



Luxe 2

**Please read whole manual before You start.
All given measurements are in millimeters.**

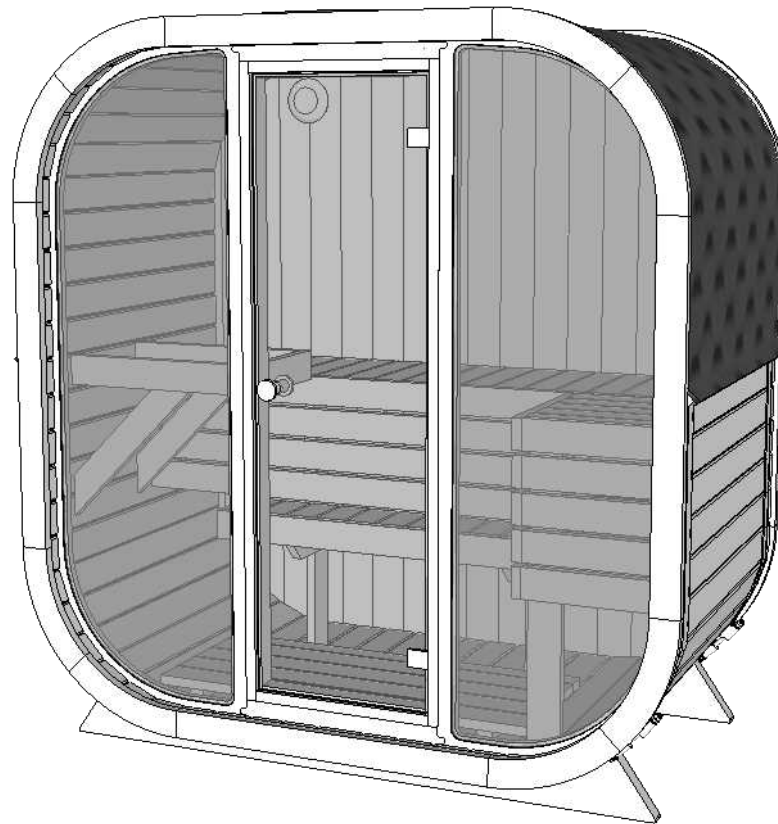


Luxe 2

Details list 1

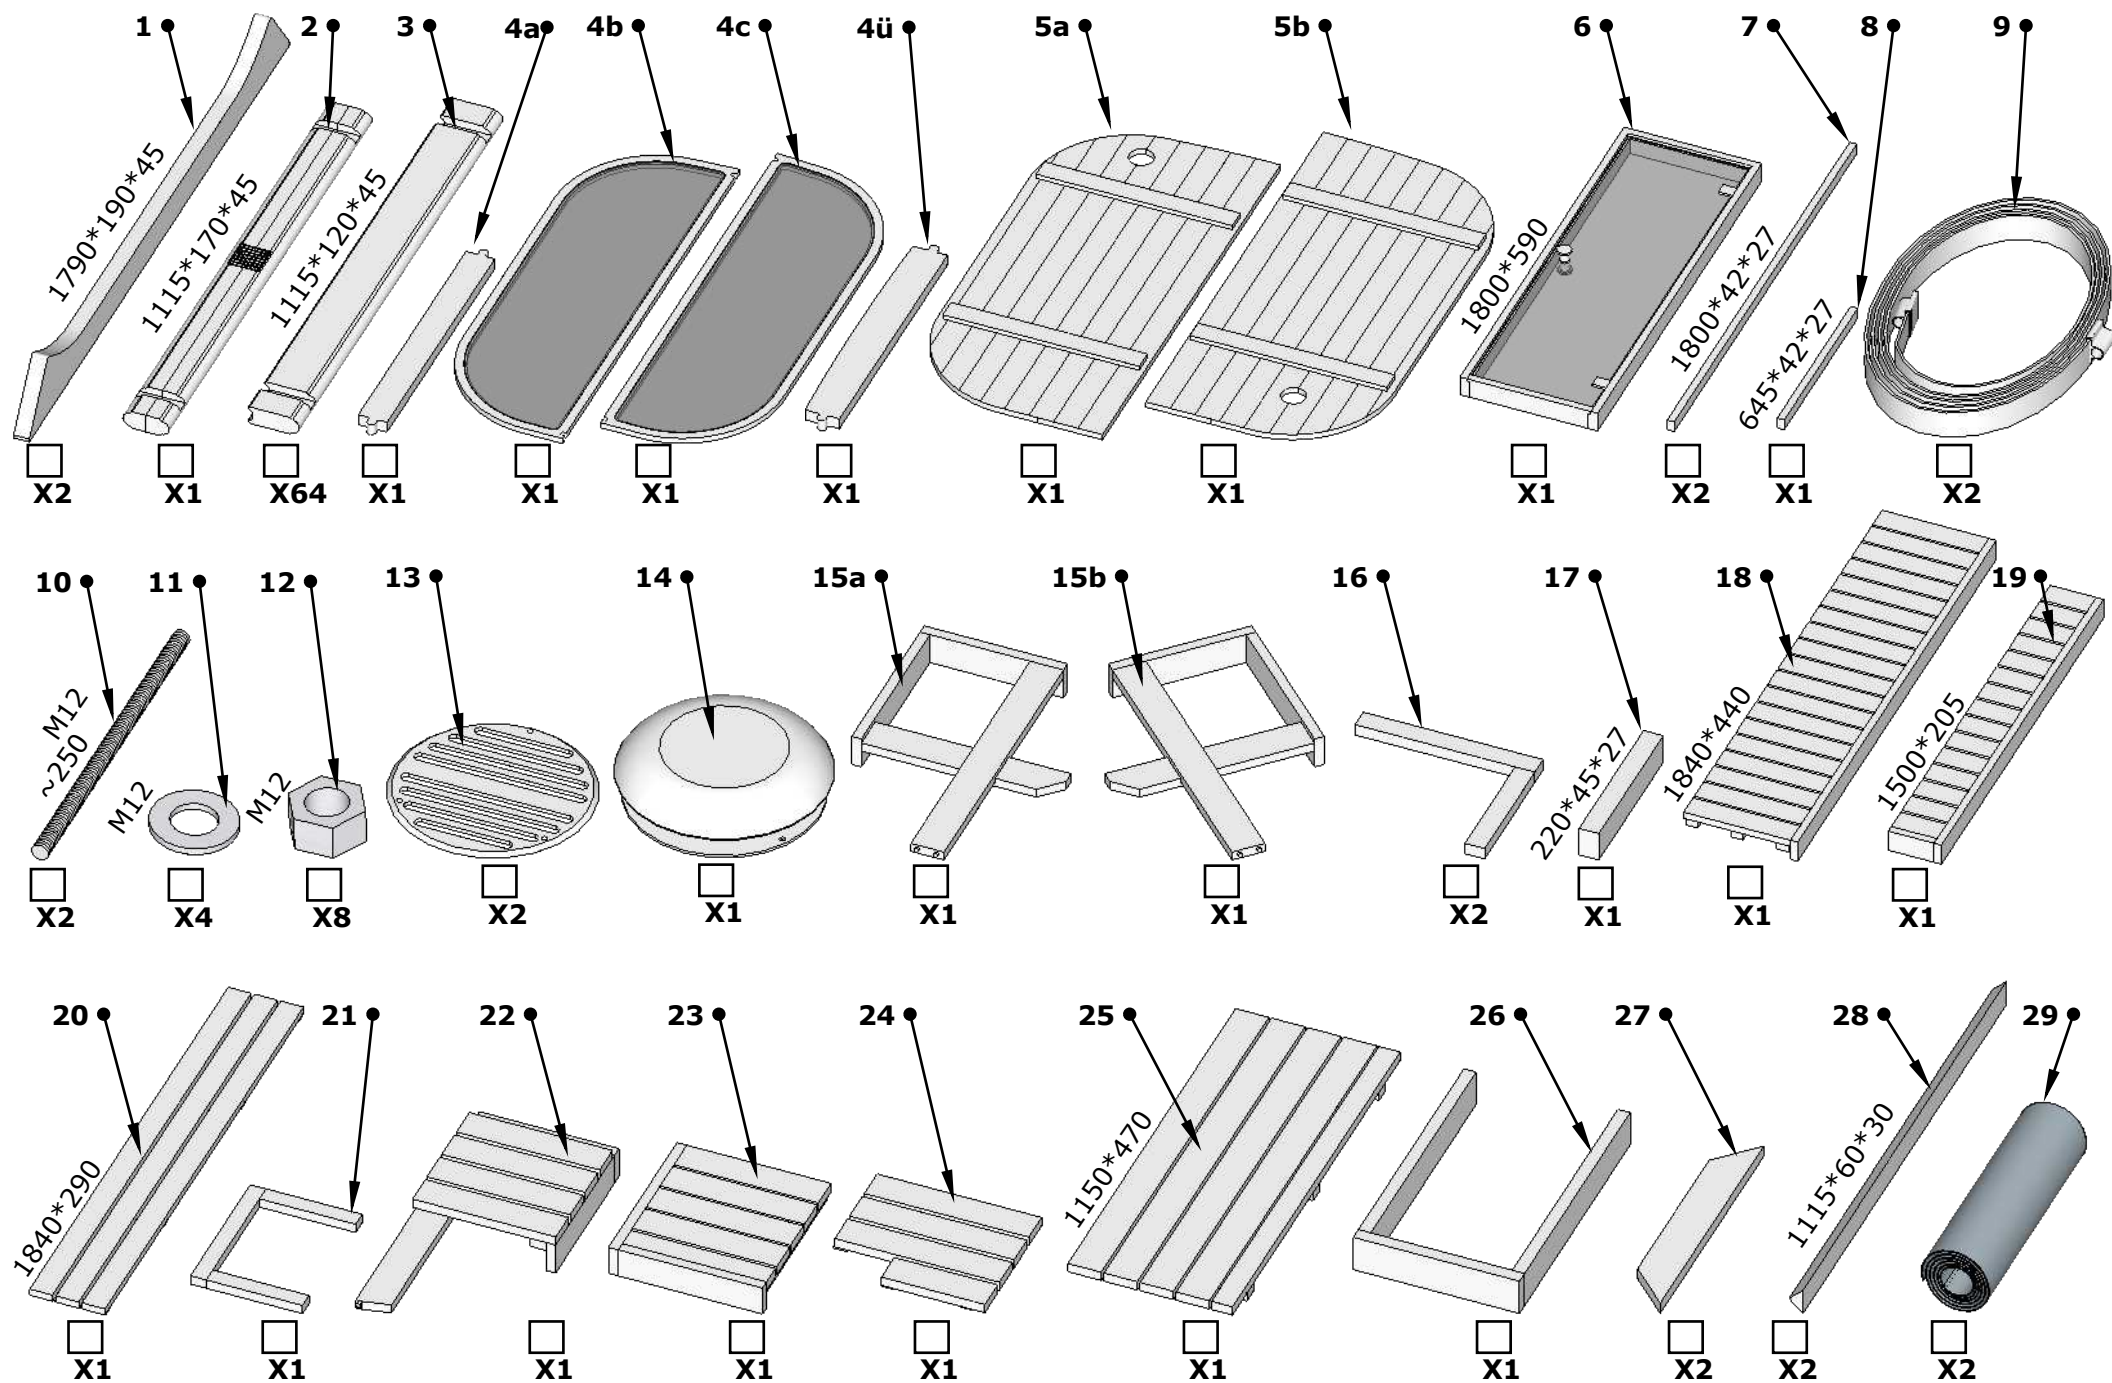


Luxe 2


Details list 2

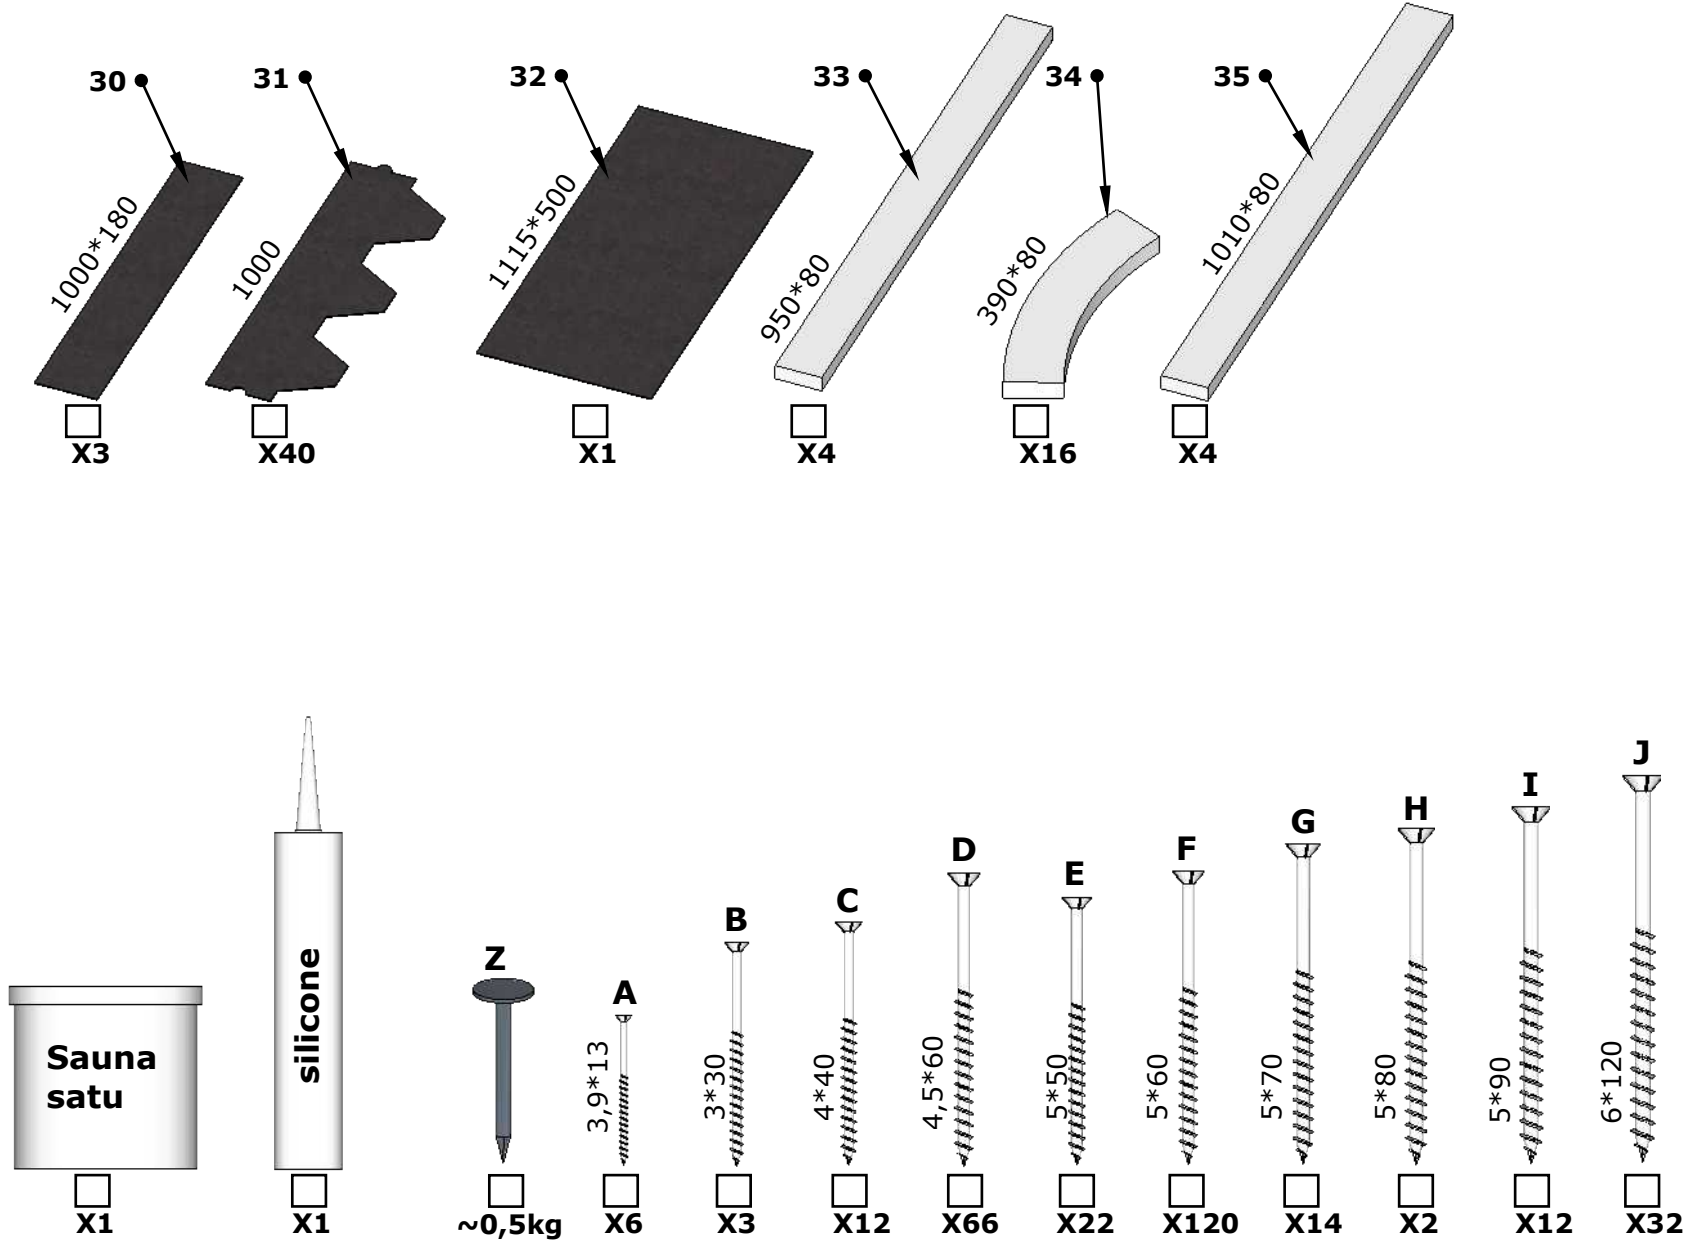




Luxe 2

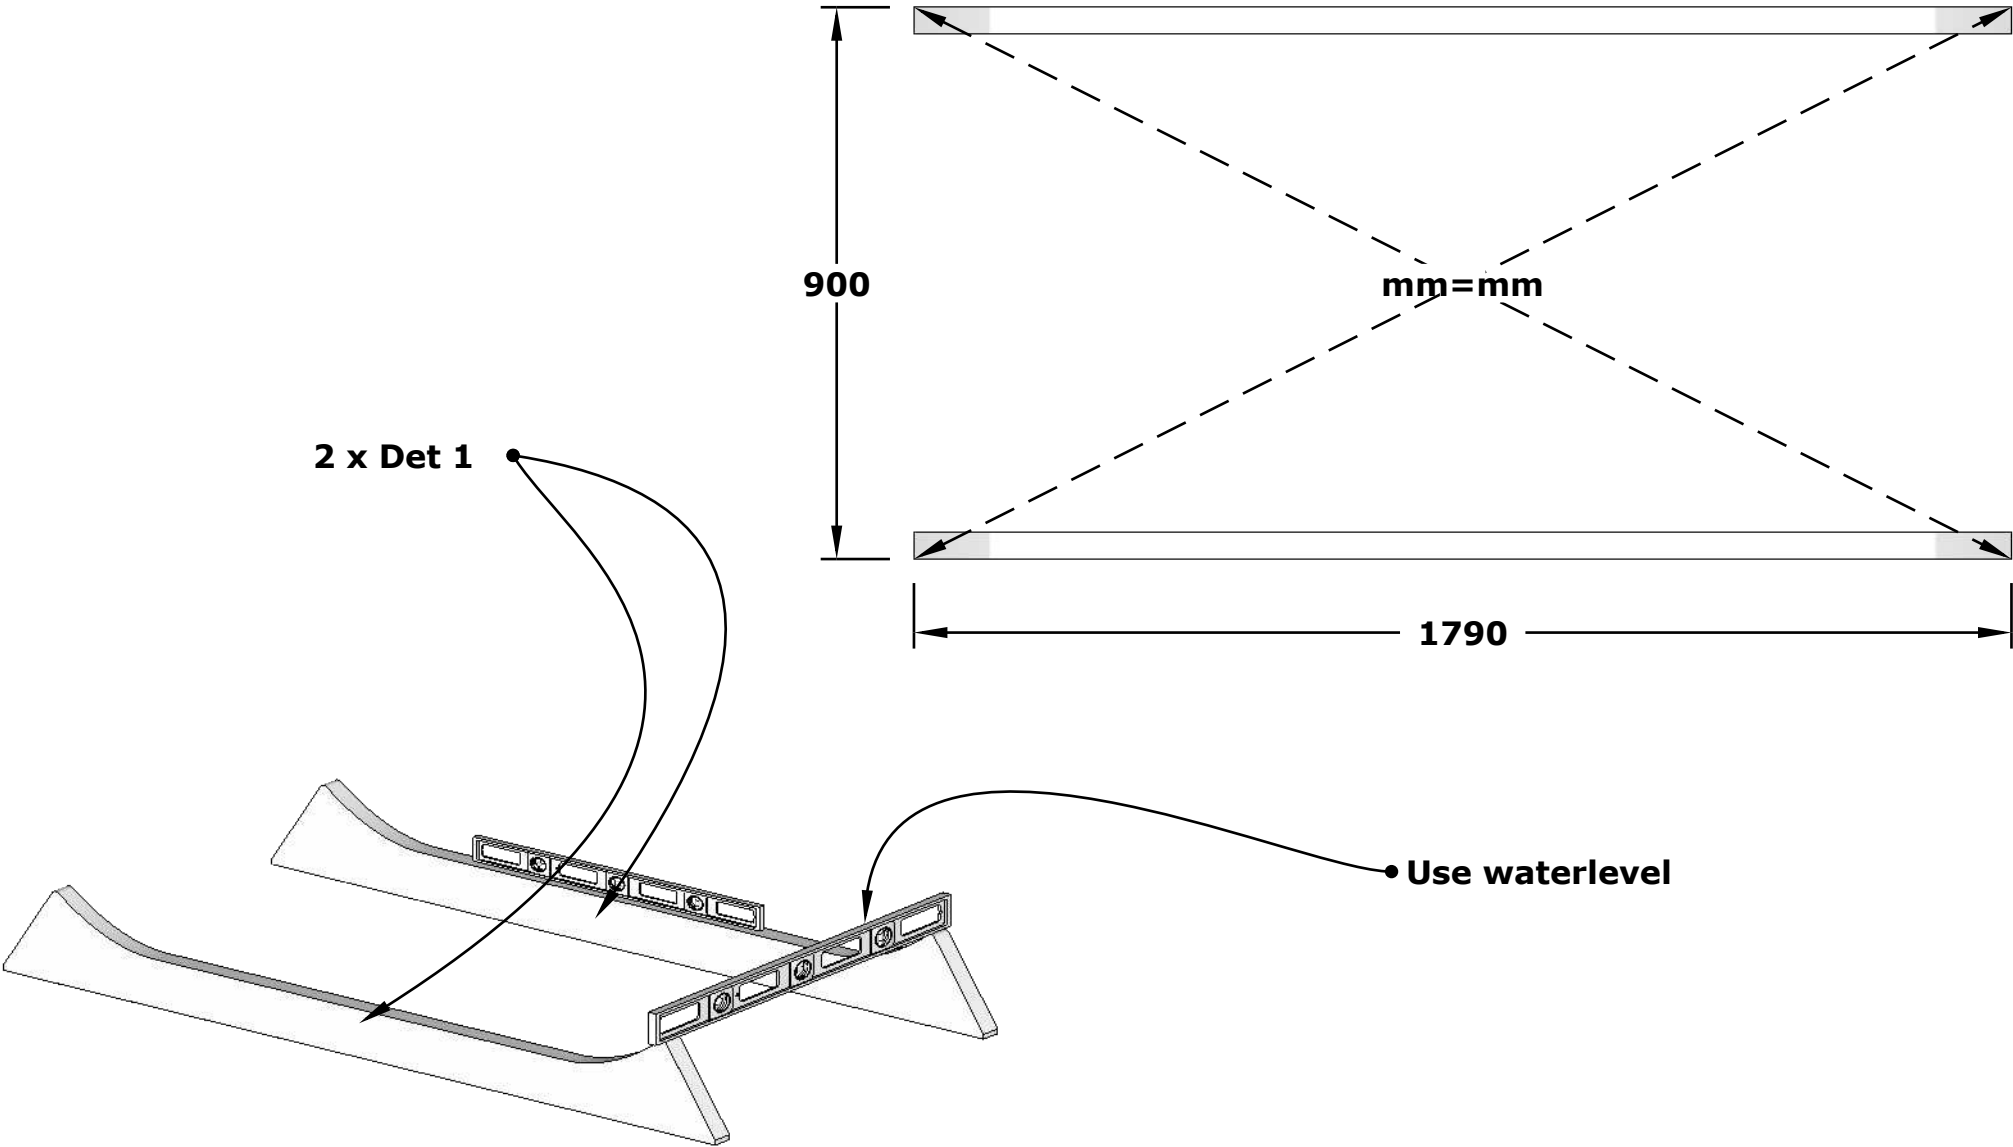

Luxe 2

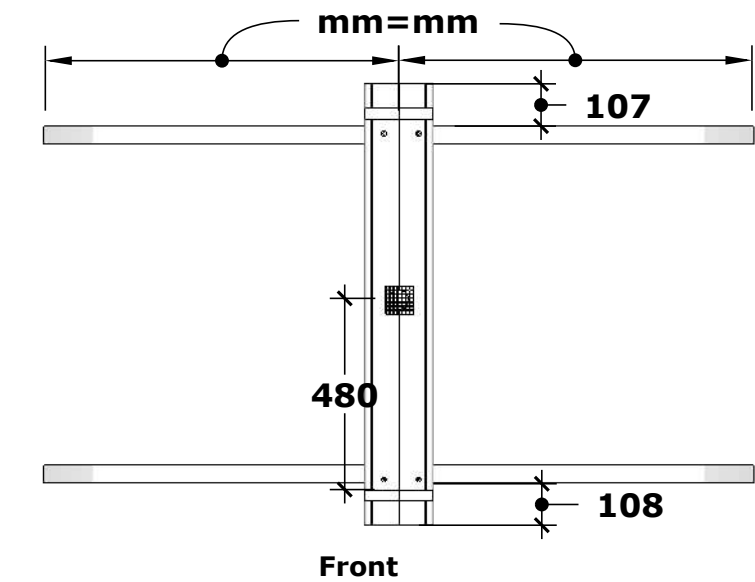


I

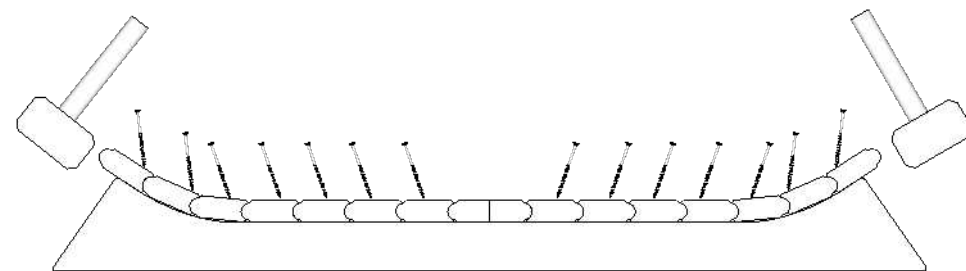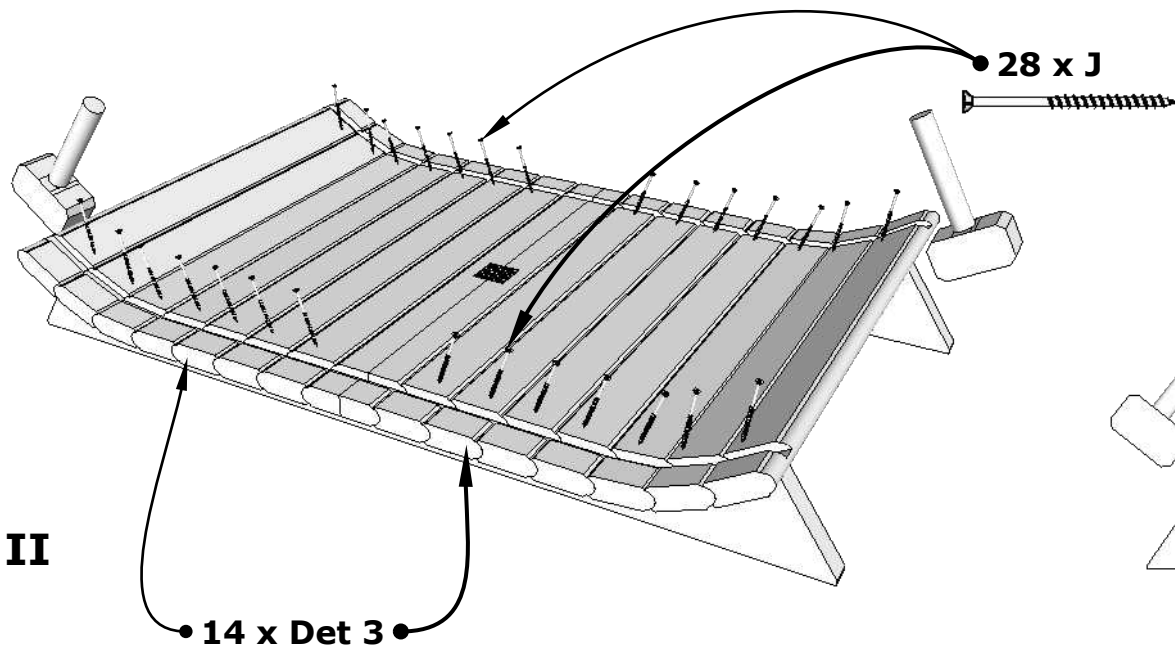
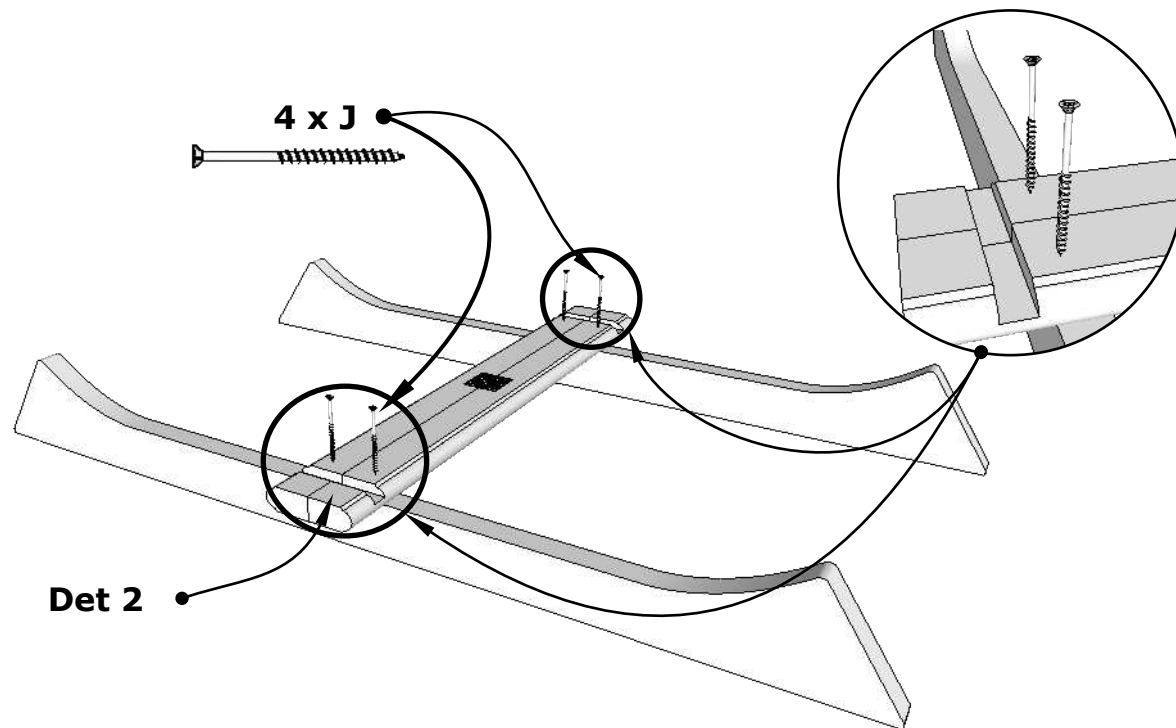


II

Luxe 2

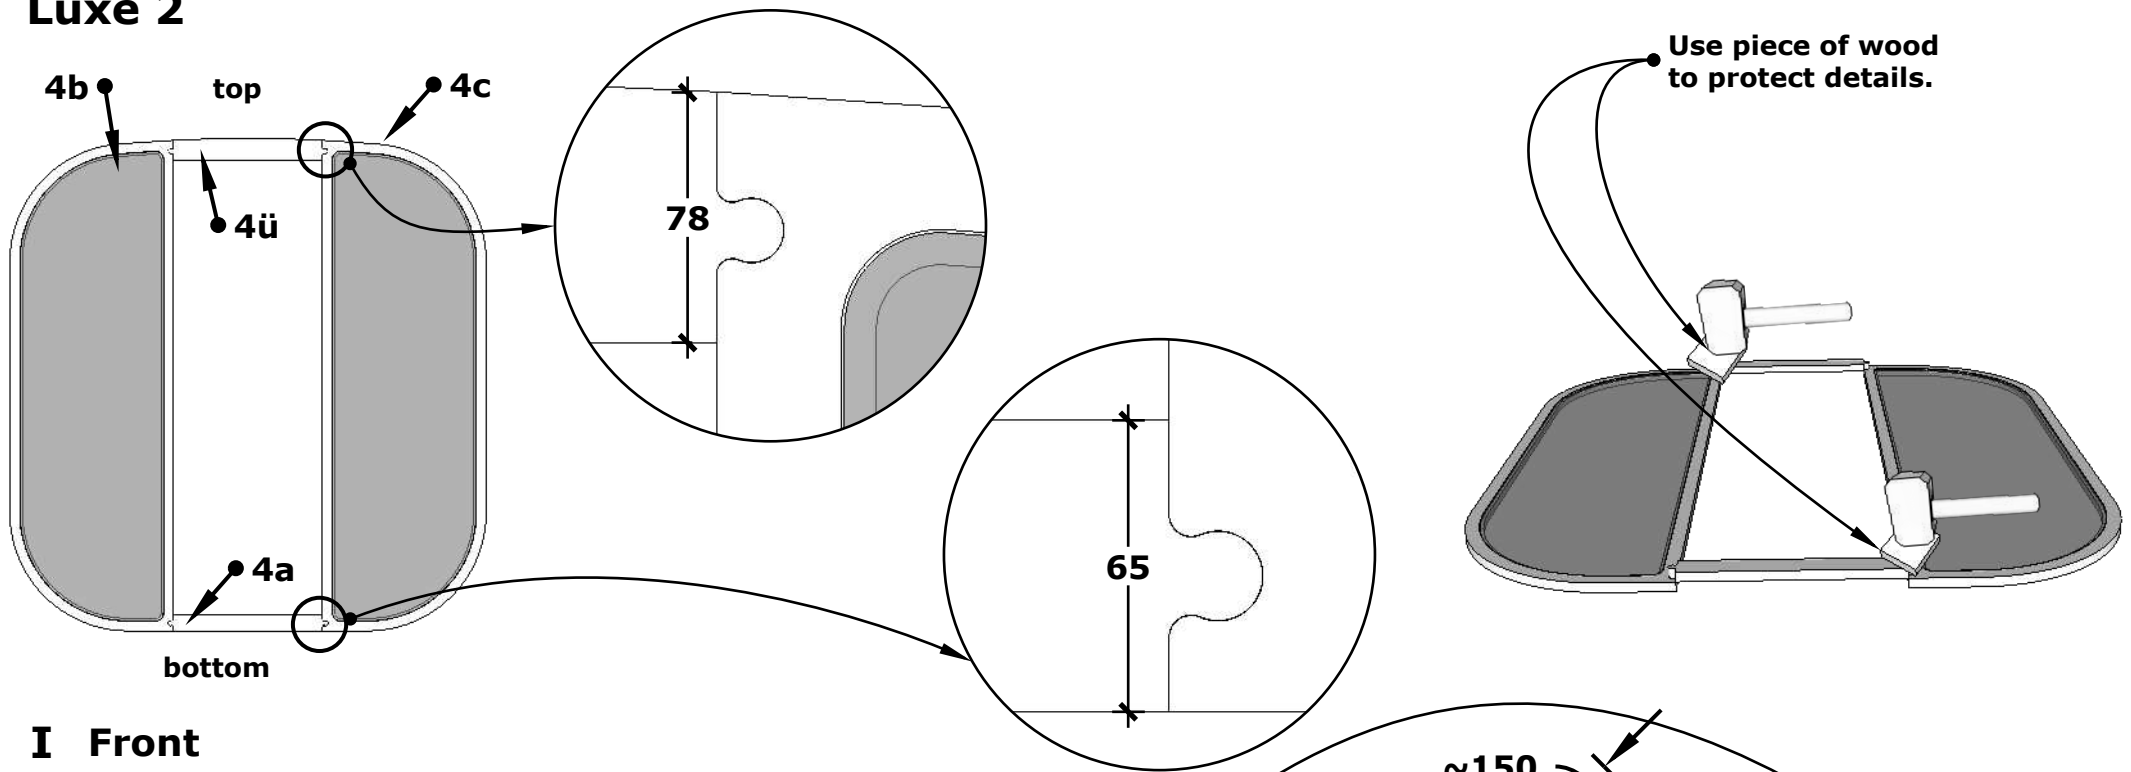


I Front

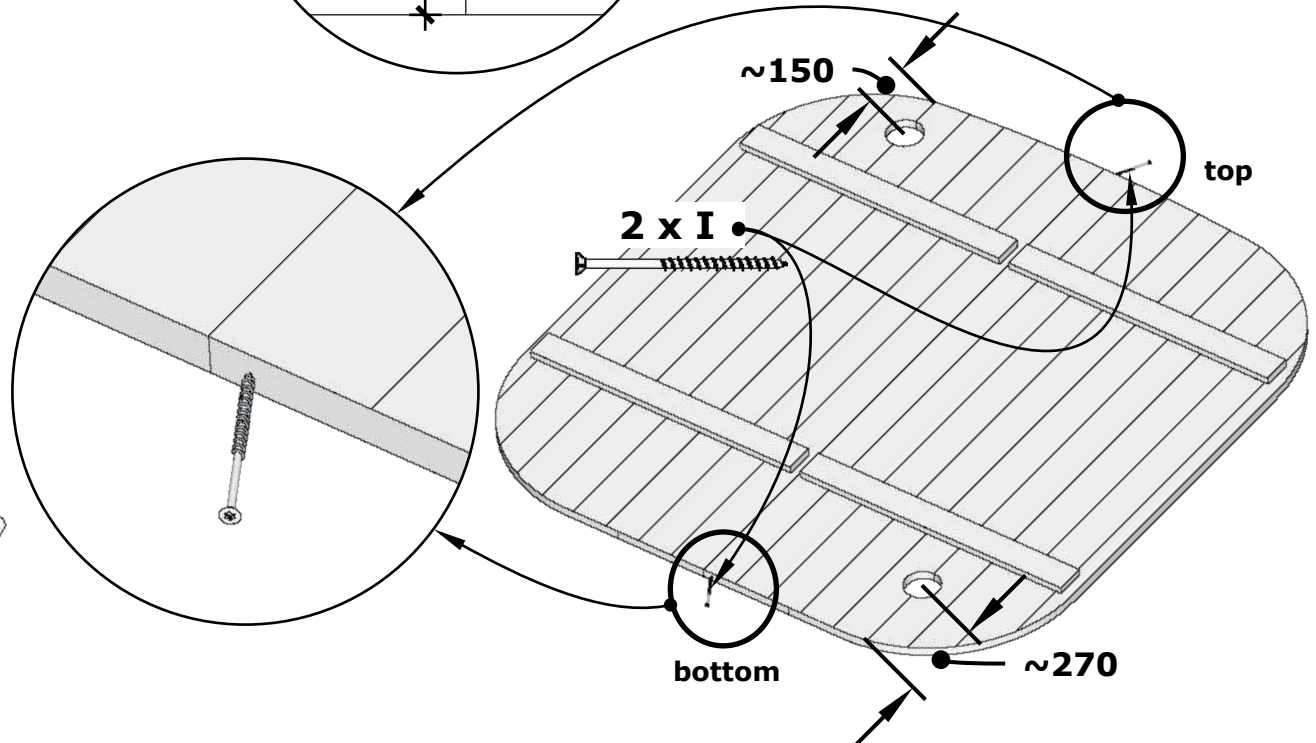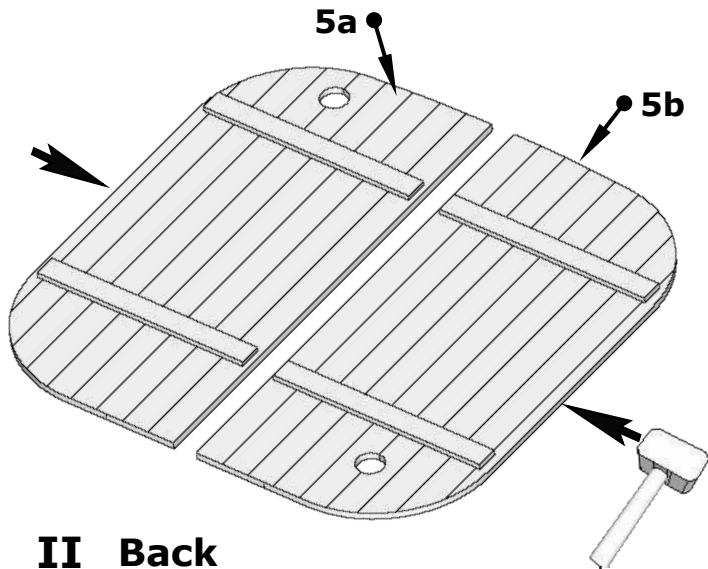

II Back


Luxe 2

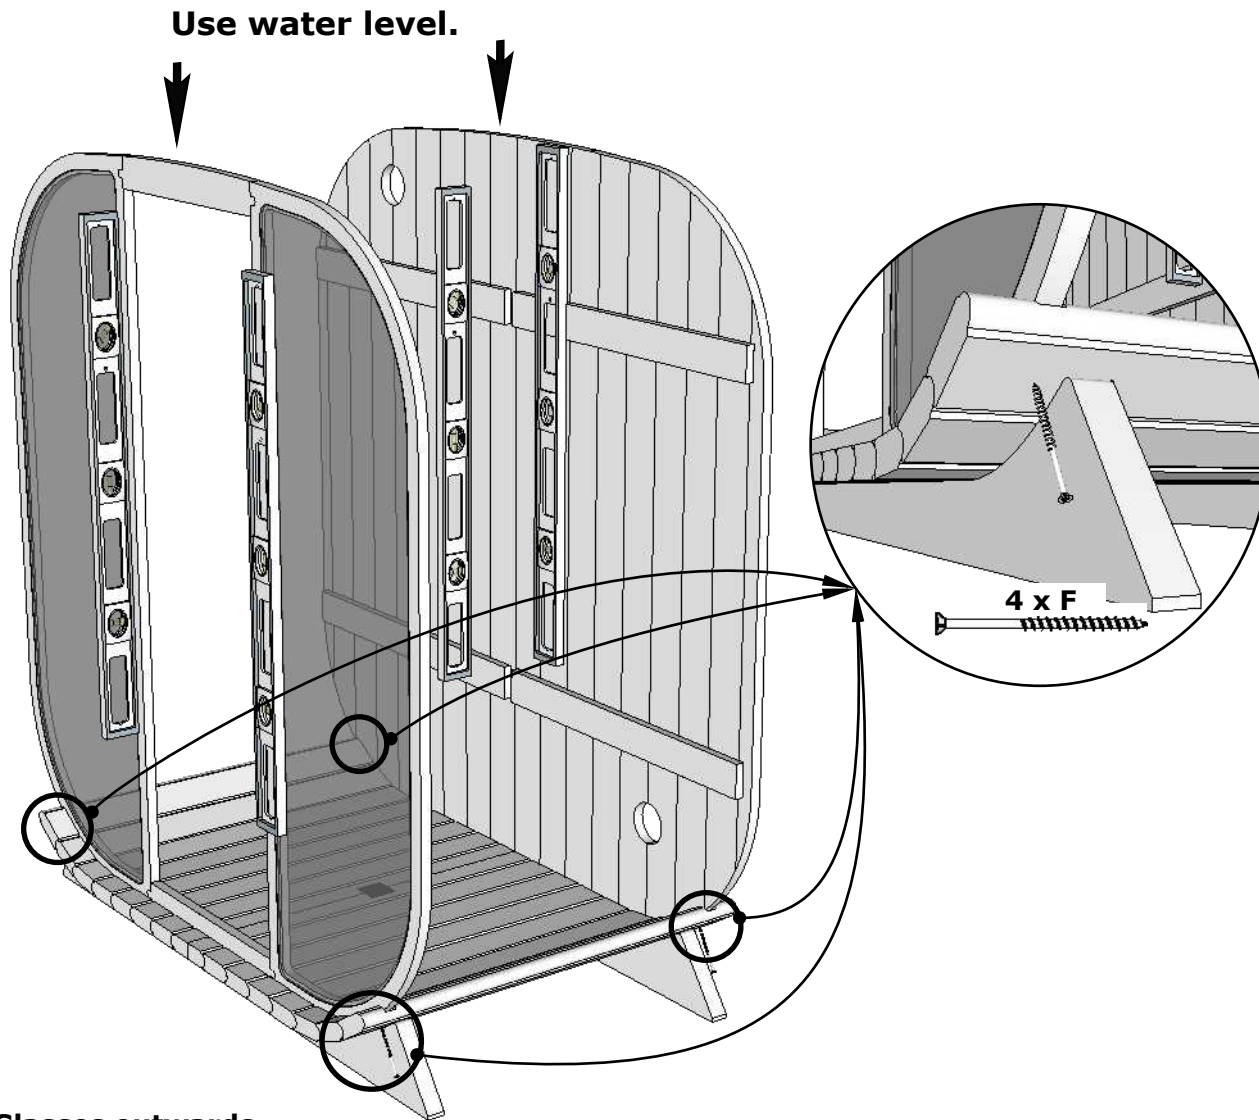

Glasses outwards

I

4




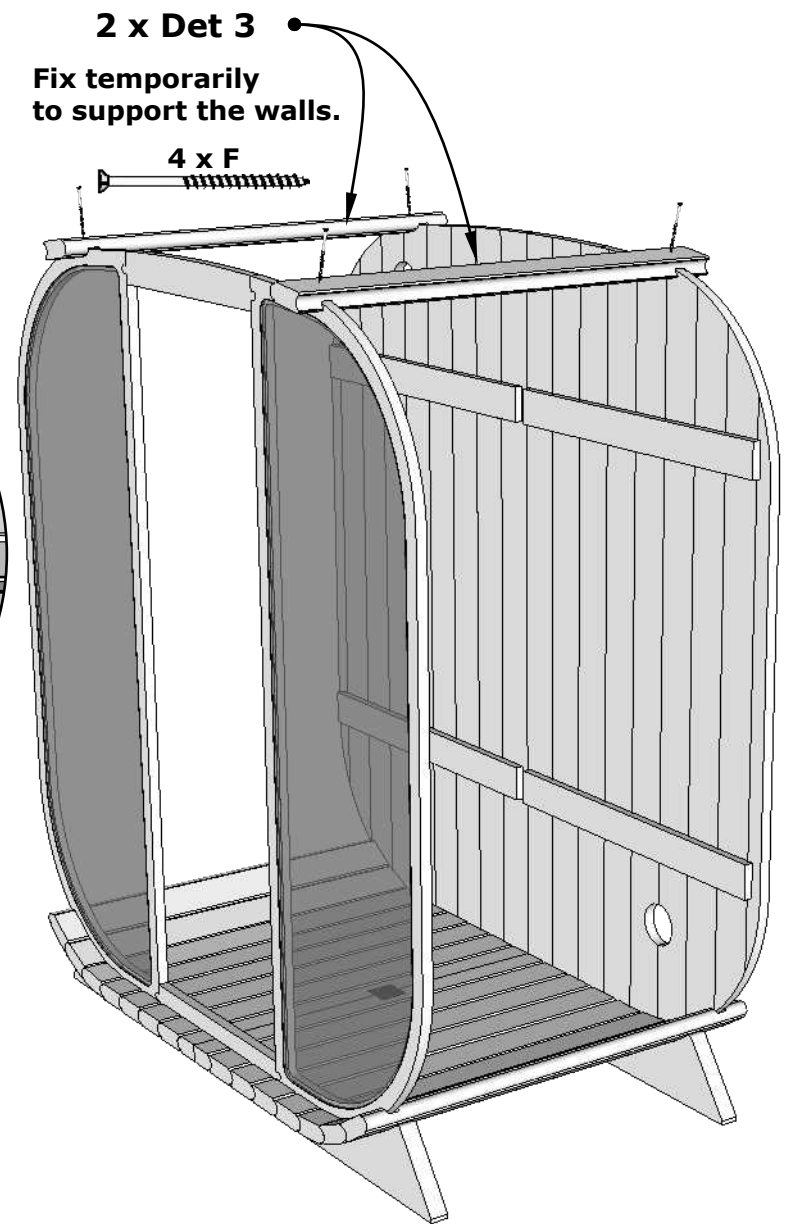


II


Luxe 2

Screw in the
screws
at an angle.





I

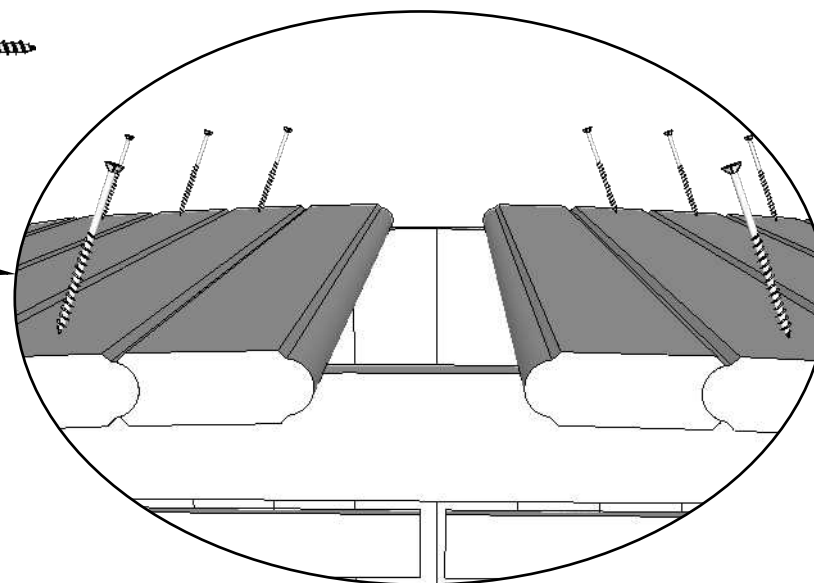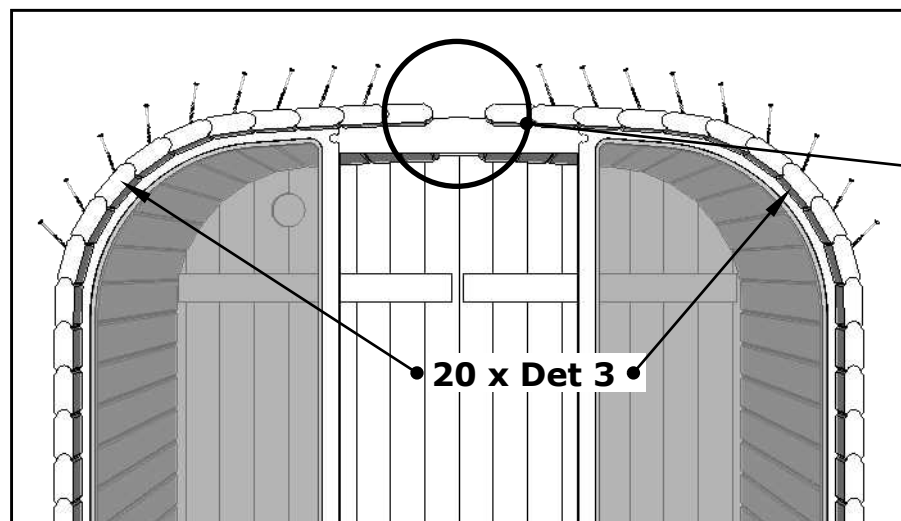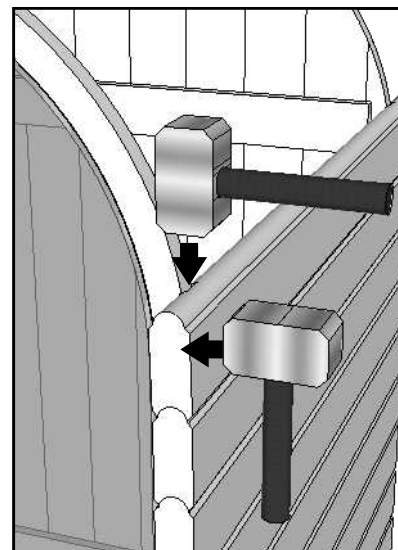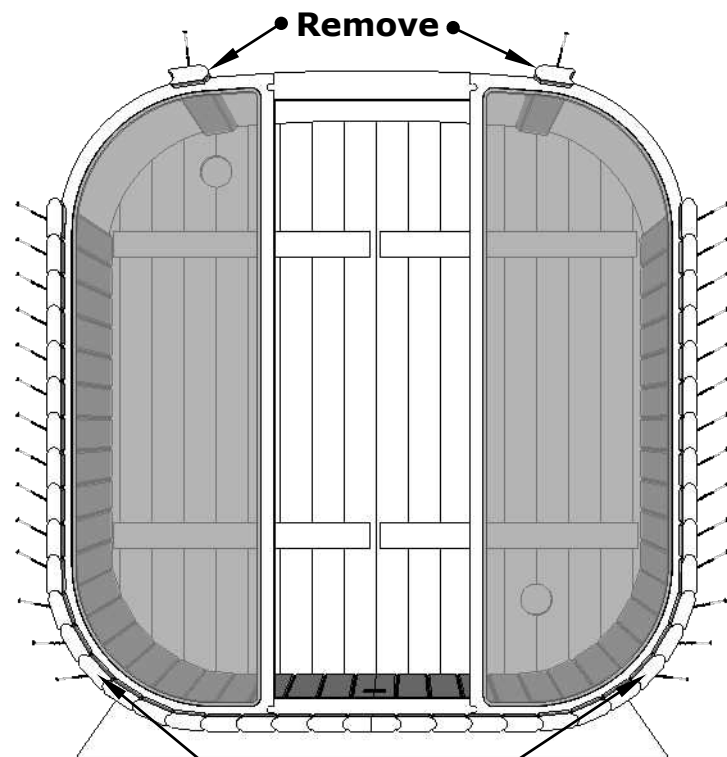

Luxe 2

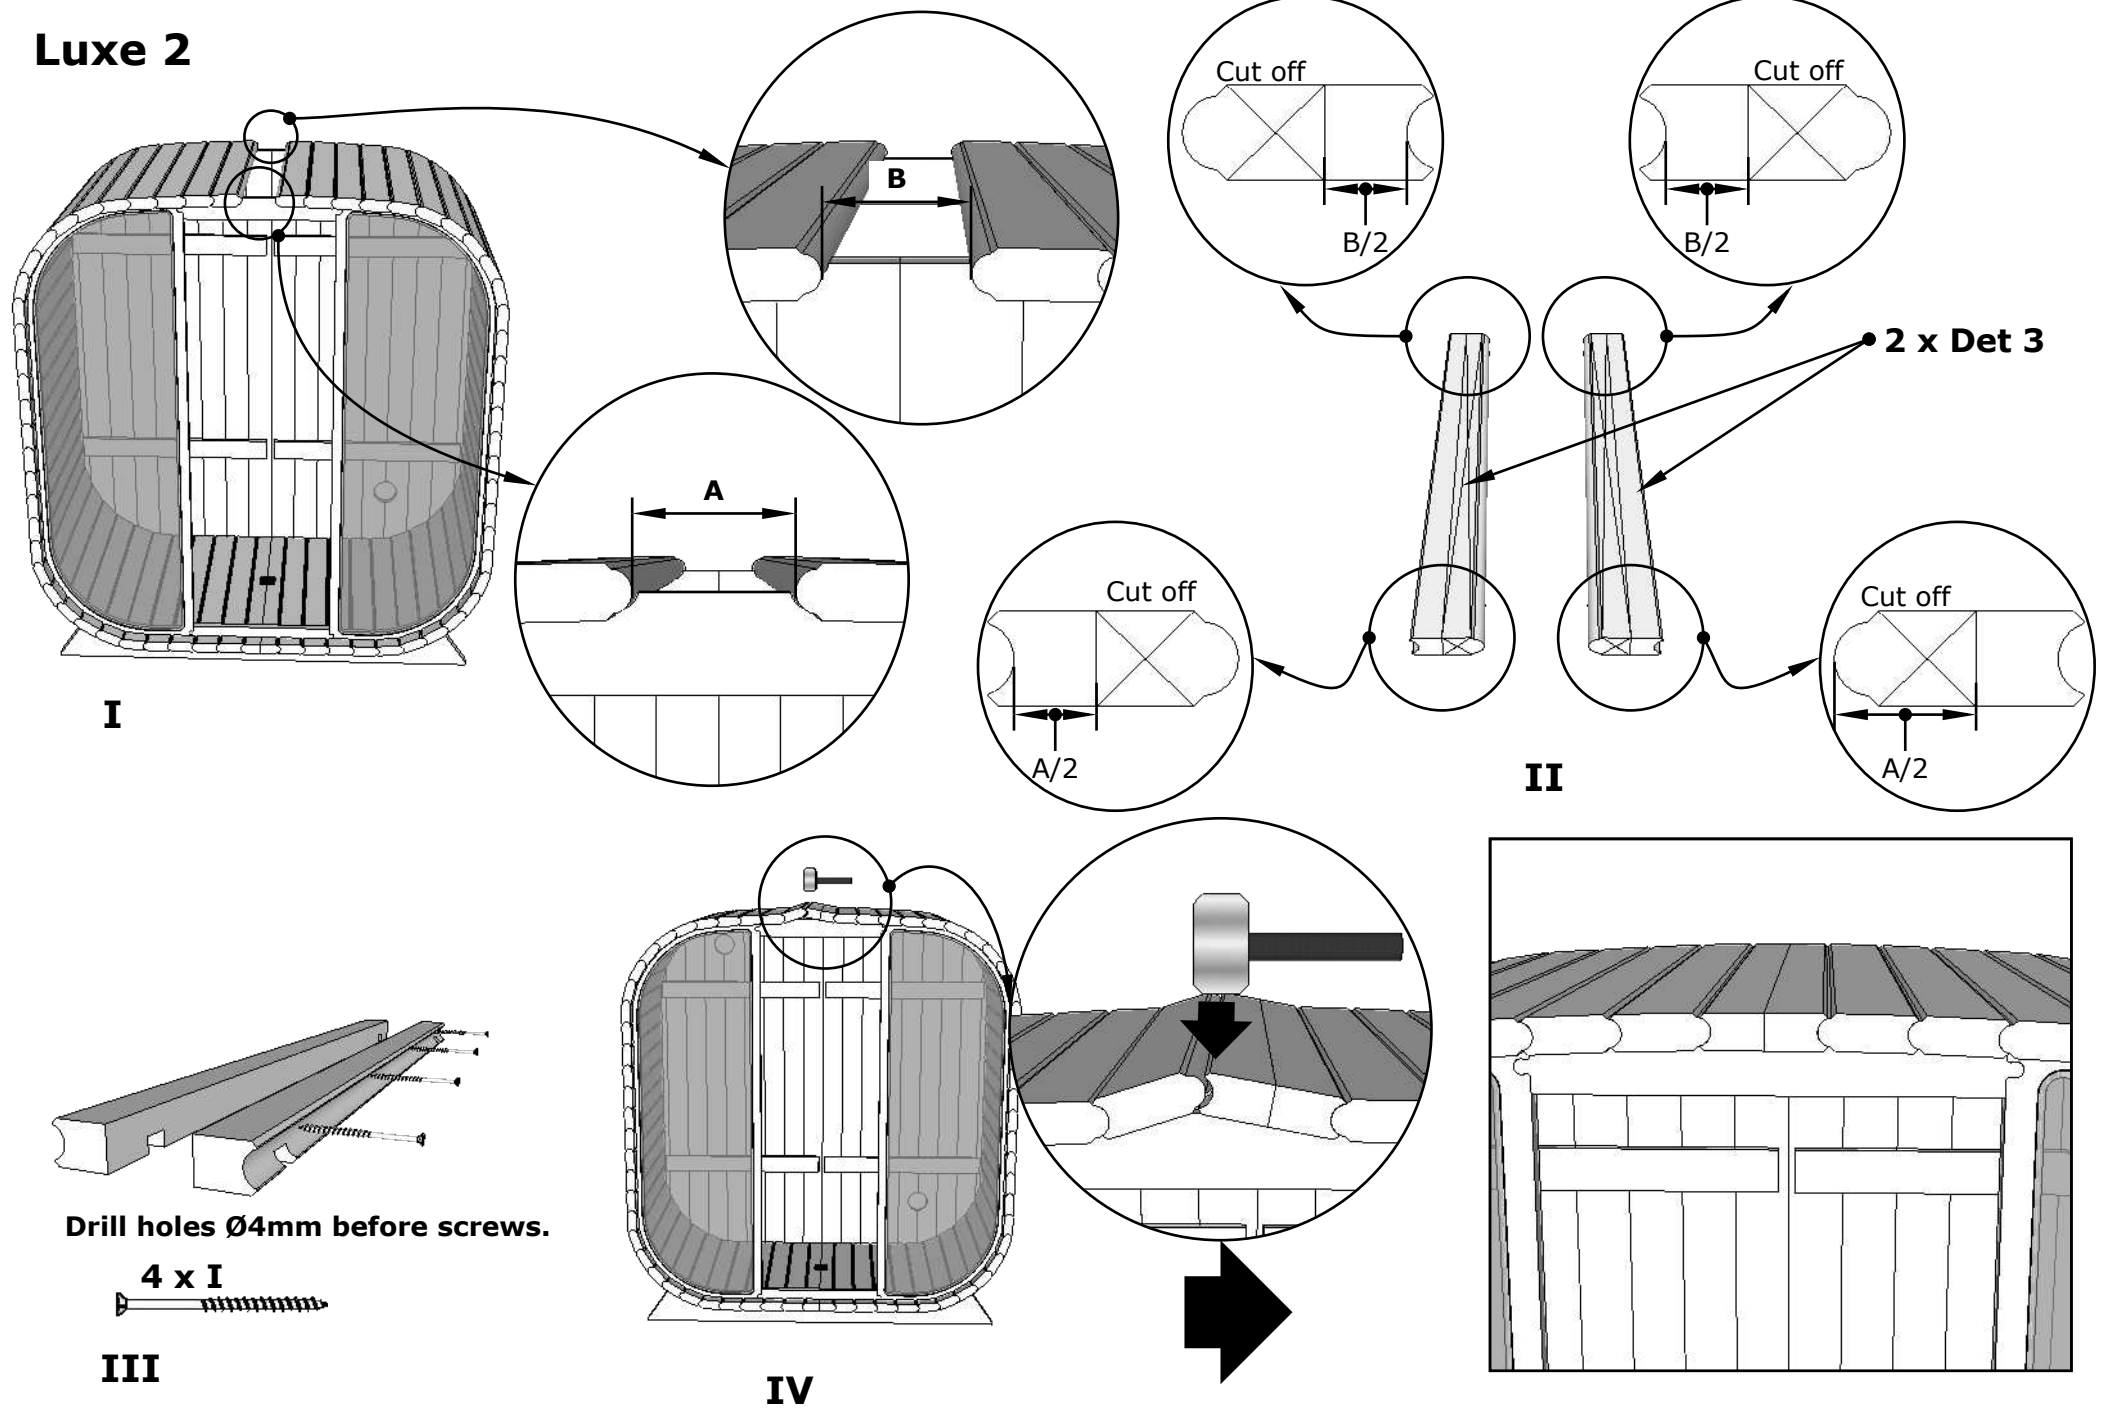


Luxe 2

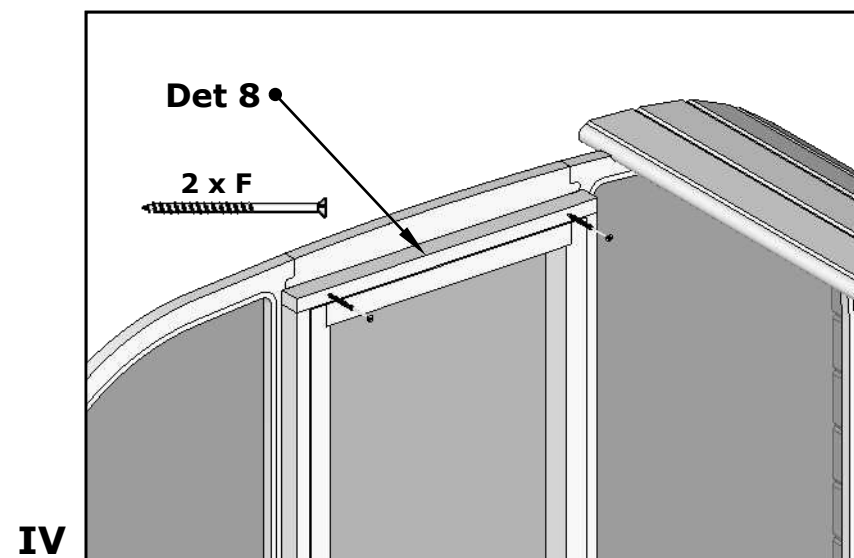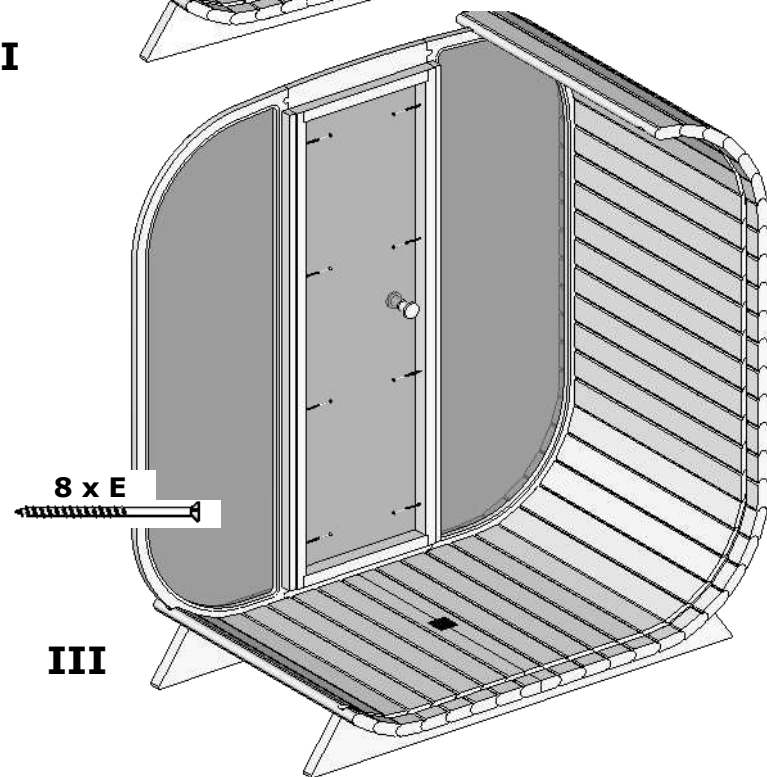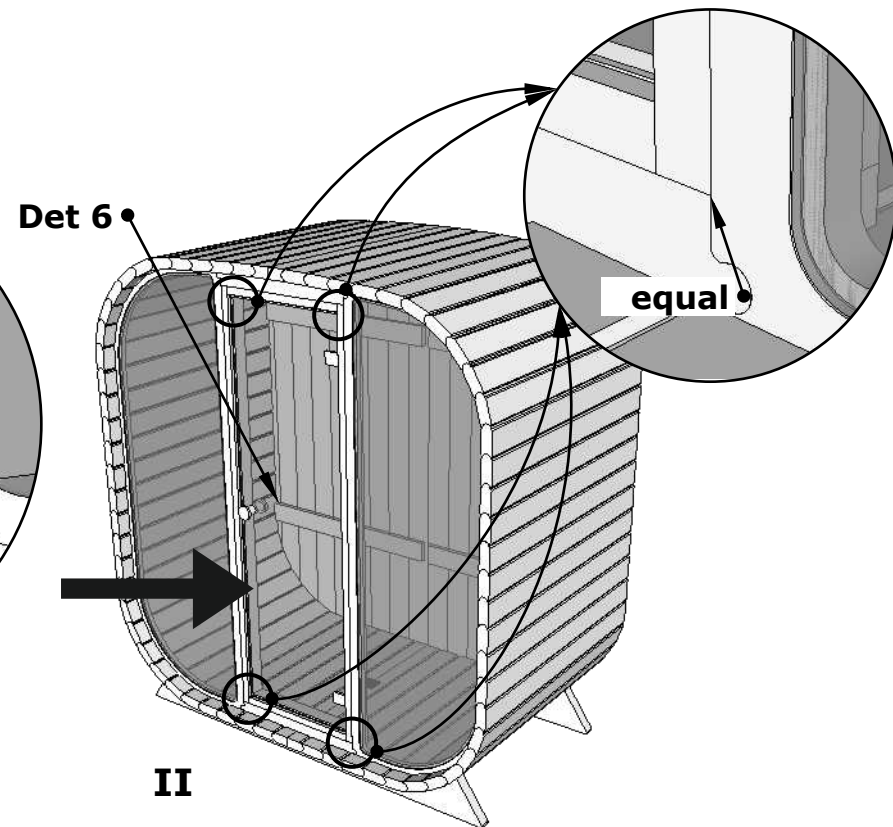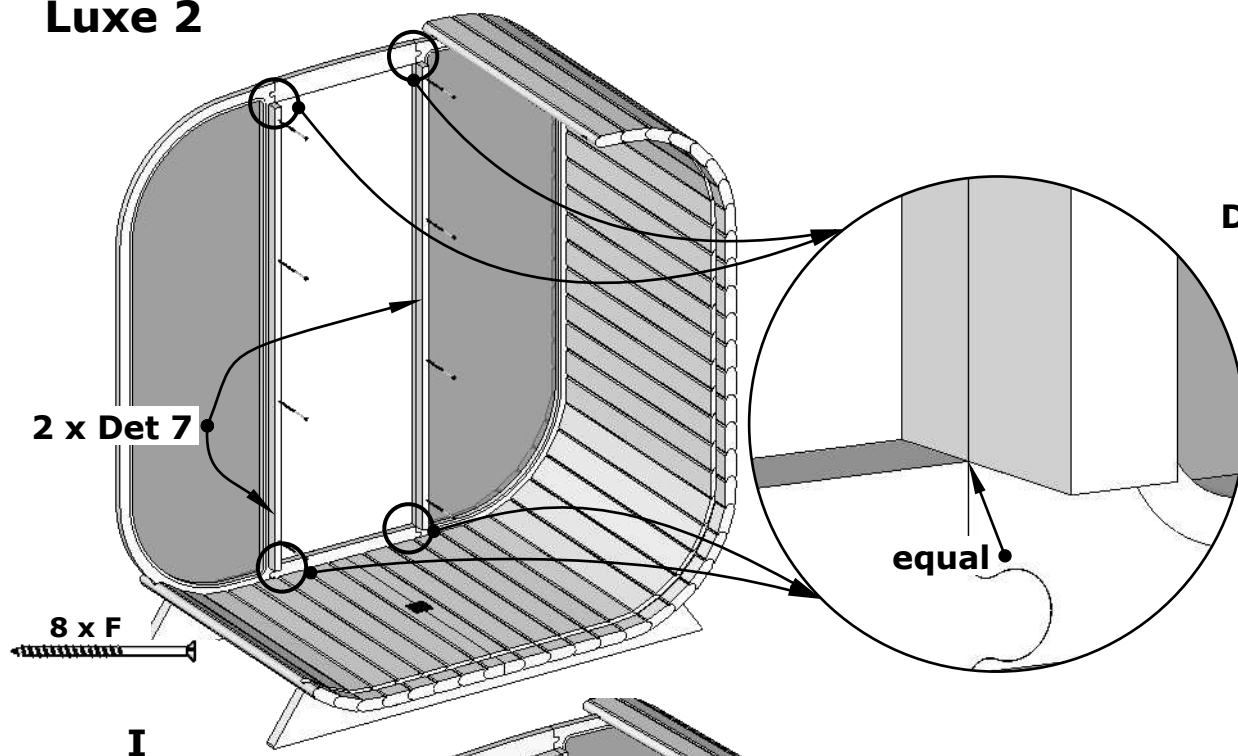


Luxe 2

2 x Det 9

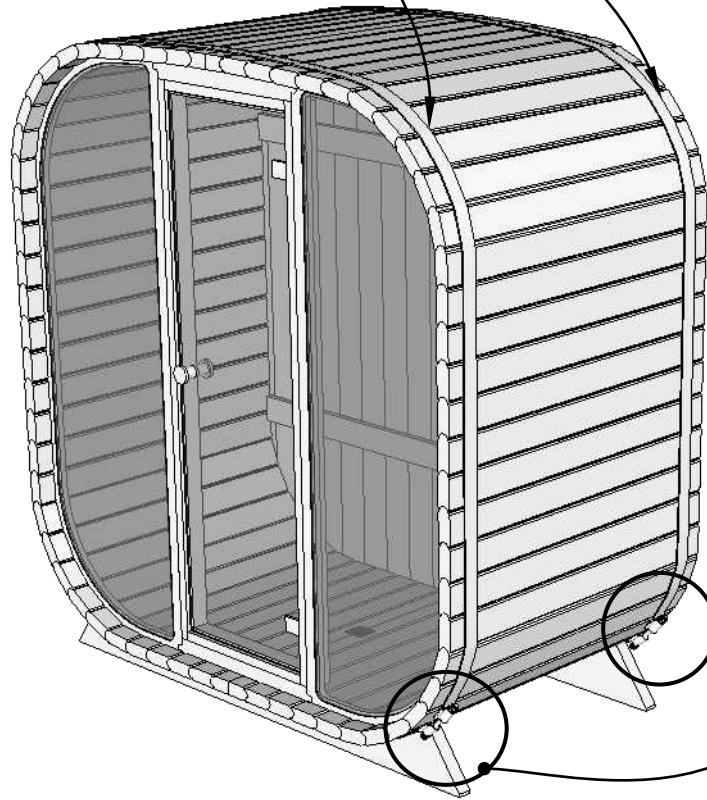


I

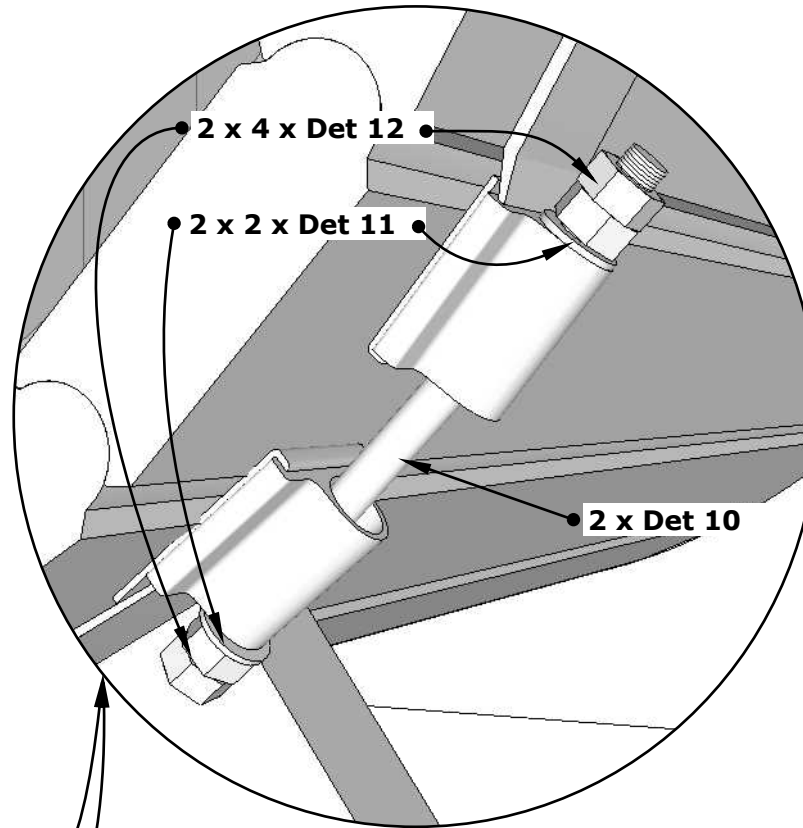


During assembly and retightening the threaded rods, use oil (Würth HSP 1400 or similar) to avoid "cold welding" and it is also easier tightening.

Remove boards

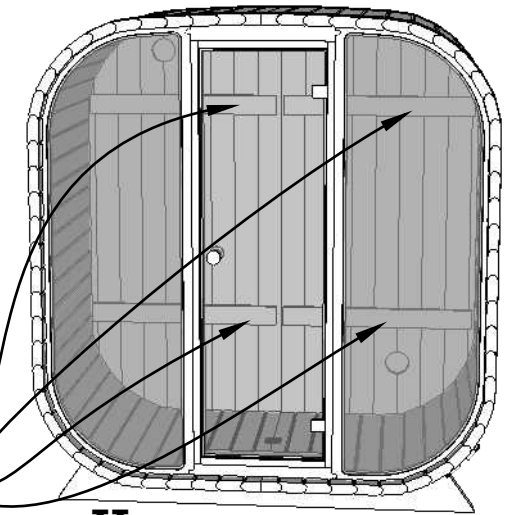


II

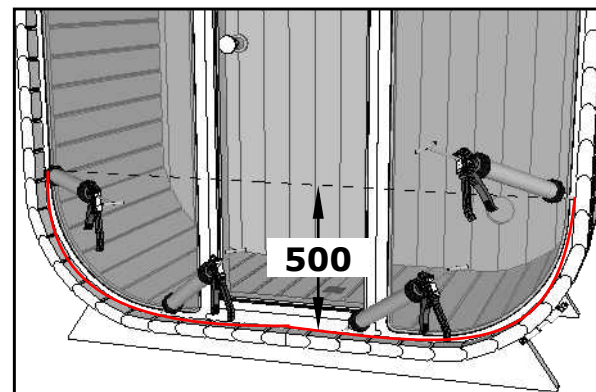

Add waterproof silicone to the walls on both sides (in- and outside).


III

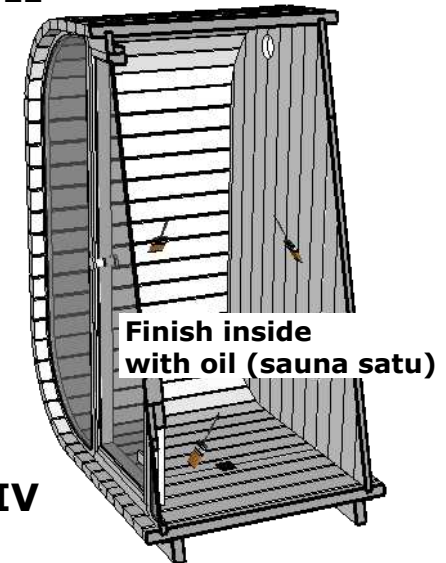


Finish inside with oil (sauna satu)

IV

Luxe 2


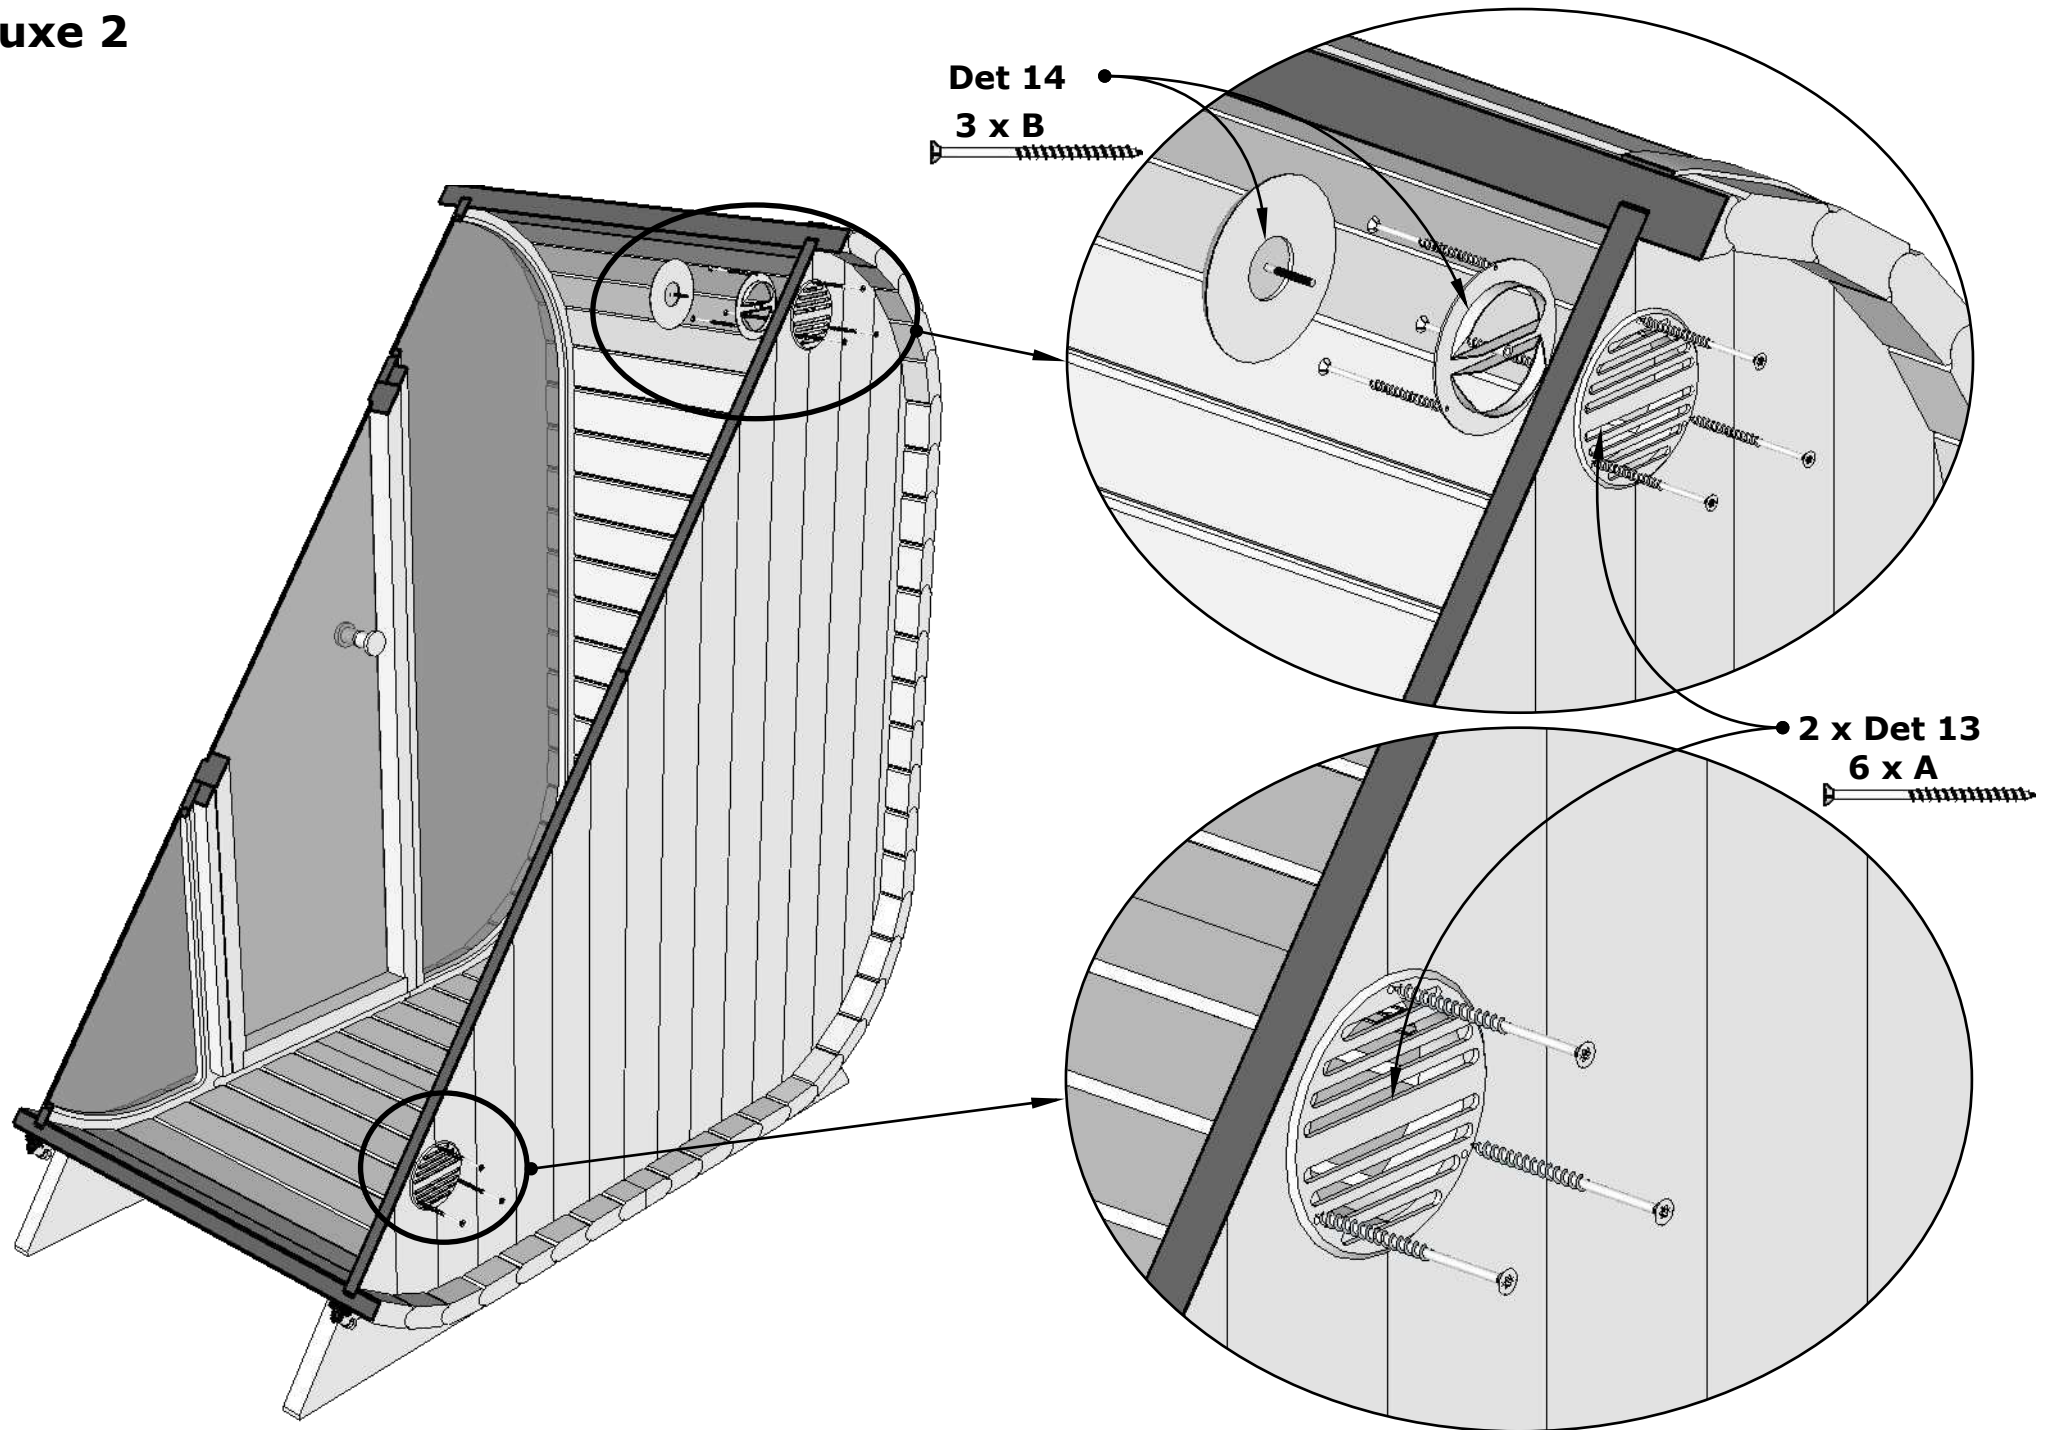


Luxe 2

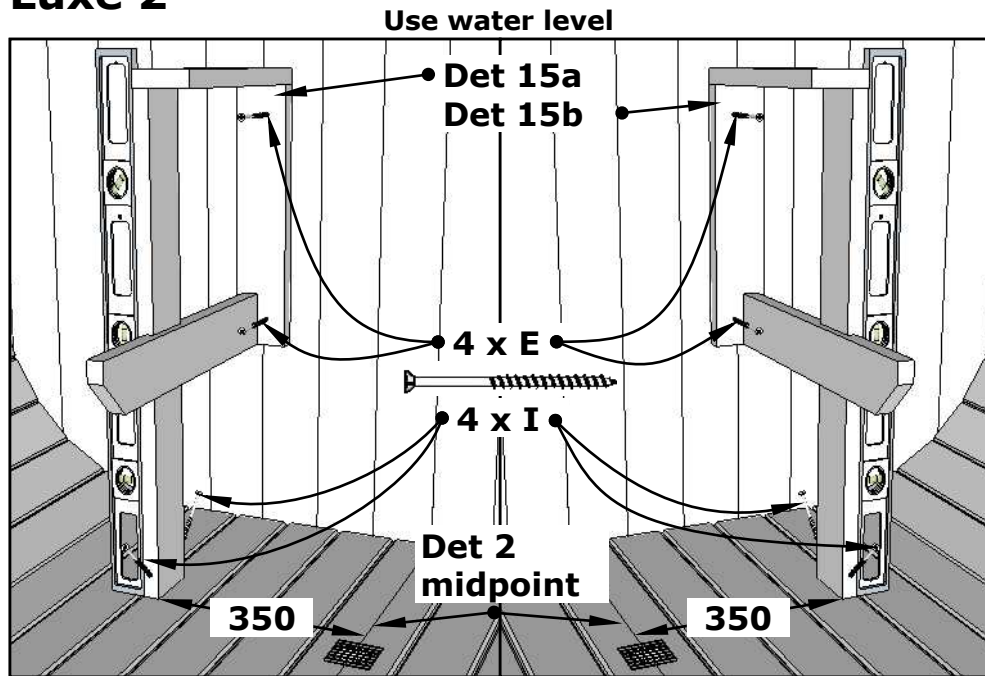


I

Drill holes 40mm before screws.

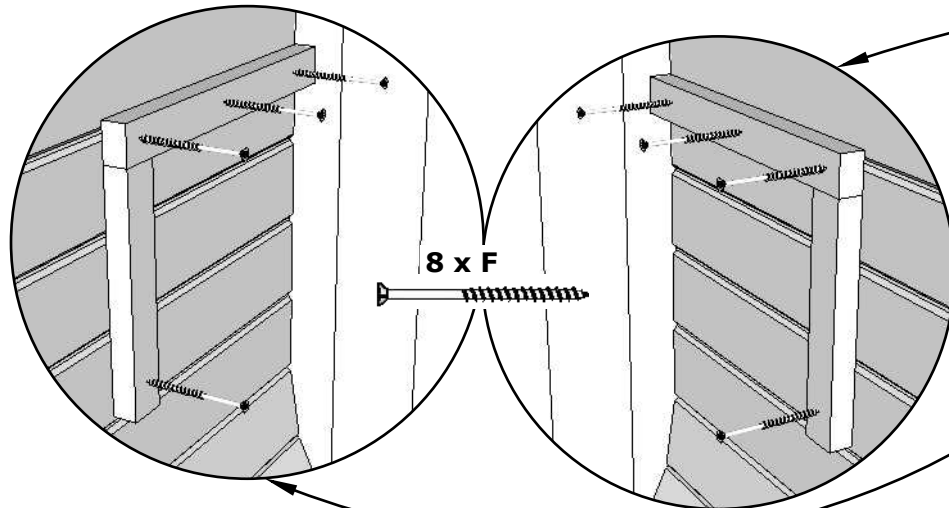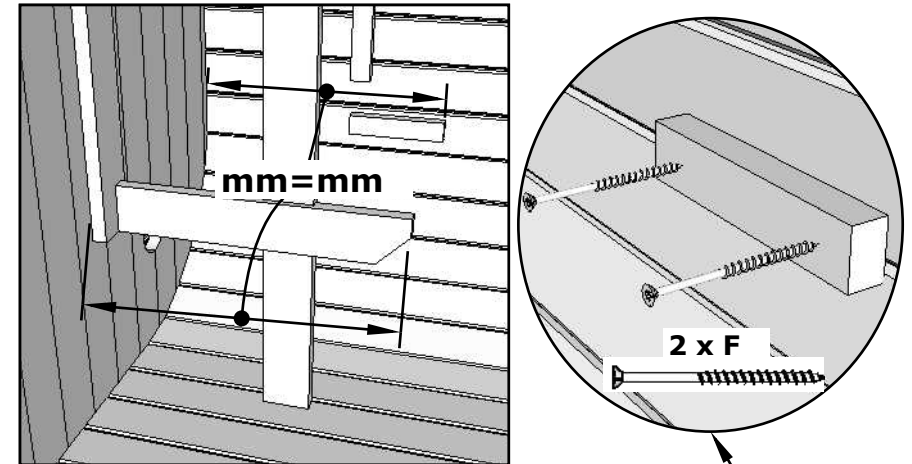


10


II

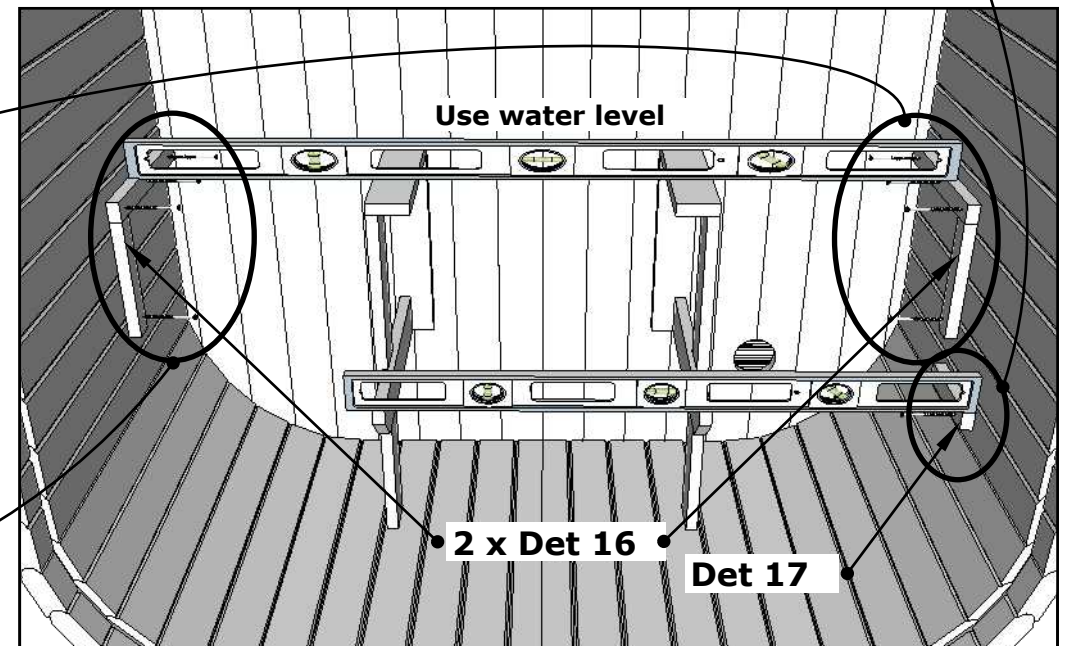

Luxe 2


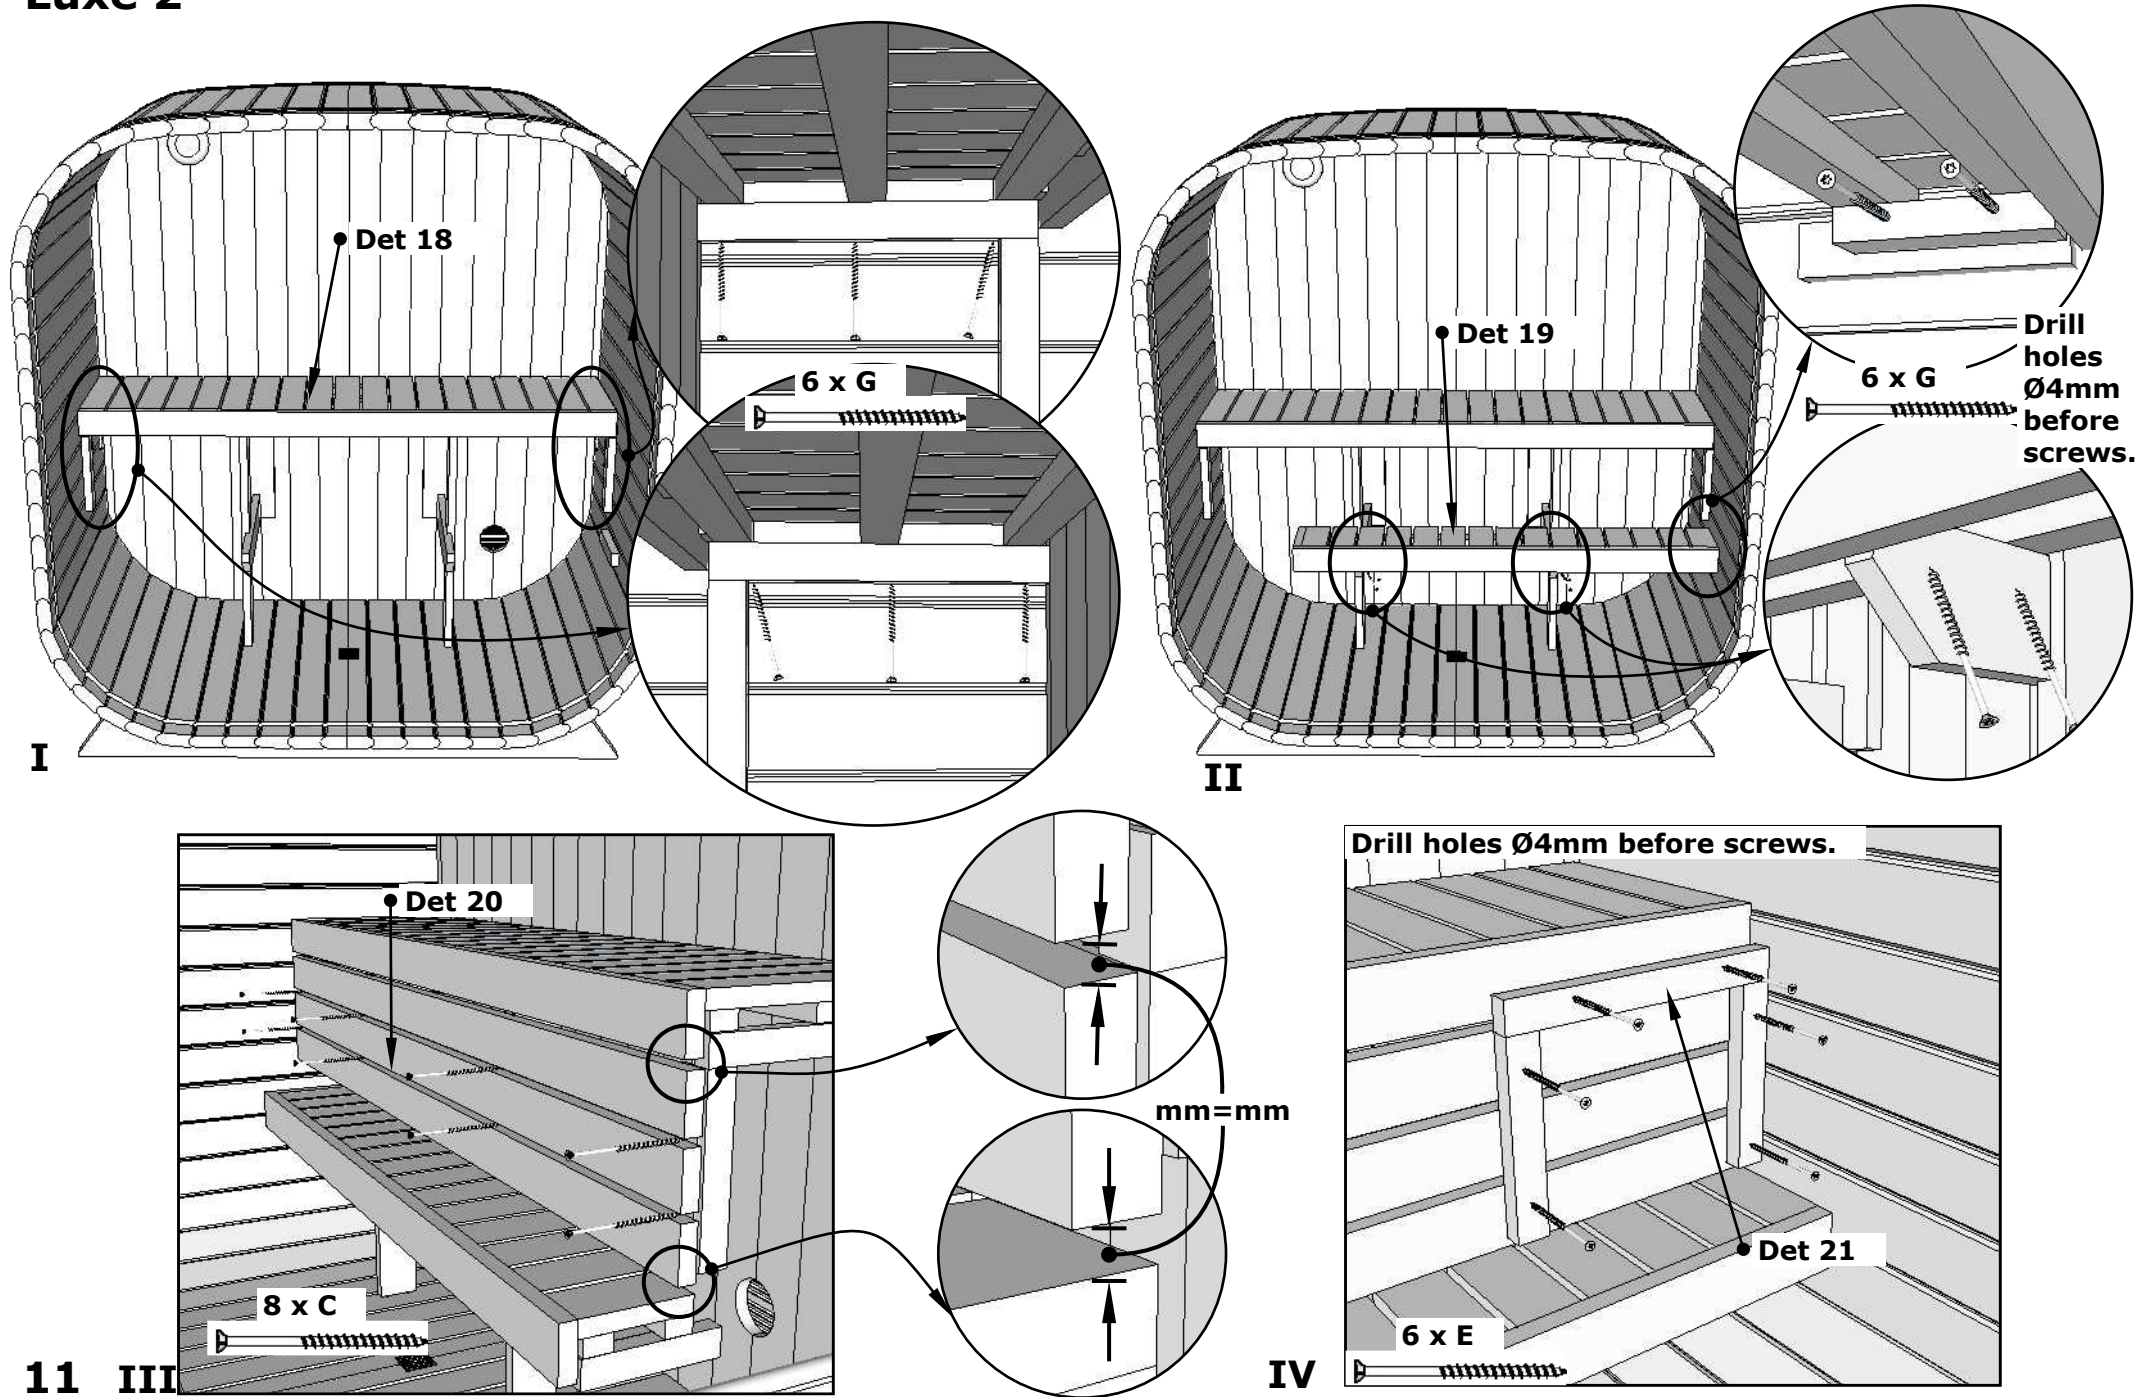


Luxe 2

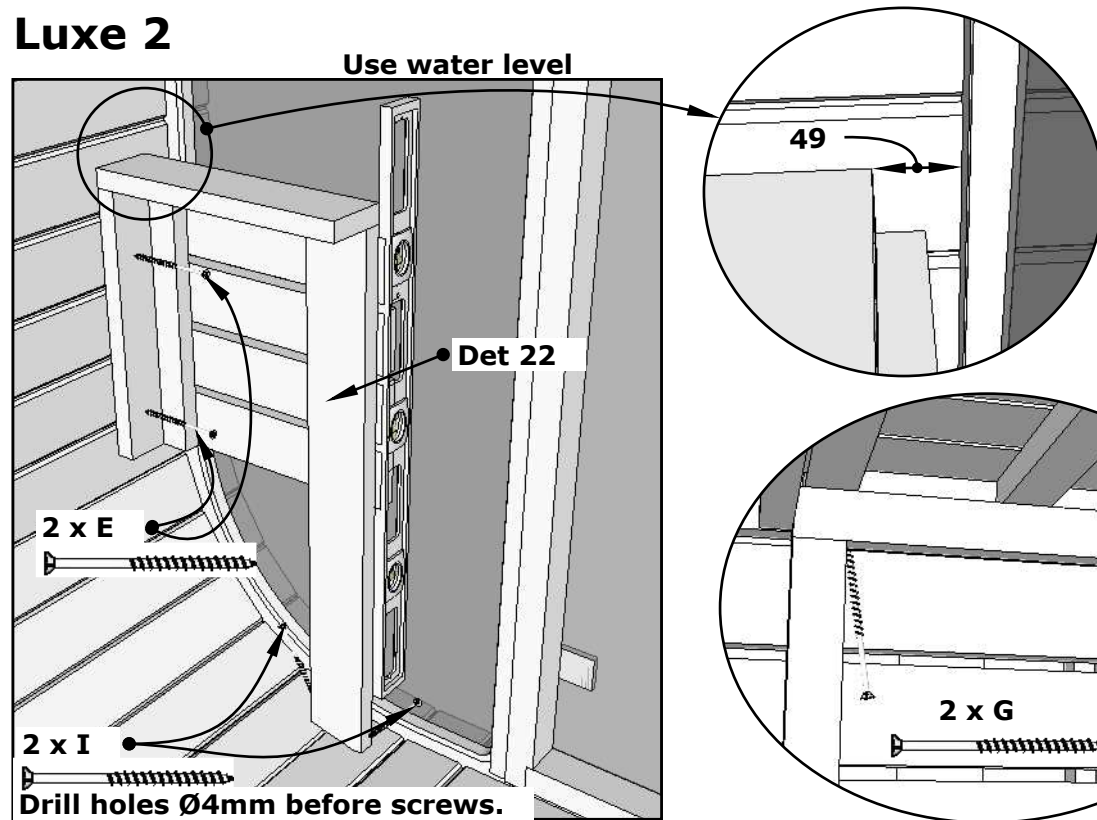


I

12 III

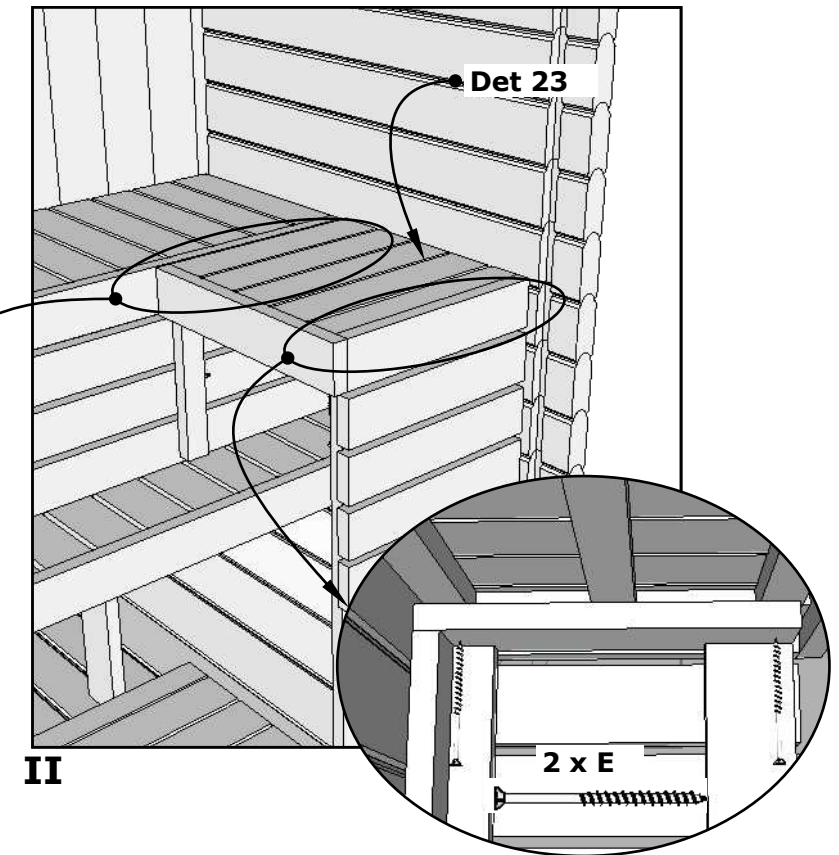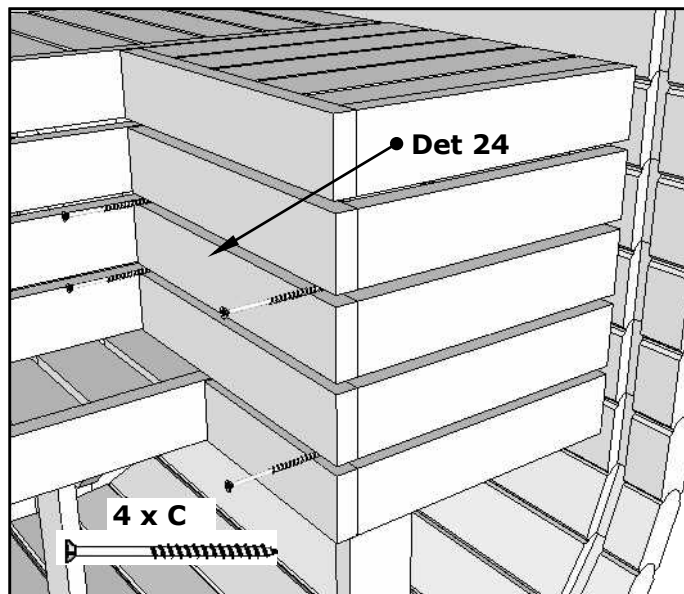


II


IV

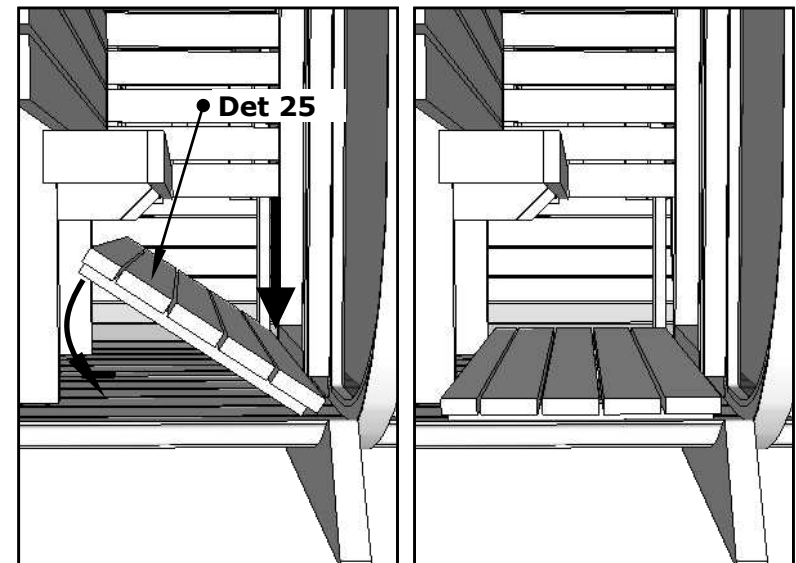


Luxe 2

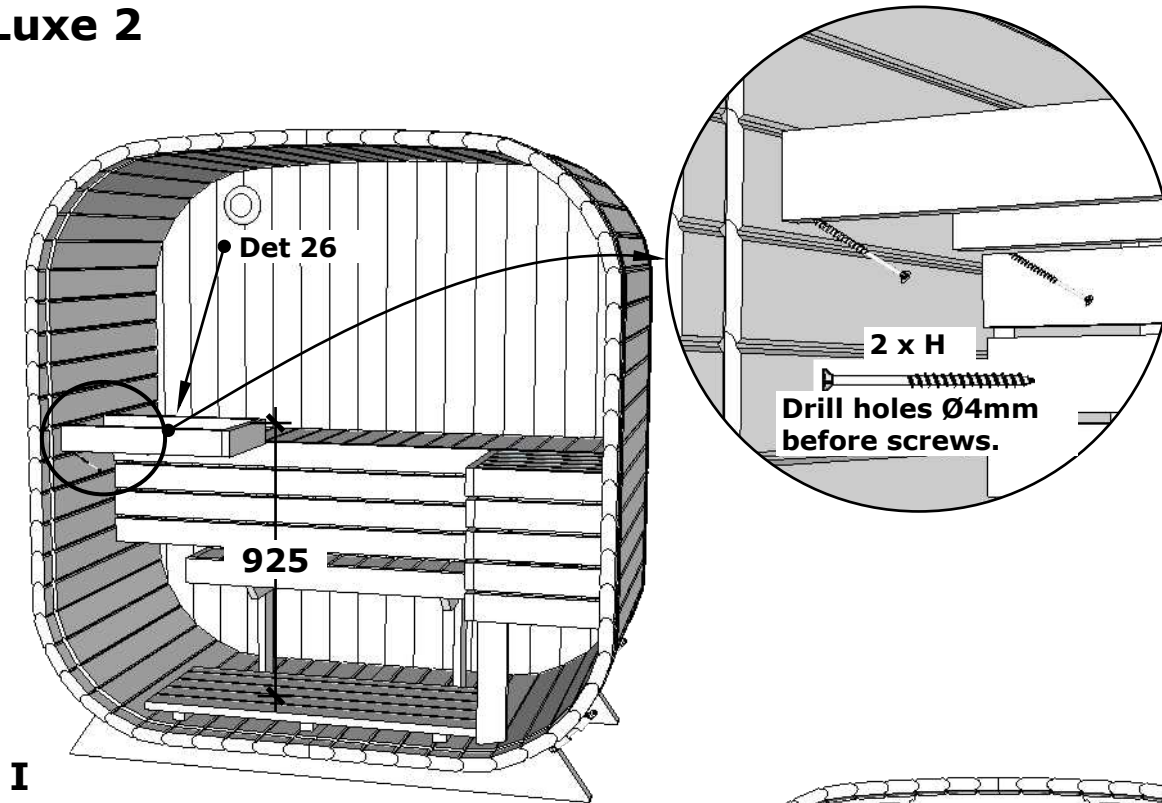


I

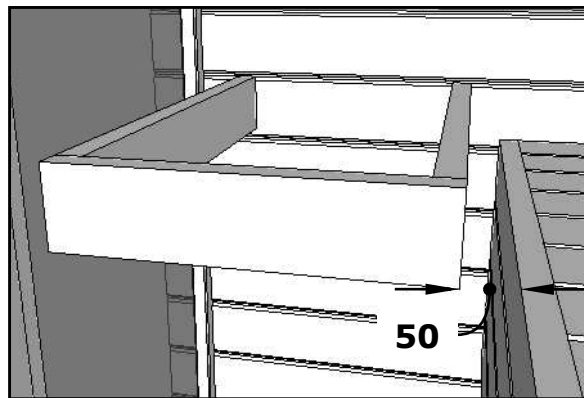

13


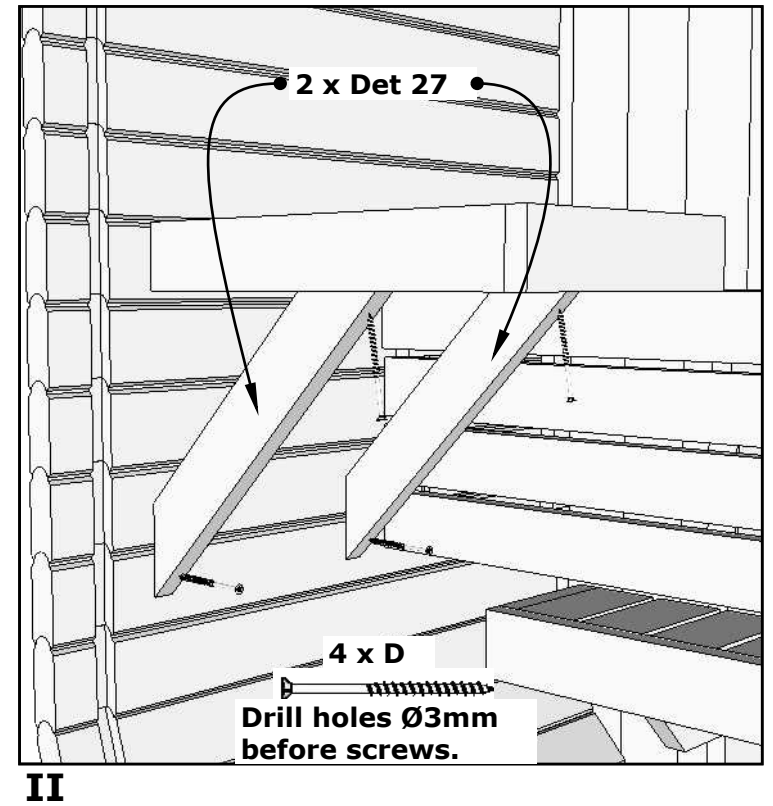


II

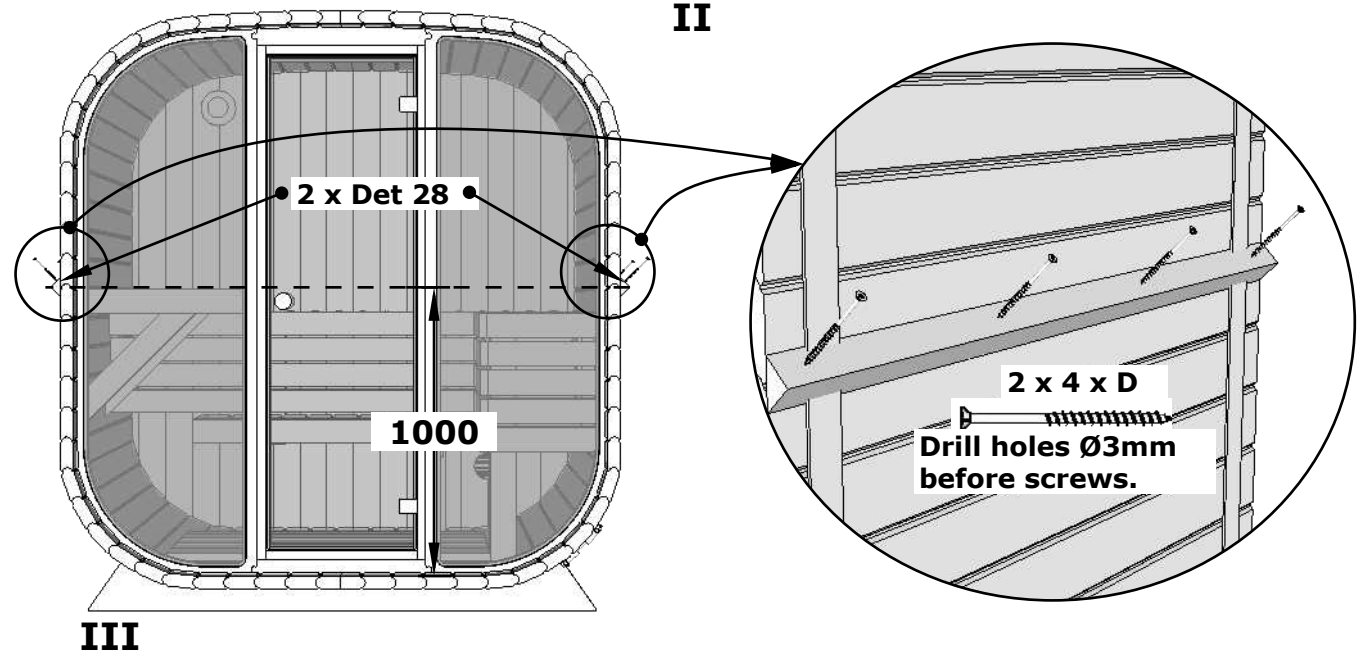

III

Luxe 2

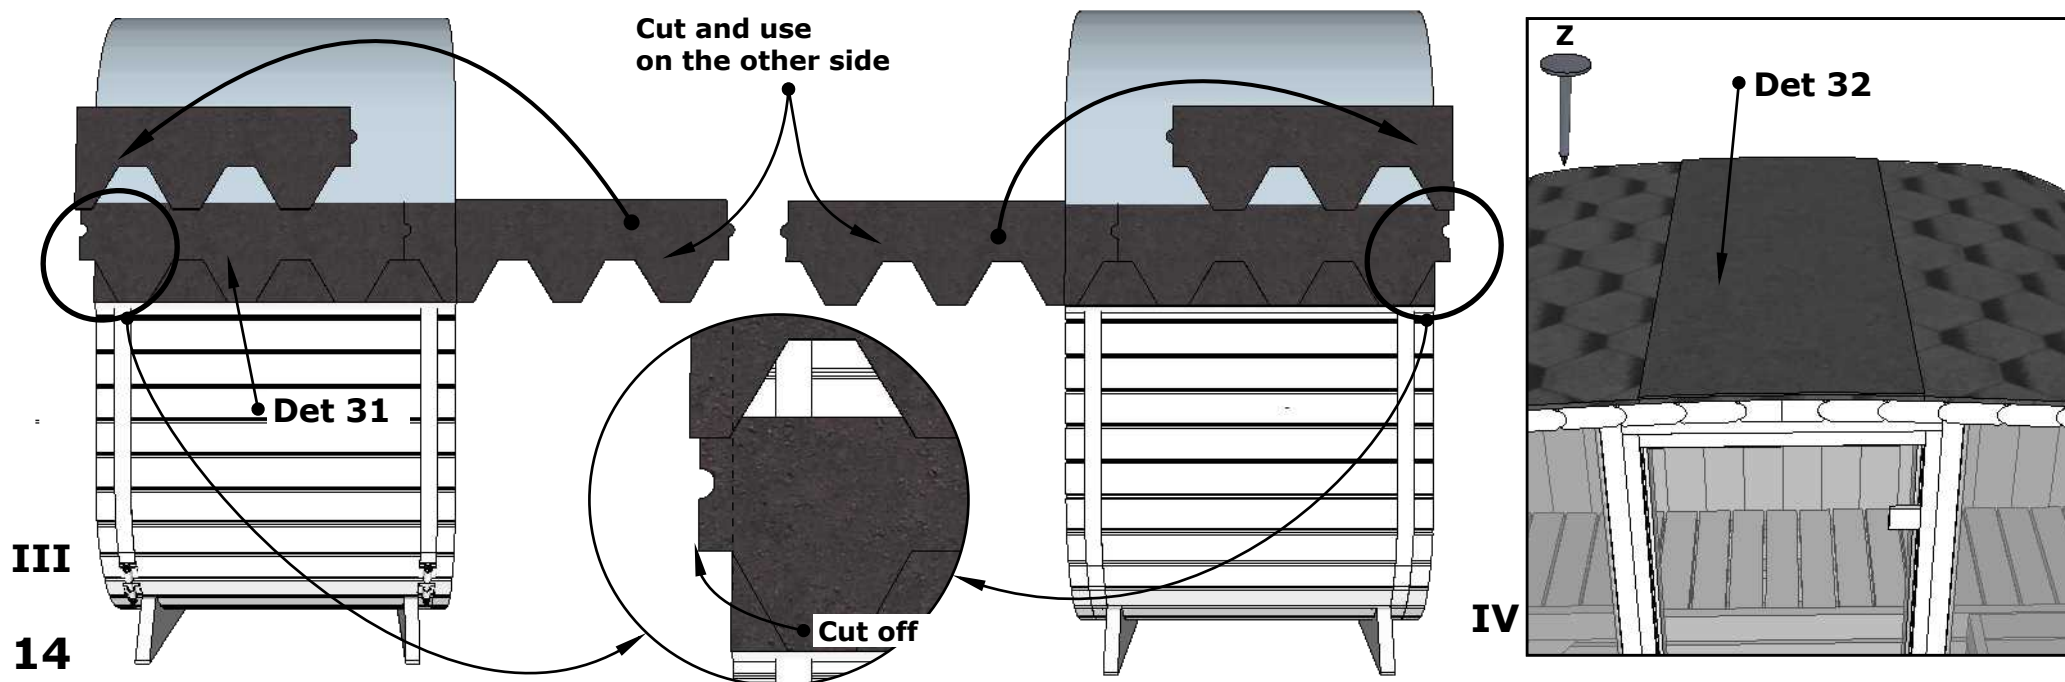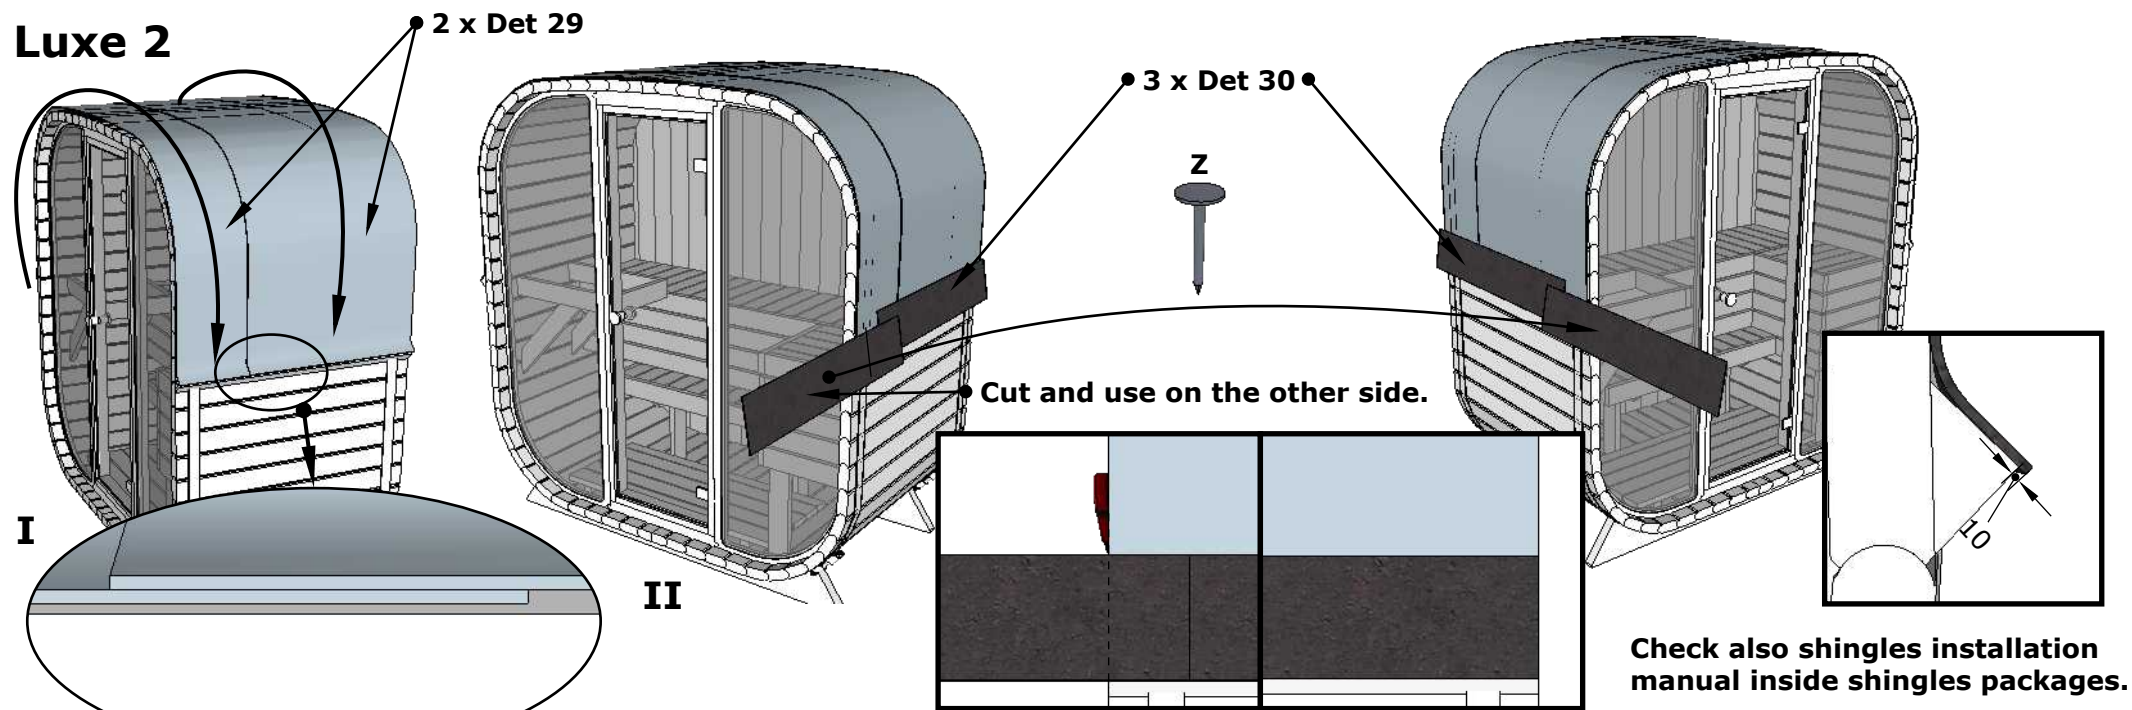

Luxe 2

