


# Sauna "Frodo" 500

**Please read the whole manual  
before You start.**

**All given measurements are in millimeters.**

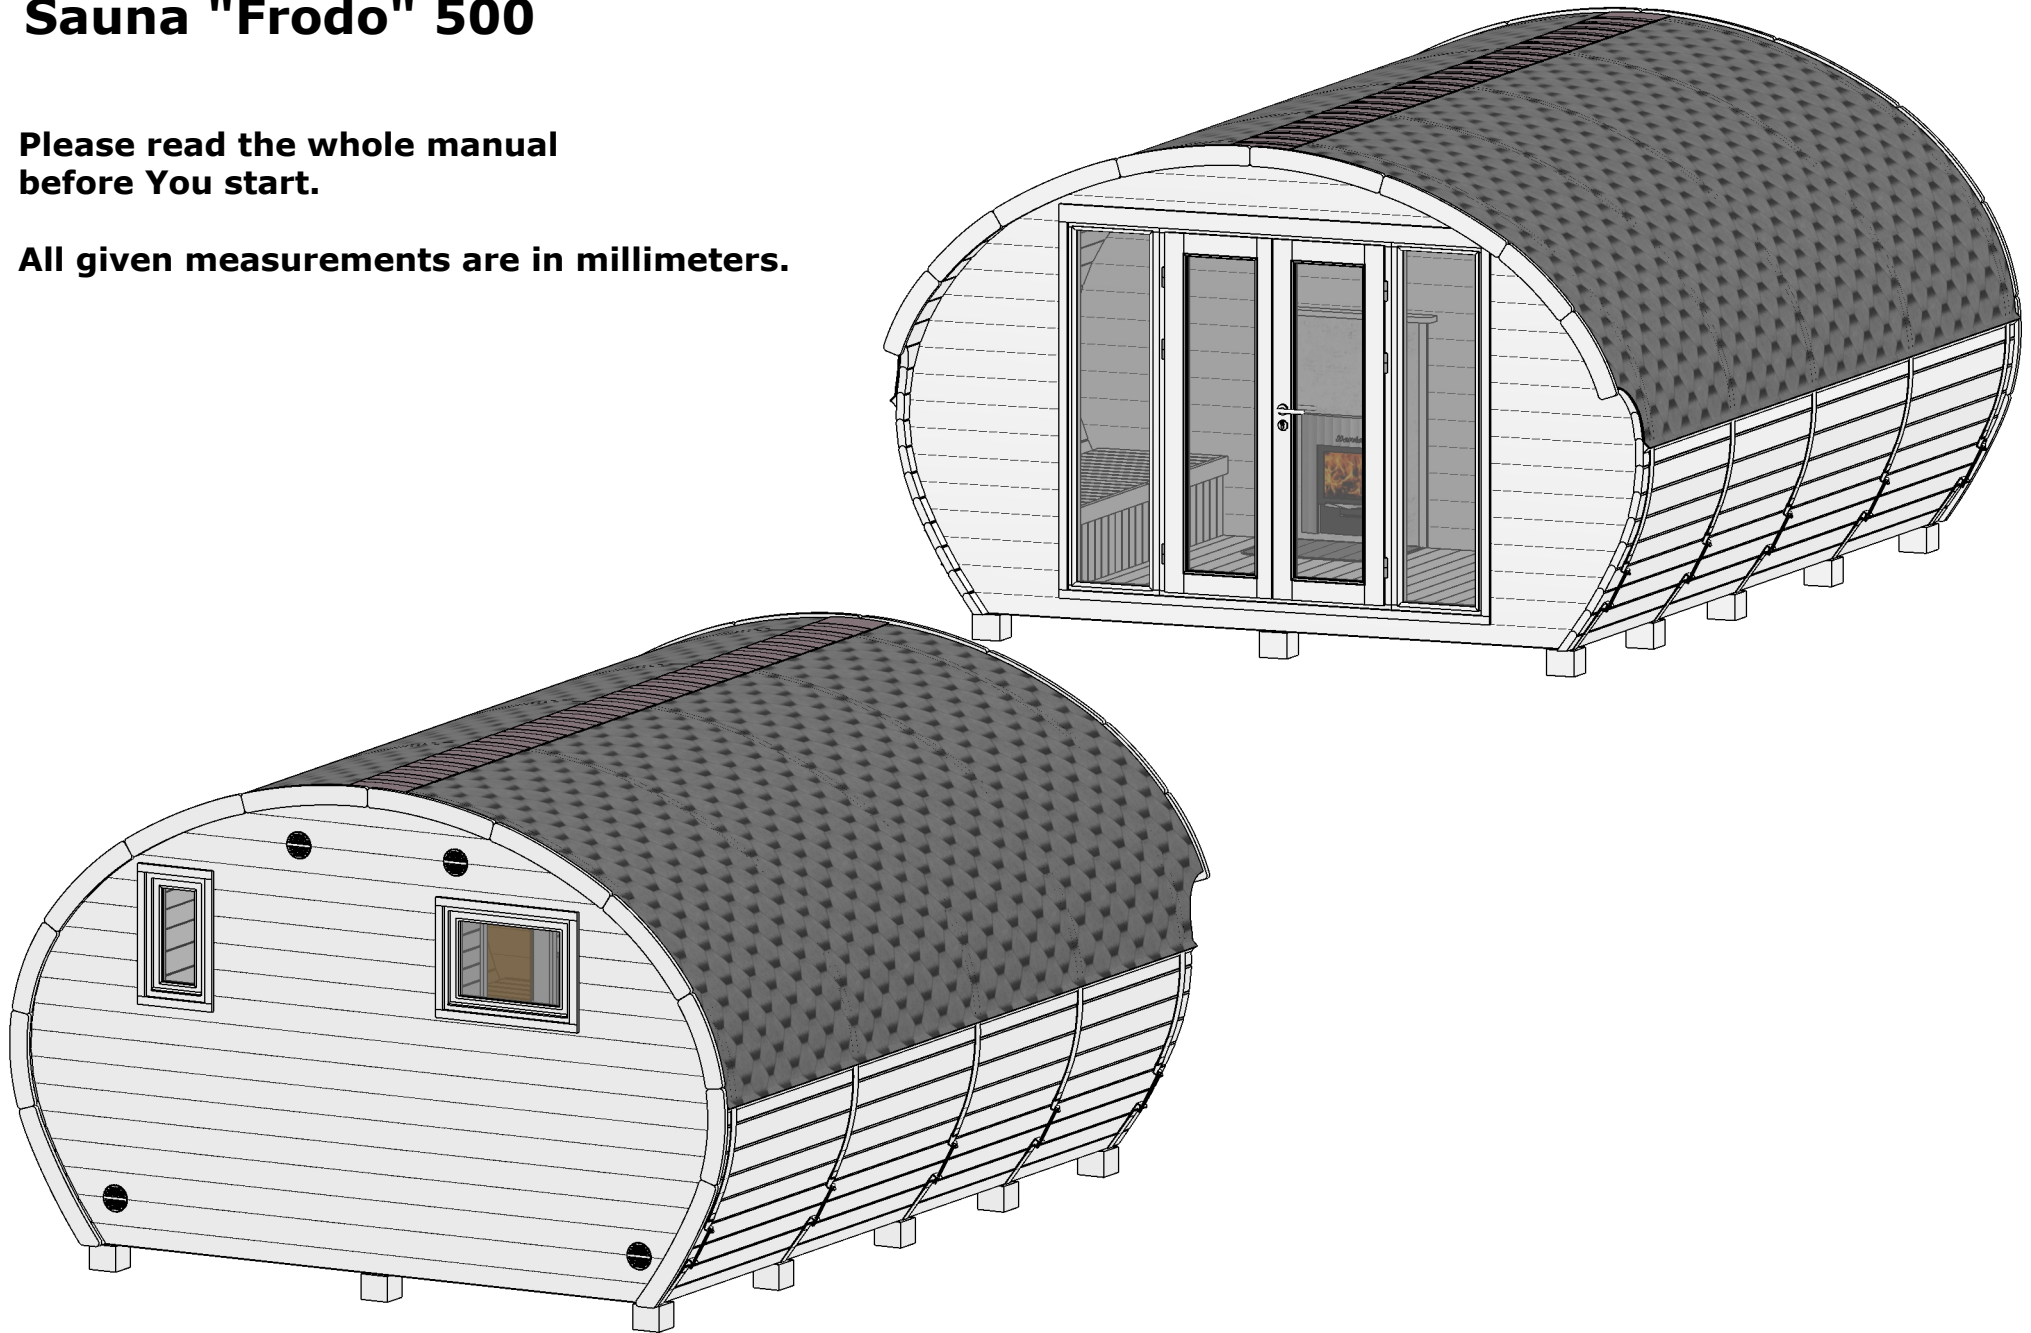


( FRO-005 )






# Sauna "Frodo" 500

## Details list 2.

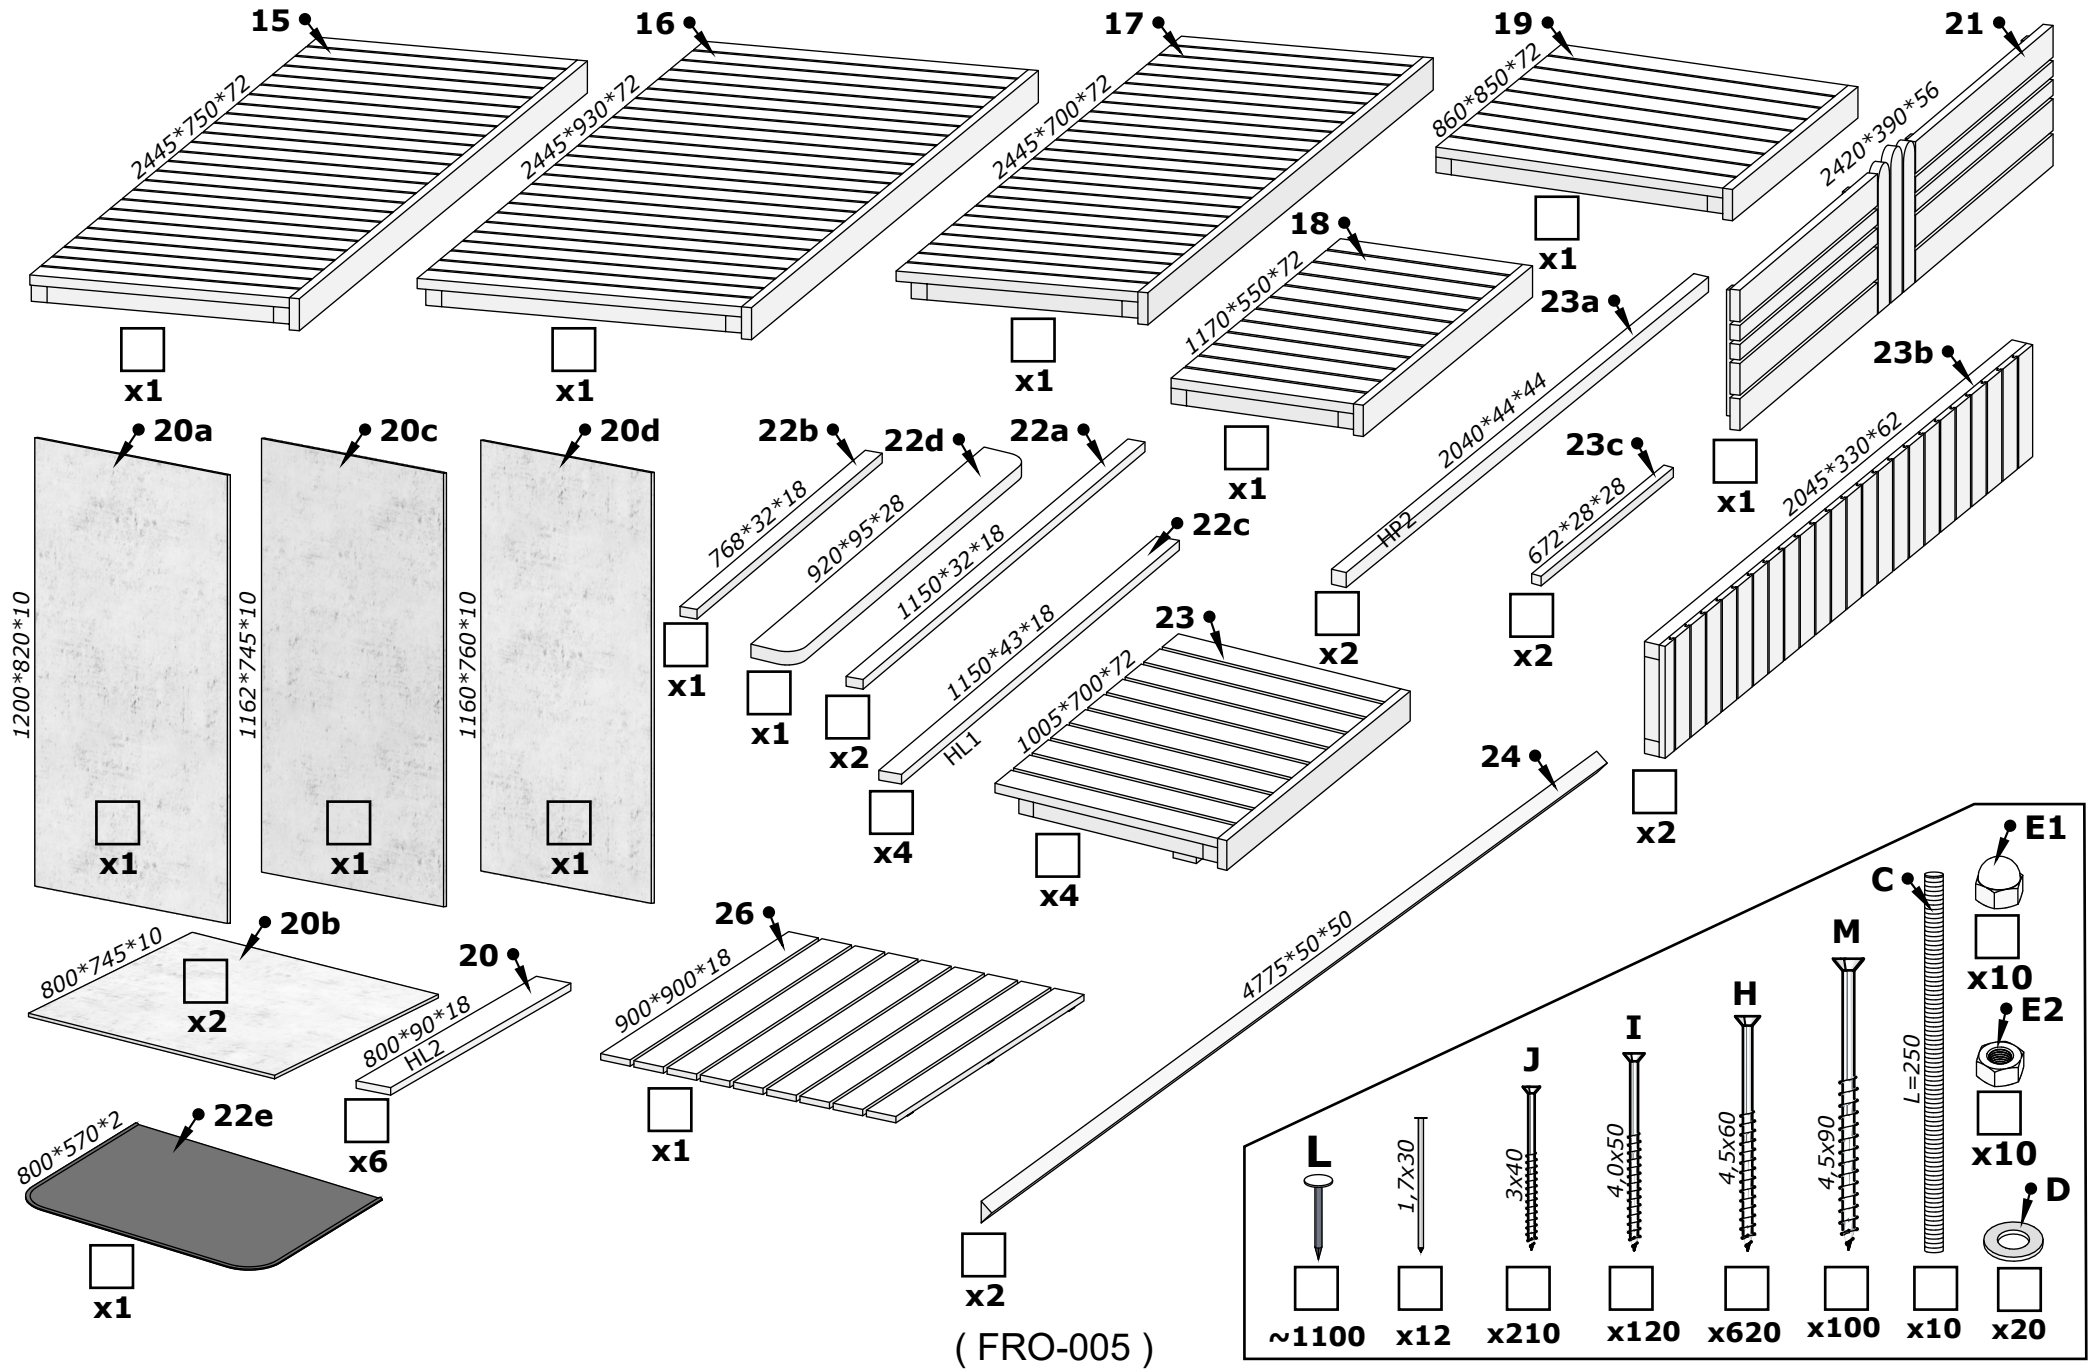




# Frodo 500

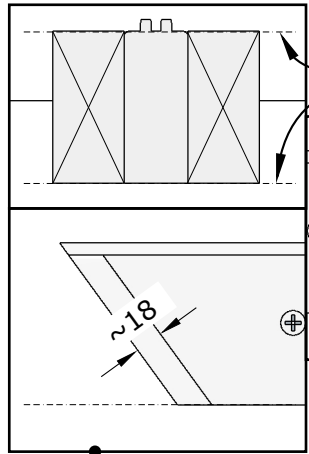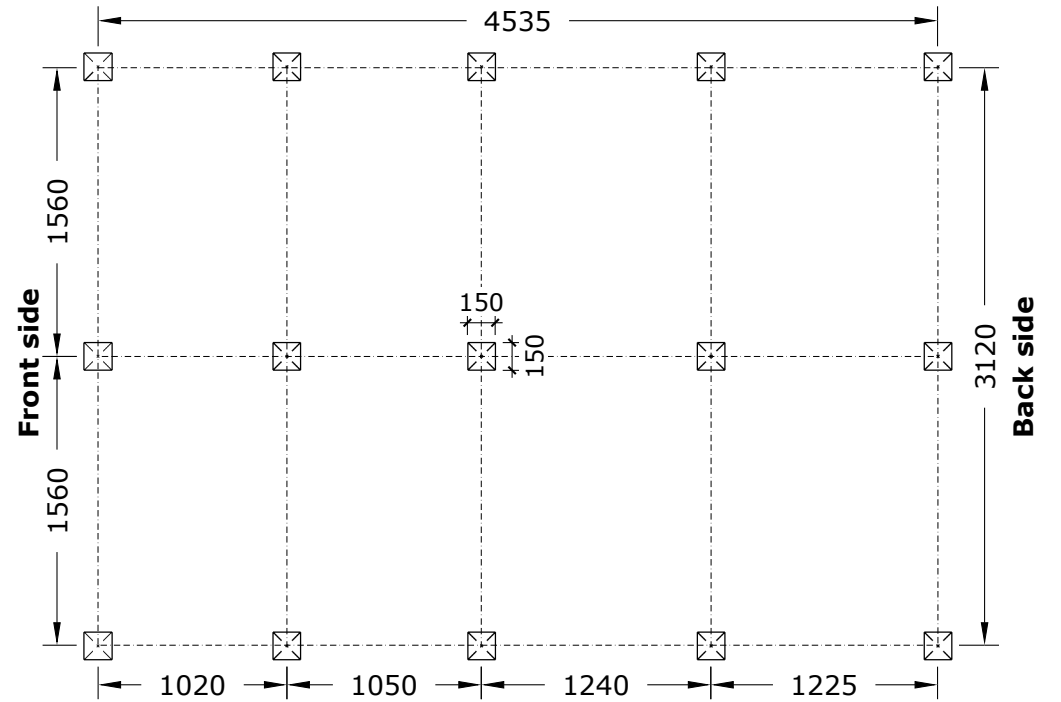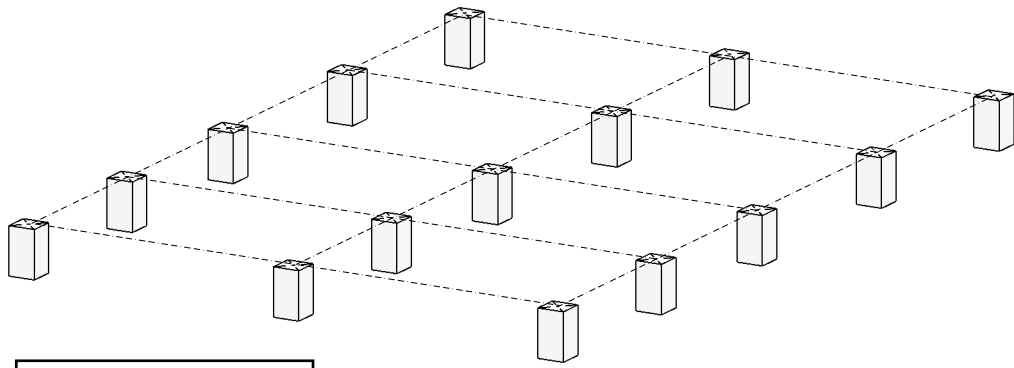

Top and bottom on same level.

I

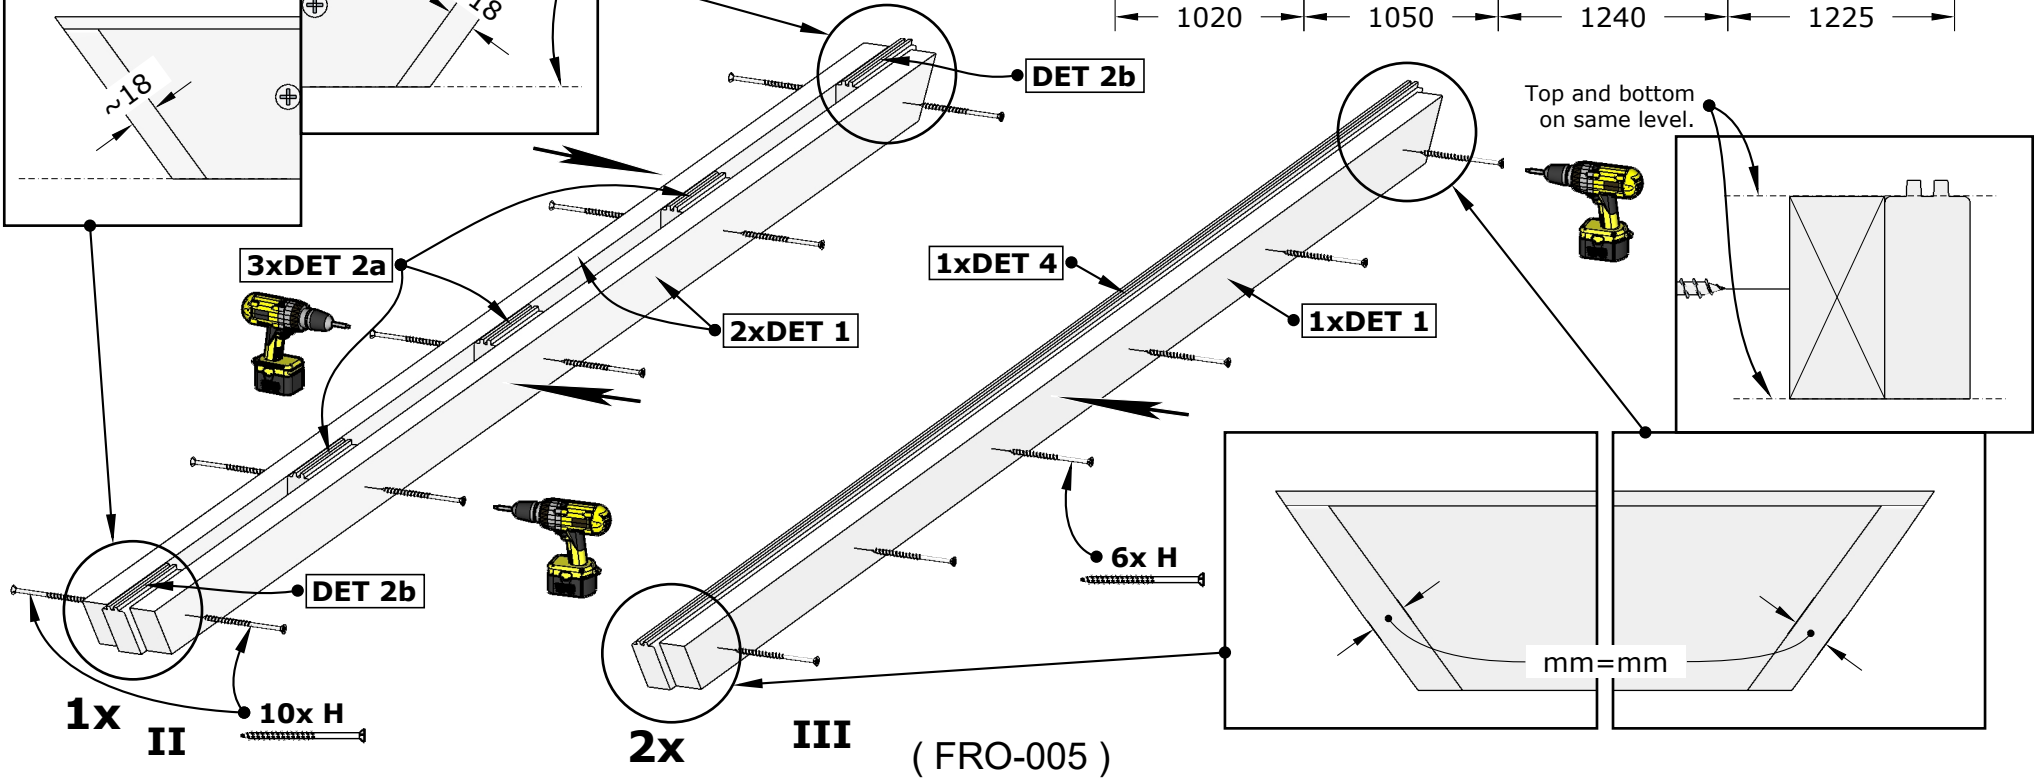

1.


1x

II



2x

III


# Frodo 500

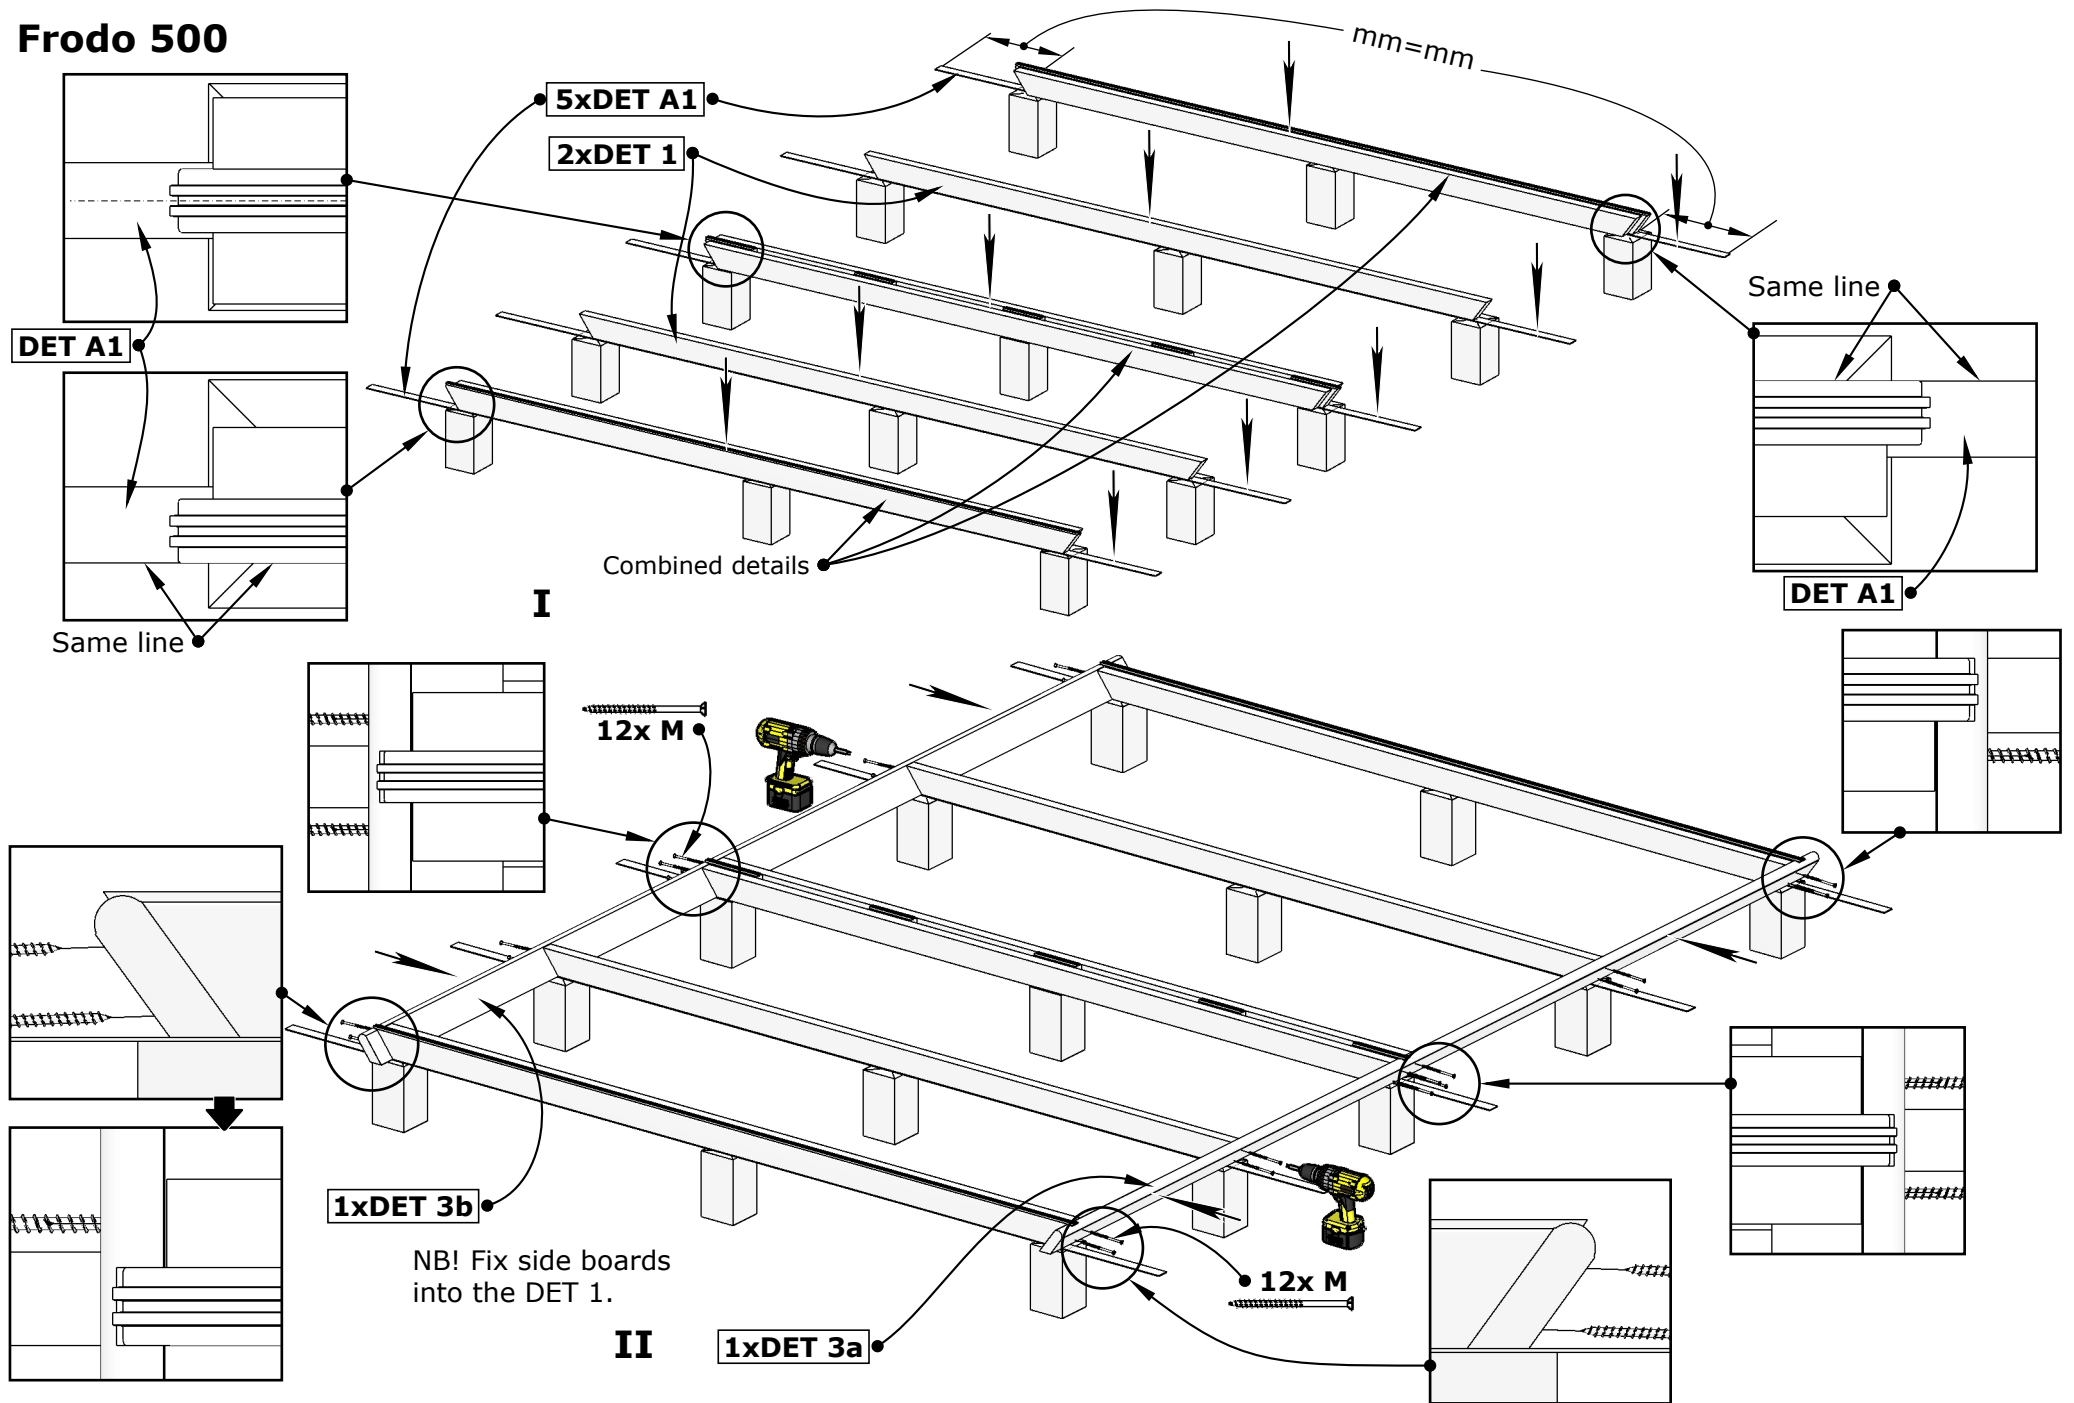



# Frodo 500

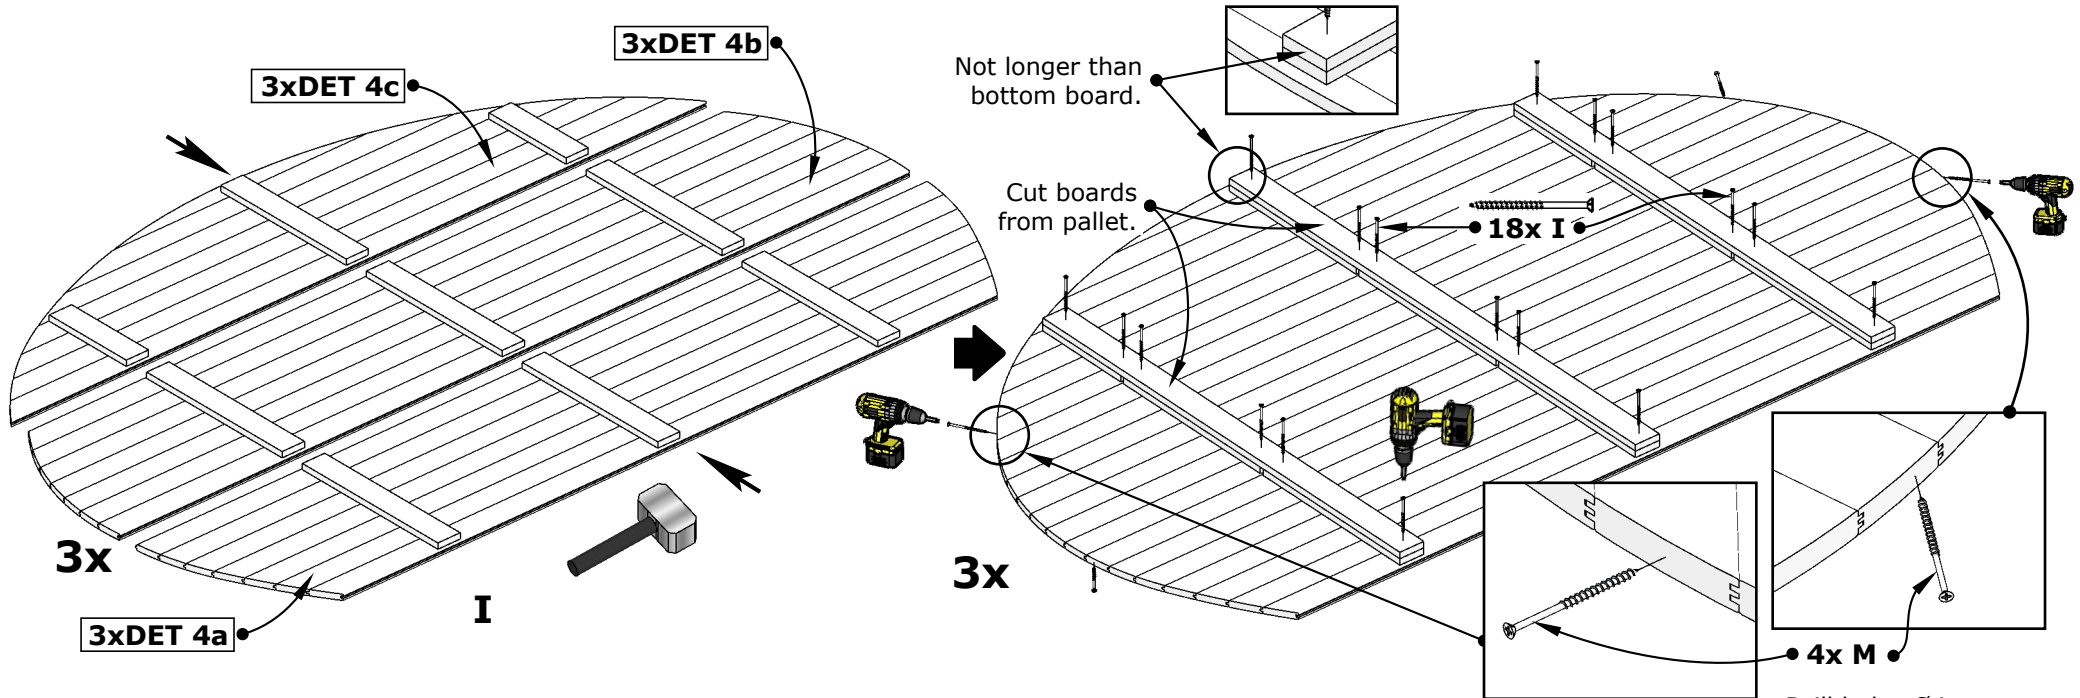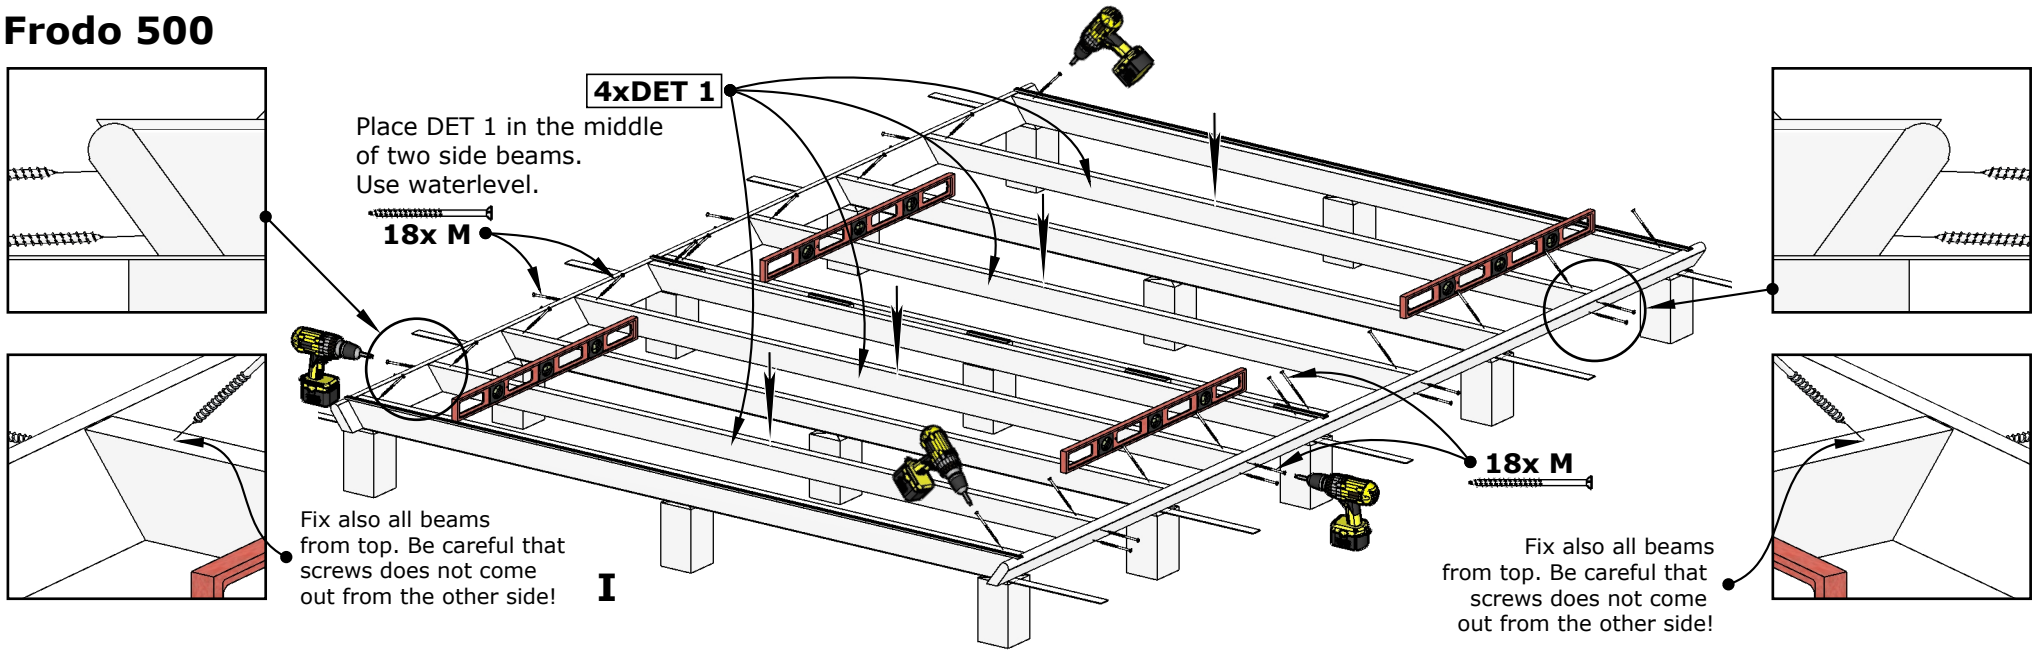

# Frodo 500

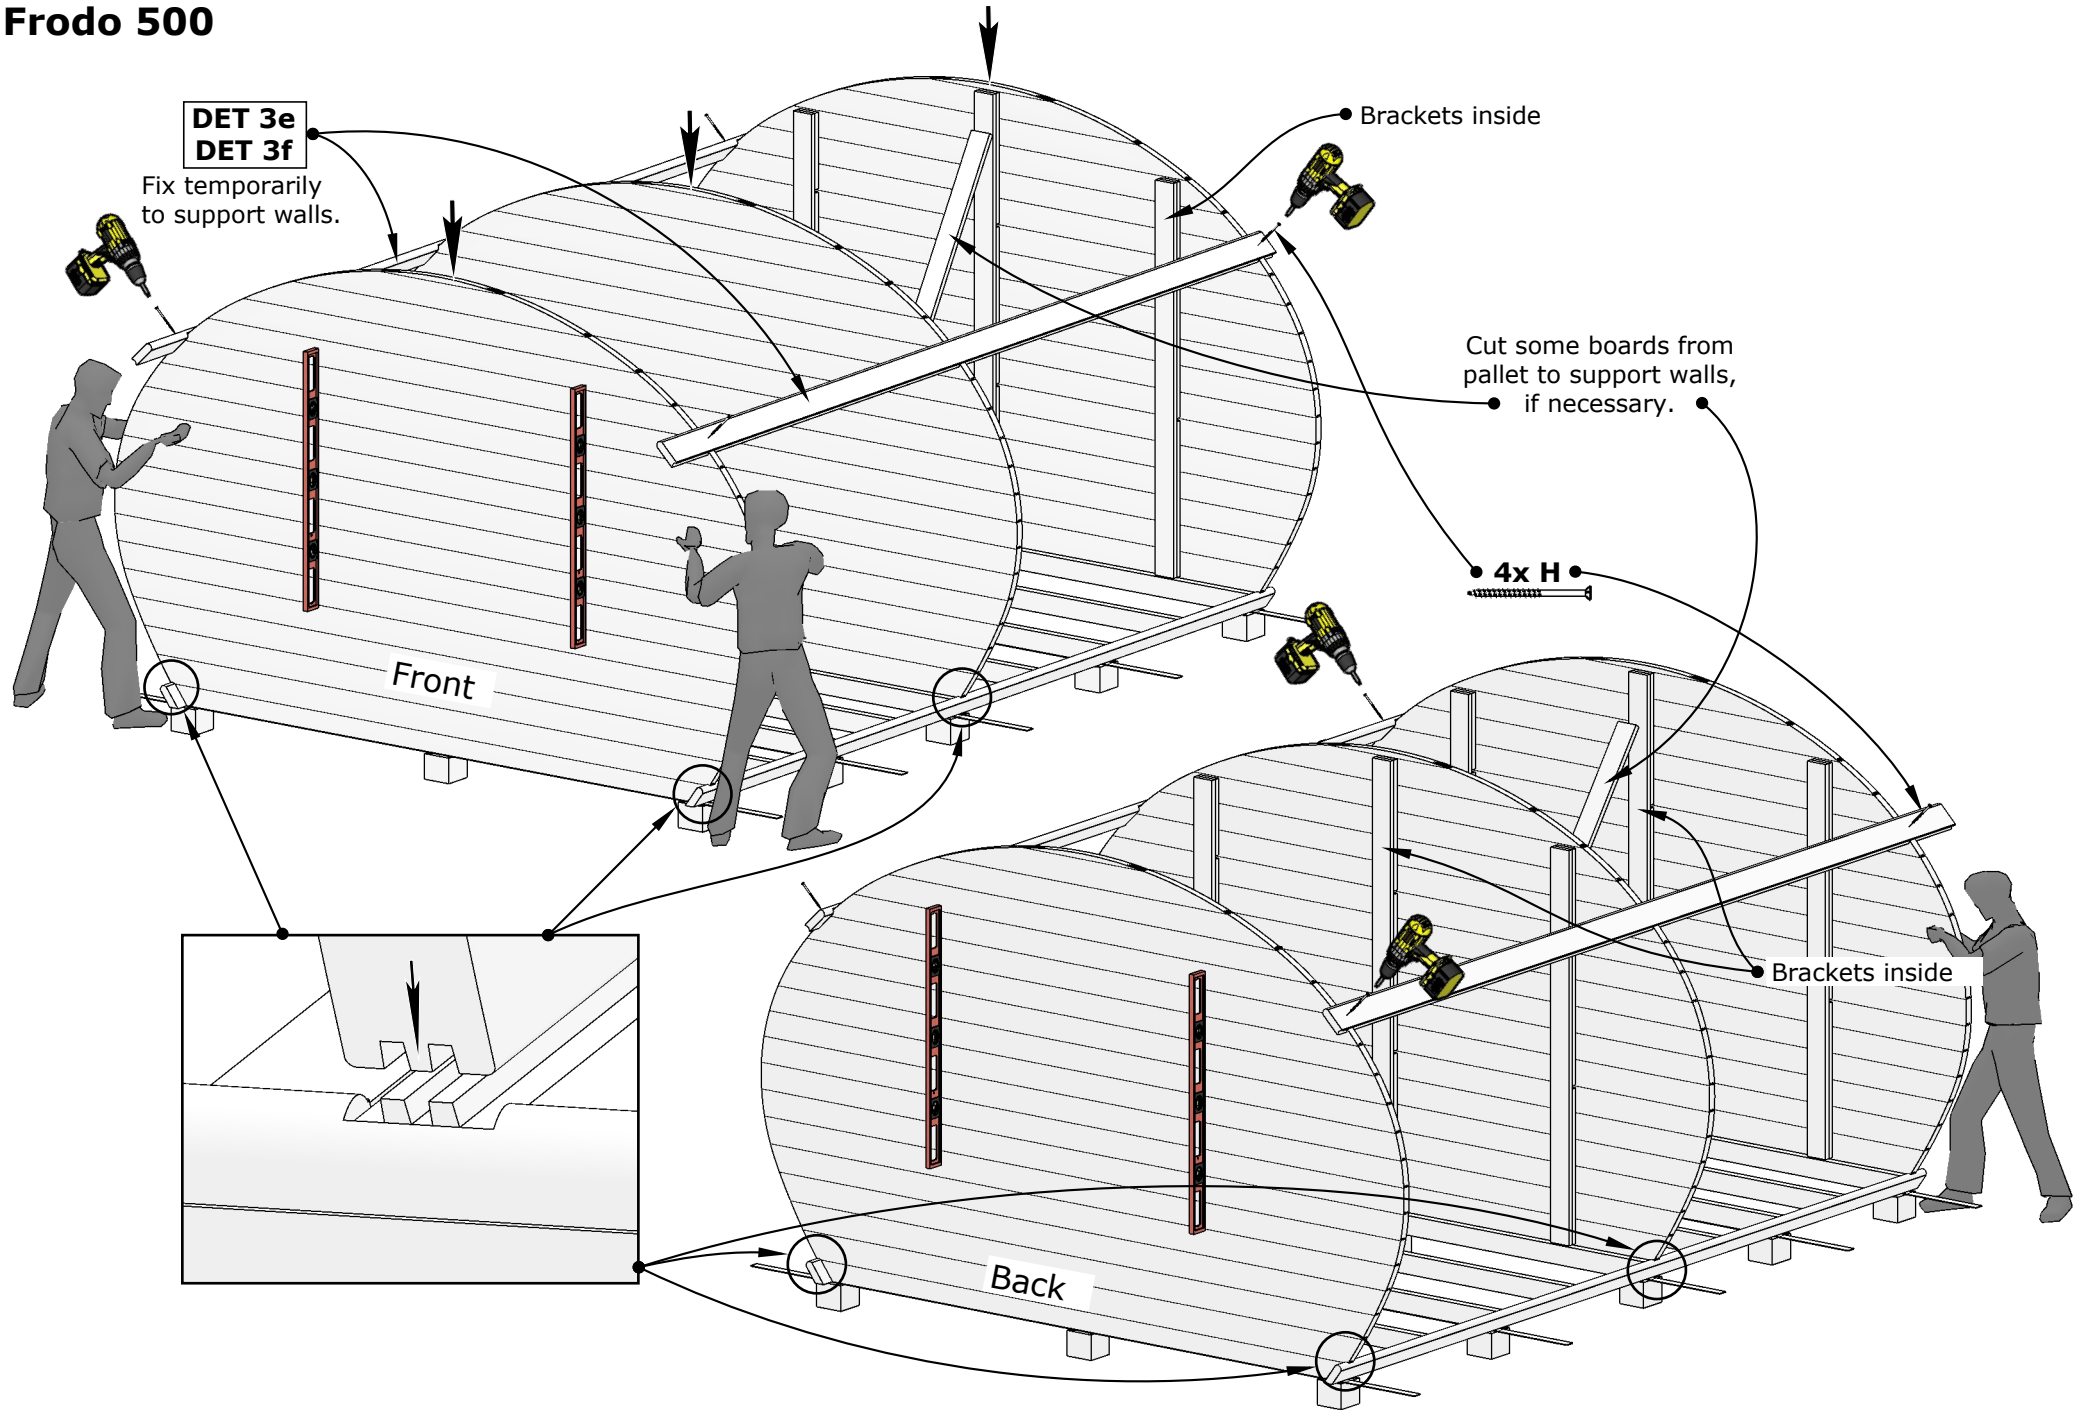


# Frodo 500

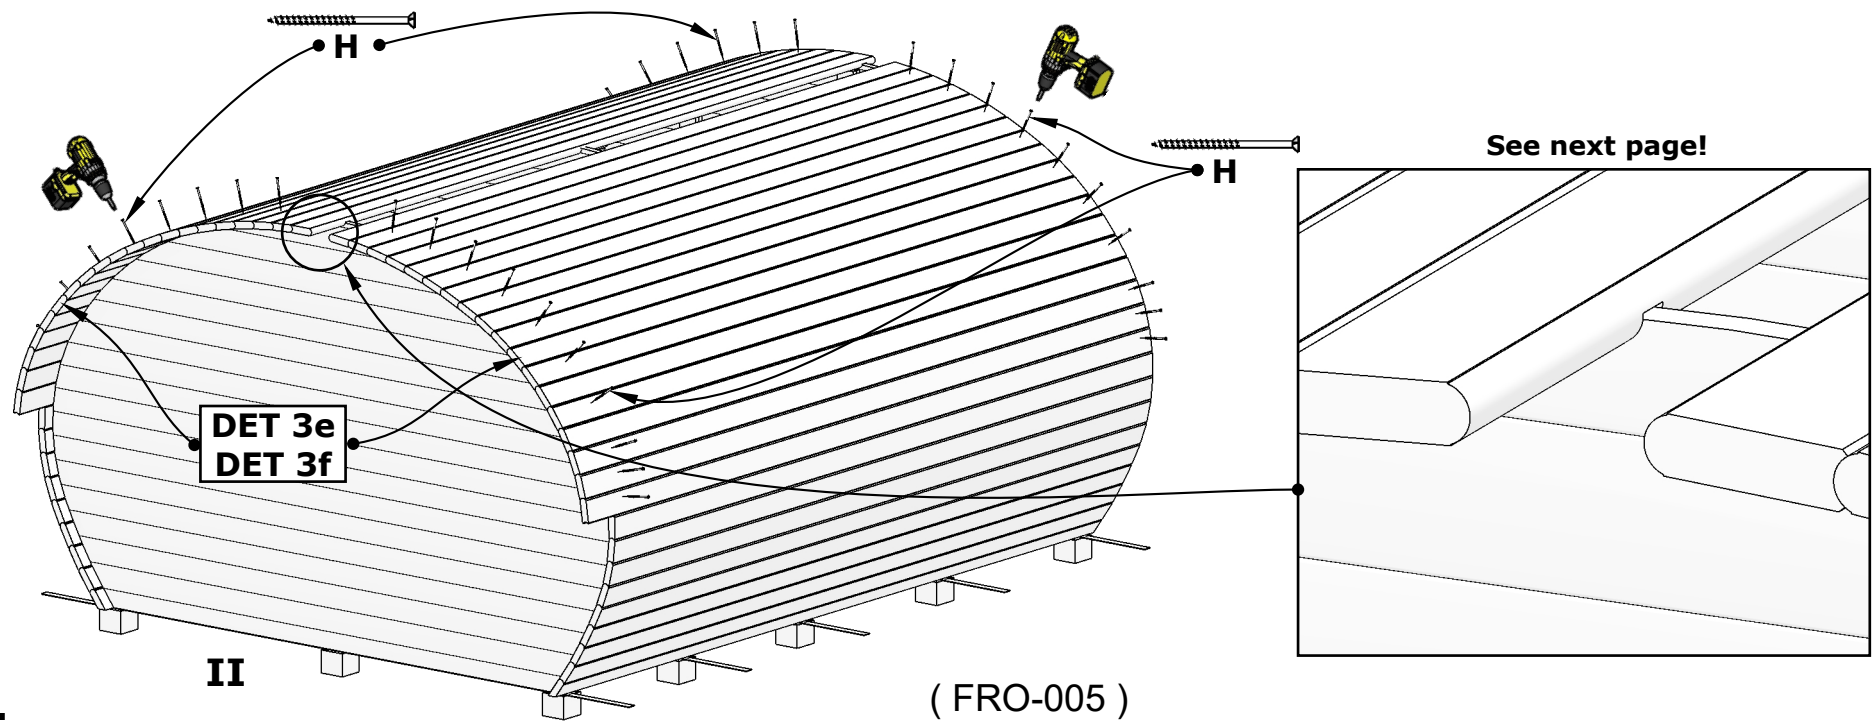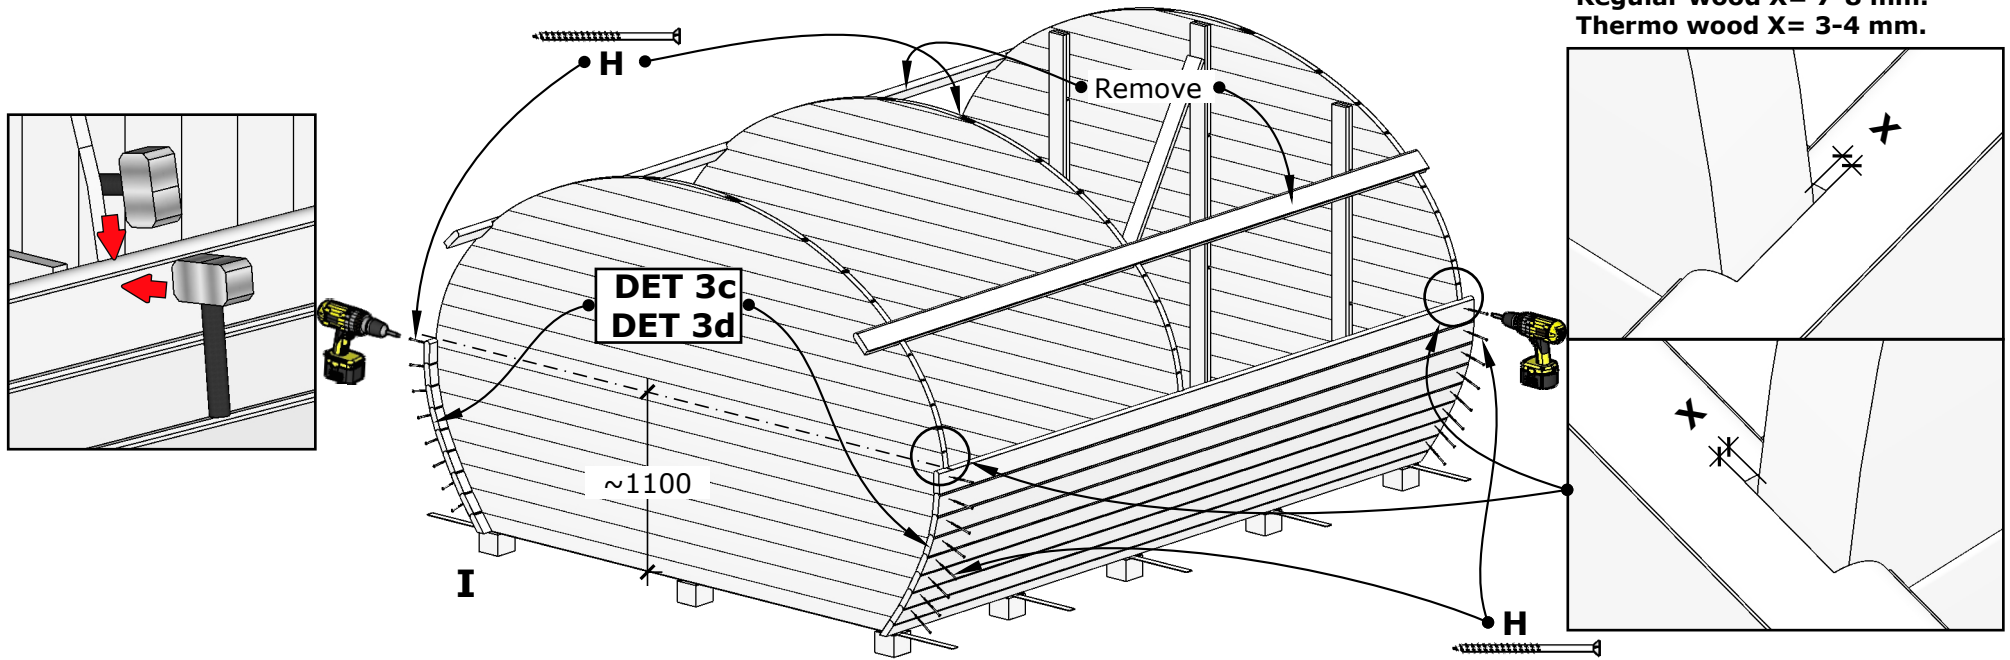


5.

( FRO-005 )

# Frodo 500

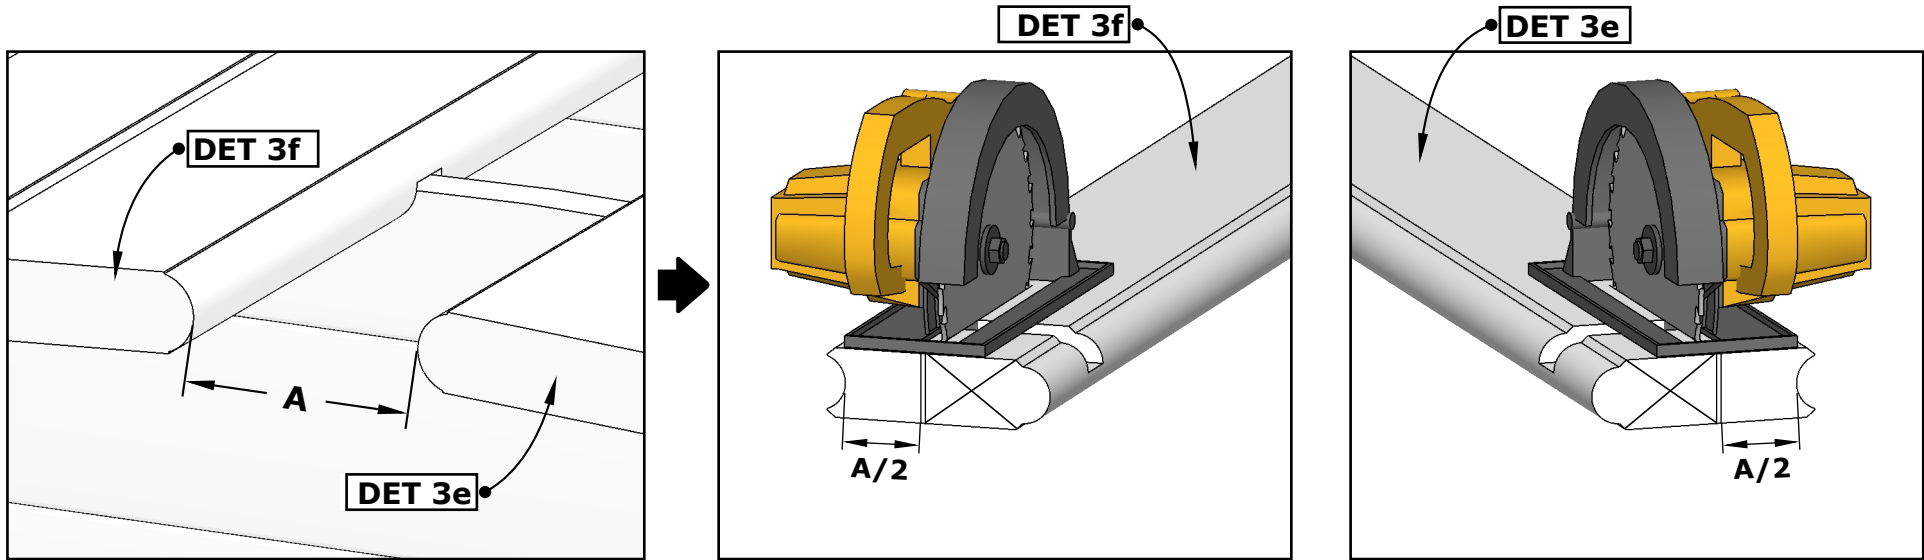

I

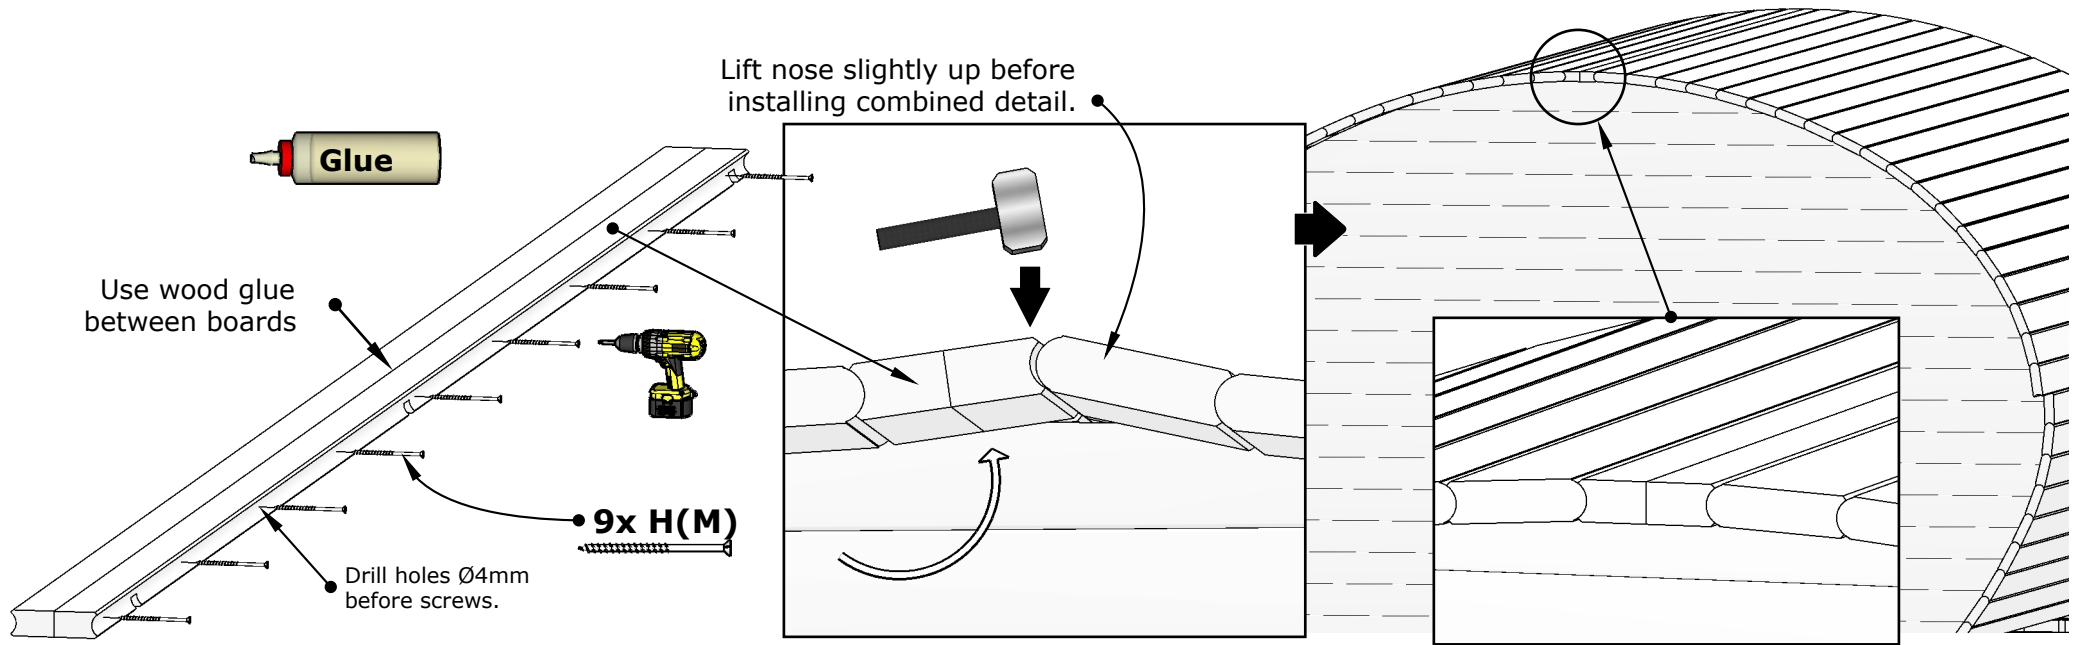


II


6.

( FRO-005 )

# Frodo 500

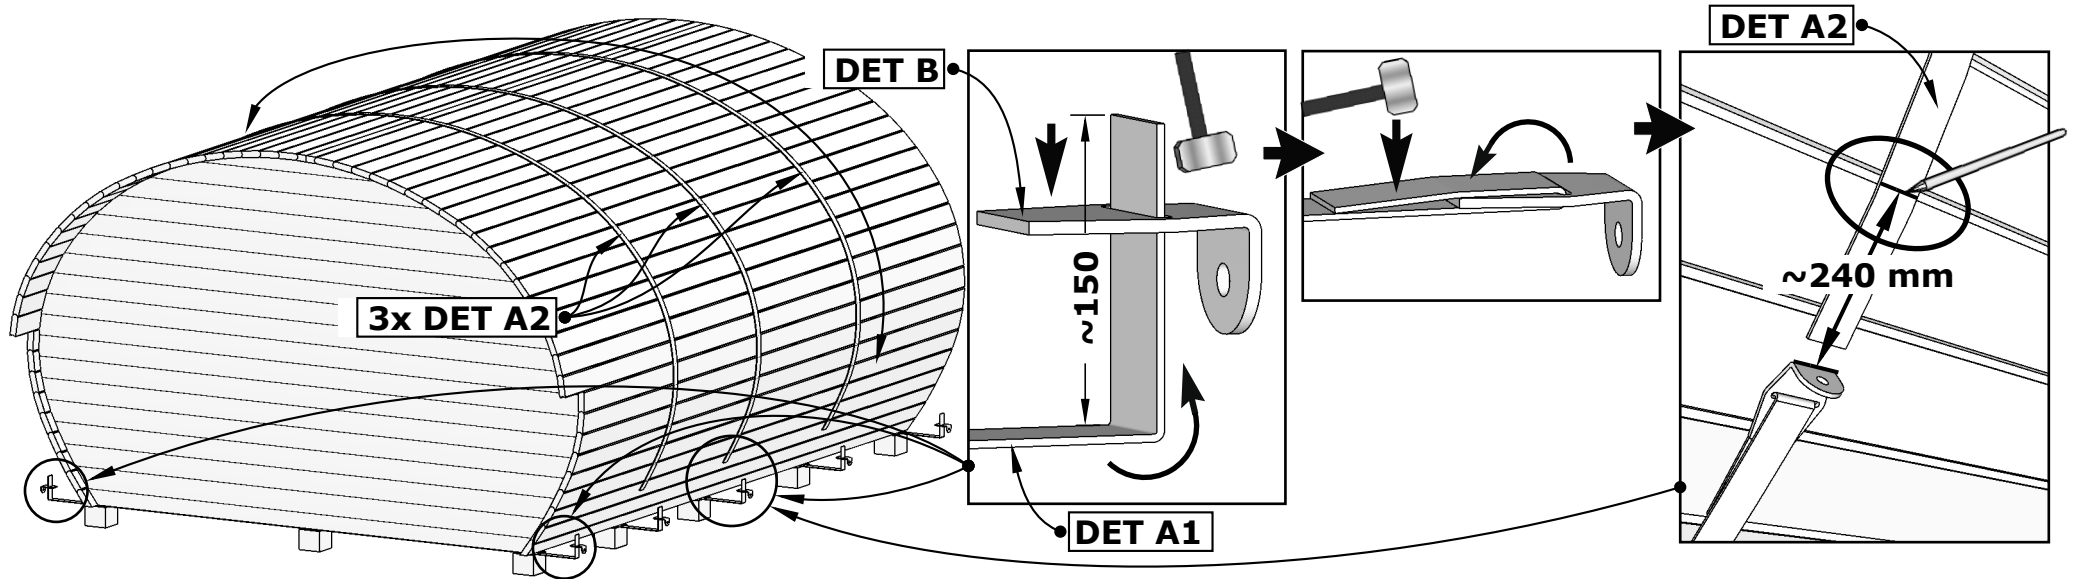





**I**

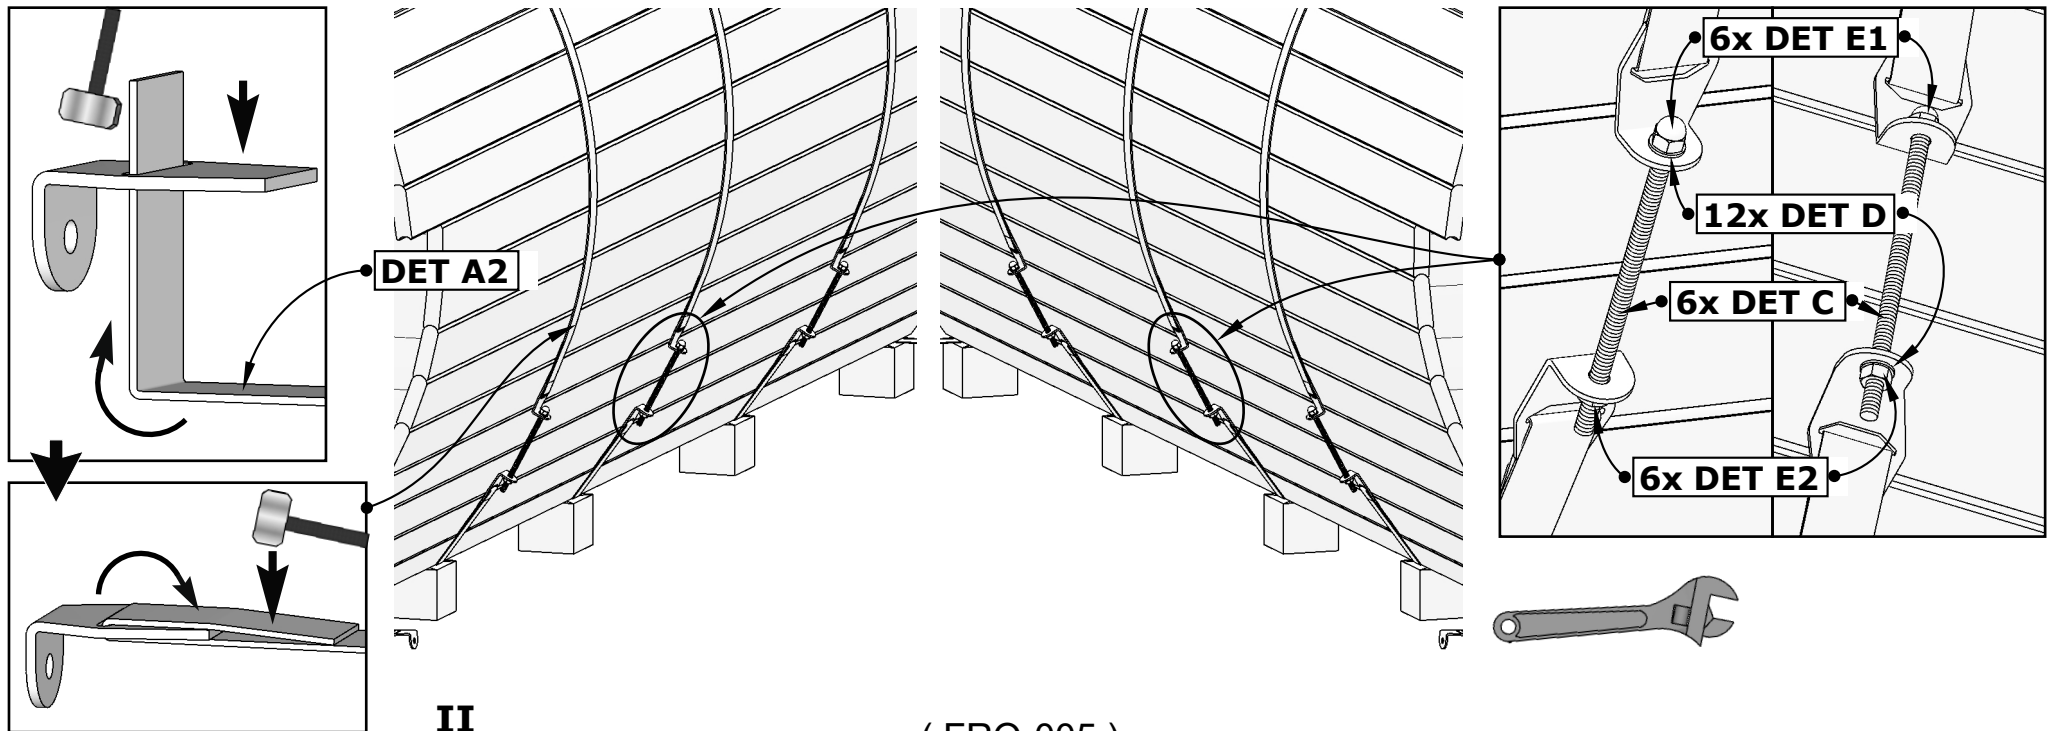





7.

( FRO-005 )


# Frodo 500

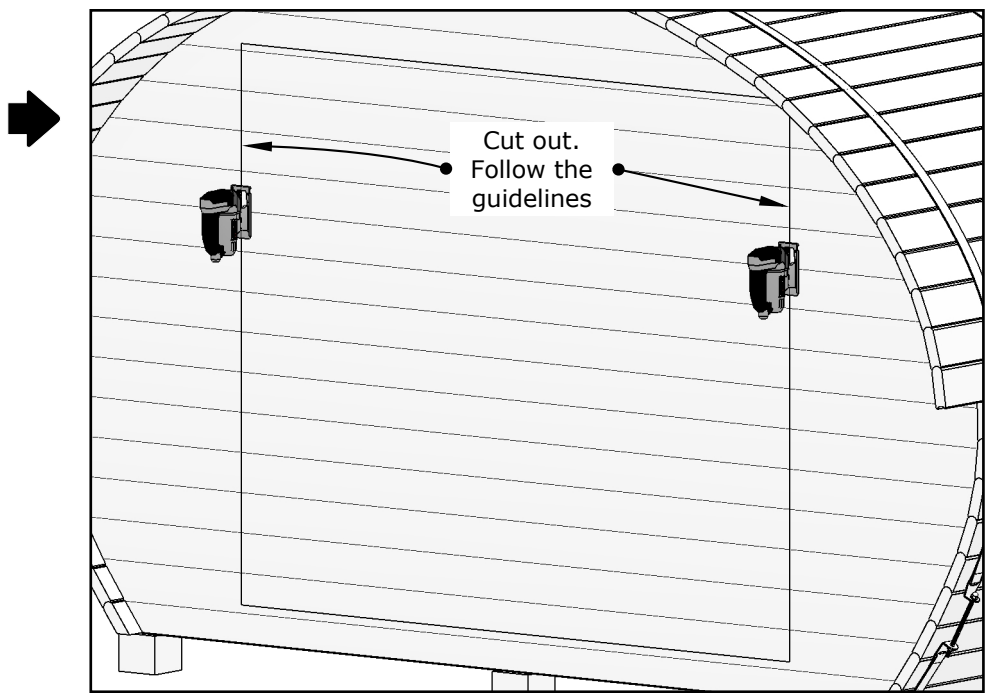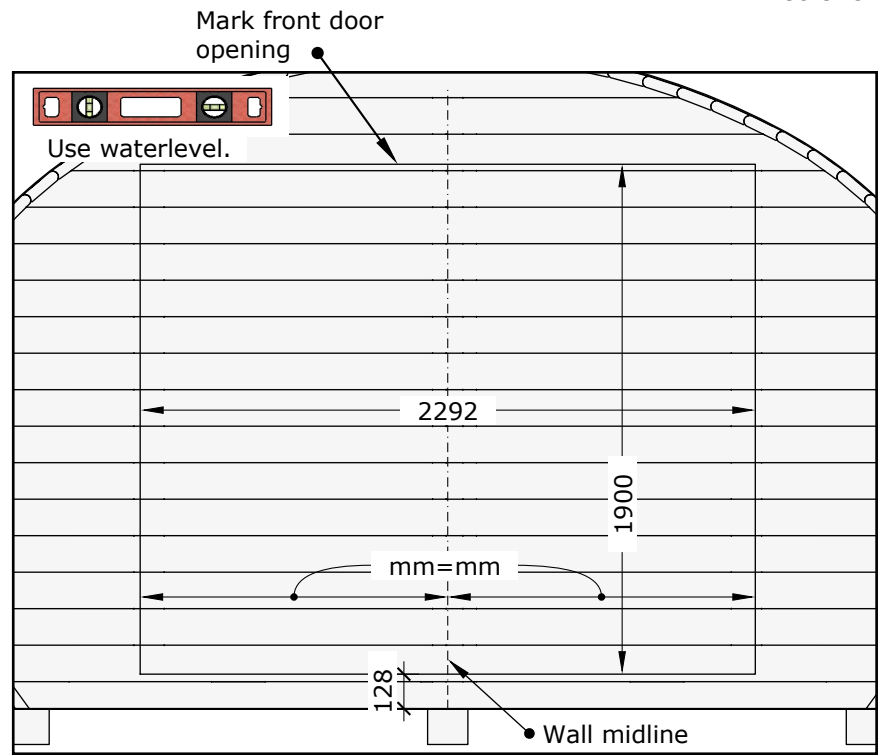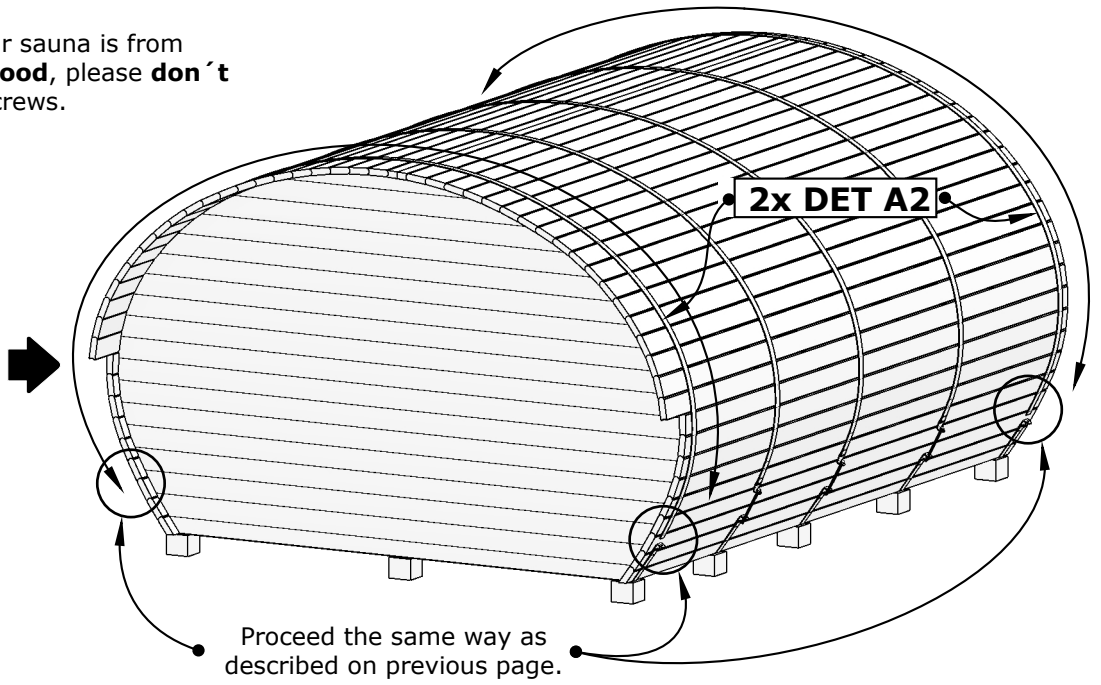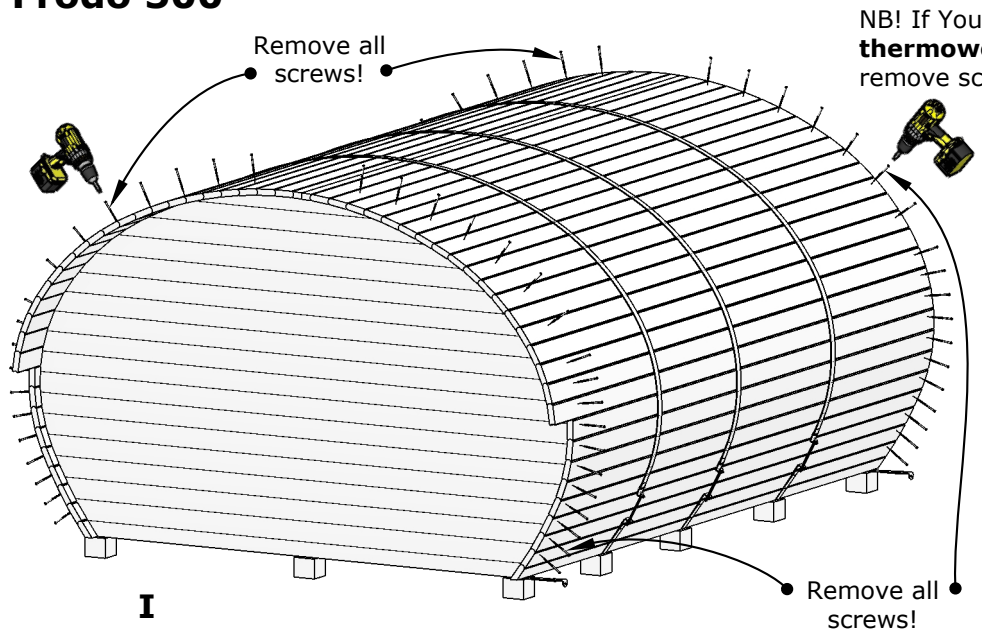


# Frodo 500

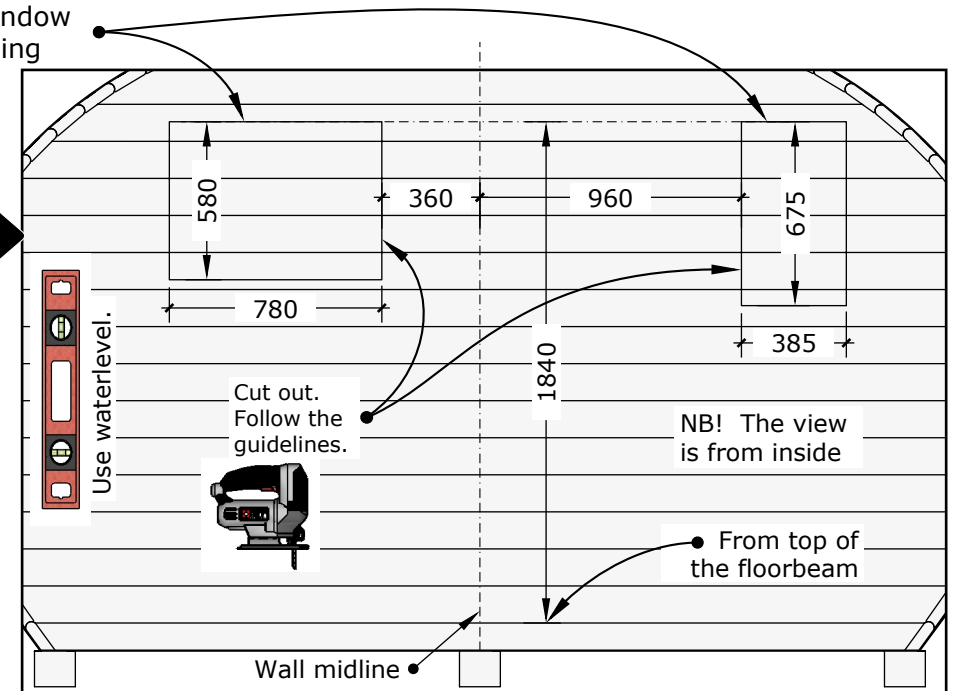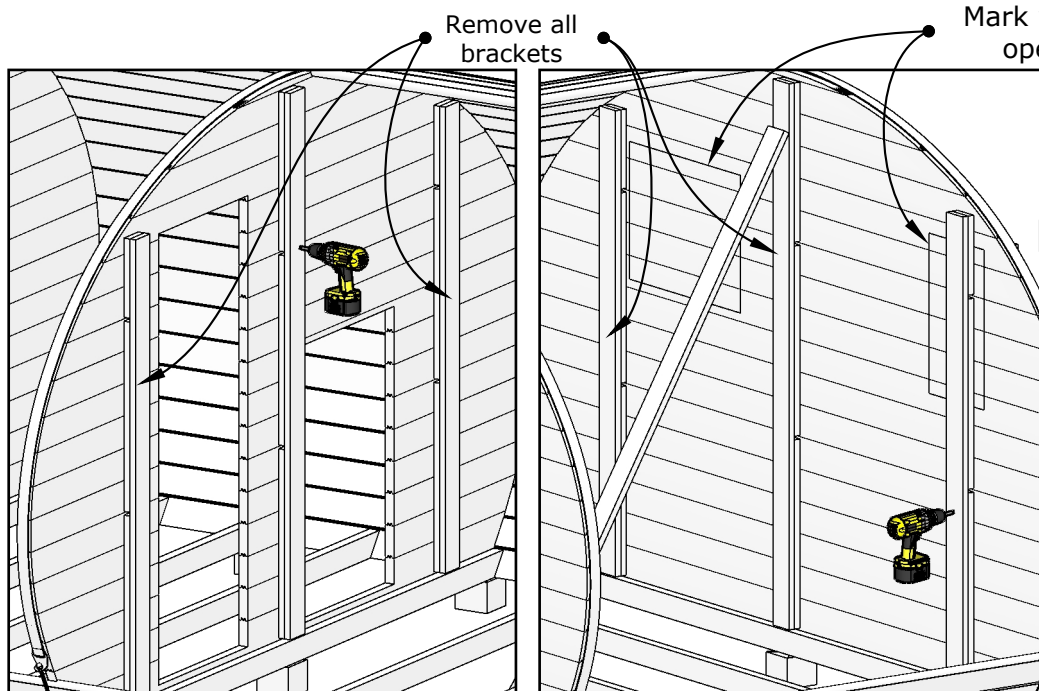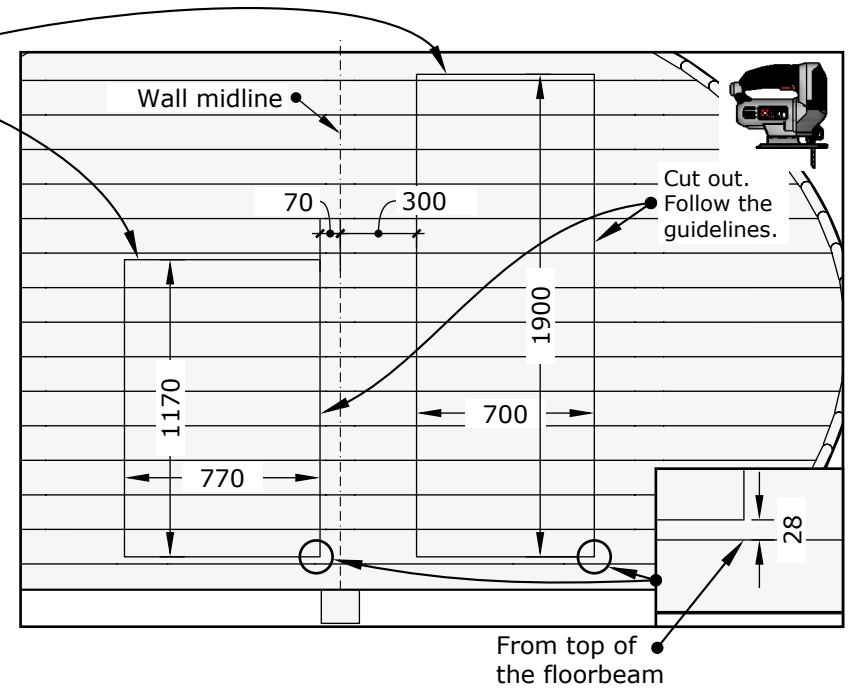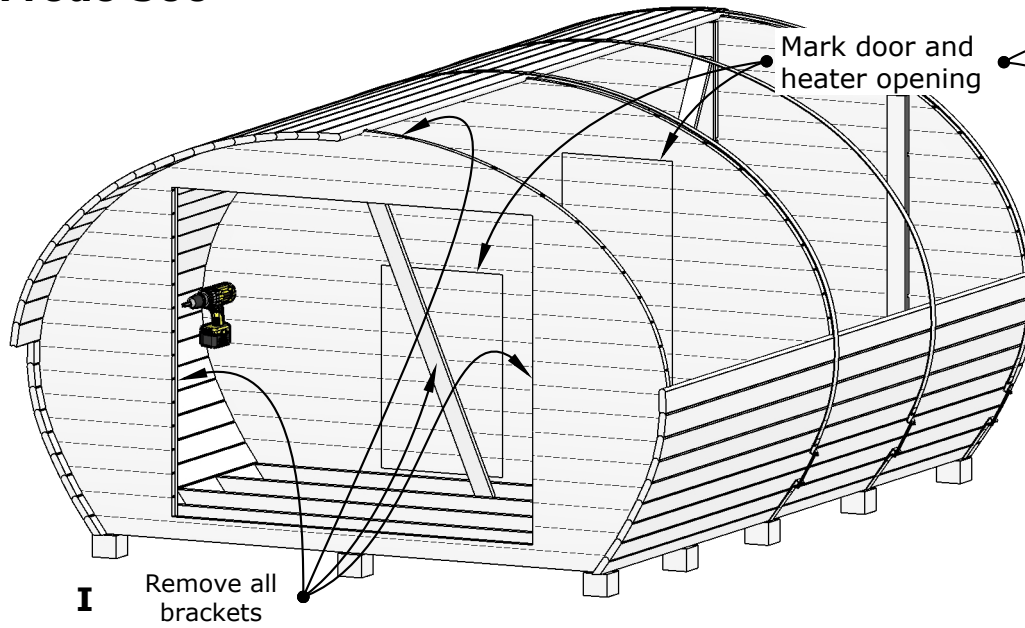

# Frodo 500

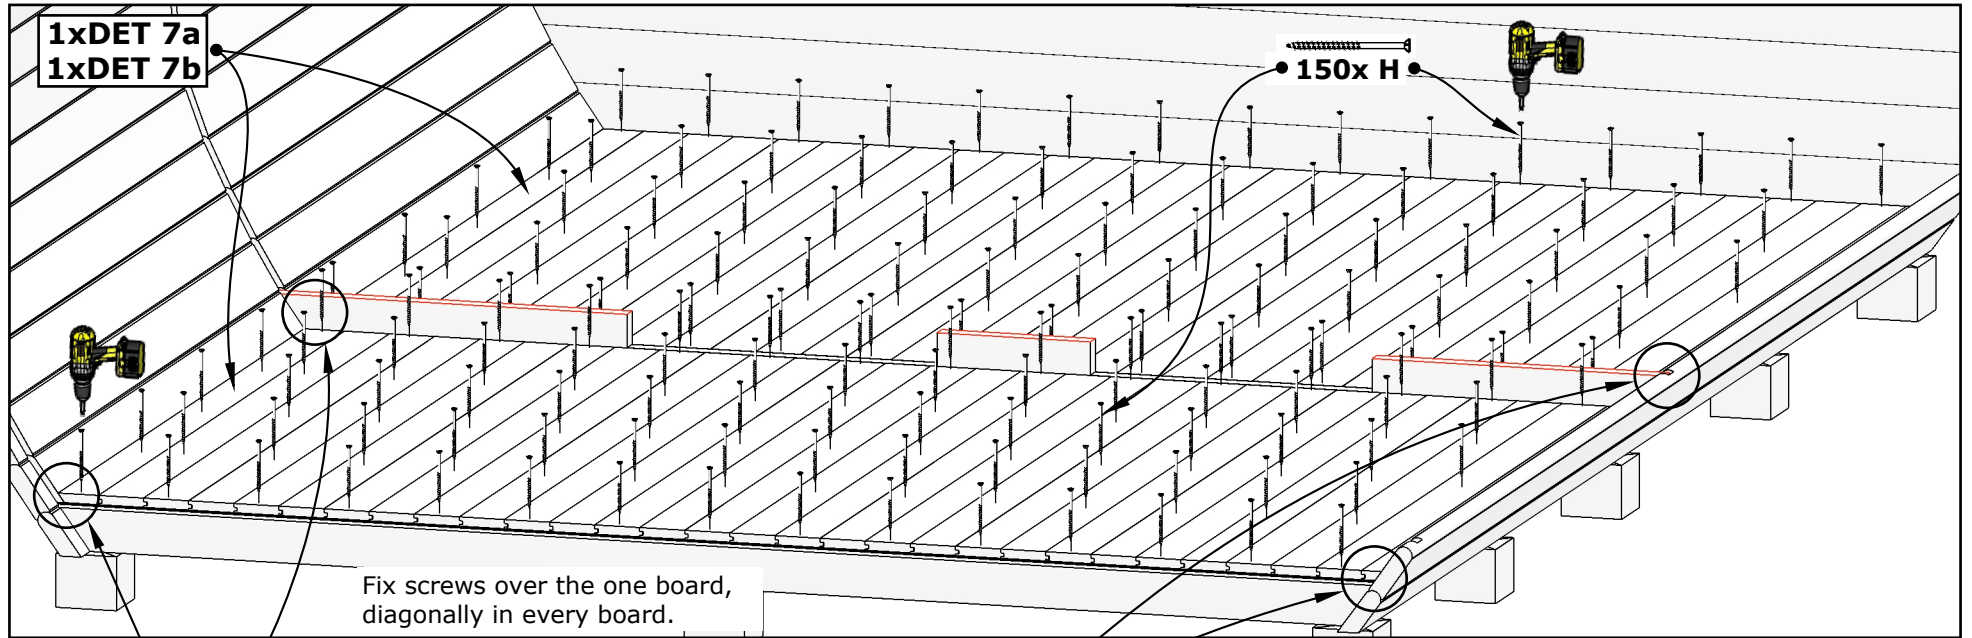


I

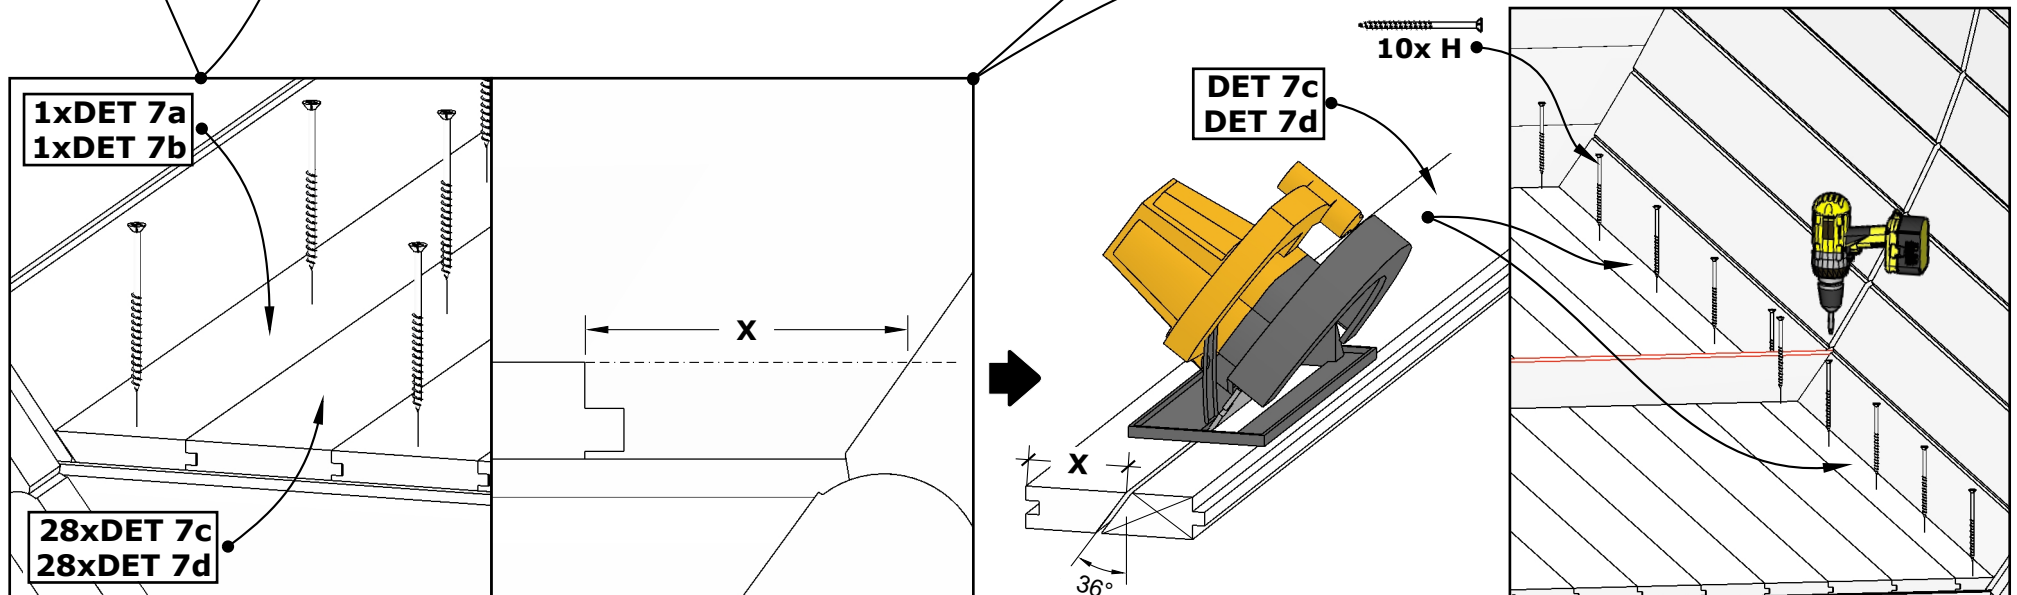


II

# Frodo 500

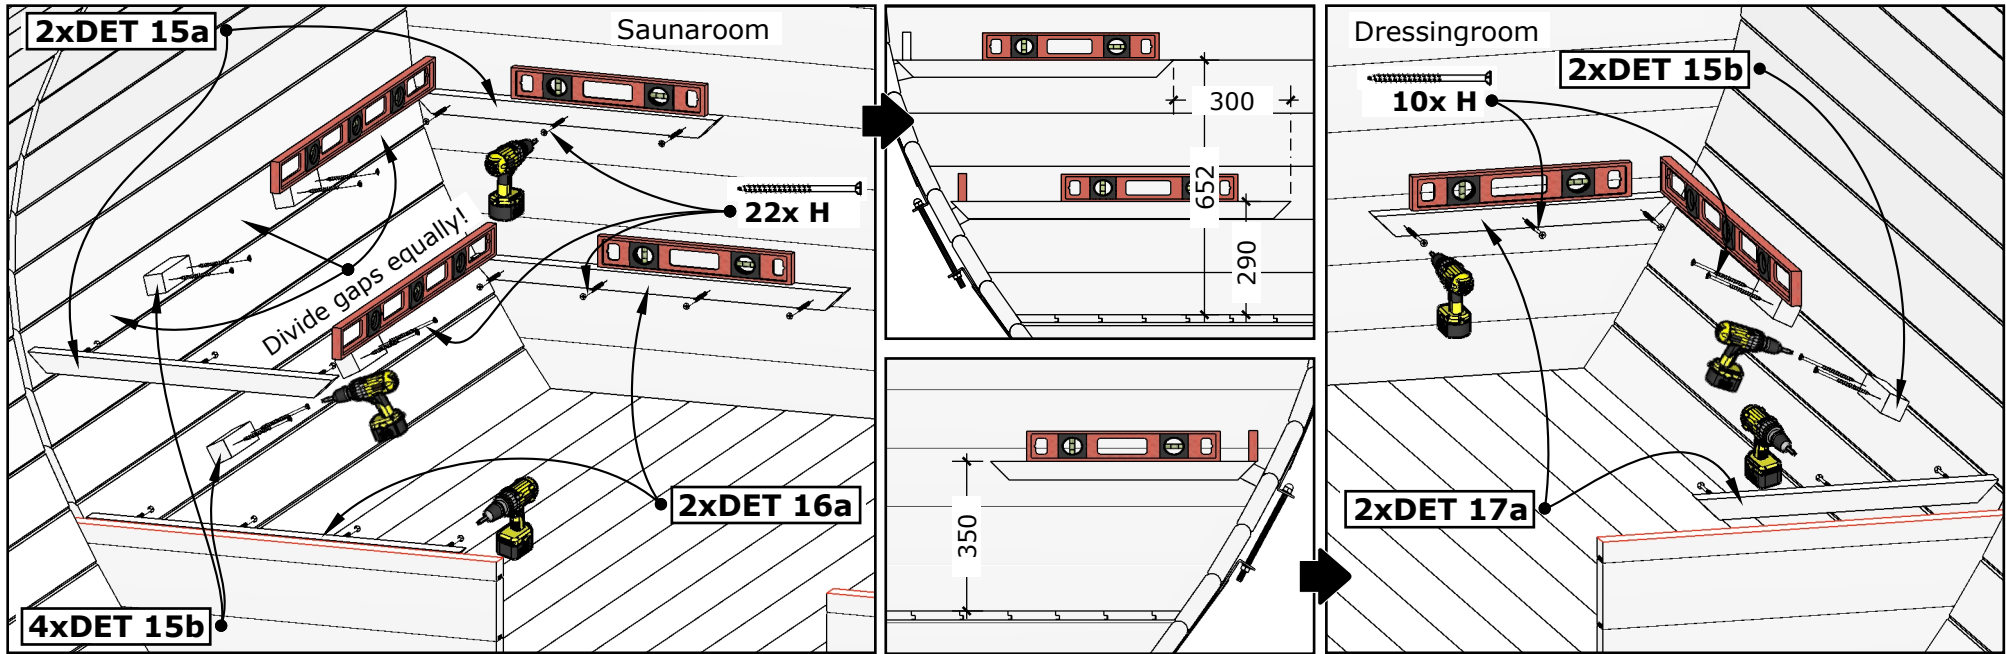


I


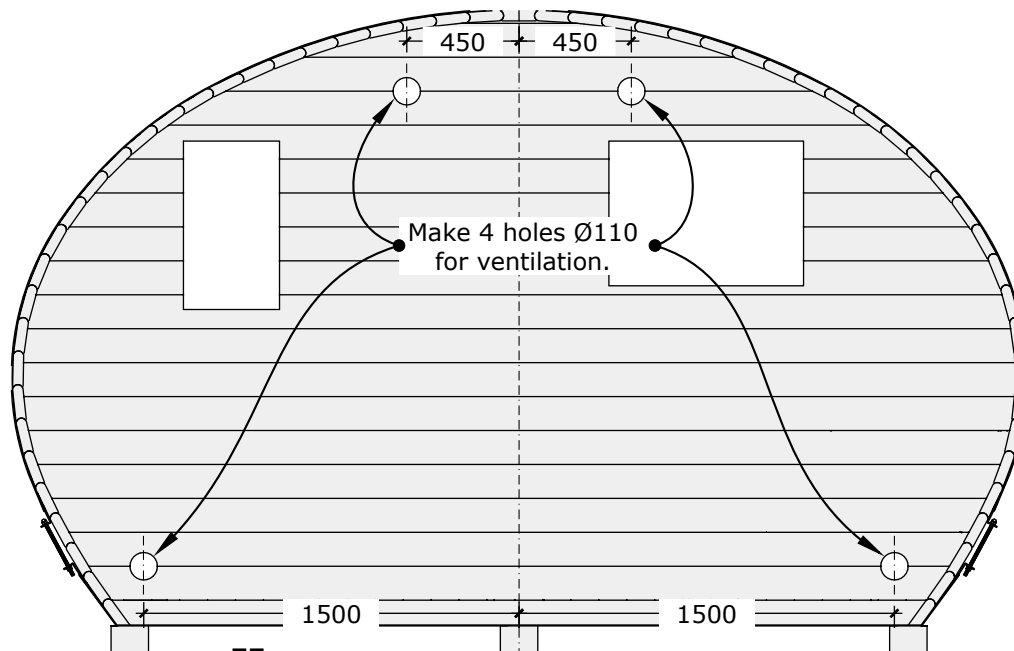


II





( FRO-005 )

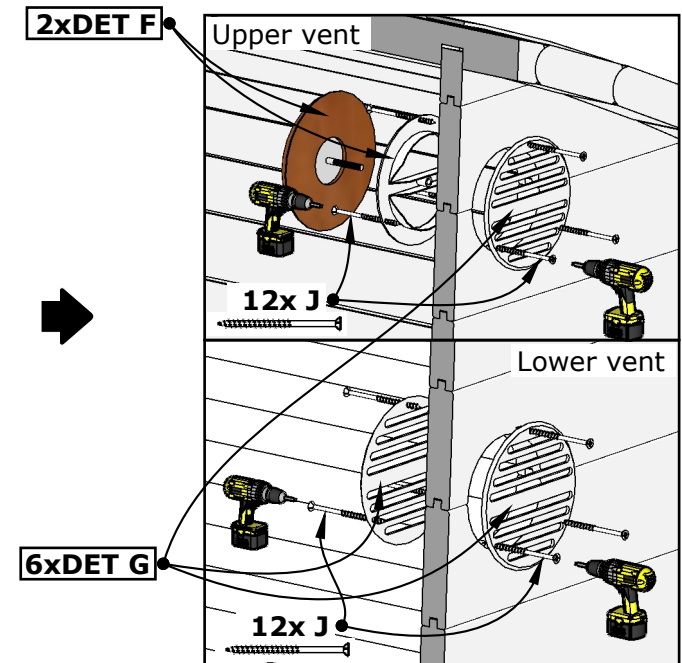

# Frodo 500

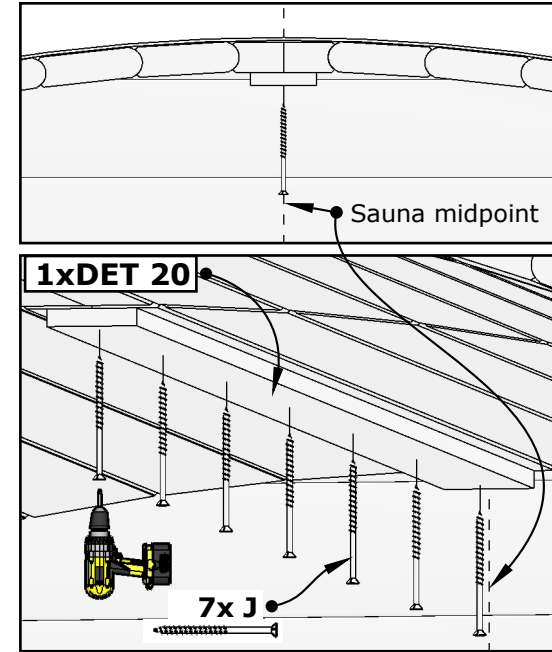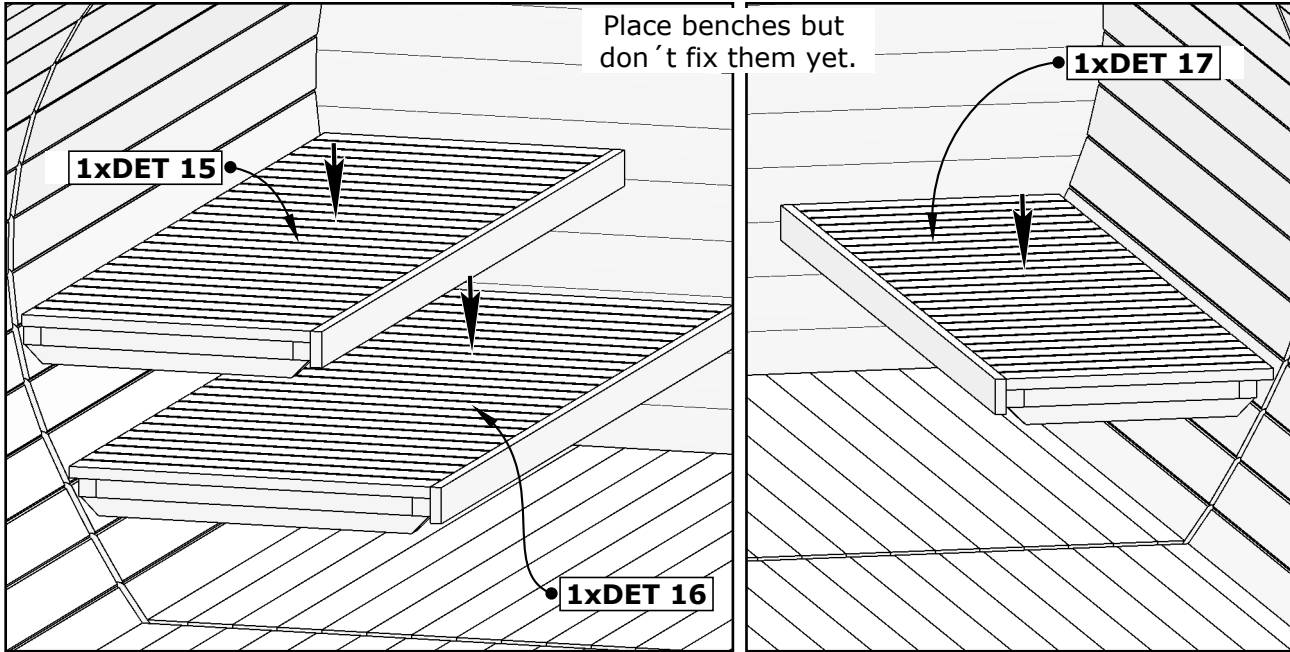


I

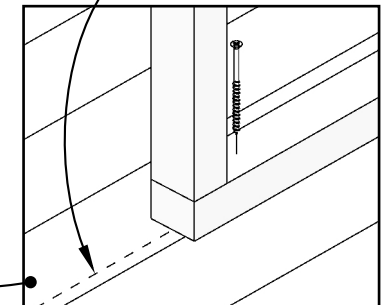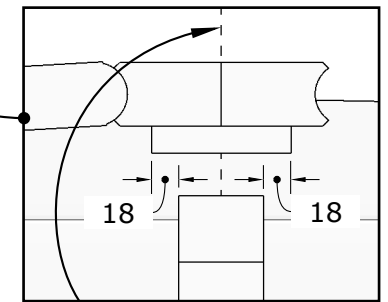
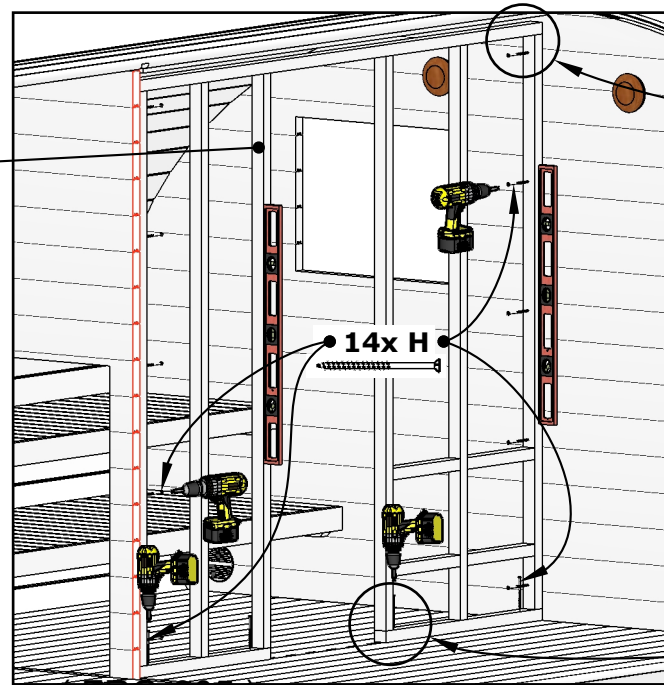
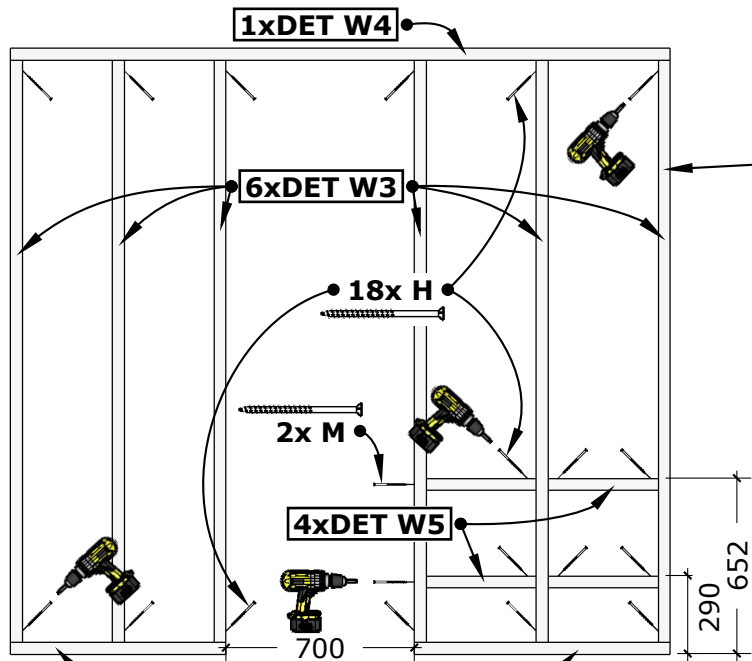


12. II 1xDET W2 1xDET W1

# Frodo 500

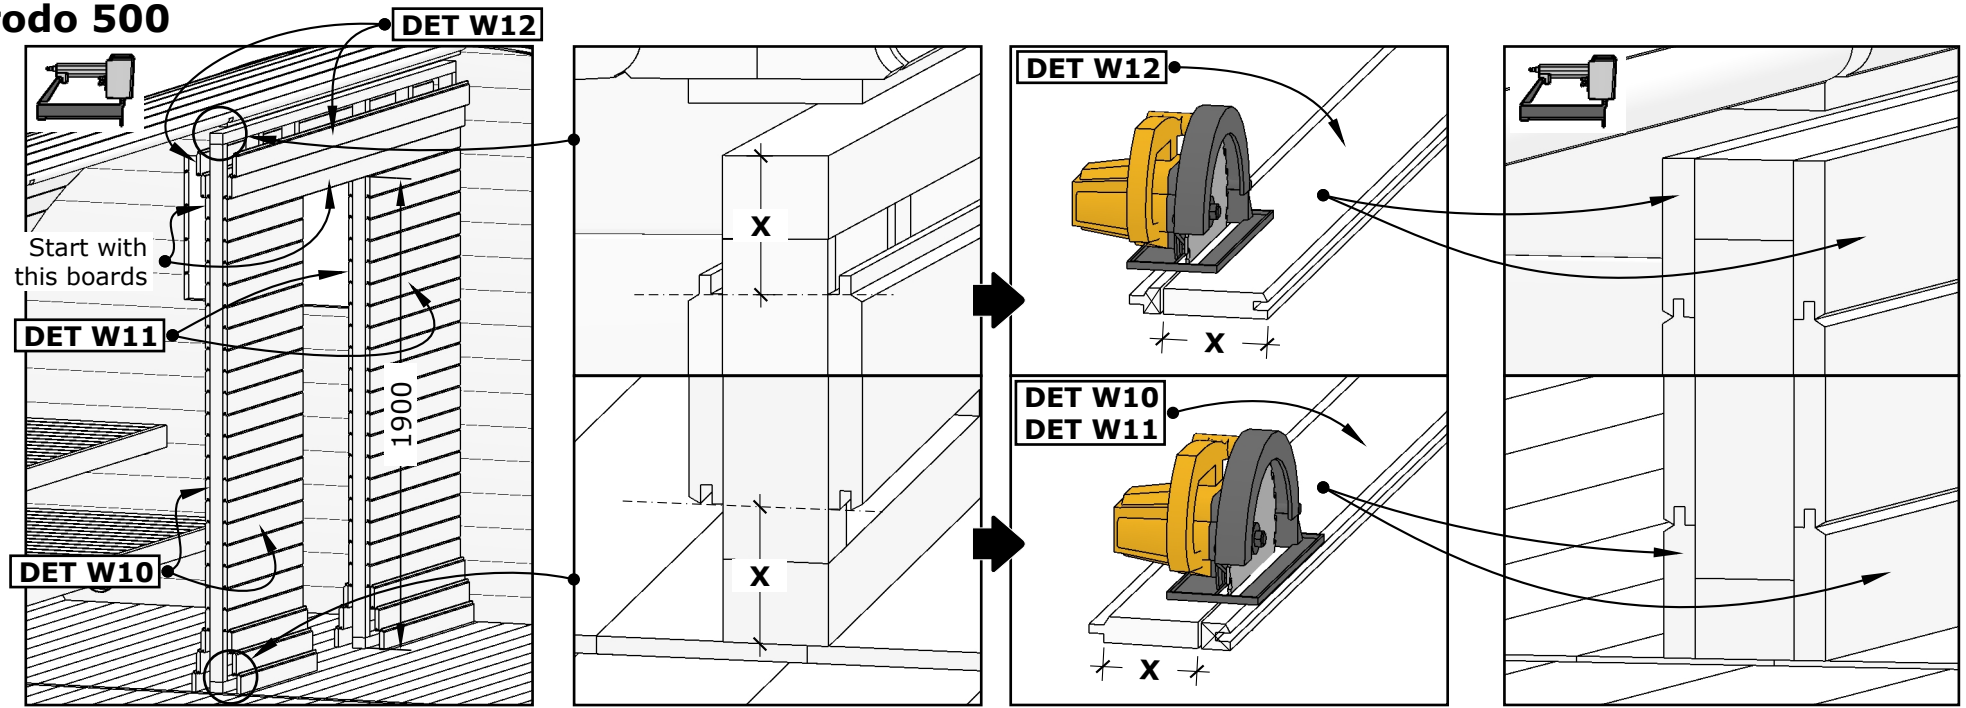


I

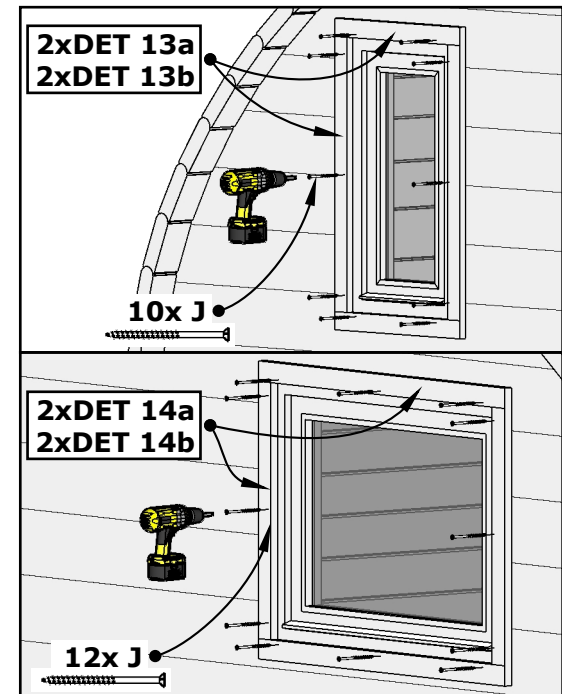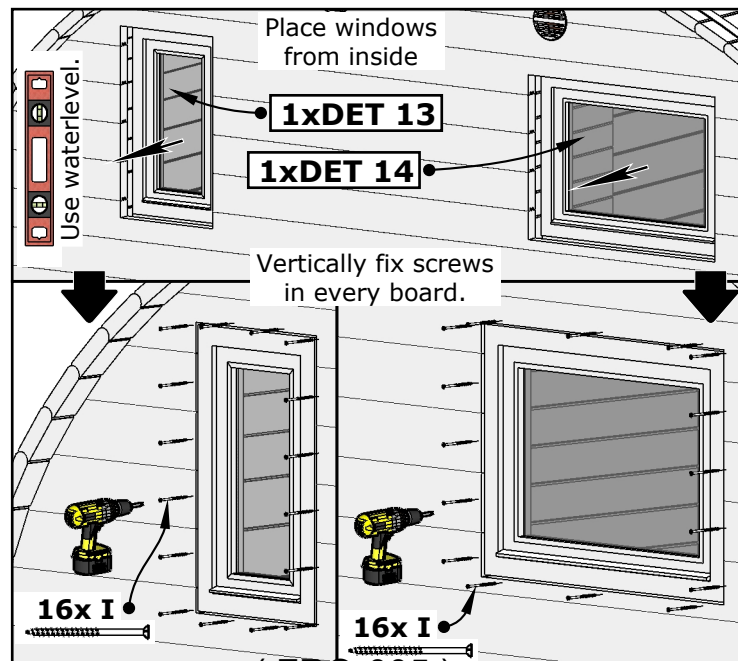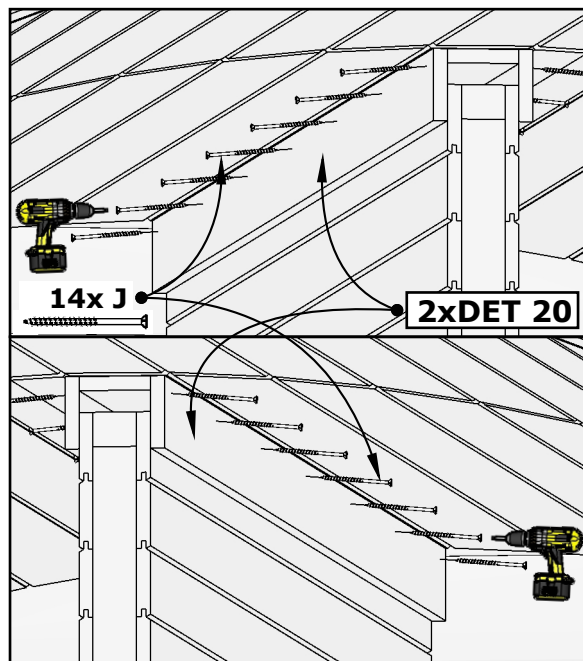


13. II

(FRO-005)

# Frodo 500

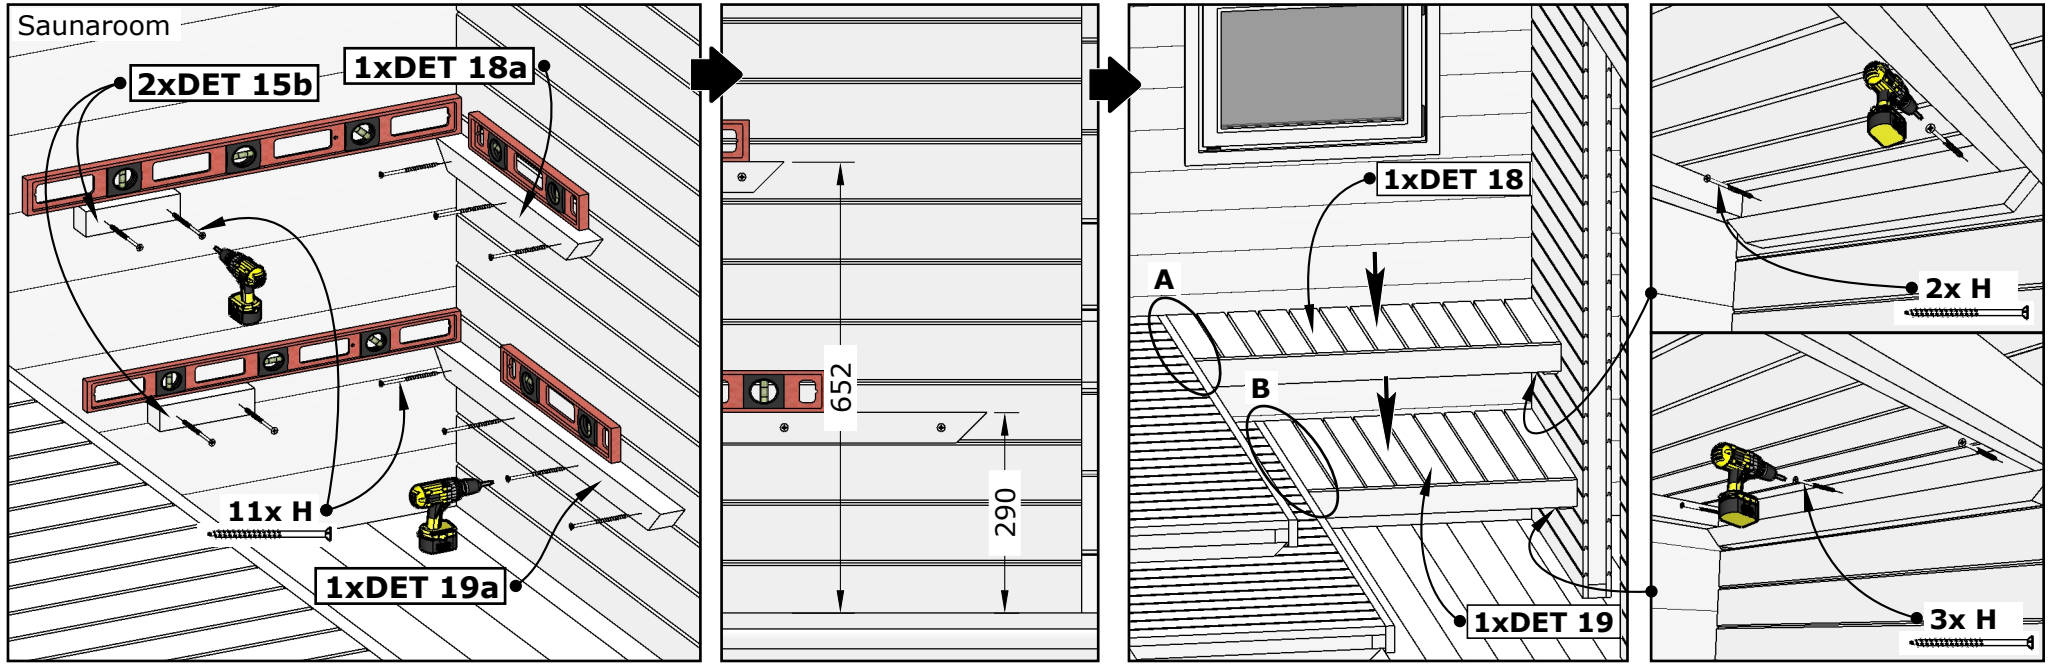

I

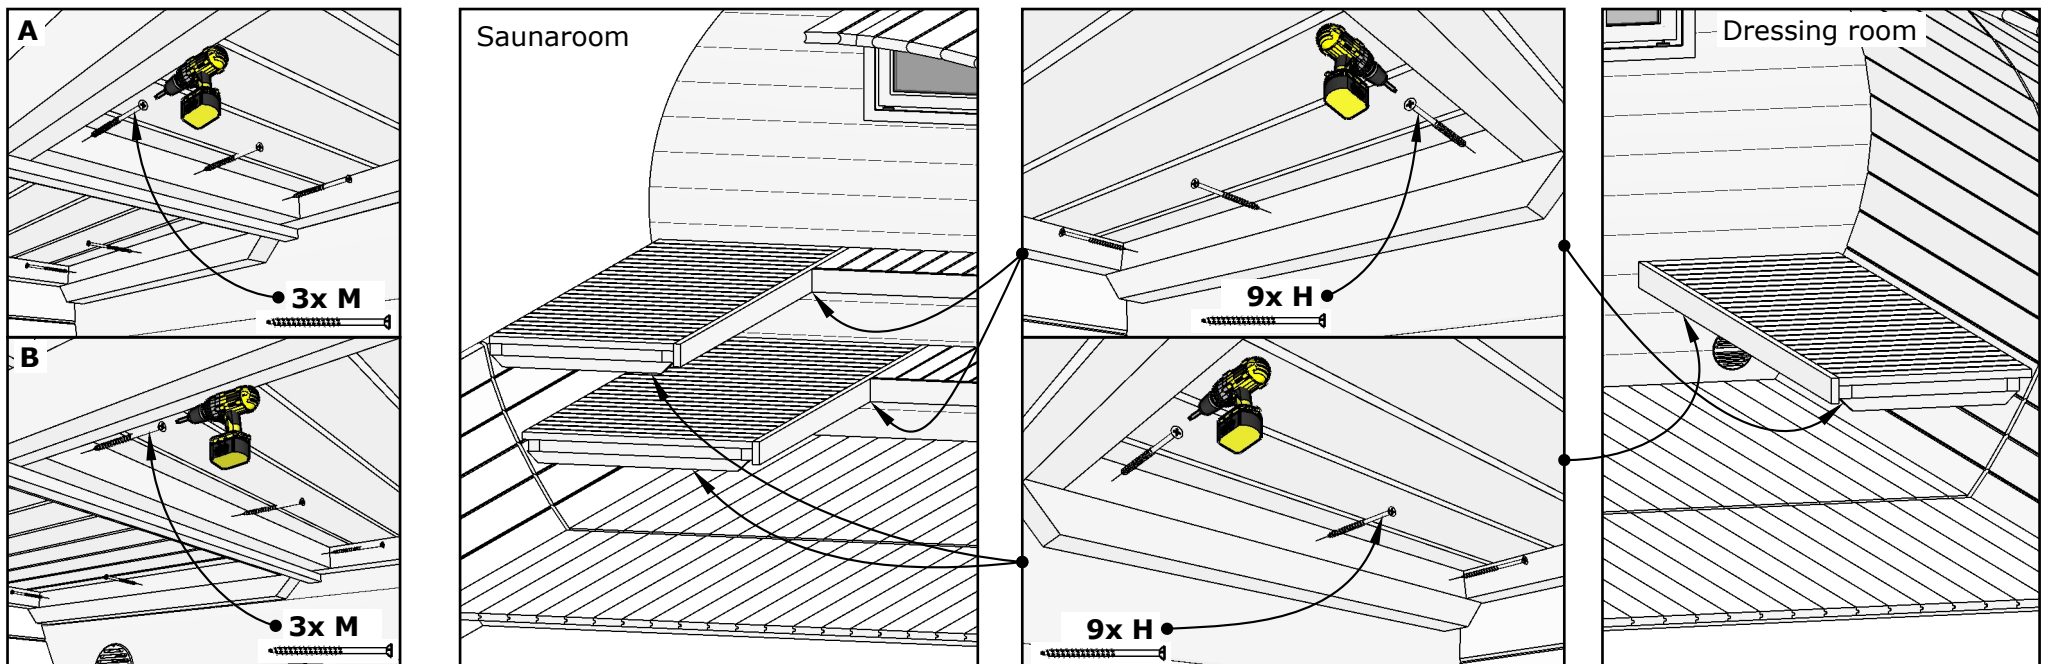


II


14.

(FRO-005)



# Frodo 500

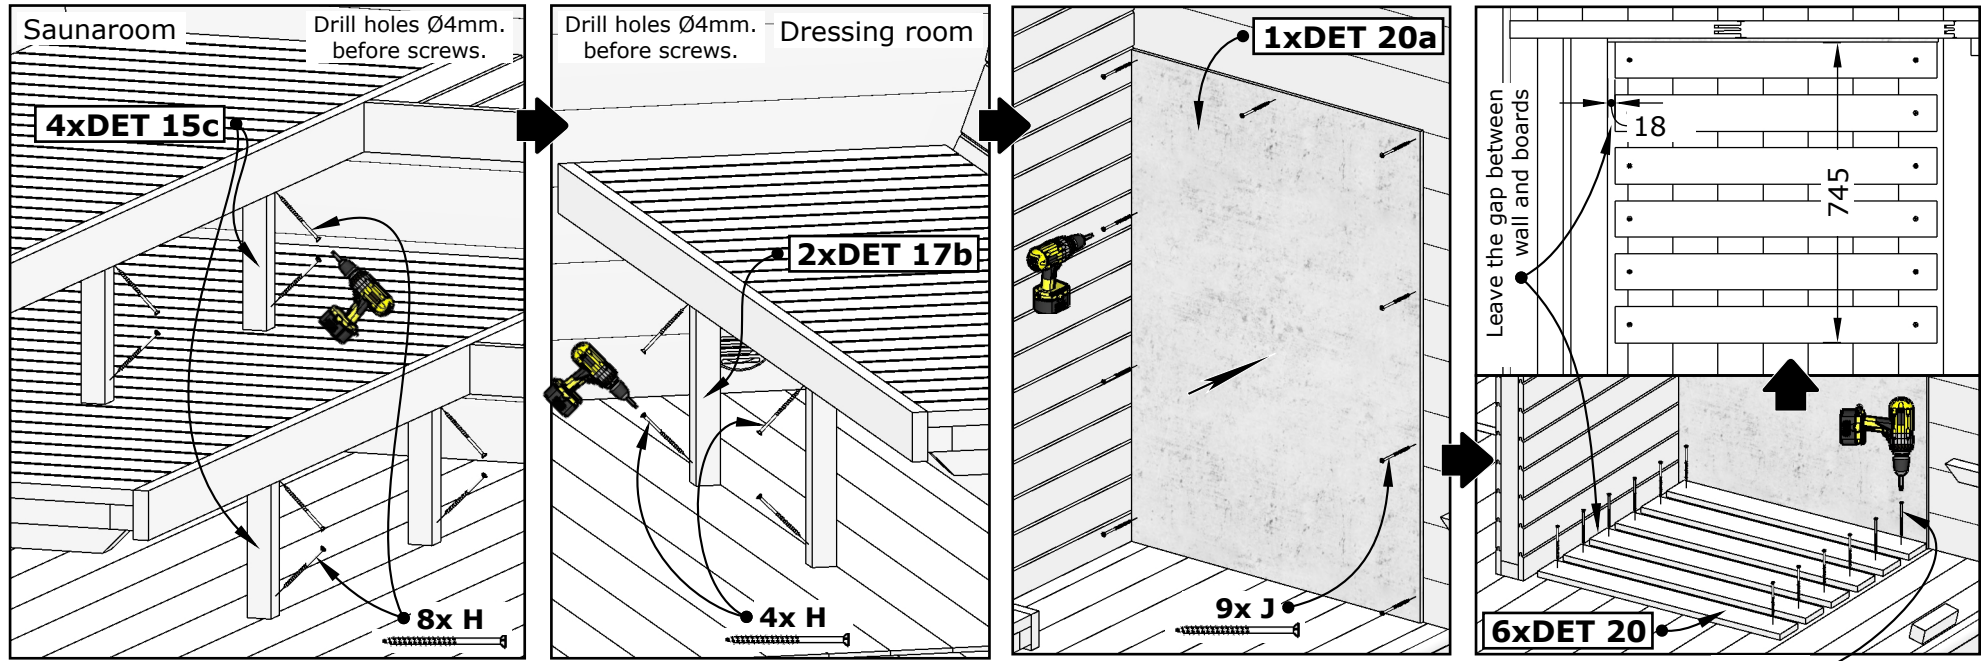







I

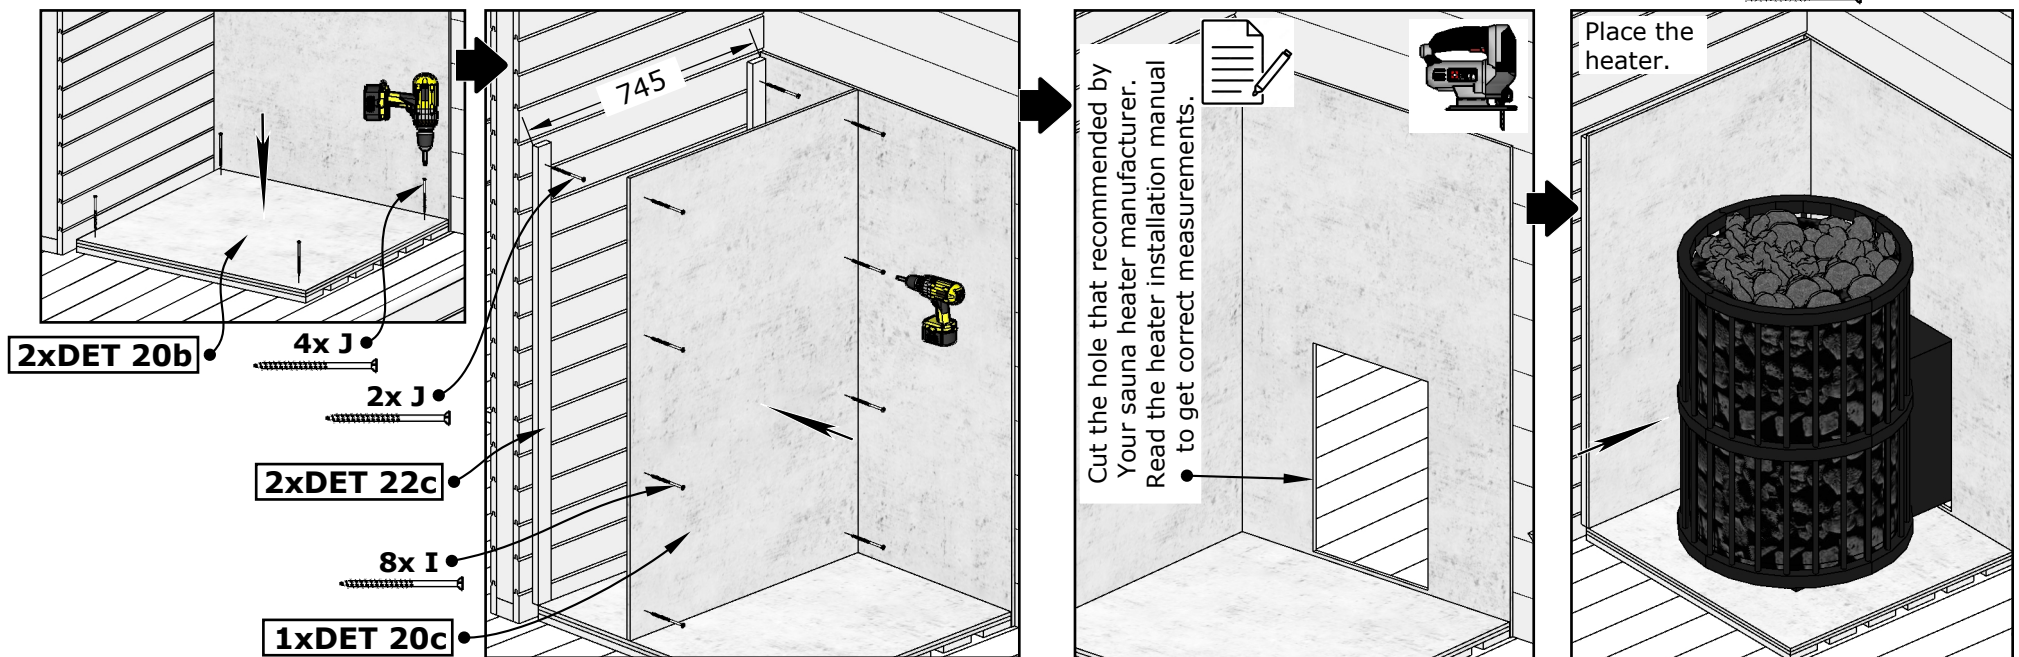







# Frodo 500

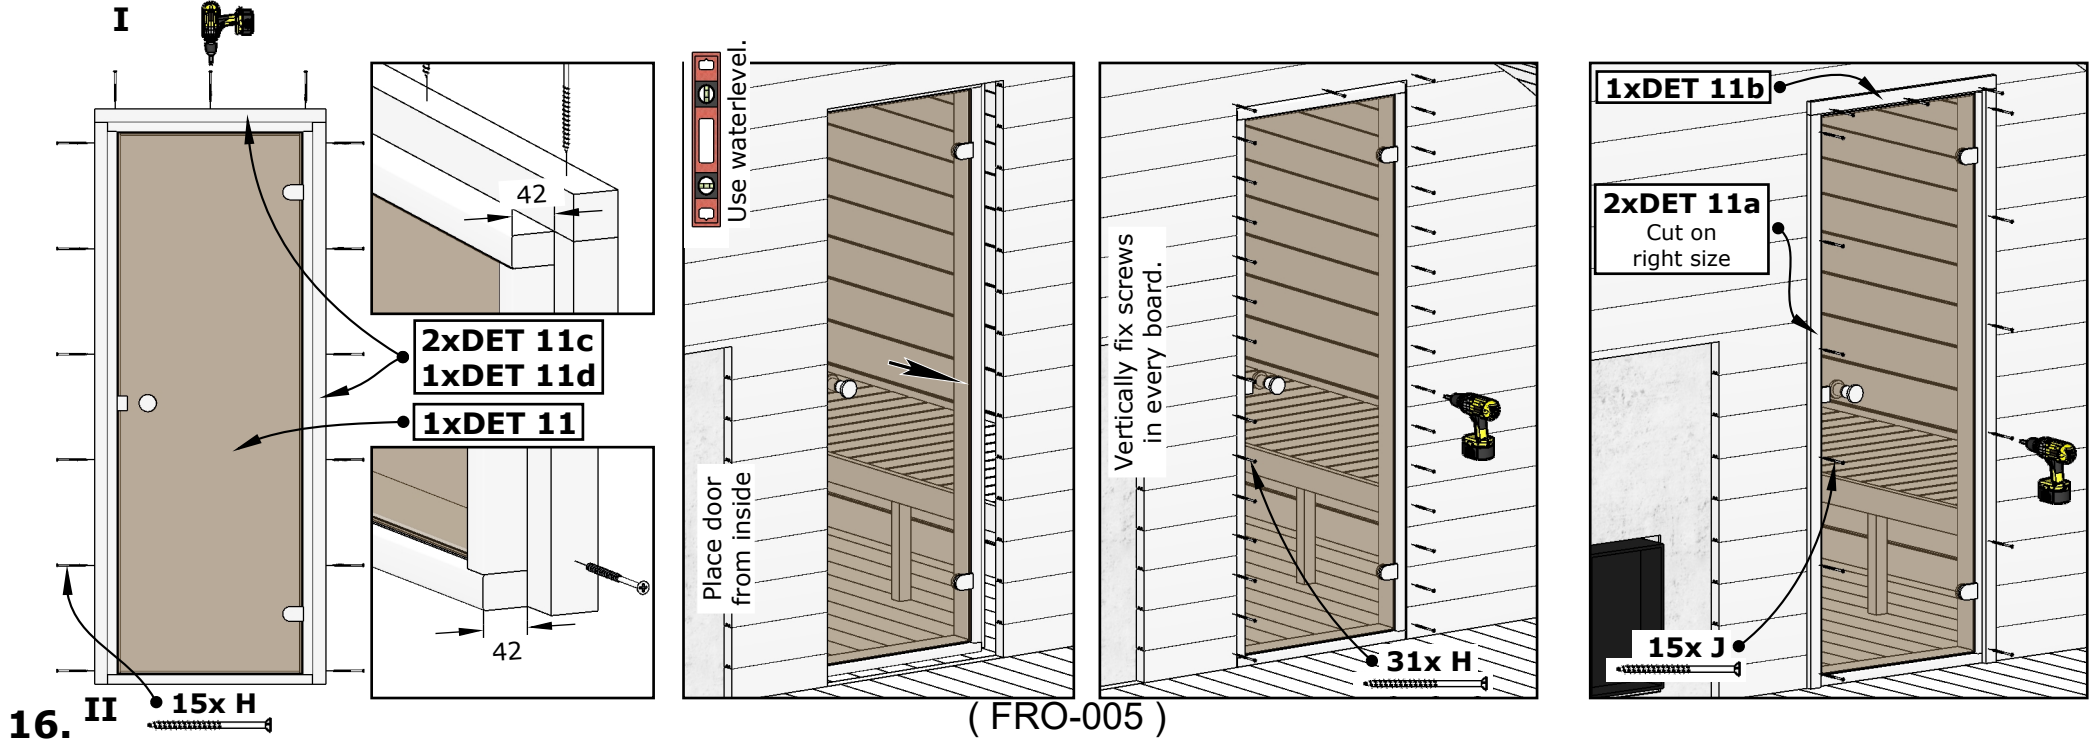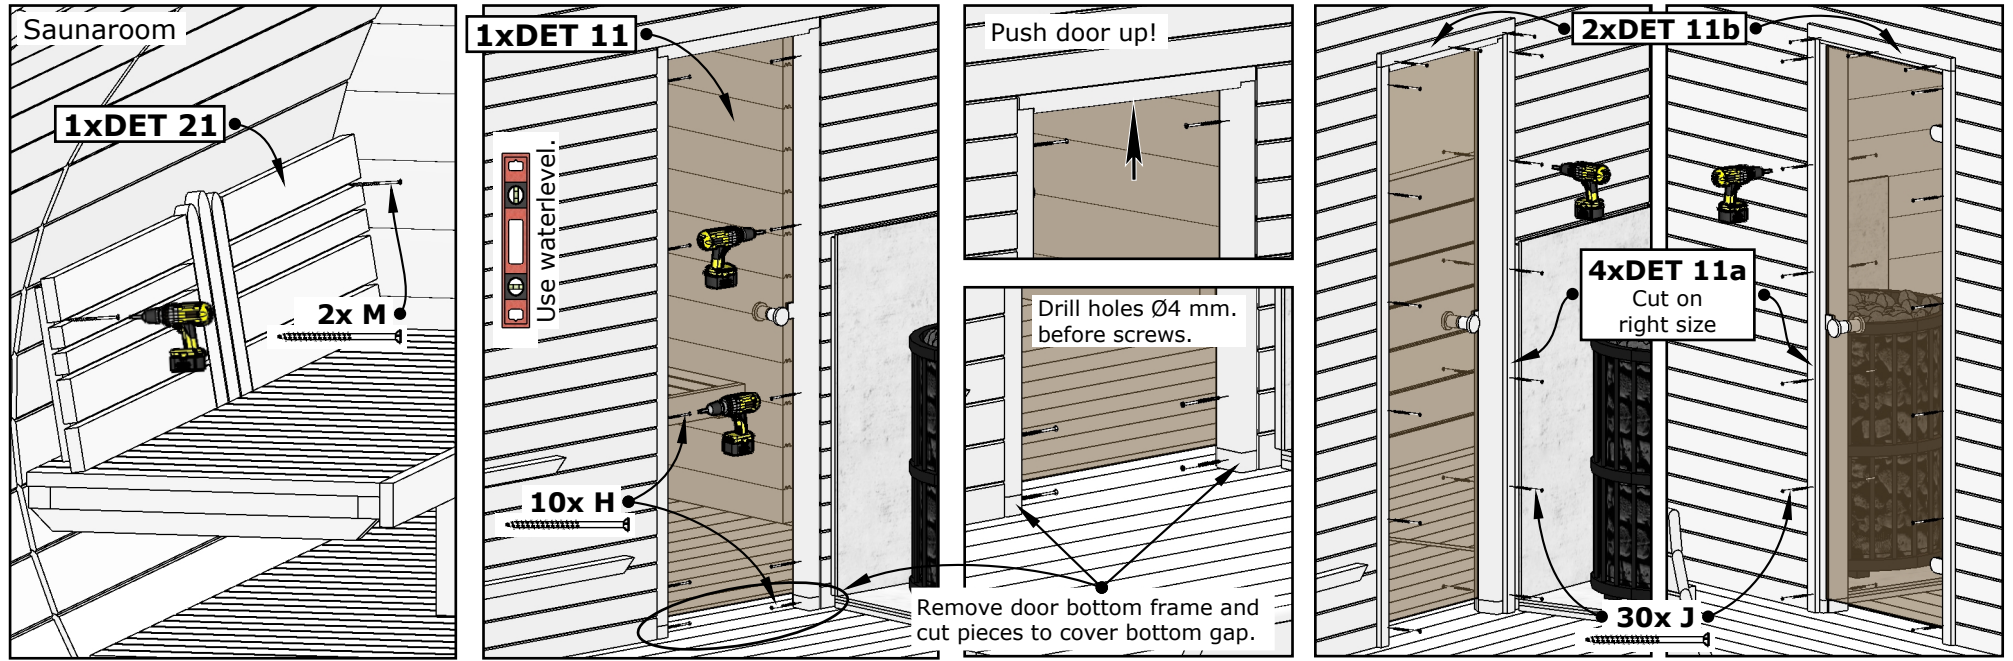


# Frodo 500

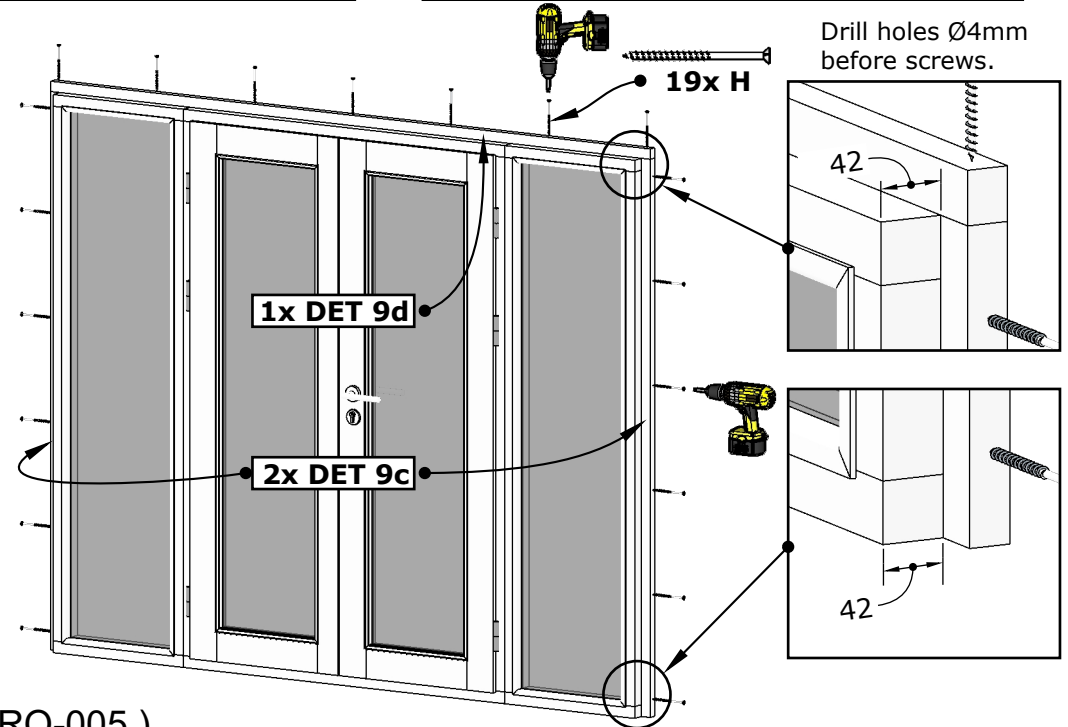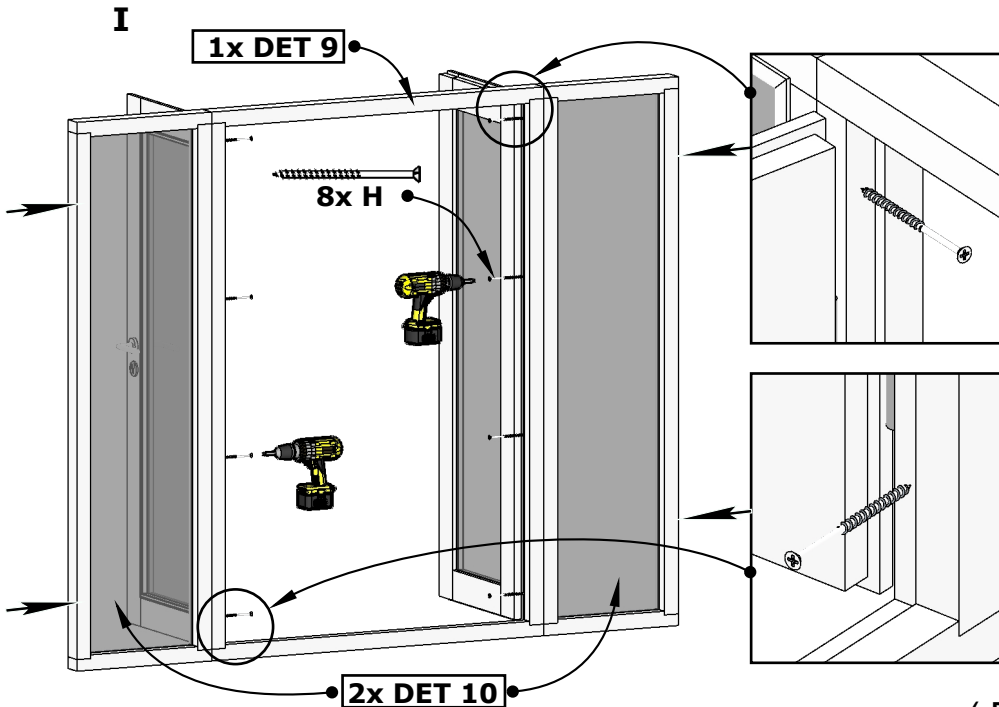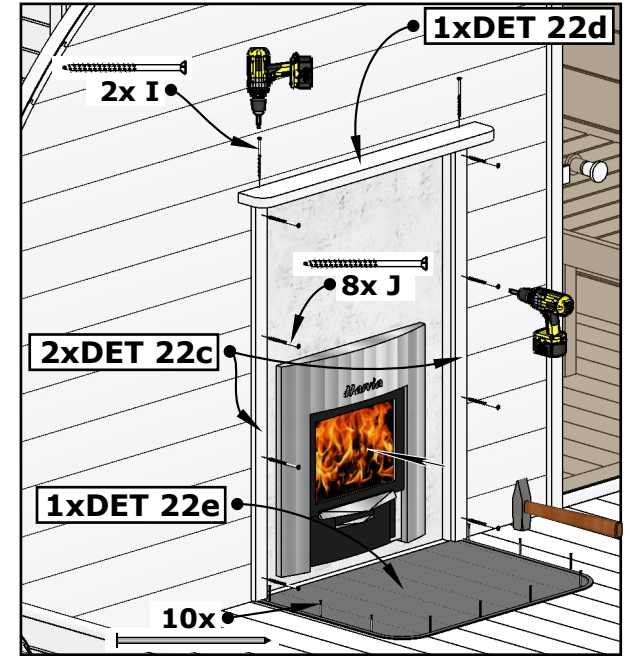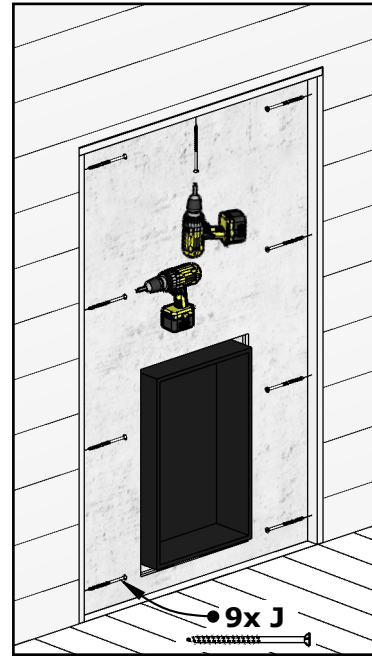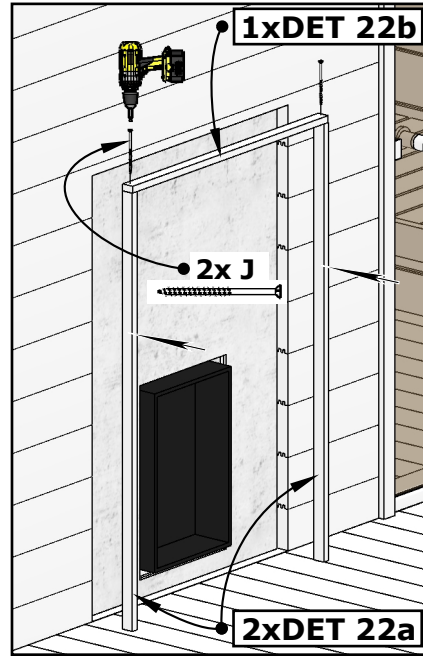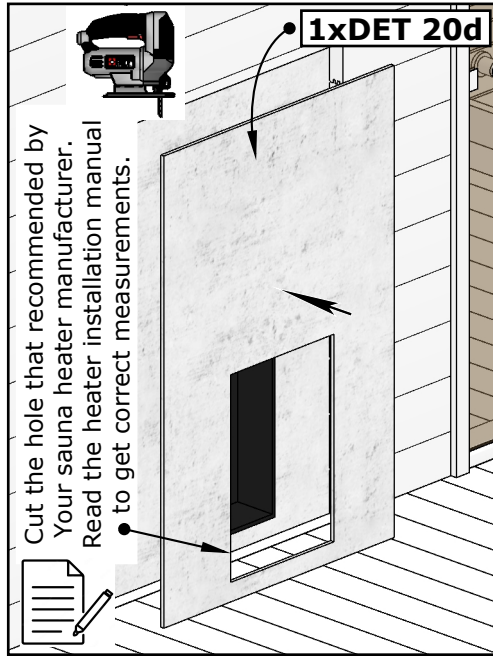



# Frodo 500

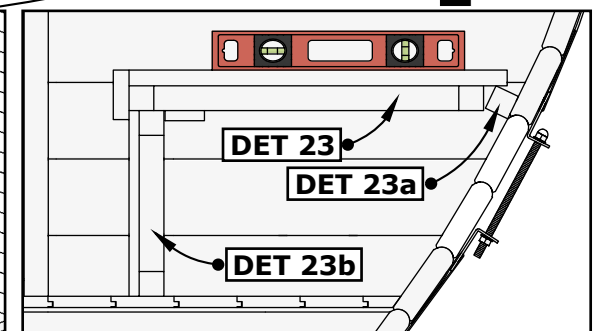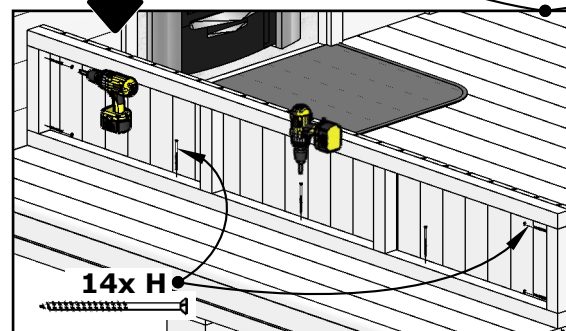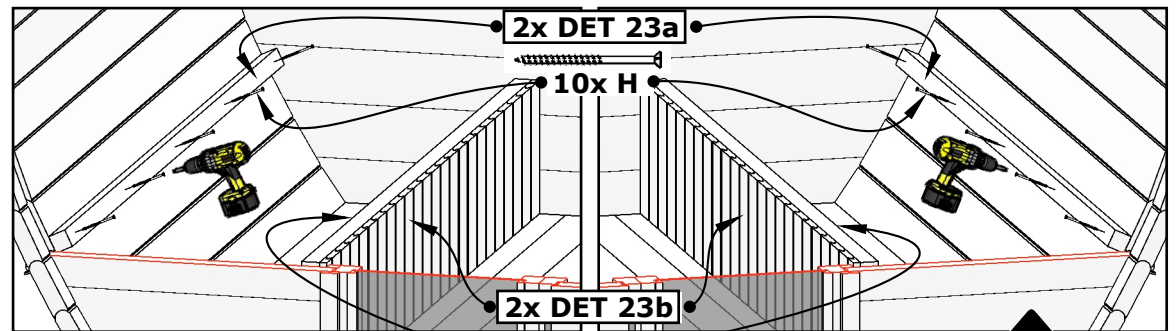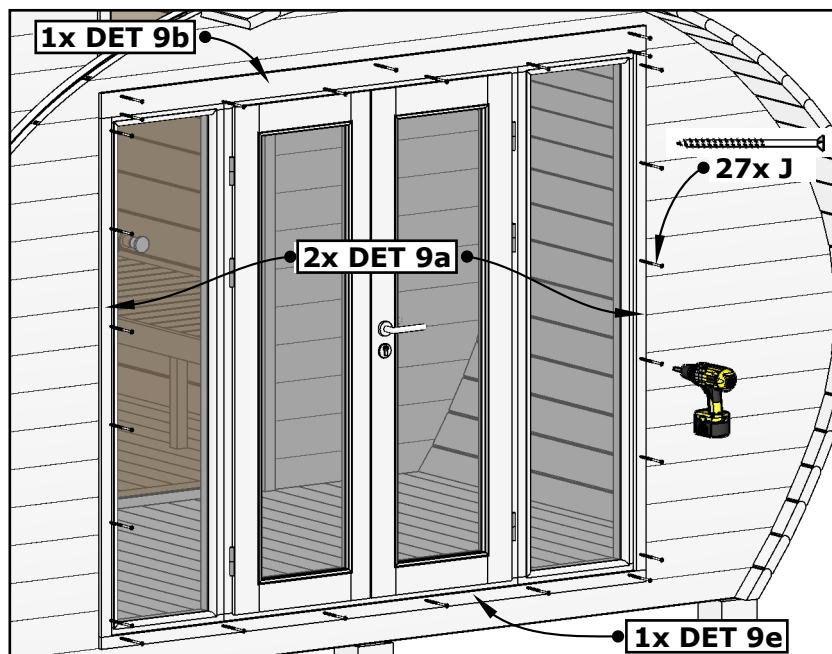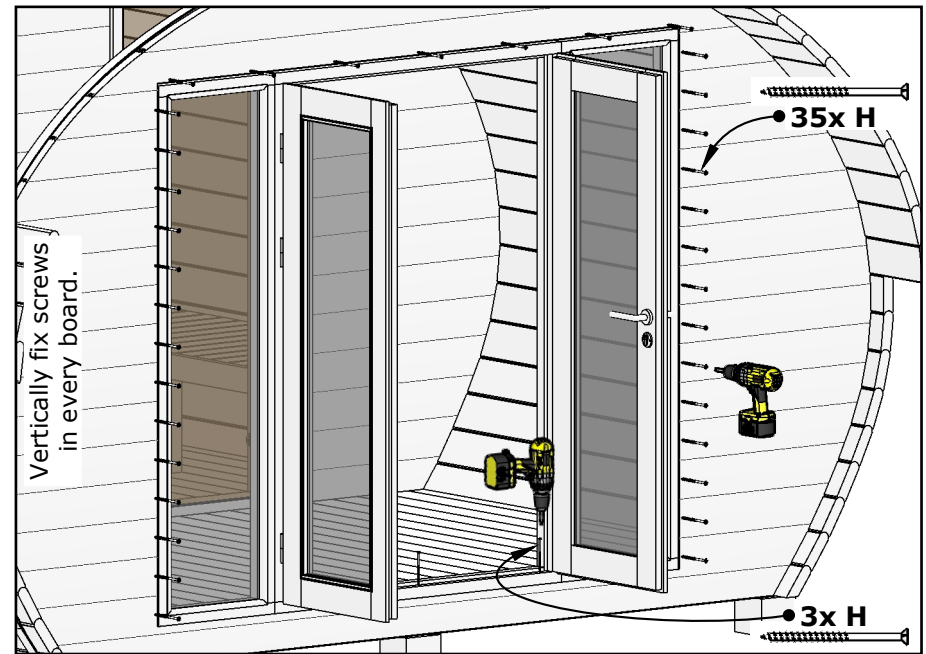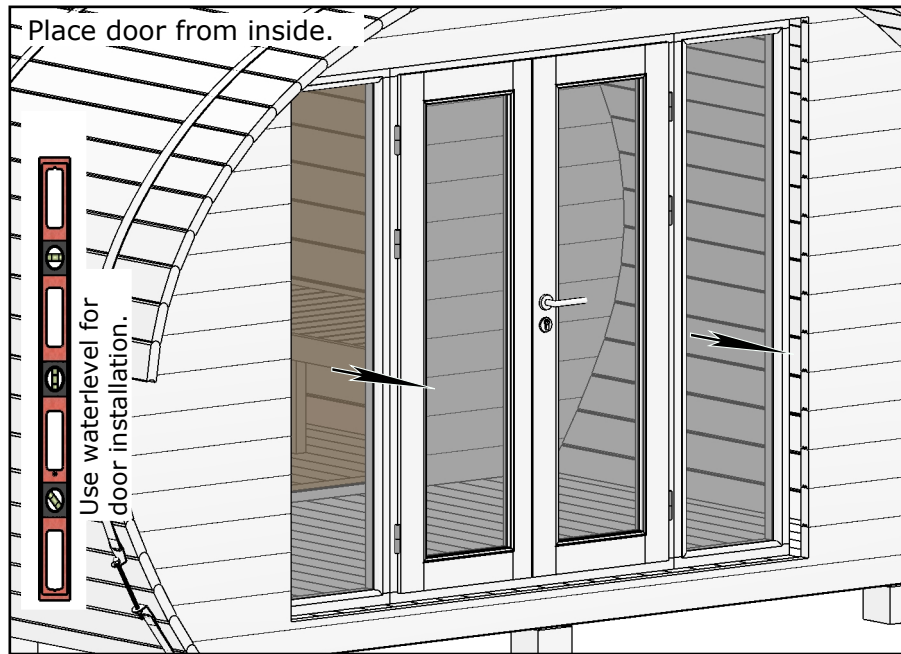


# Frodo 500

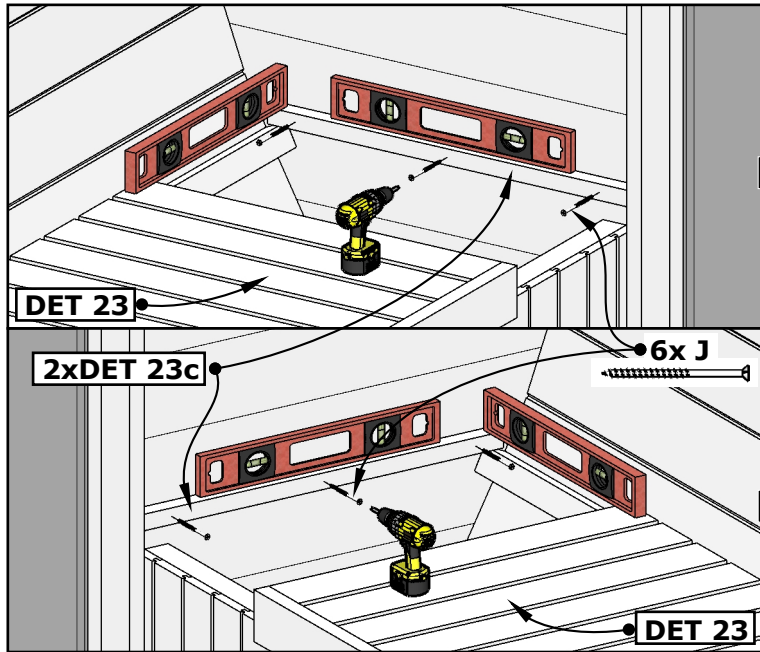

**I**

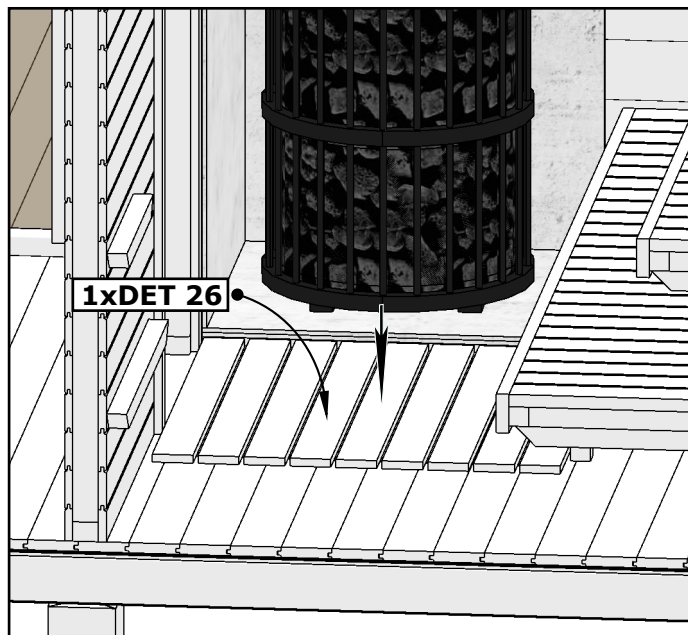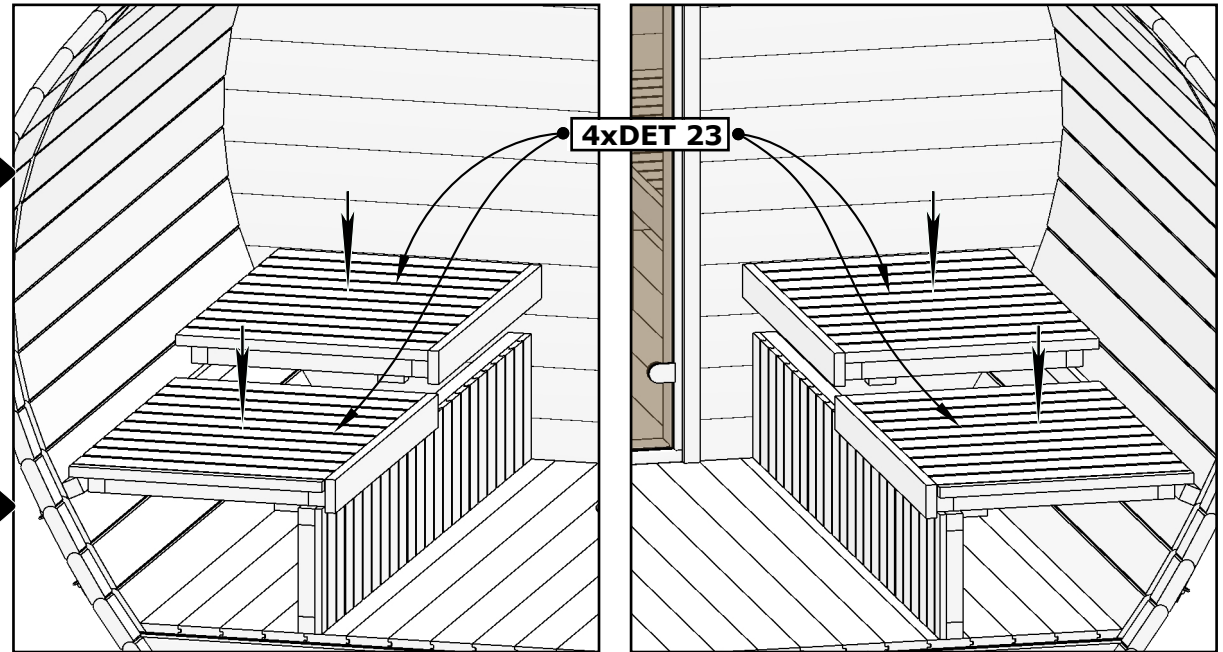


**II**

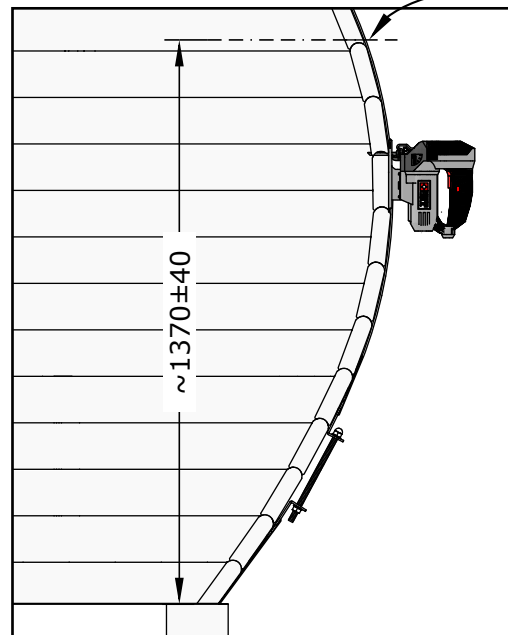


**III**

( FRO-005 )

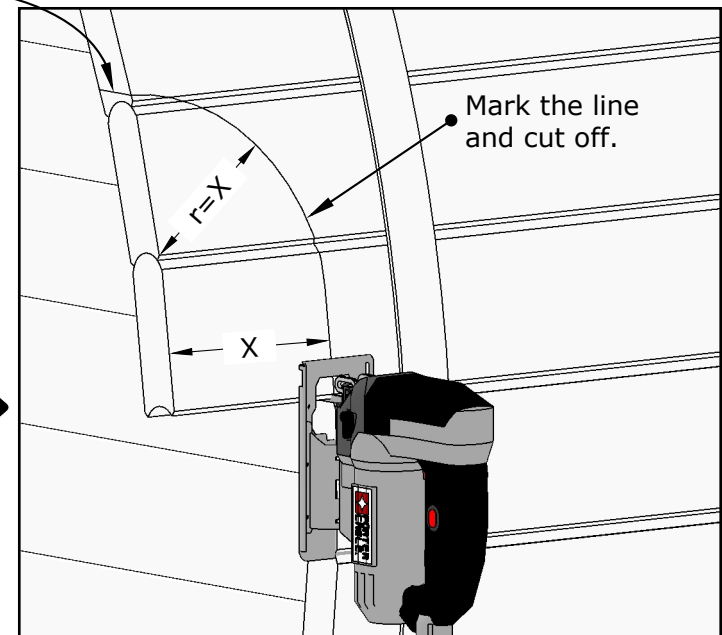


# Frodo 500




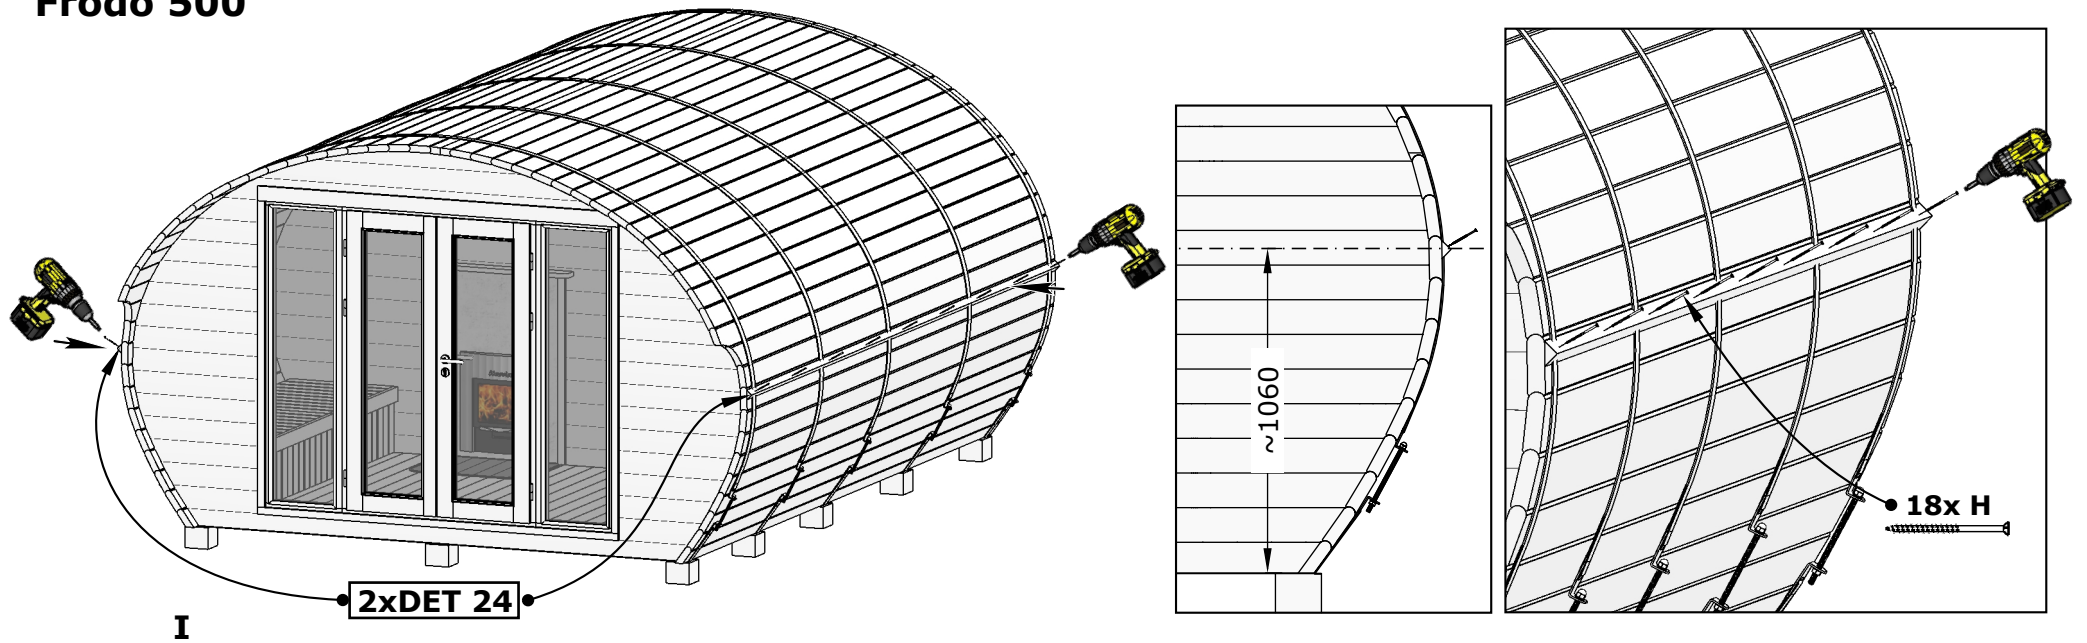


**NB!** Before roof shingles,  
install underlay felt.  
Check underlay felt installation  
manual on extra pages.

Check also roof shingles  
installation manual inside package.

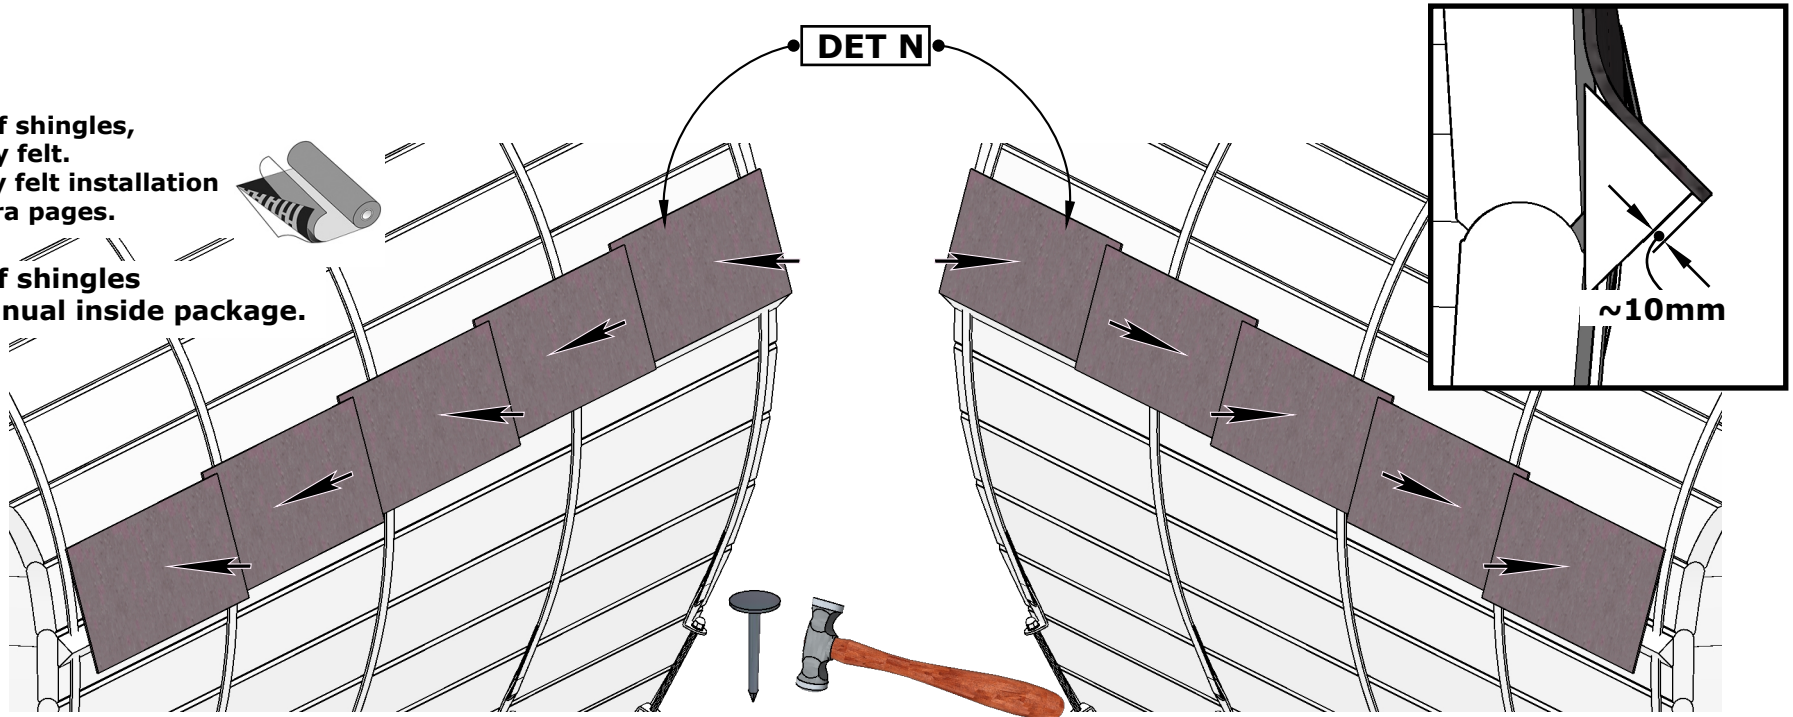

# Frodo 500

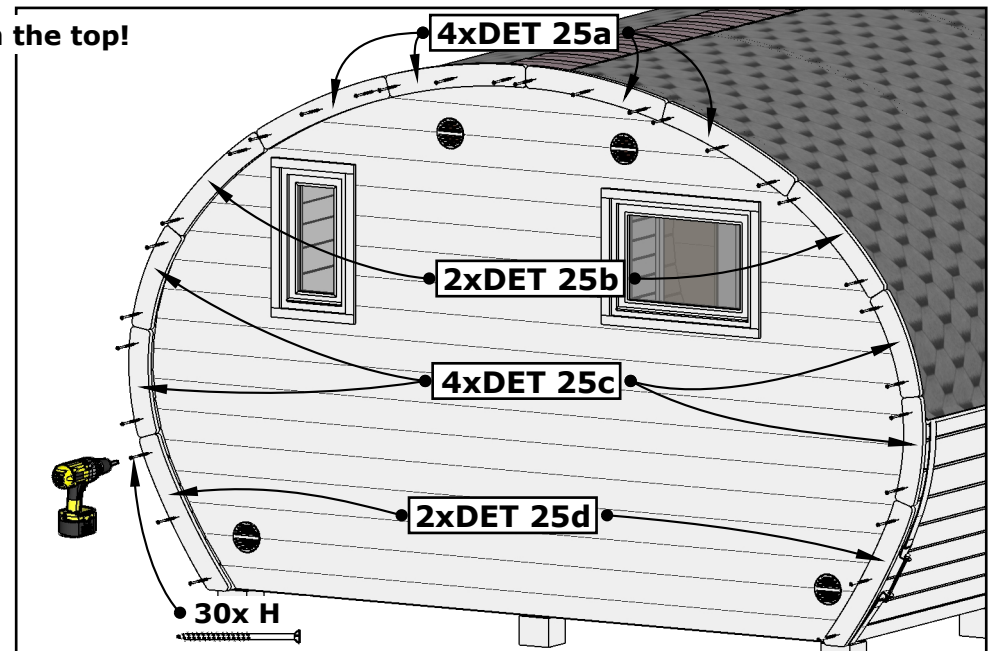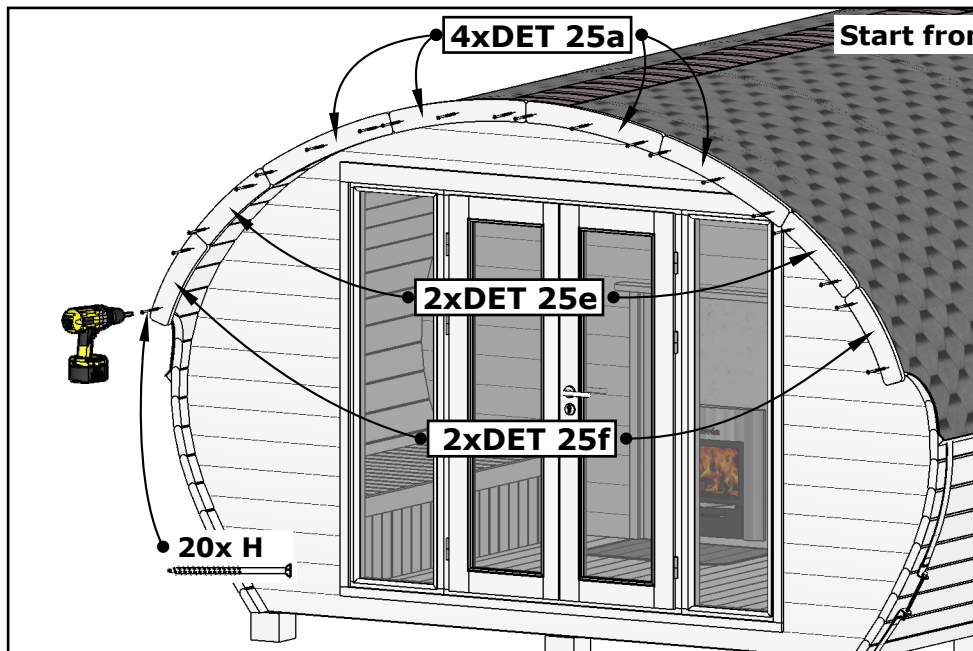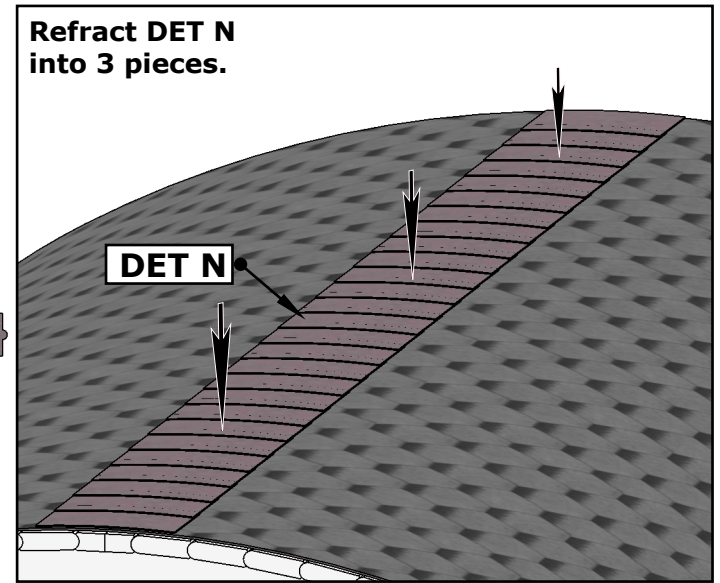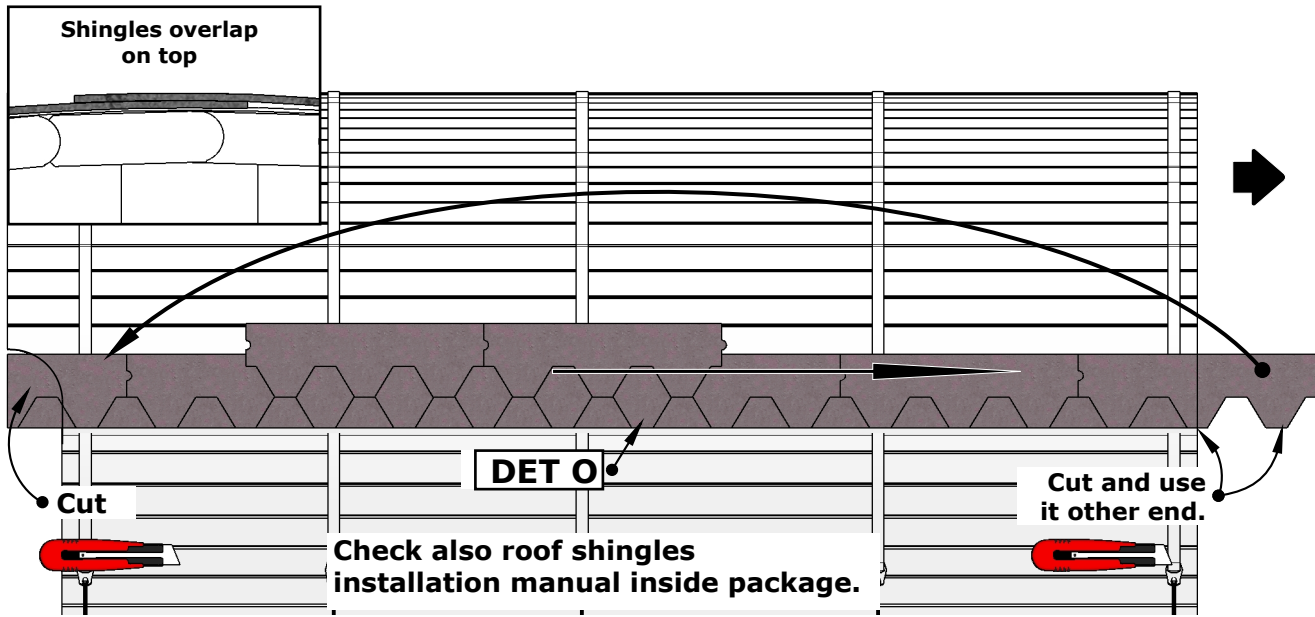

# Underlay felt installation manual.

