
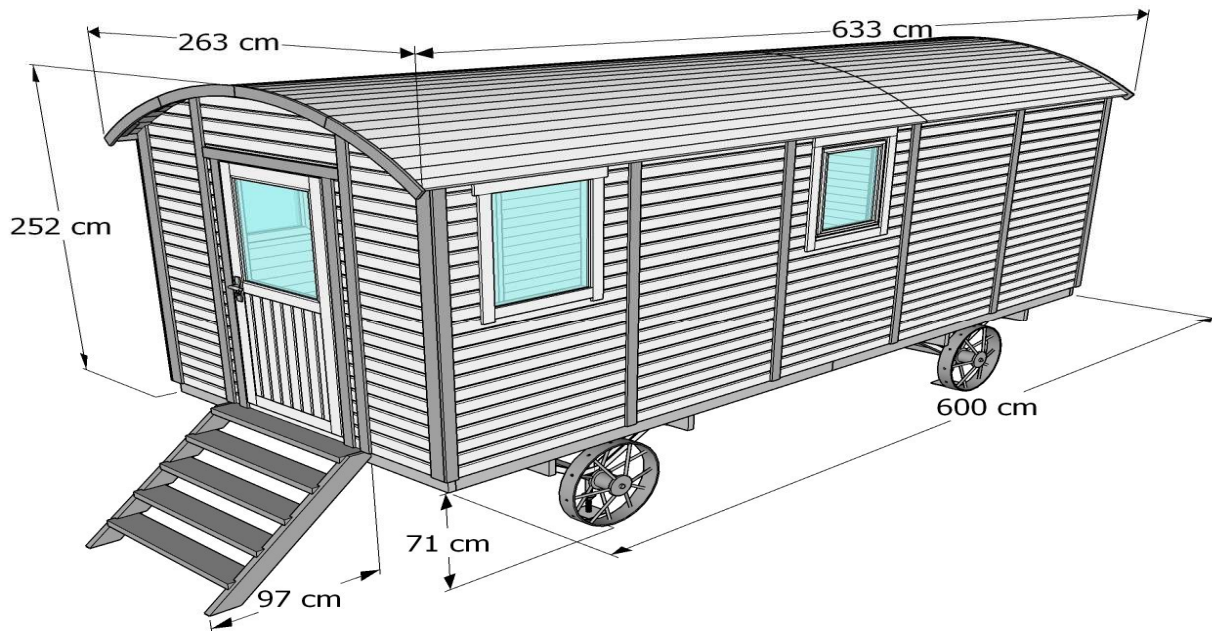


Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

ACHTUNG! Dieser Wagen steht sich an den verstellbare Metall-Pfosten und ist nicht um bewegen geeignet!!!

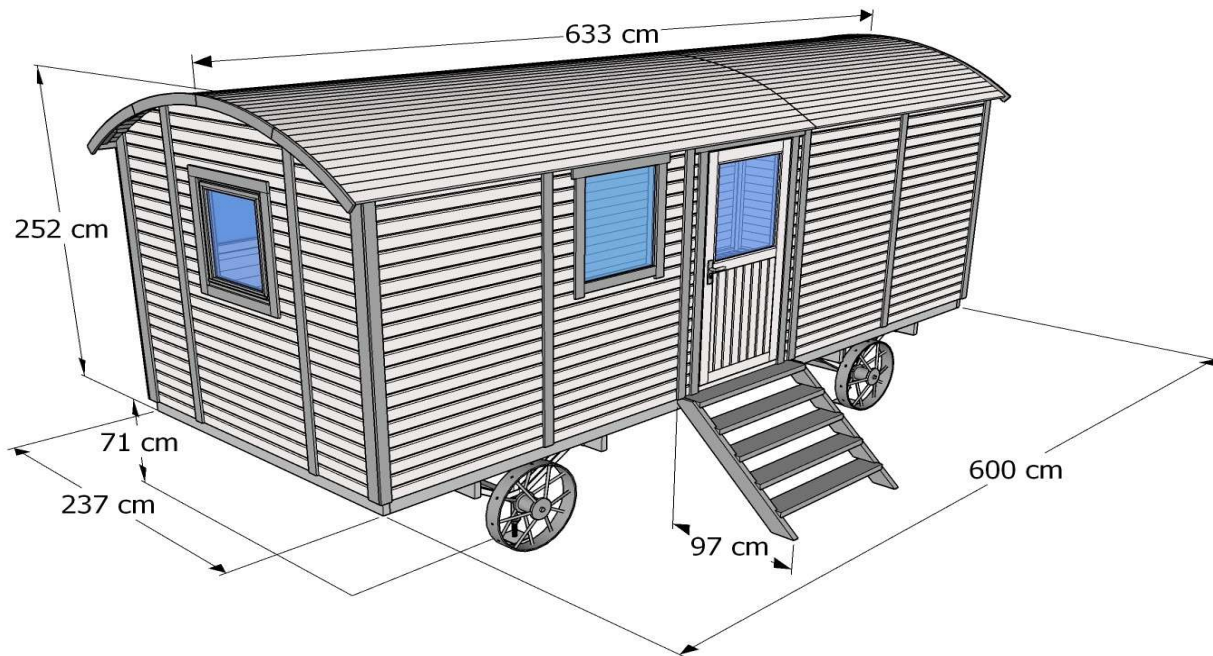



IMPORTANT!!!!

The structure can carry a weight of max. up to 1000 kg in addition to the existing one.

Die Struktur kann ein Gewicht von max. bis 1000 kg zusätzlich zum bestehenden.



Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

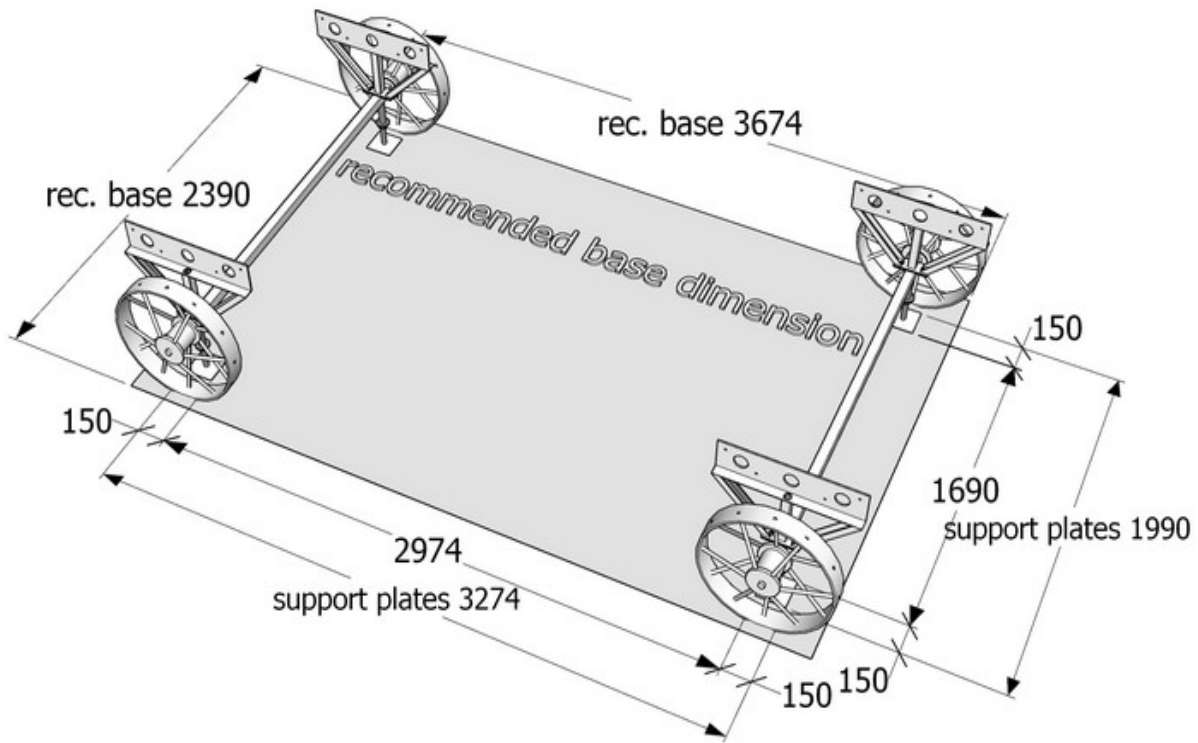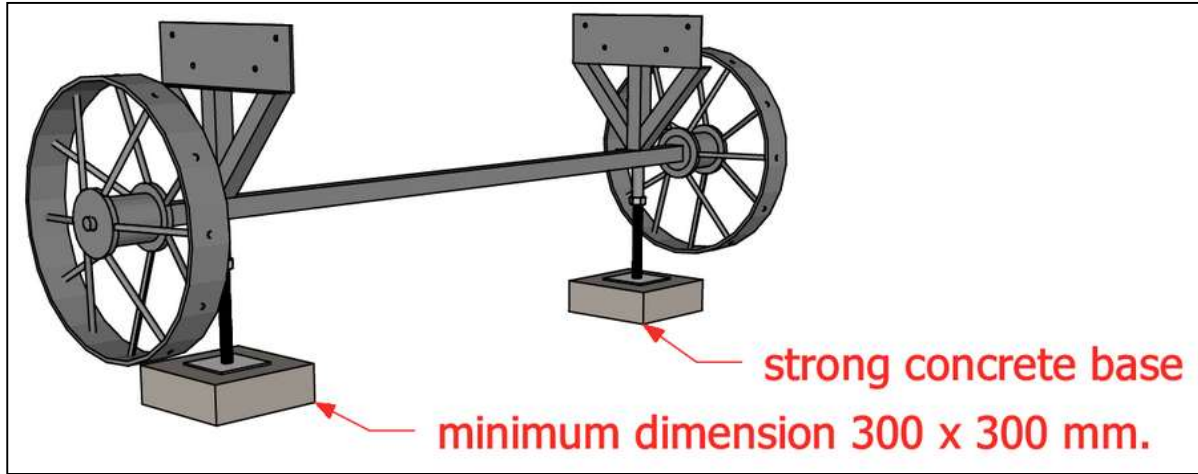

Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

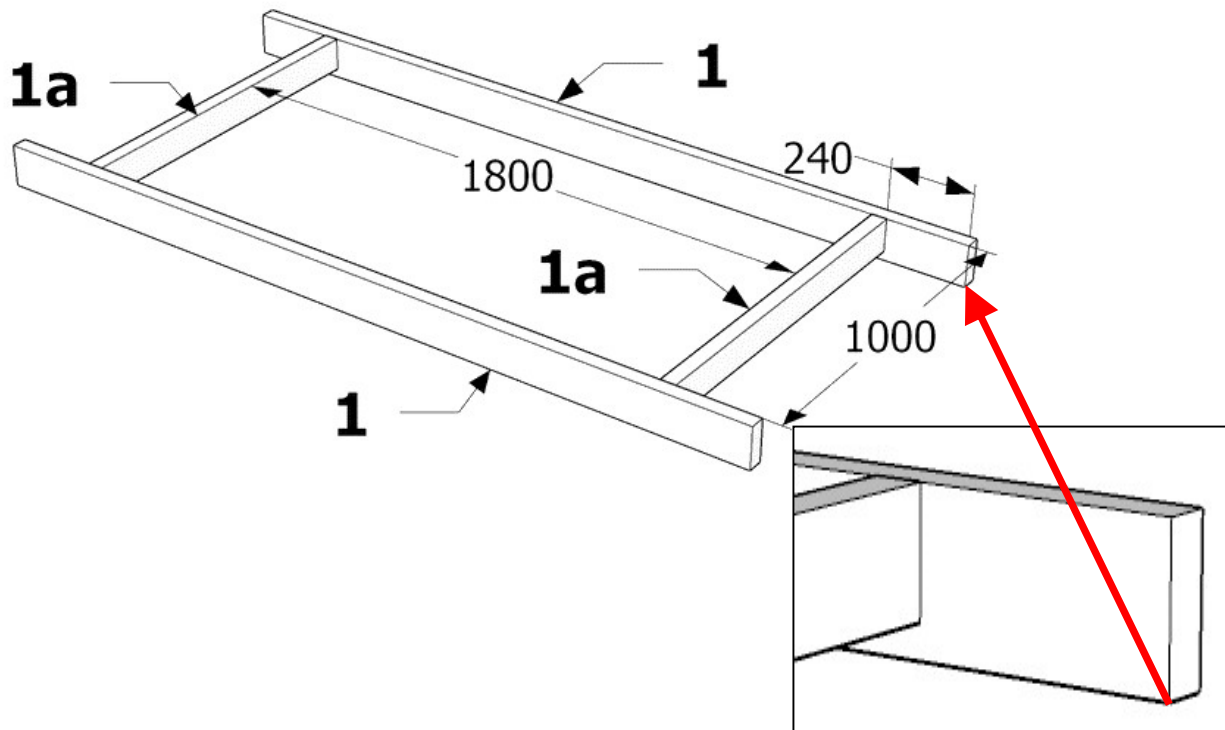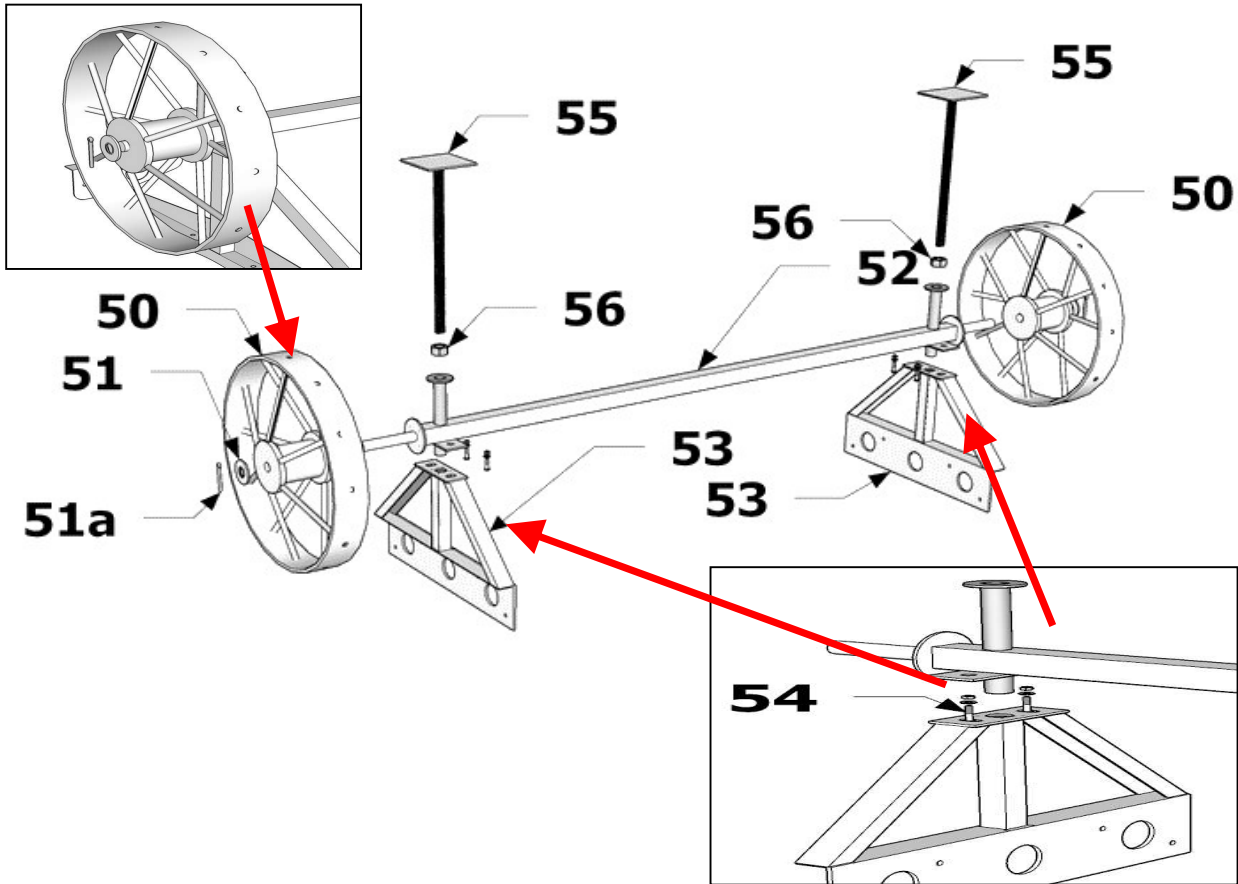





1 + **1a**

4,5 x 80	8
-----------------	----------


Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

2/10

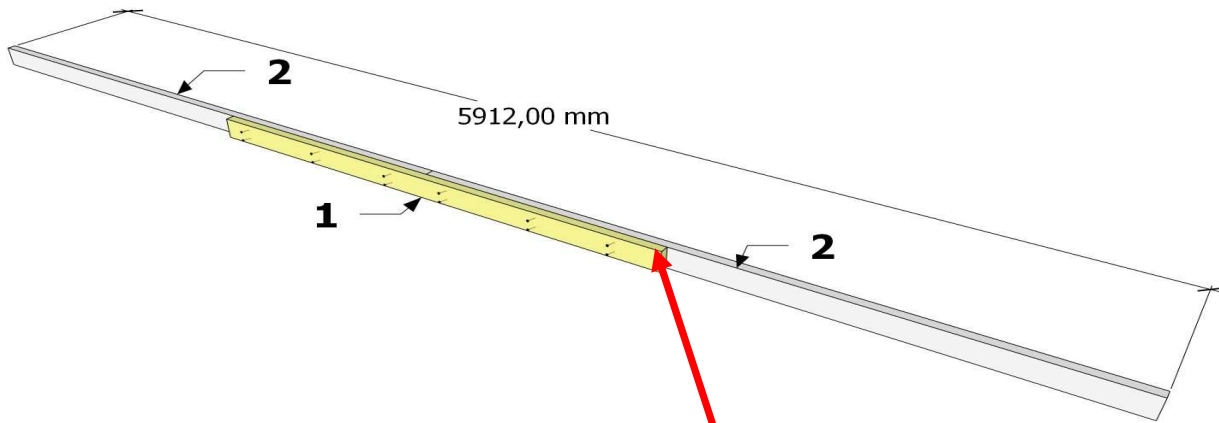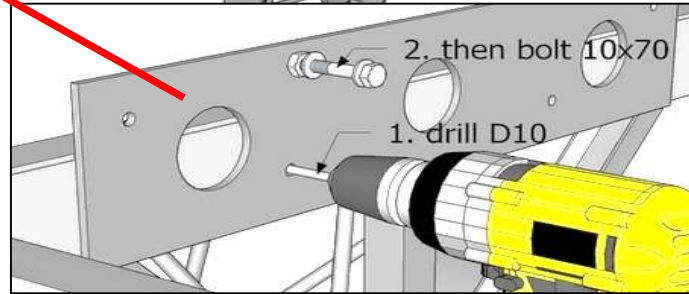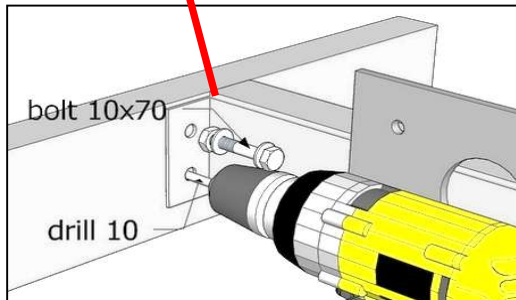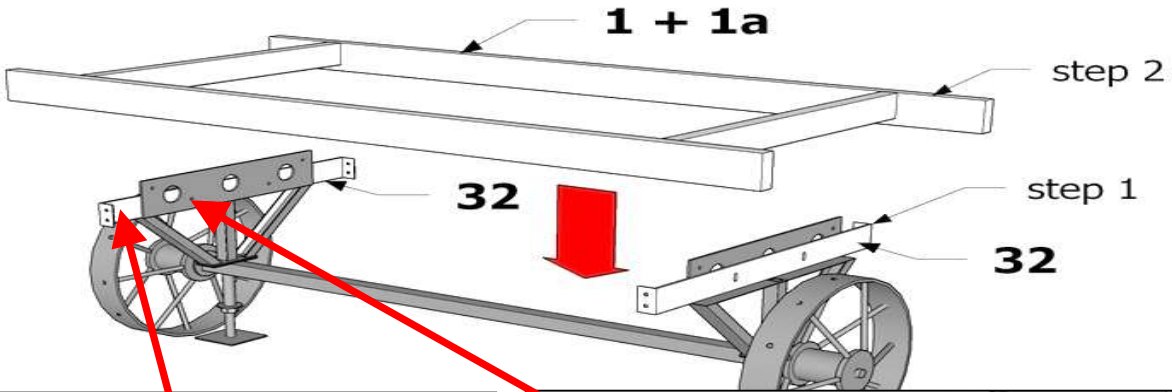


2	+	1	+	2		4,5 x 80	84
				X	7		

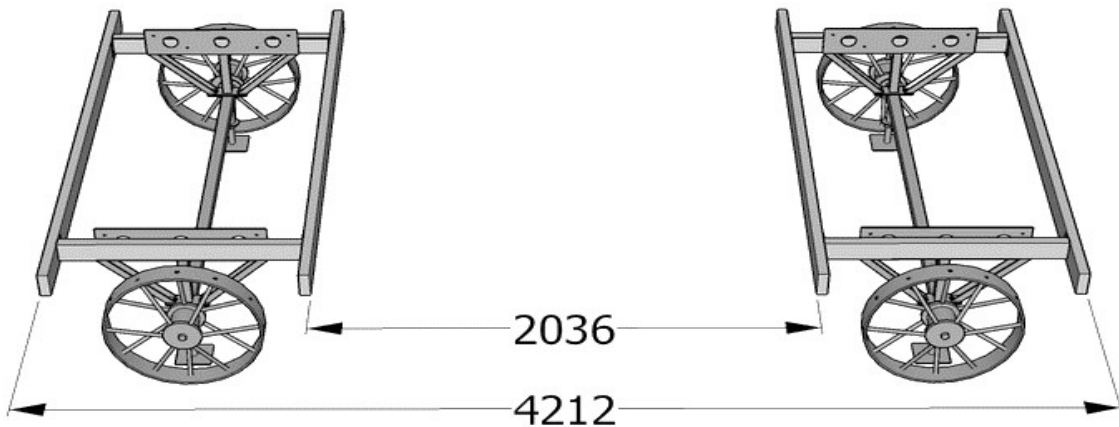


Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

3/10

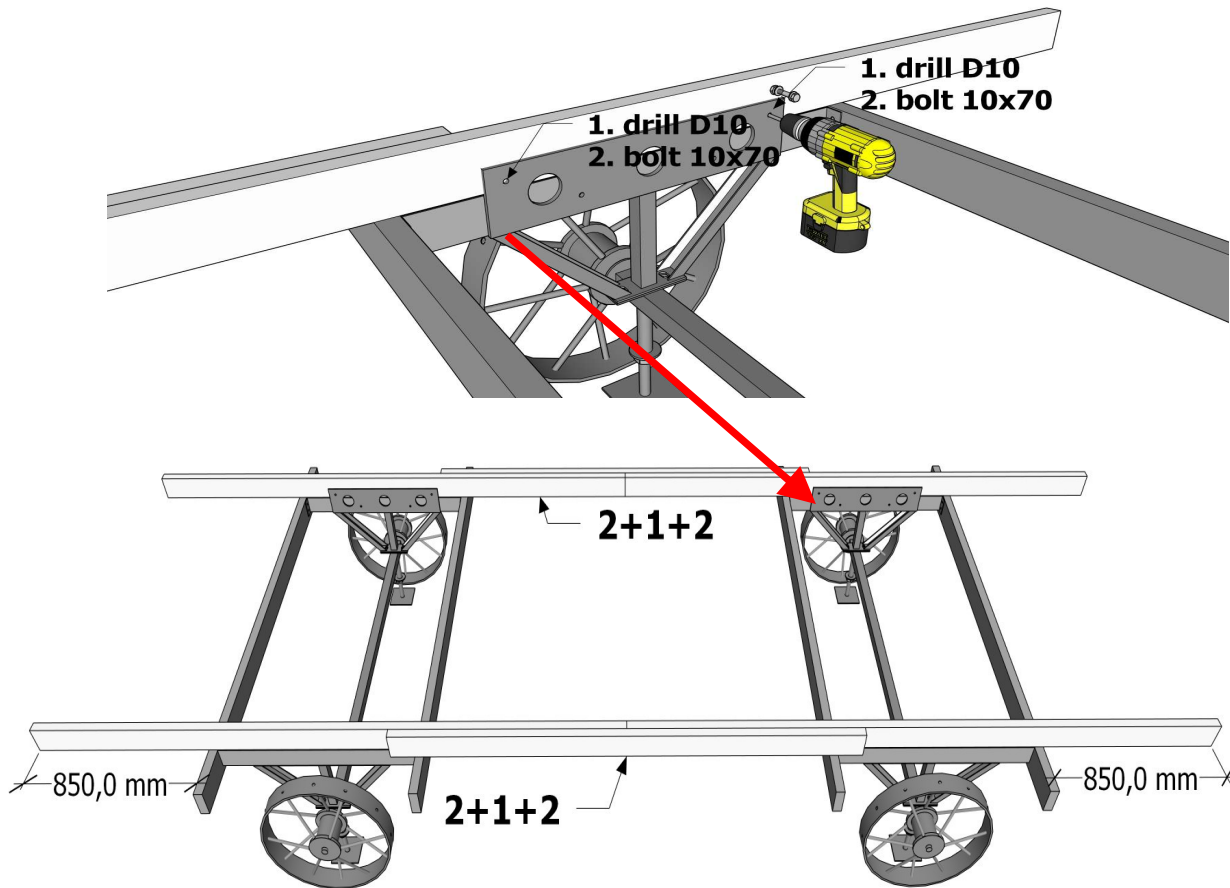


2	+	base	bolt 10 x 70	8
---	---	------	--------------	---

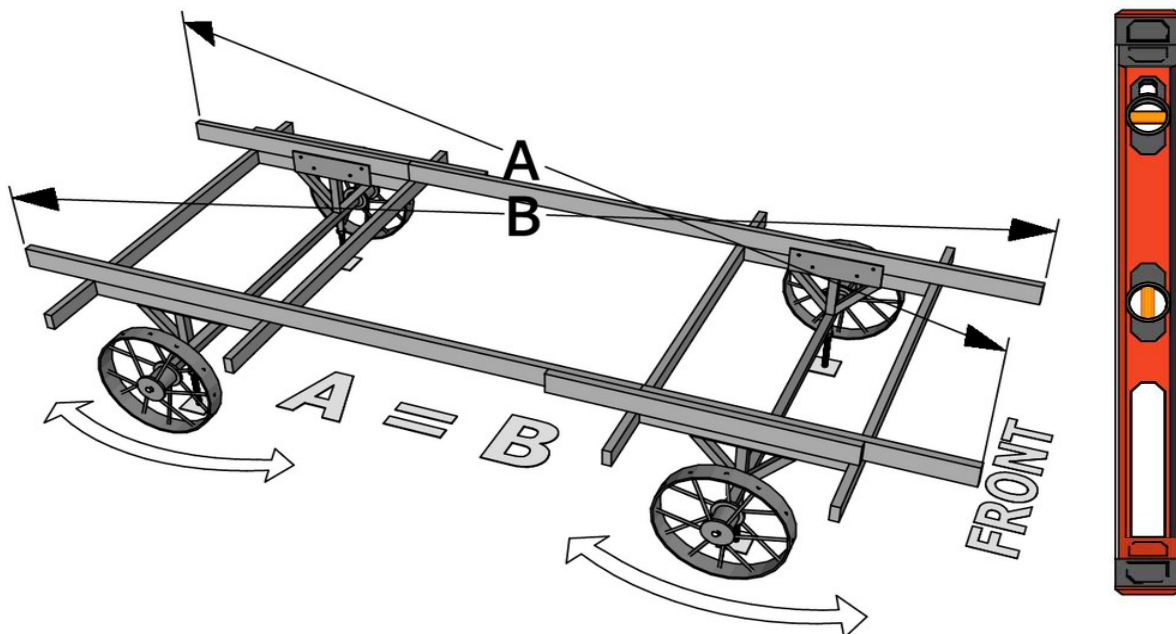

Wagon 2,4 x 6,0 m. Knot

Assembly instruction/ Montageanleitung



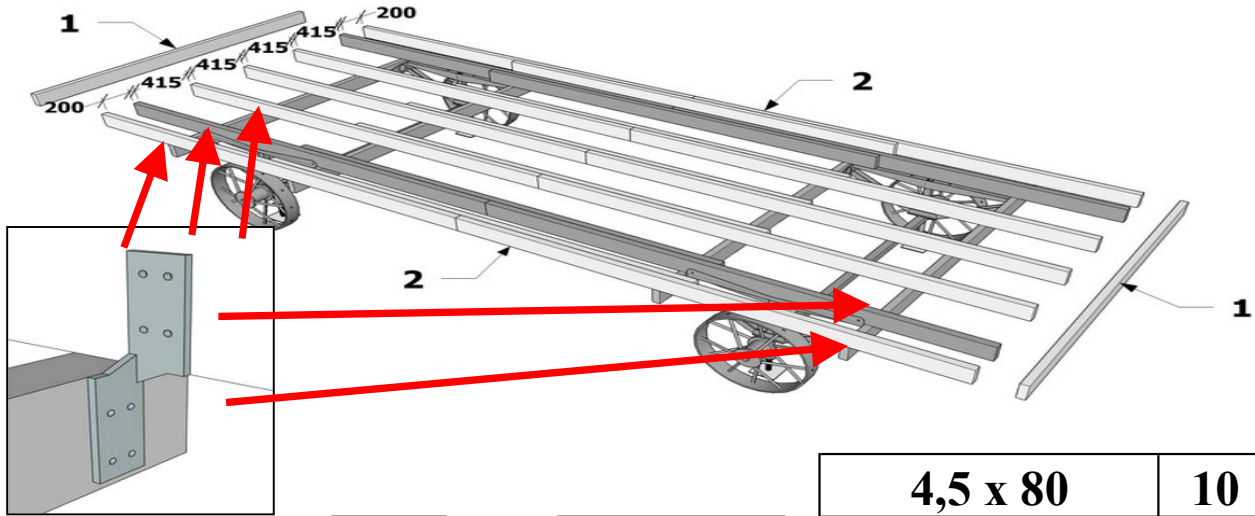


+ **2** + **(lower) 1**

+ **1**

4,5 x 80	10
3,5 x 40	112
support plate	14

4,5 x 80	28
----------	----

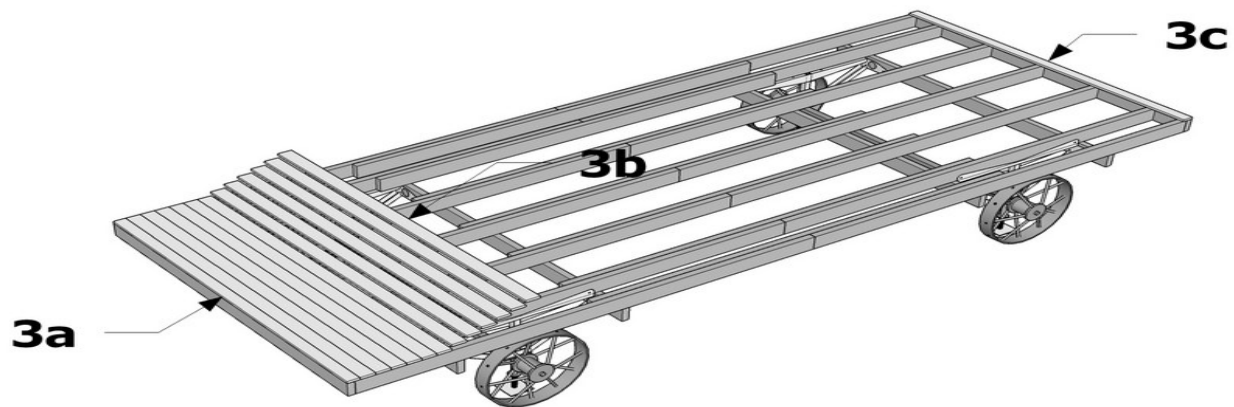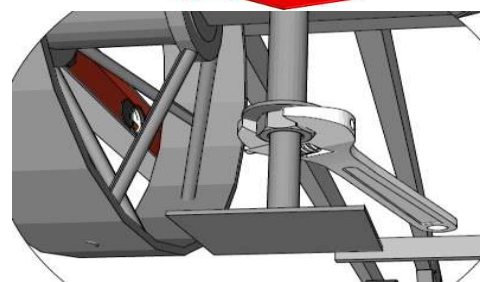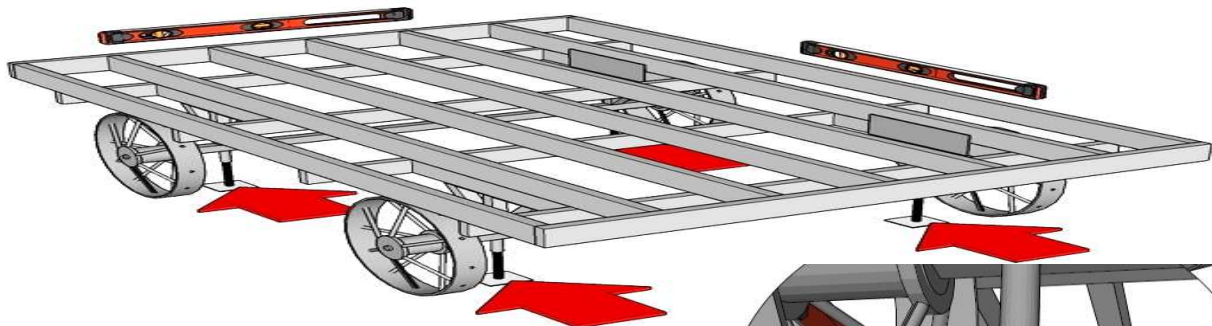


3a + **3b** + **3c**

nail 2 x 50	483
-------------	-----

Wagon 2,4 x 6,0 m. Knut




Assembly instruction/ Montageanleitung

5/10

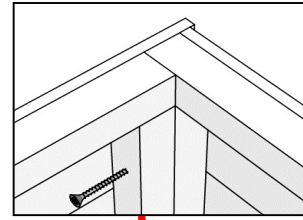

You can compile walls of the wagon so ...

... or so

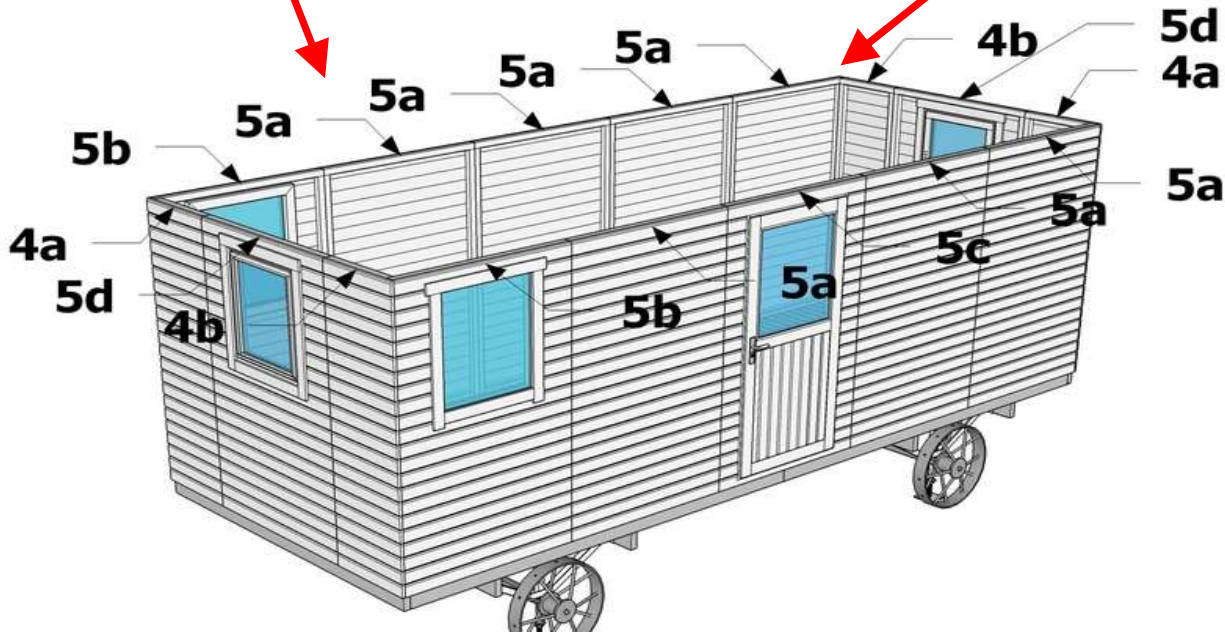
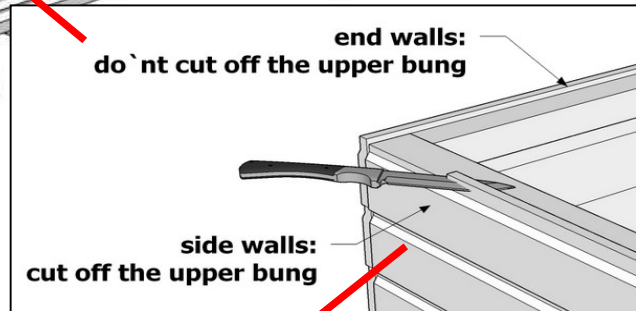


NB ! Please, read explanations at next page!



Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

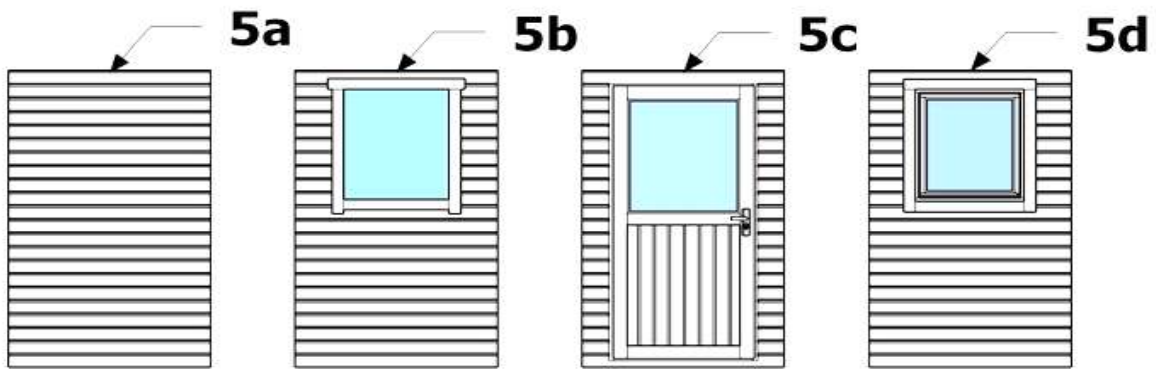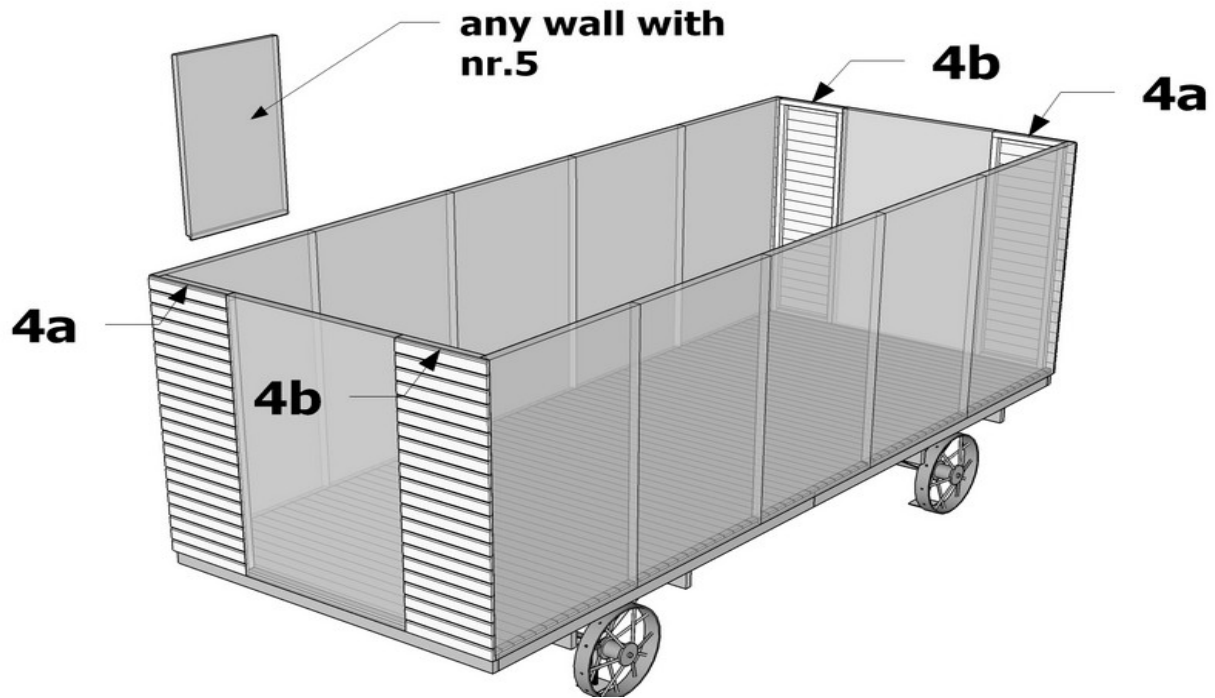




You can place the walls nr. 5 anywhere You like, excl. walls nr. 4a and 4b

All following instructions be in effect regardless of the position walls No. 5

4a	+	5...	+	4b	+	5...		4,5 x 80	64
5...	+	5...	+	5...	+	5...			
4a	+	5...	+	4b	+	5...			
5...	+	5...	+	5...	+	5...			
4a		5...		4b		5...		4 x 60	32
5...		4a		5...		4b			
							+	base

Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

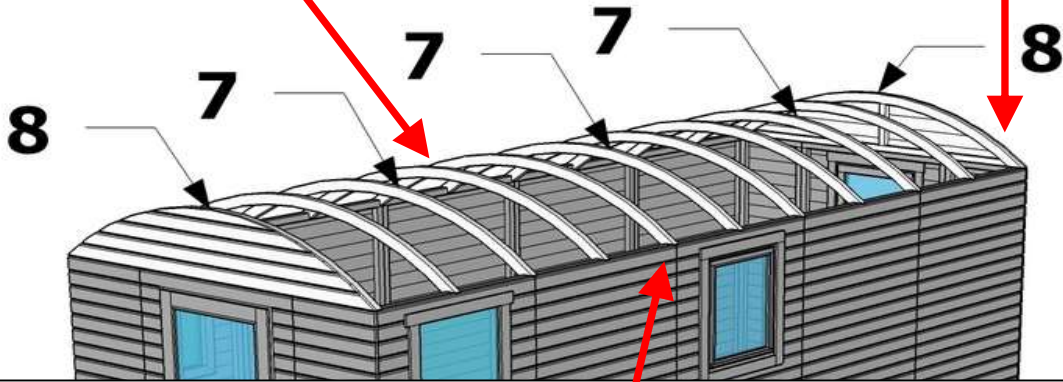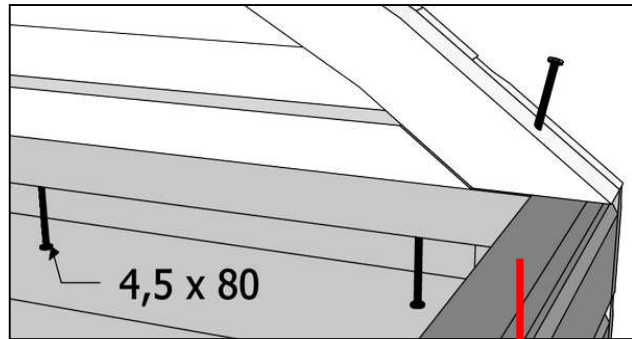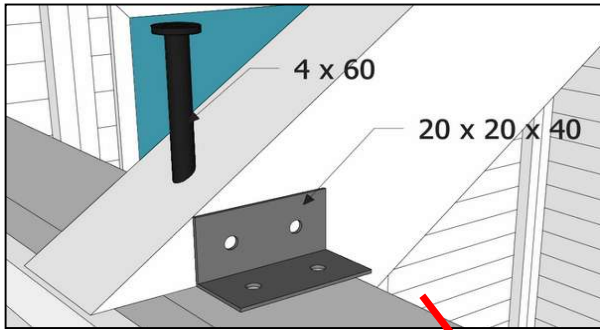


+ 7

4 x 60	18
20x20x40	18
3,5 x 40	72

+ 8

4,5 x 80	16
----------	----

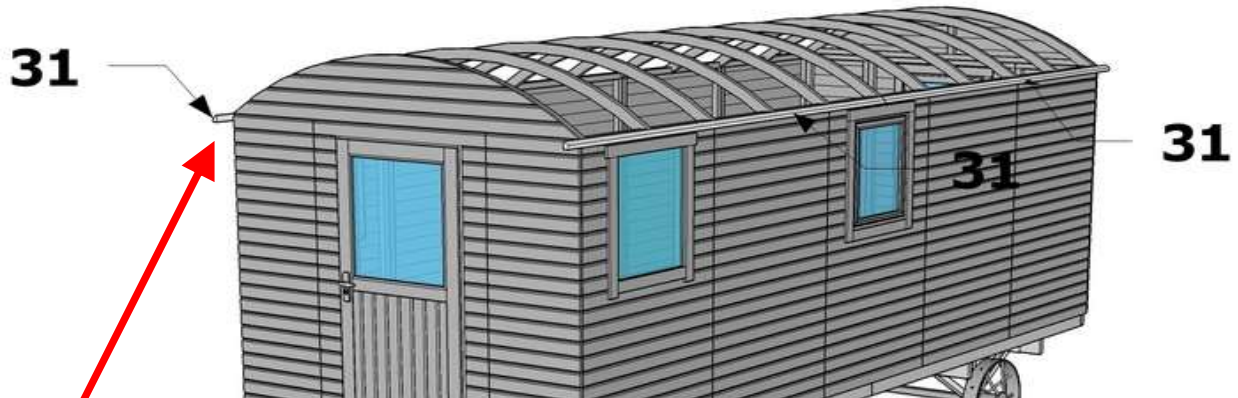



+ 31

4,5 x 80	24
----------	----



Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

8/10

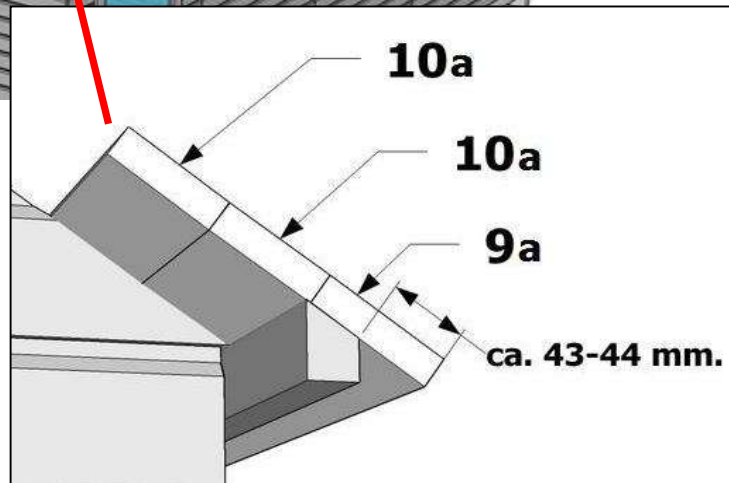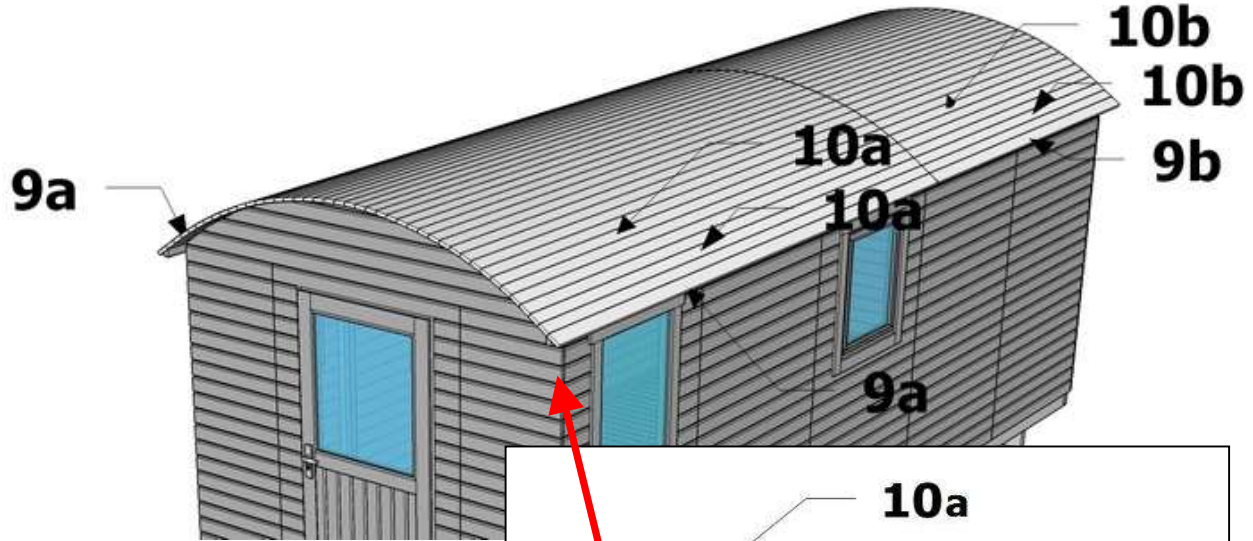


+	9a/b	+	10a/b	+	9a/b	3,5 x 40	44
		+	10a	+	10b	nail 2 x 50	560

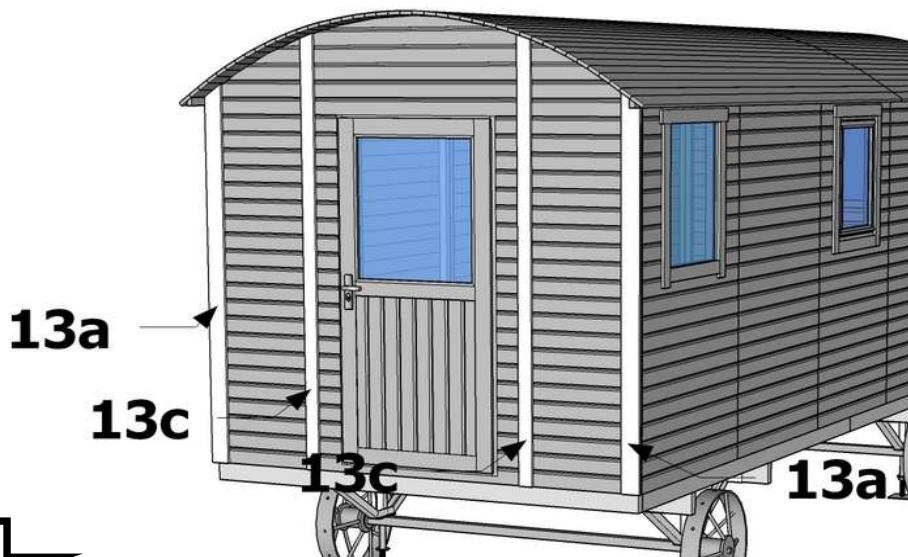


Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung

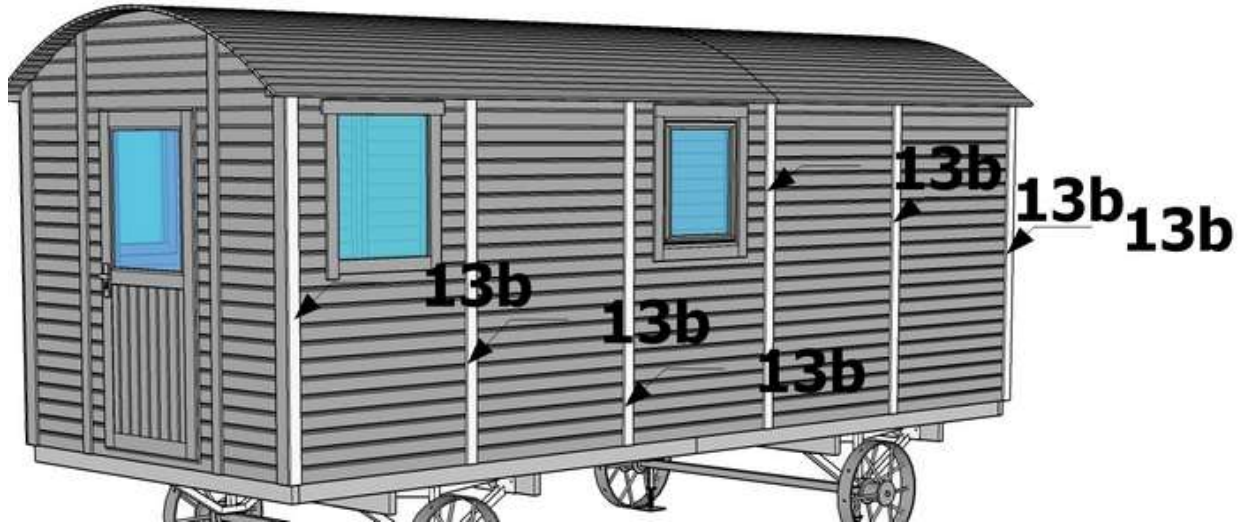


13a	+	13b	+	13c		3,5 x 40	84
------------	---	------------	---	------------	--	-----------------	-----------

Before this we recommend to install the roofing

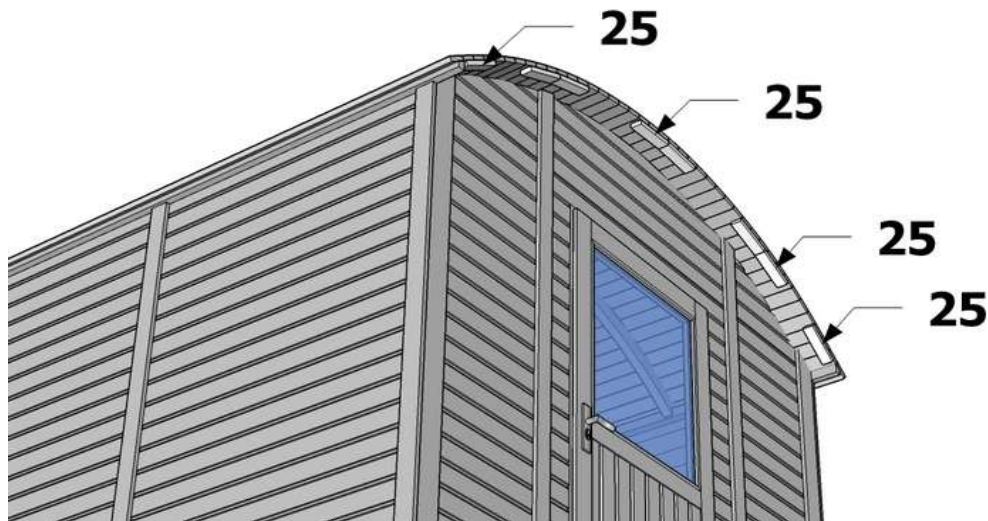

+	25		3,5 x 35	32
---	-----------	--	-----------------	-----------

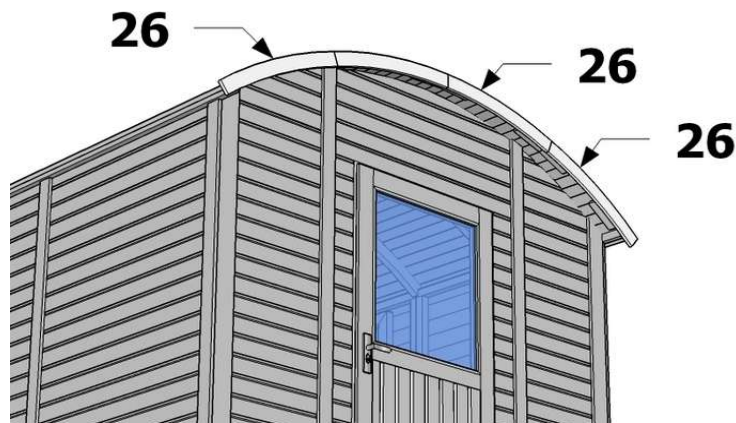


+	26		3,5 x 40	16
---	-----------	--	-----------------	-----------


Wagon 2,4 x 6,0 m. Knut

Assembly instruction/ Montageanleitung


10/10

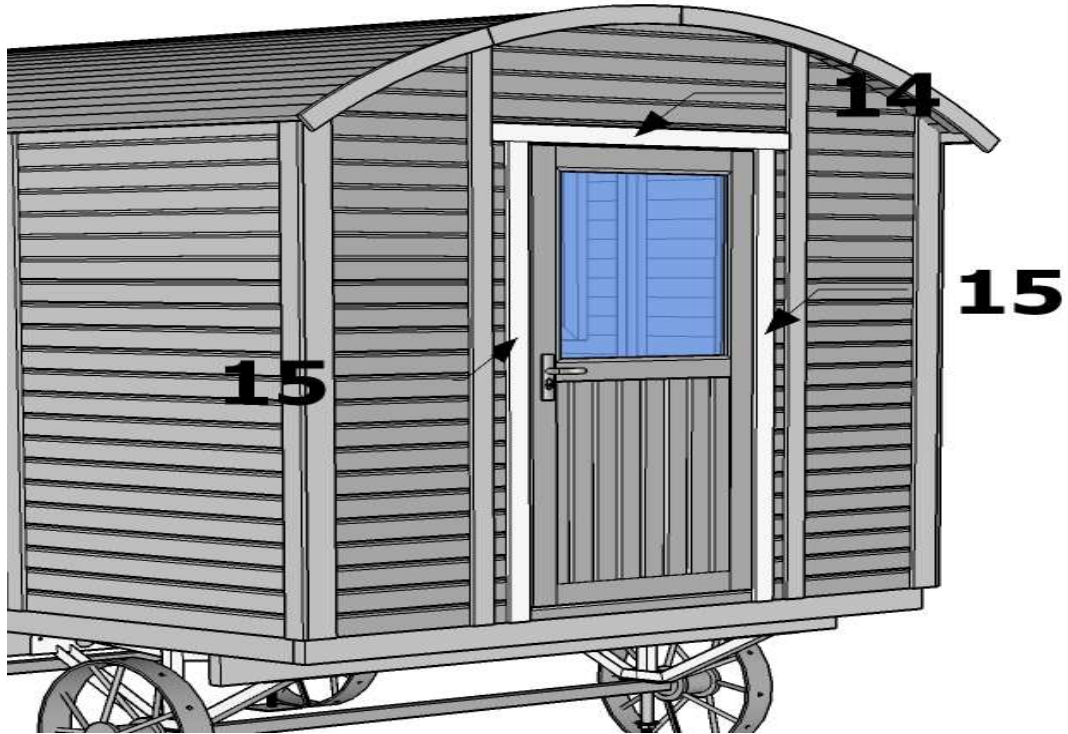

+	15	+	14	3,5 x 40	12
---	-----------	---	-----------	-----------------	-----------

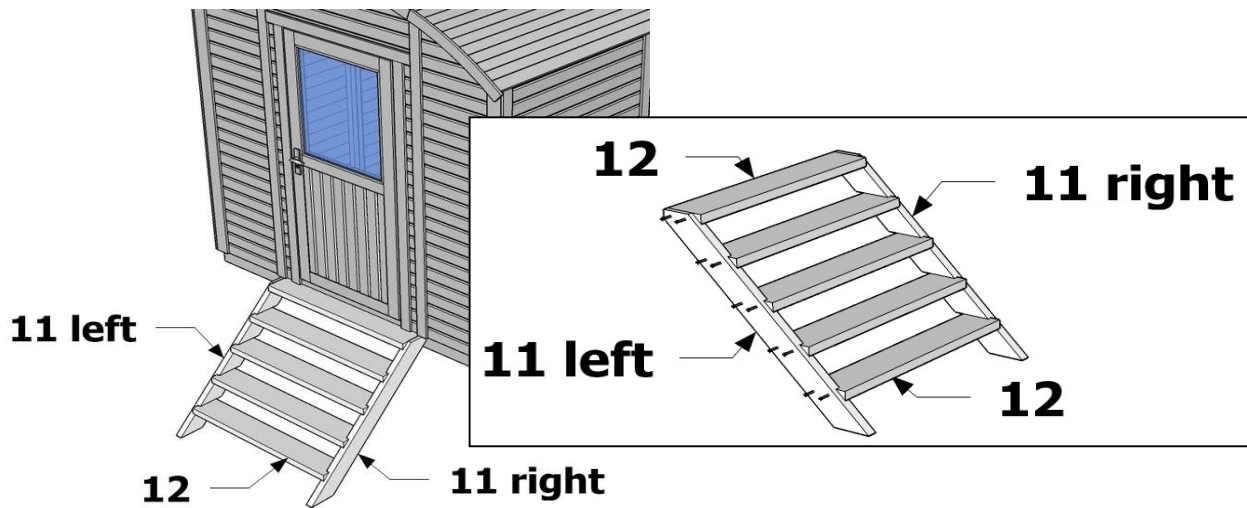

11	+	12	4,5 x 80	20
-----------	---	-----------	-----------------	-----------

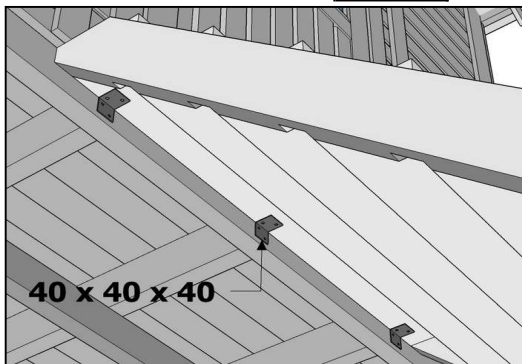

11+12		
+	40x40x40	3
base	3,5 x 40	18