


Sauna 280, Ø226

**NB! Please read whole manual
before start.**


**All given measurements
are in millimeters!**

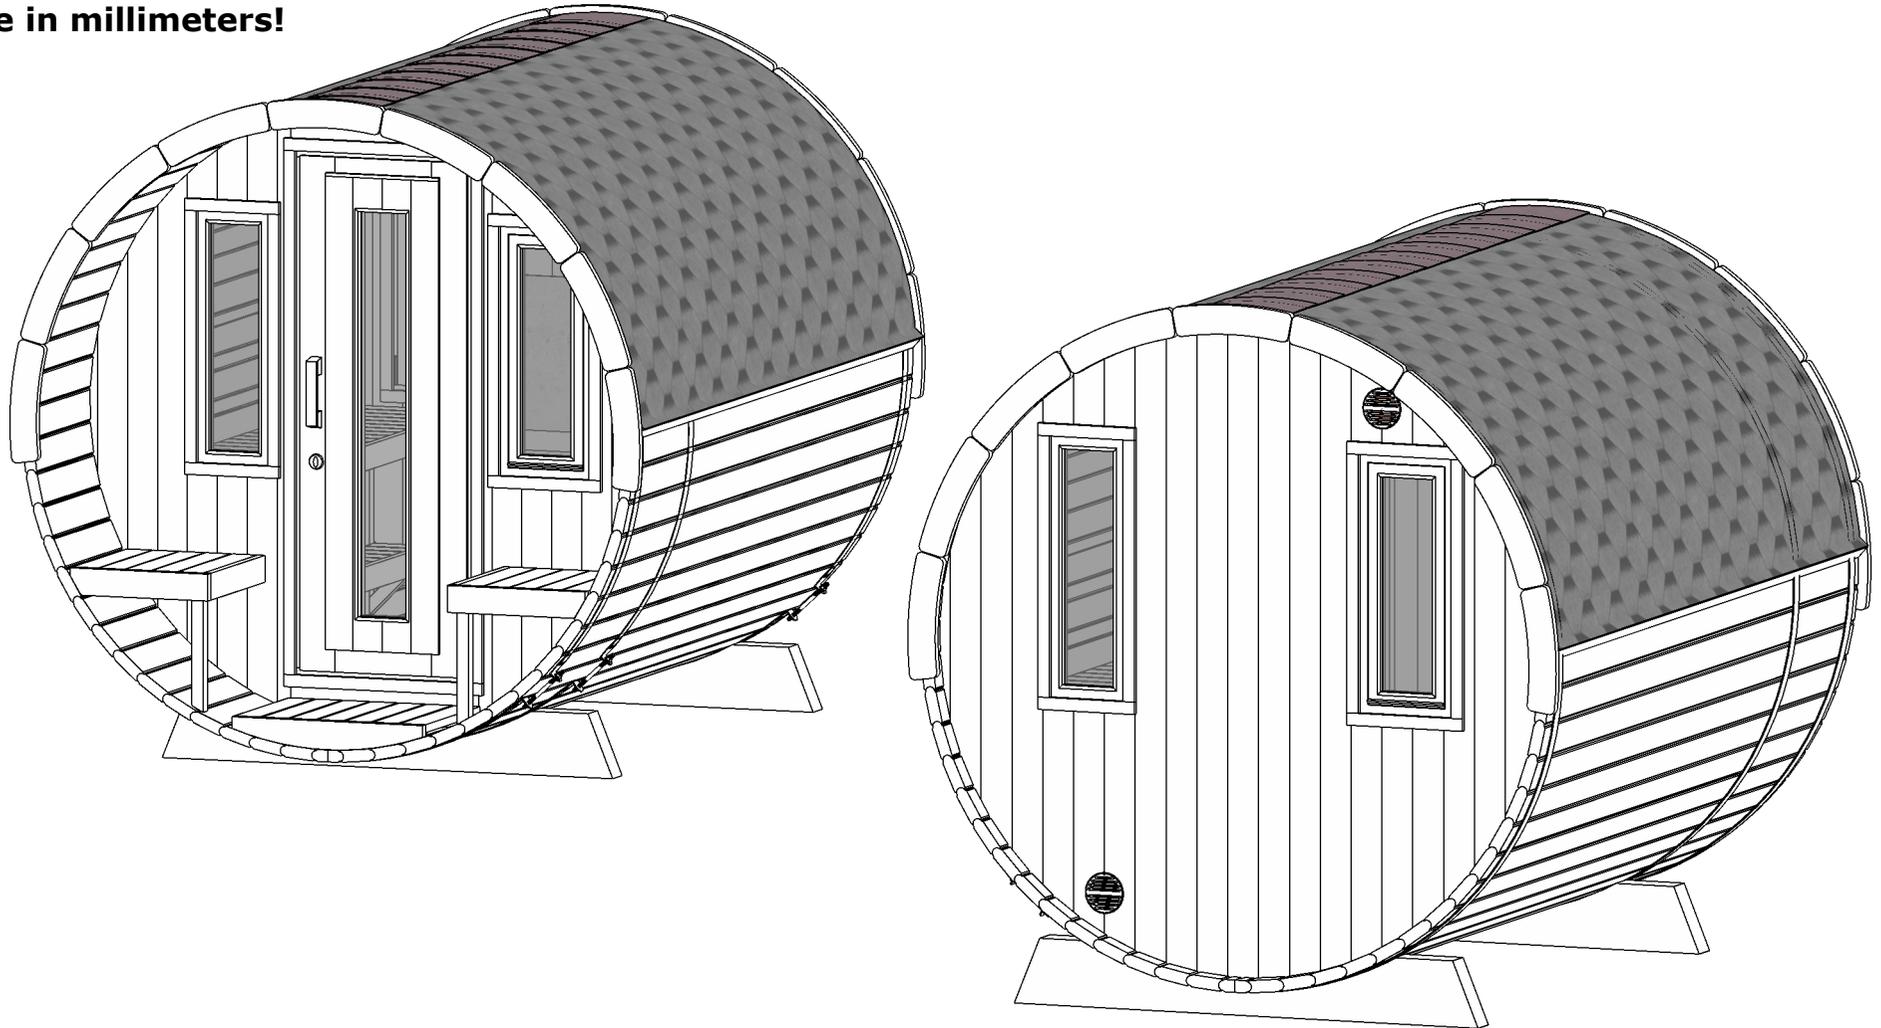


(I26-TKE-PTS-018)

Wall configuration.

Windows are optional!


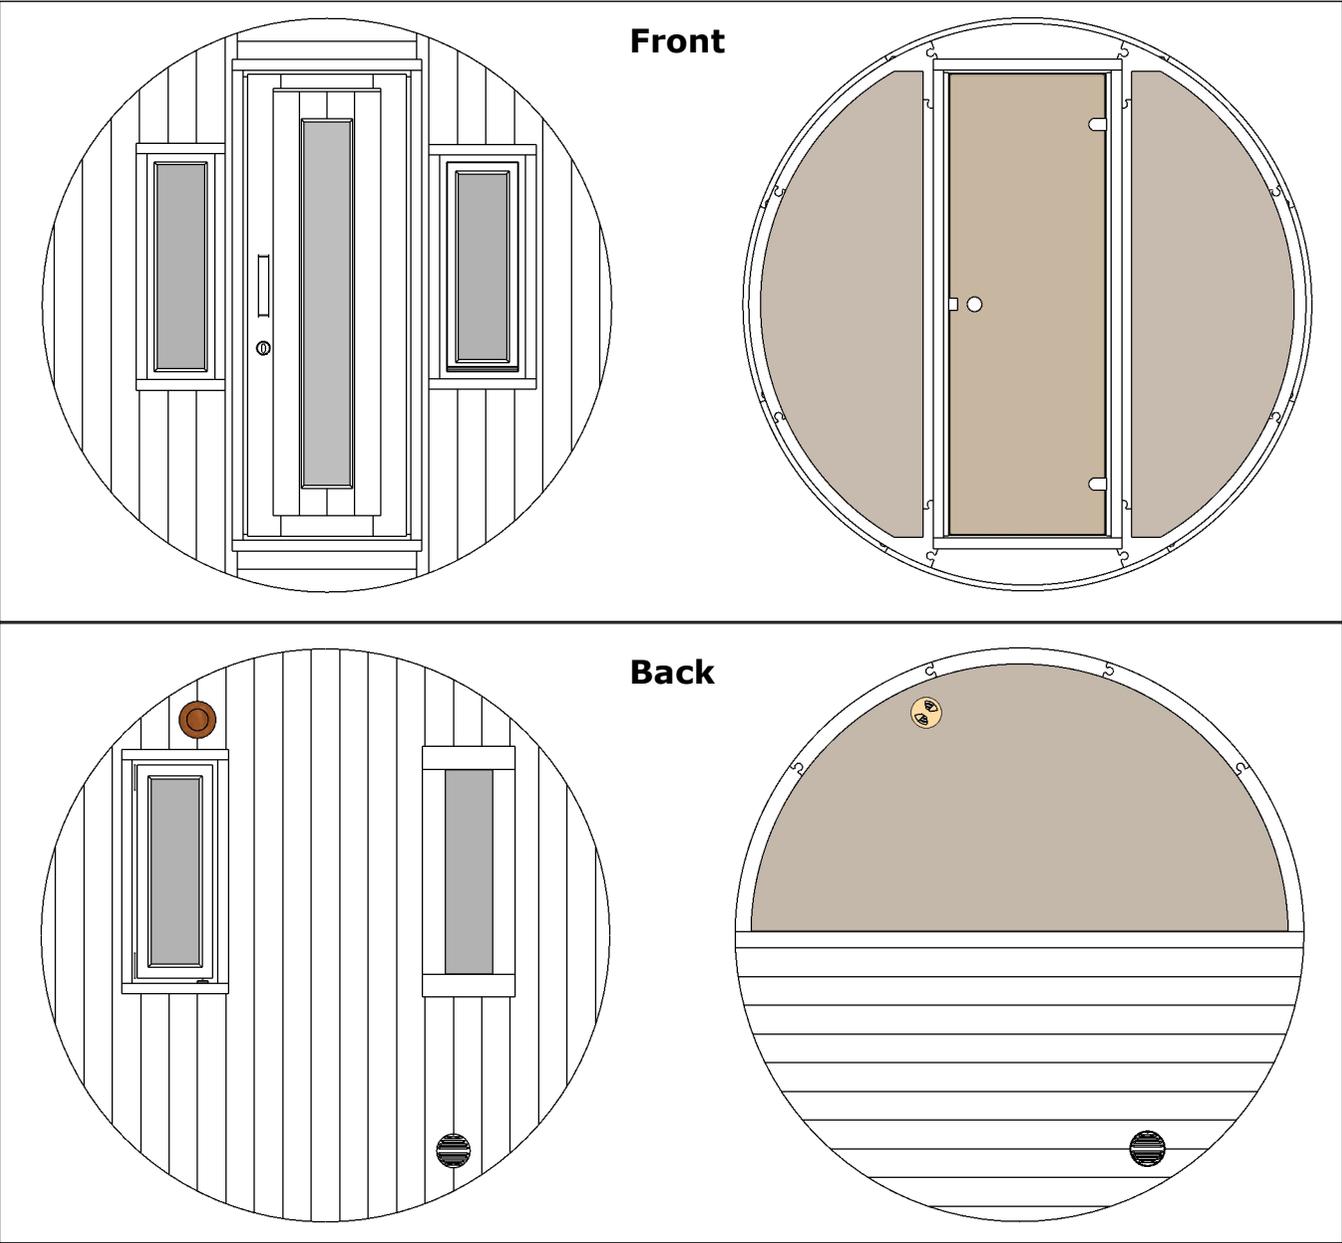


Glass Wall mounting Ø226


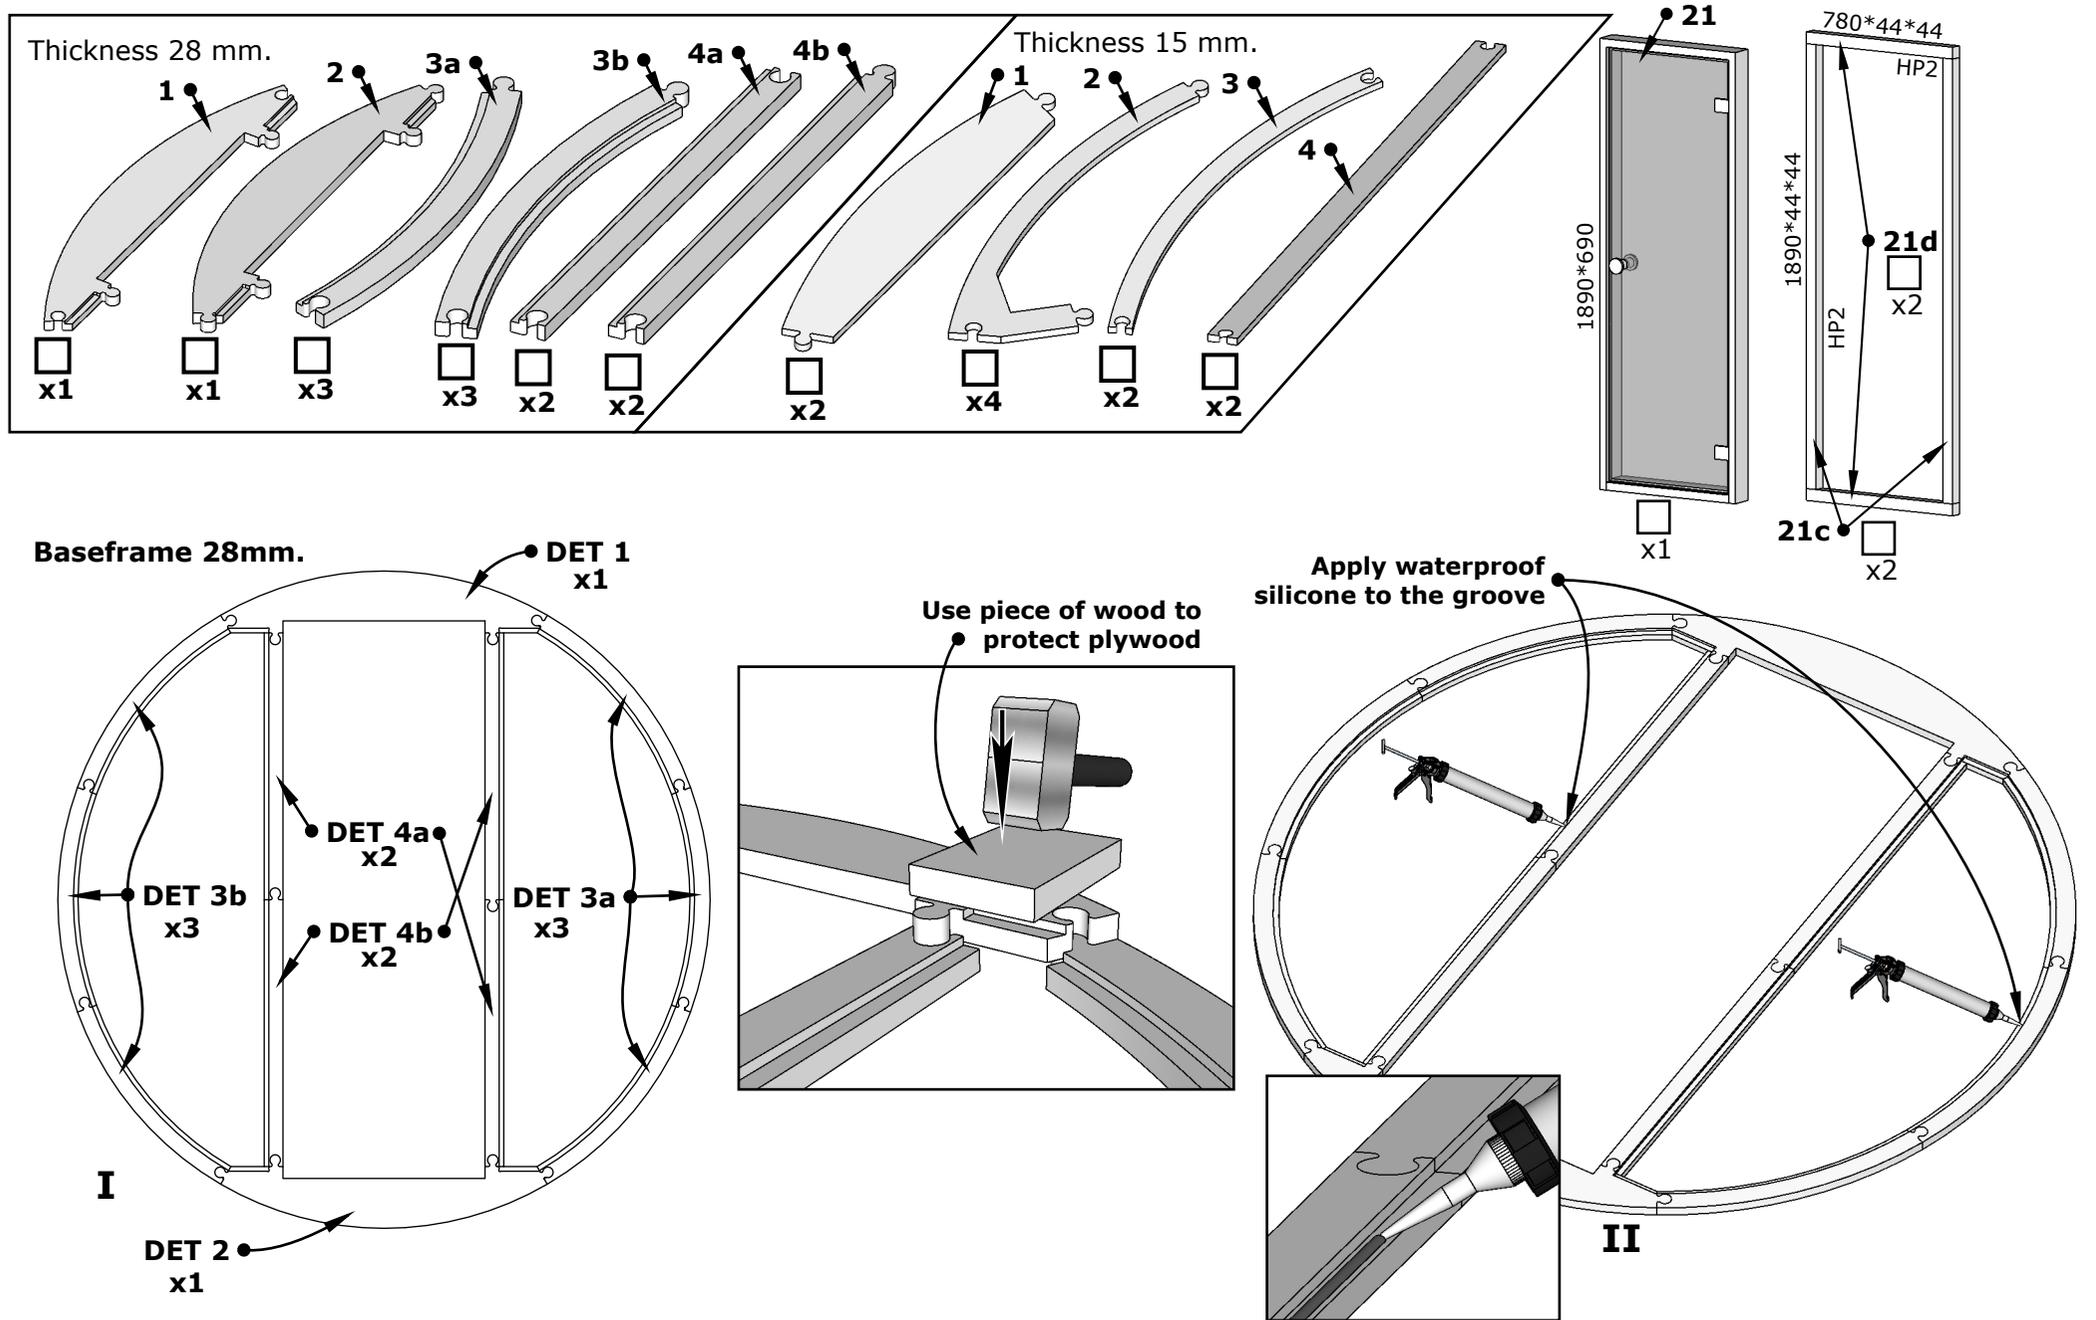


1.


Glass Wall mounting Ø226

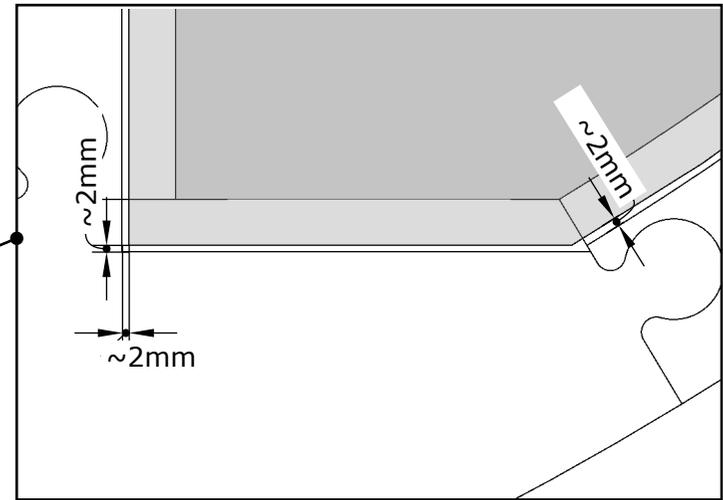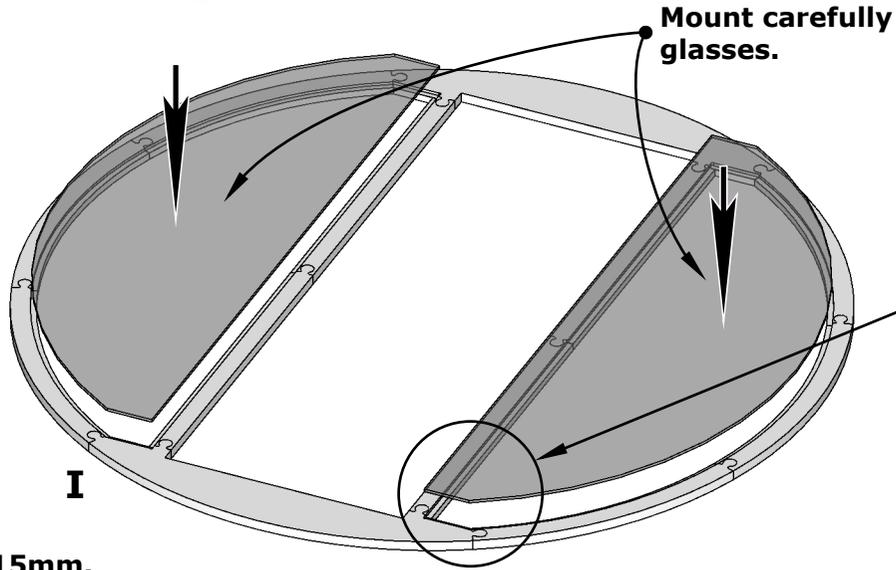

Coverframe 15mm.

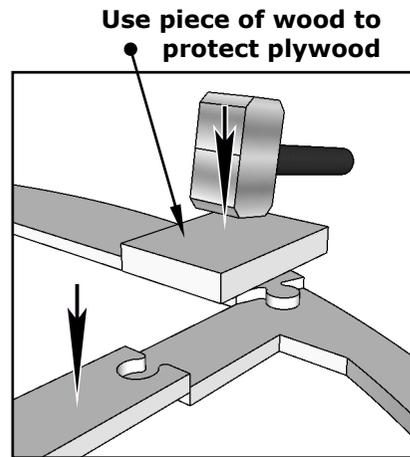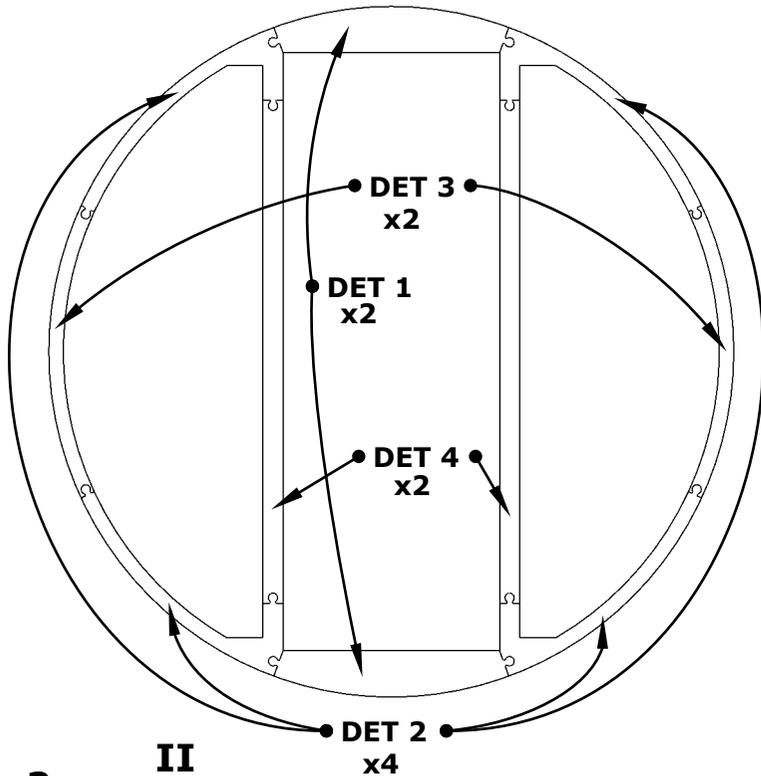


Apply waterproof silicone


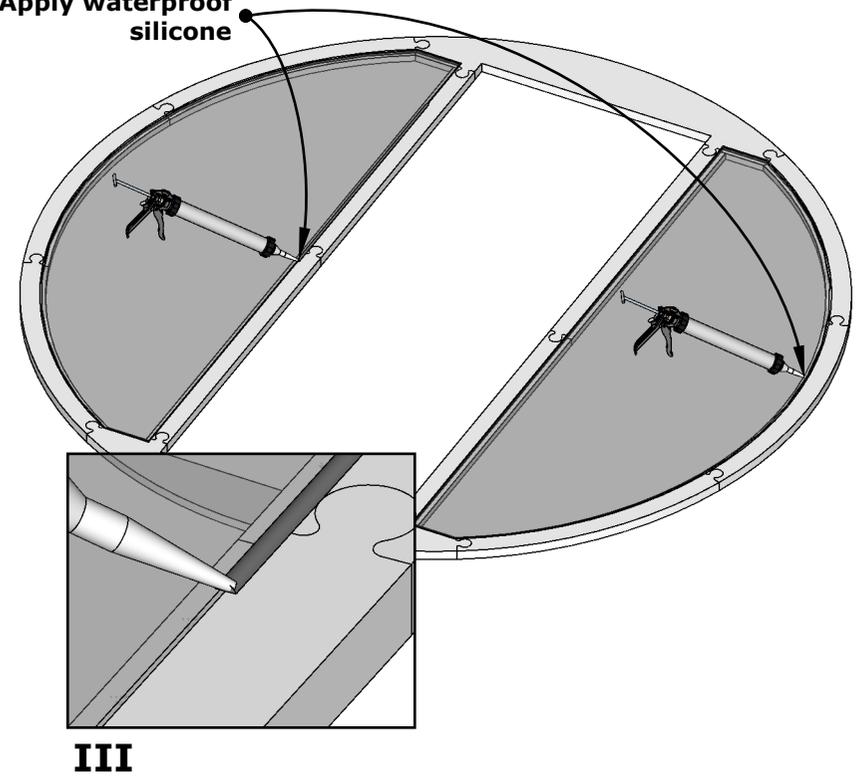


2.

Glass Wall mounting Ø226

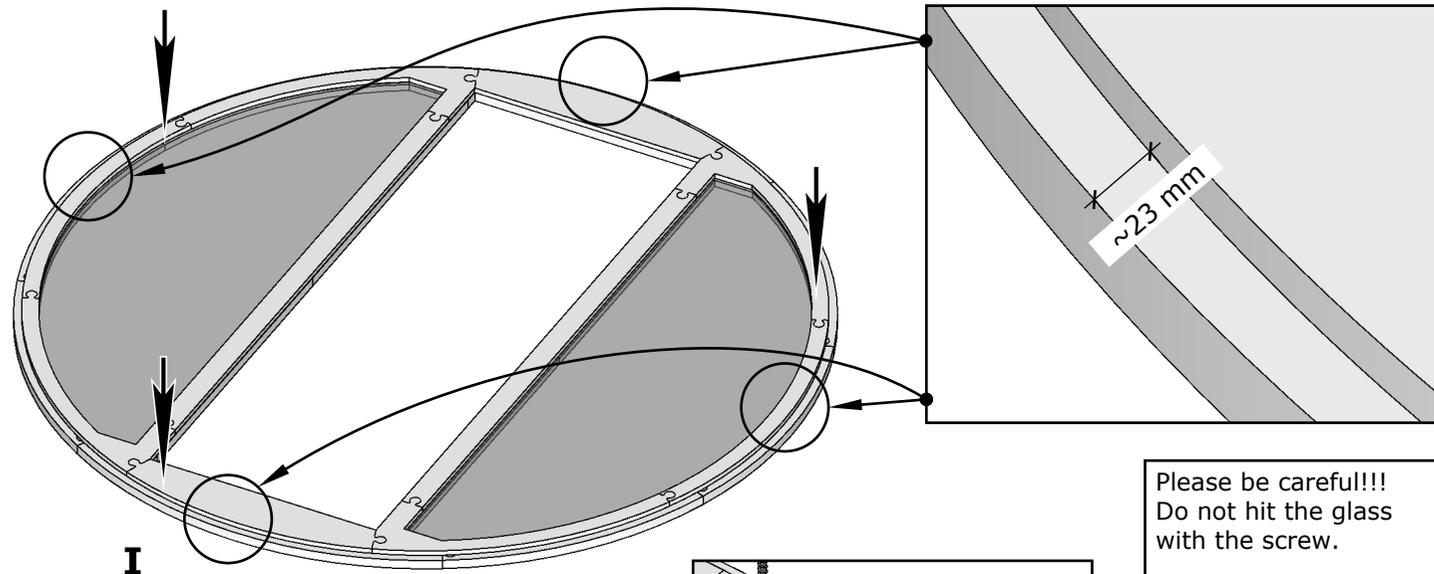


Cut board from pallet $L \sim 2200 \text{ mm}$.
Fix it diagonally to make wall more rigid during the installation.

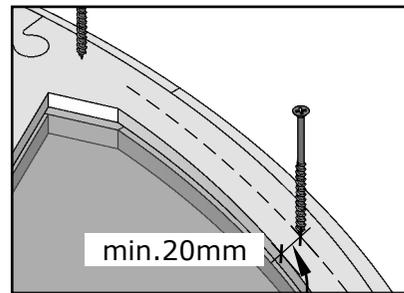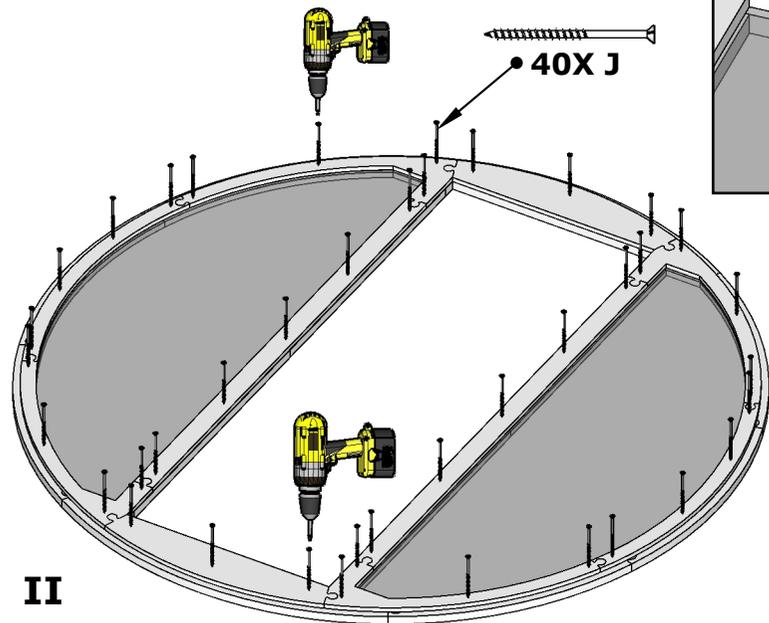

Please be careful!!!
Do not hit the glass with the screw.


Attention!
Place cover frame outside

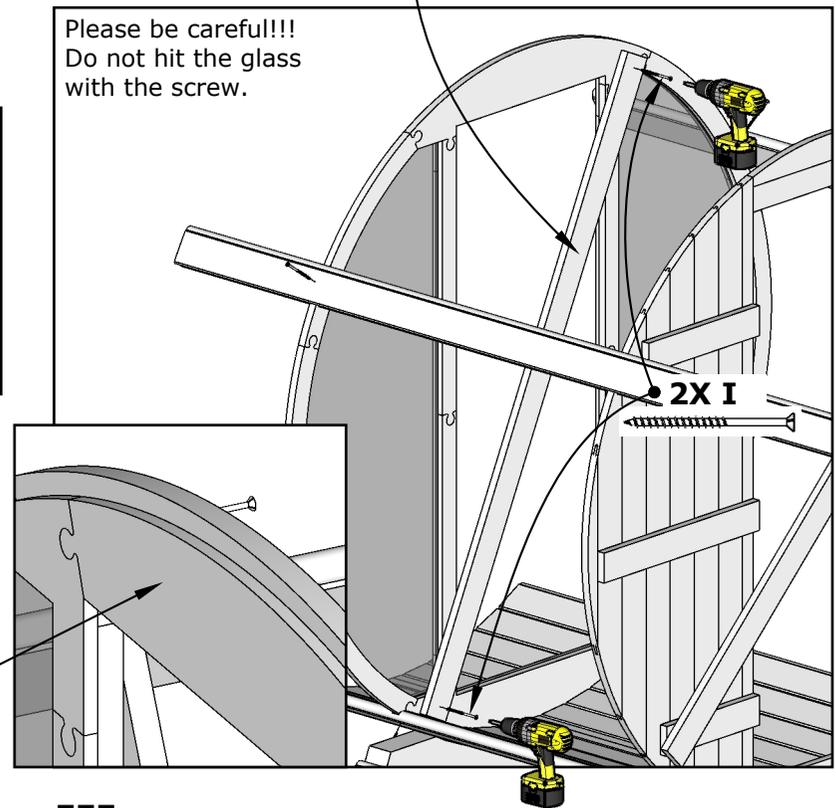





3.

(I26-TKE-PTS-018)



Glass Wall mounting Ø226

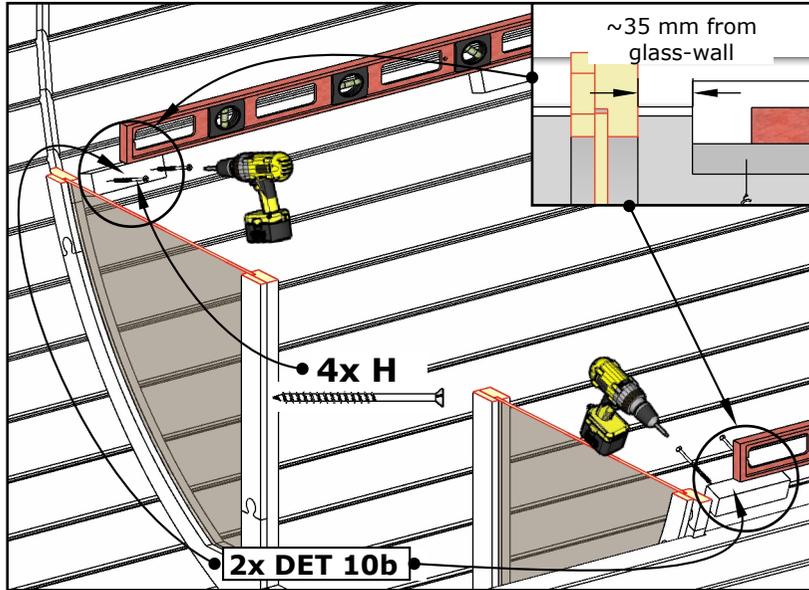

Benches installation

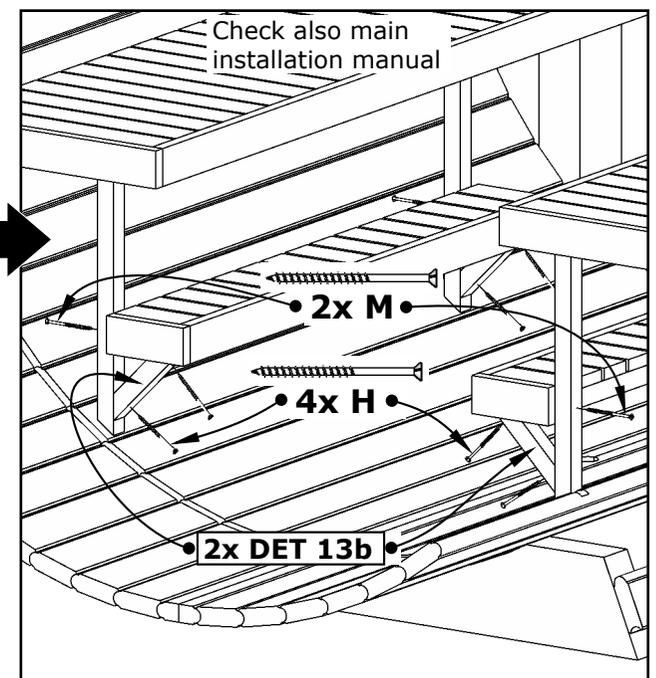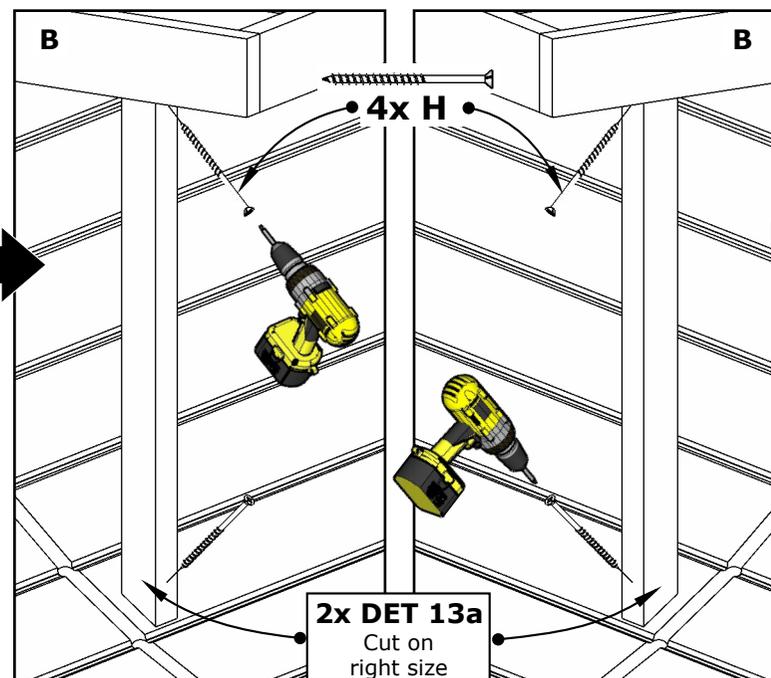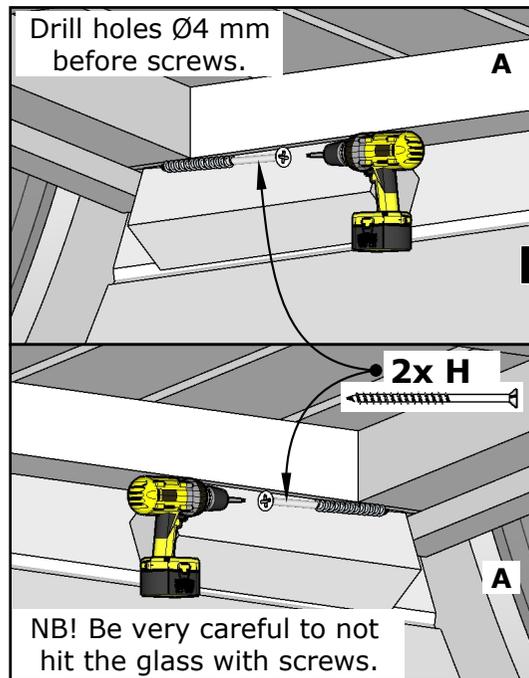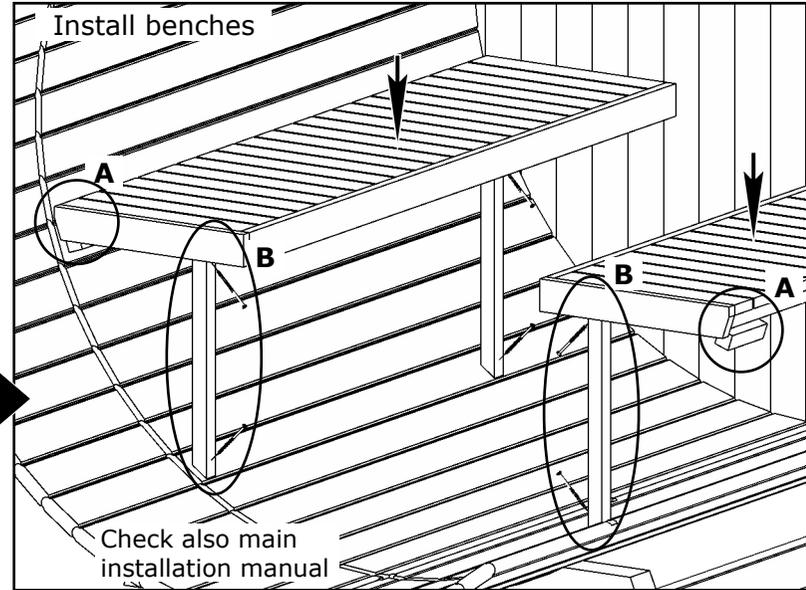





Glass Wall mounting Ø226

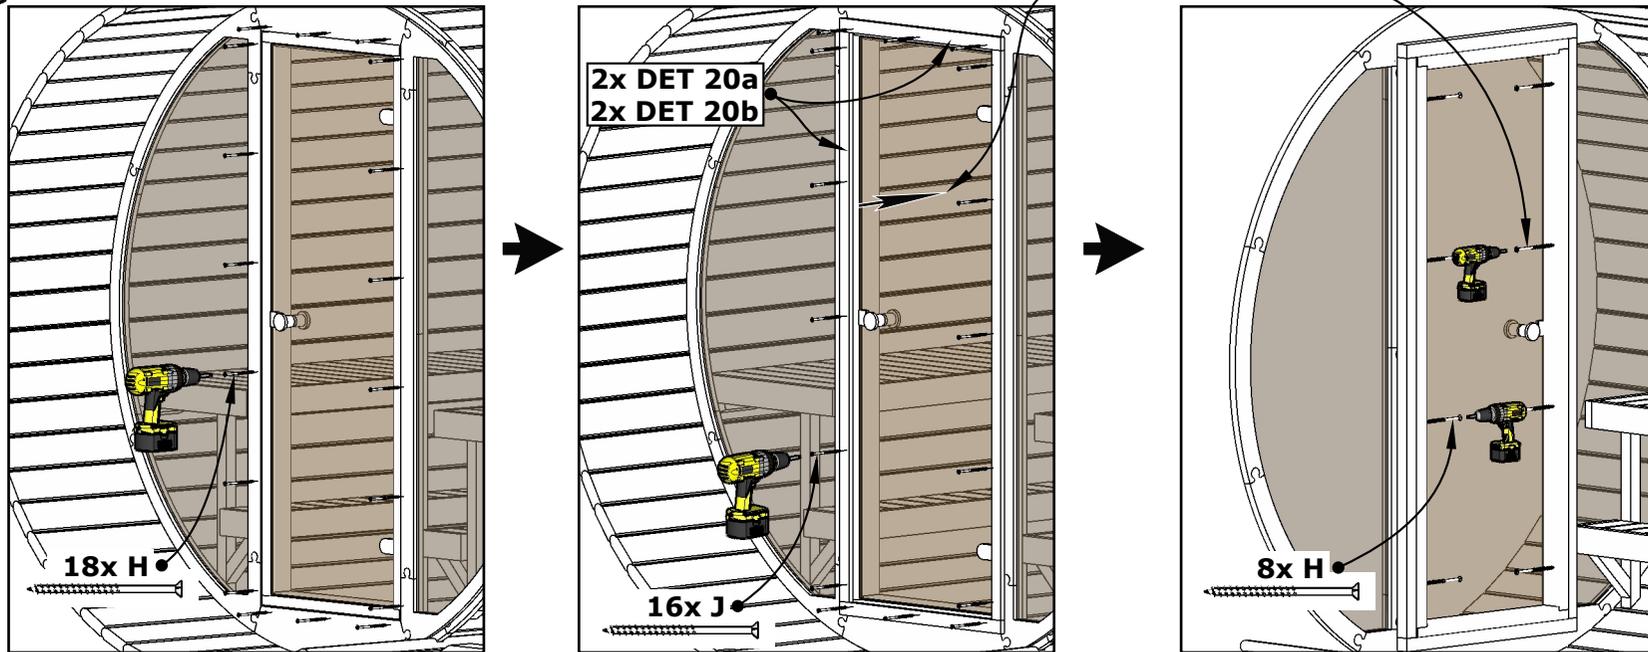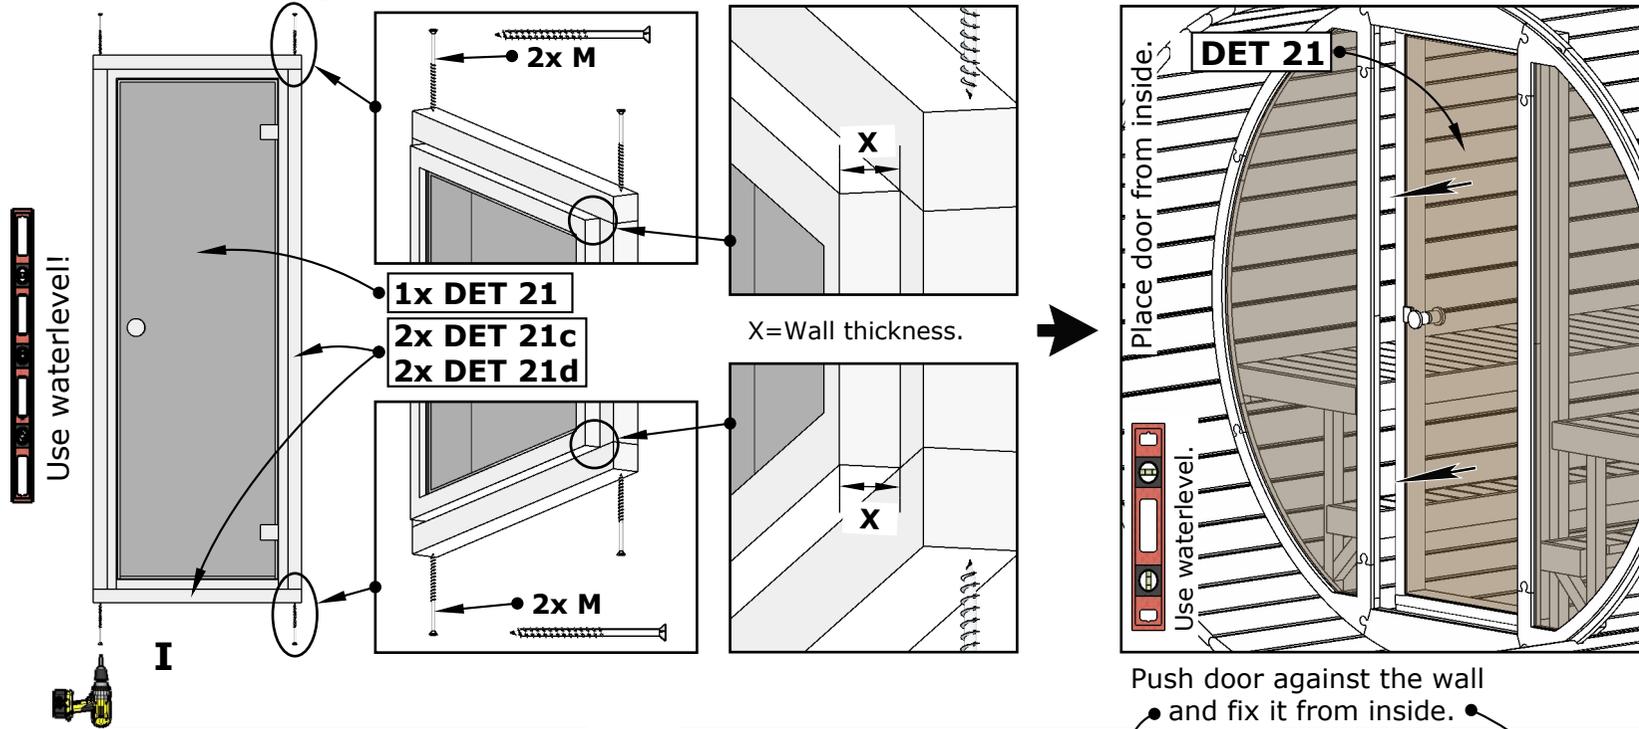

5.



(I26-TKE-PTS-018)

Glass Wall mounting Ø226

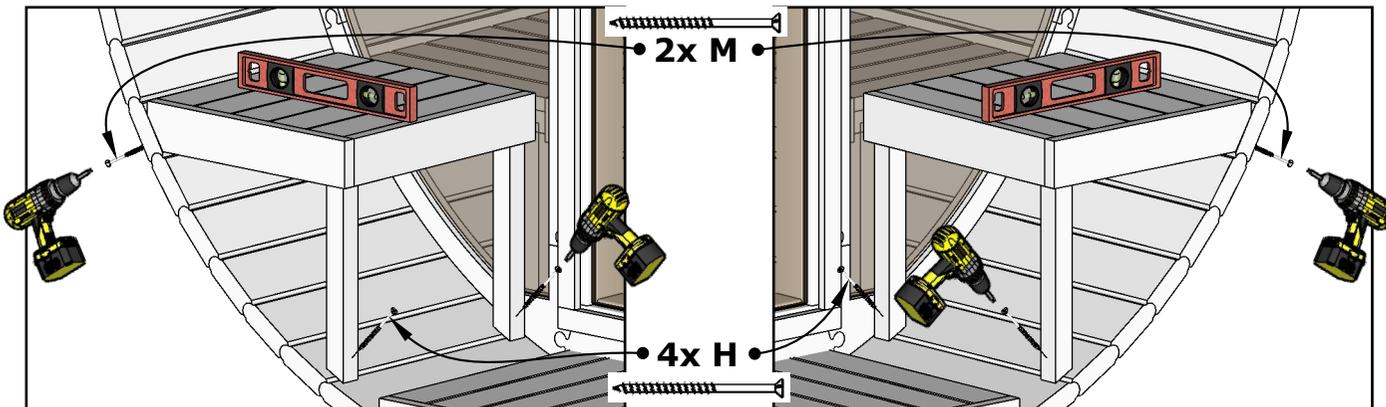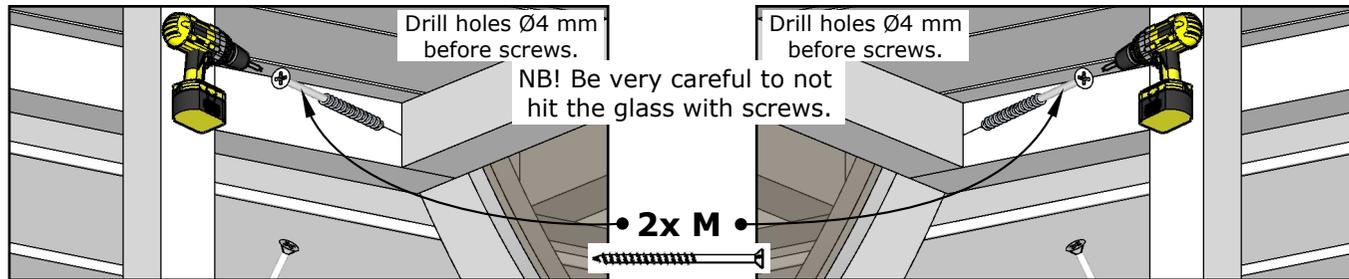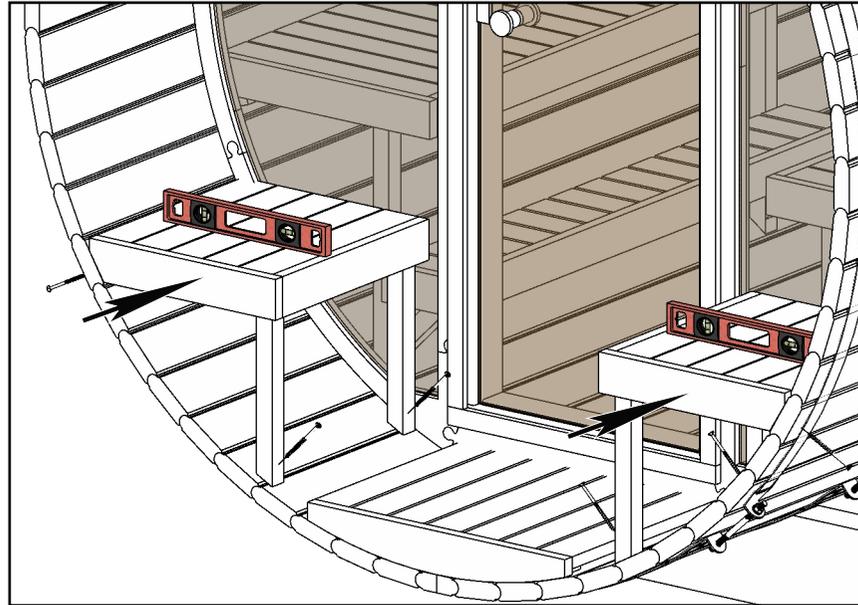
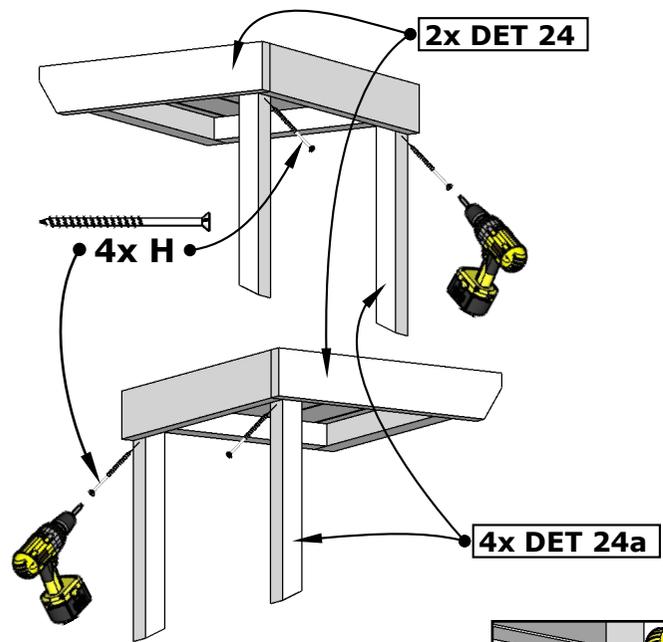


Wooden back wall assembly

Details

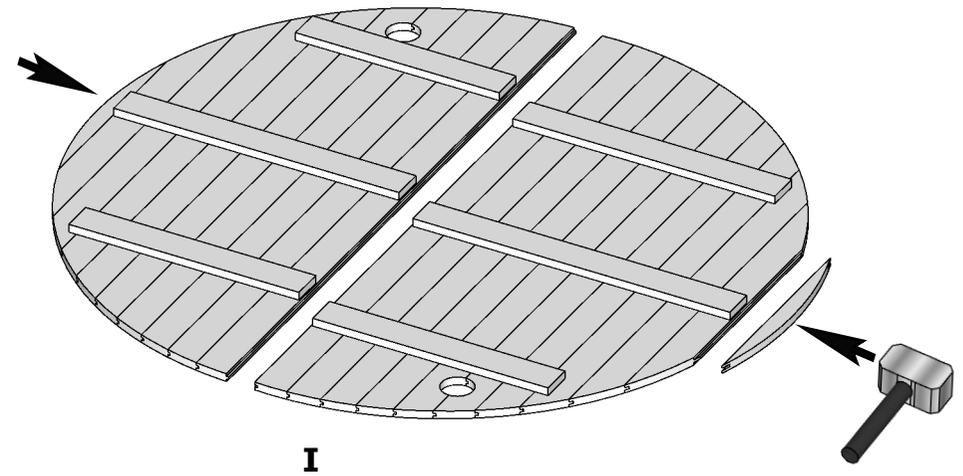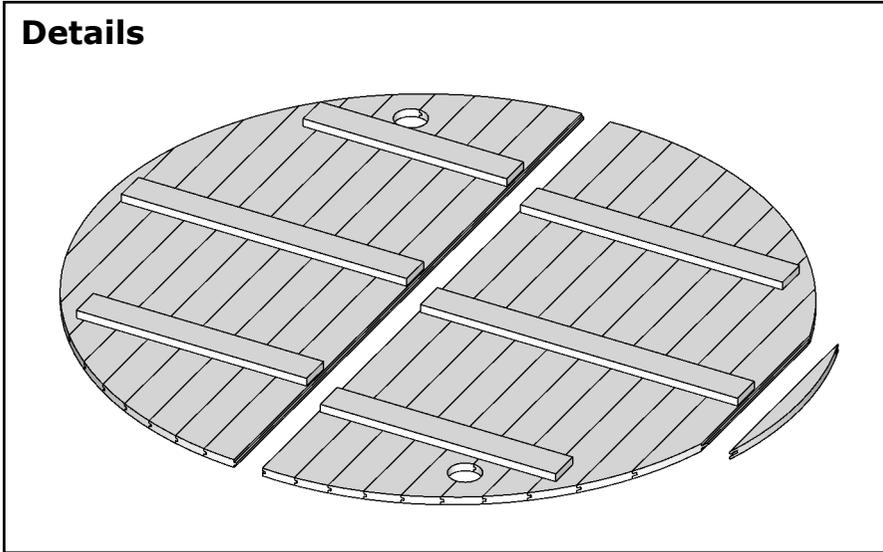


Cut board from pallet
L≈2100 mm.

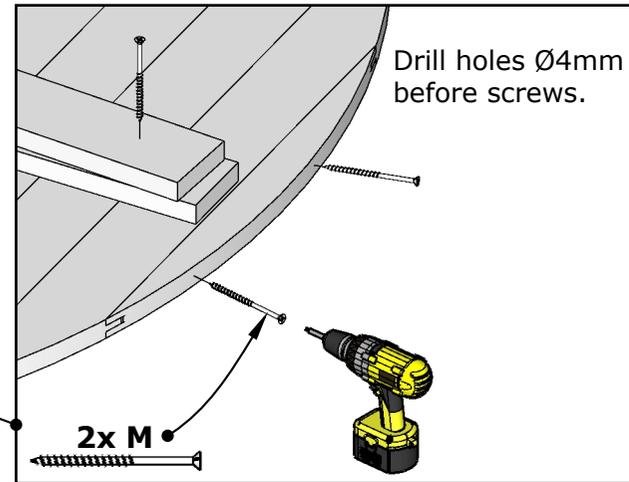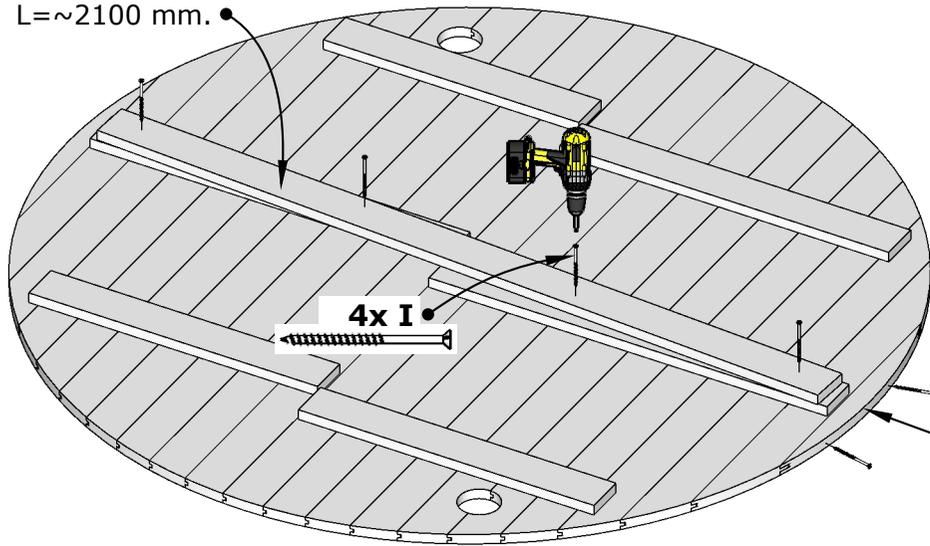

Sauna 280, Ø226


Details list 1.

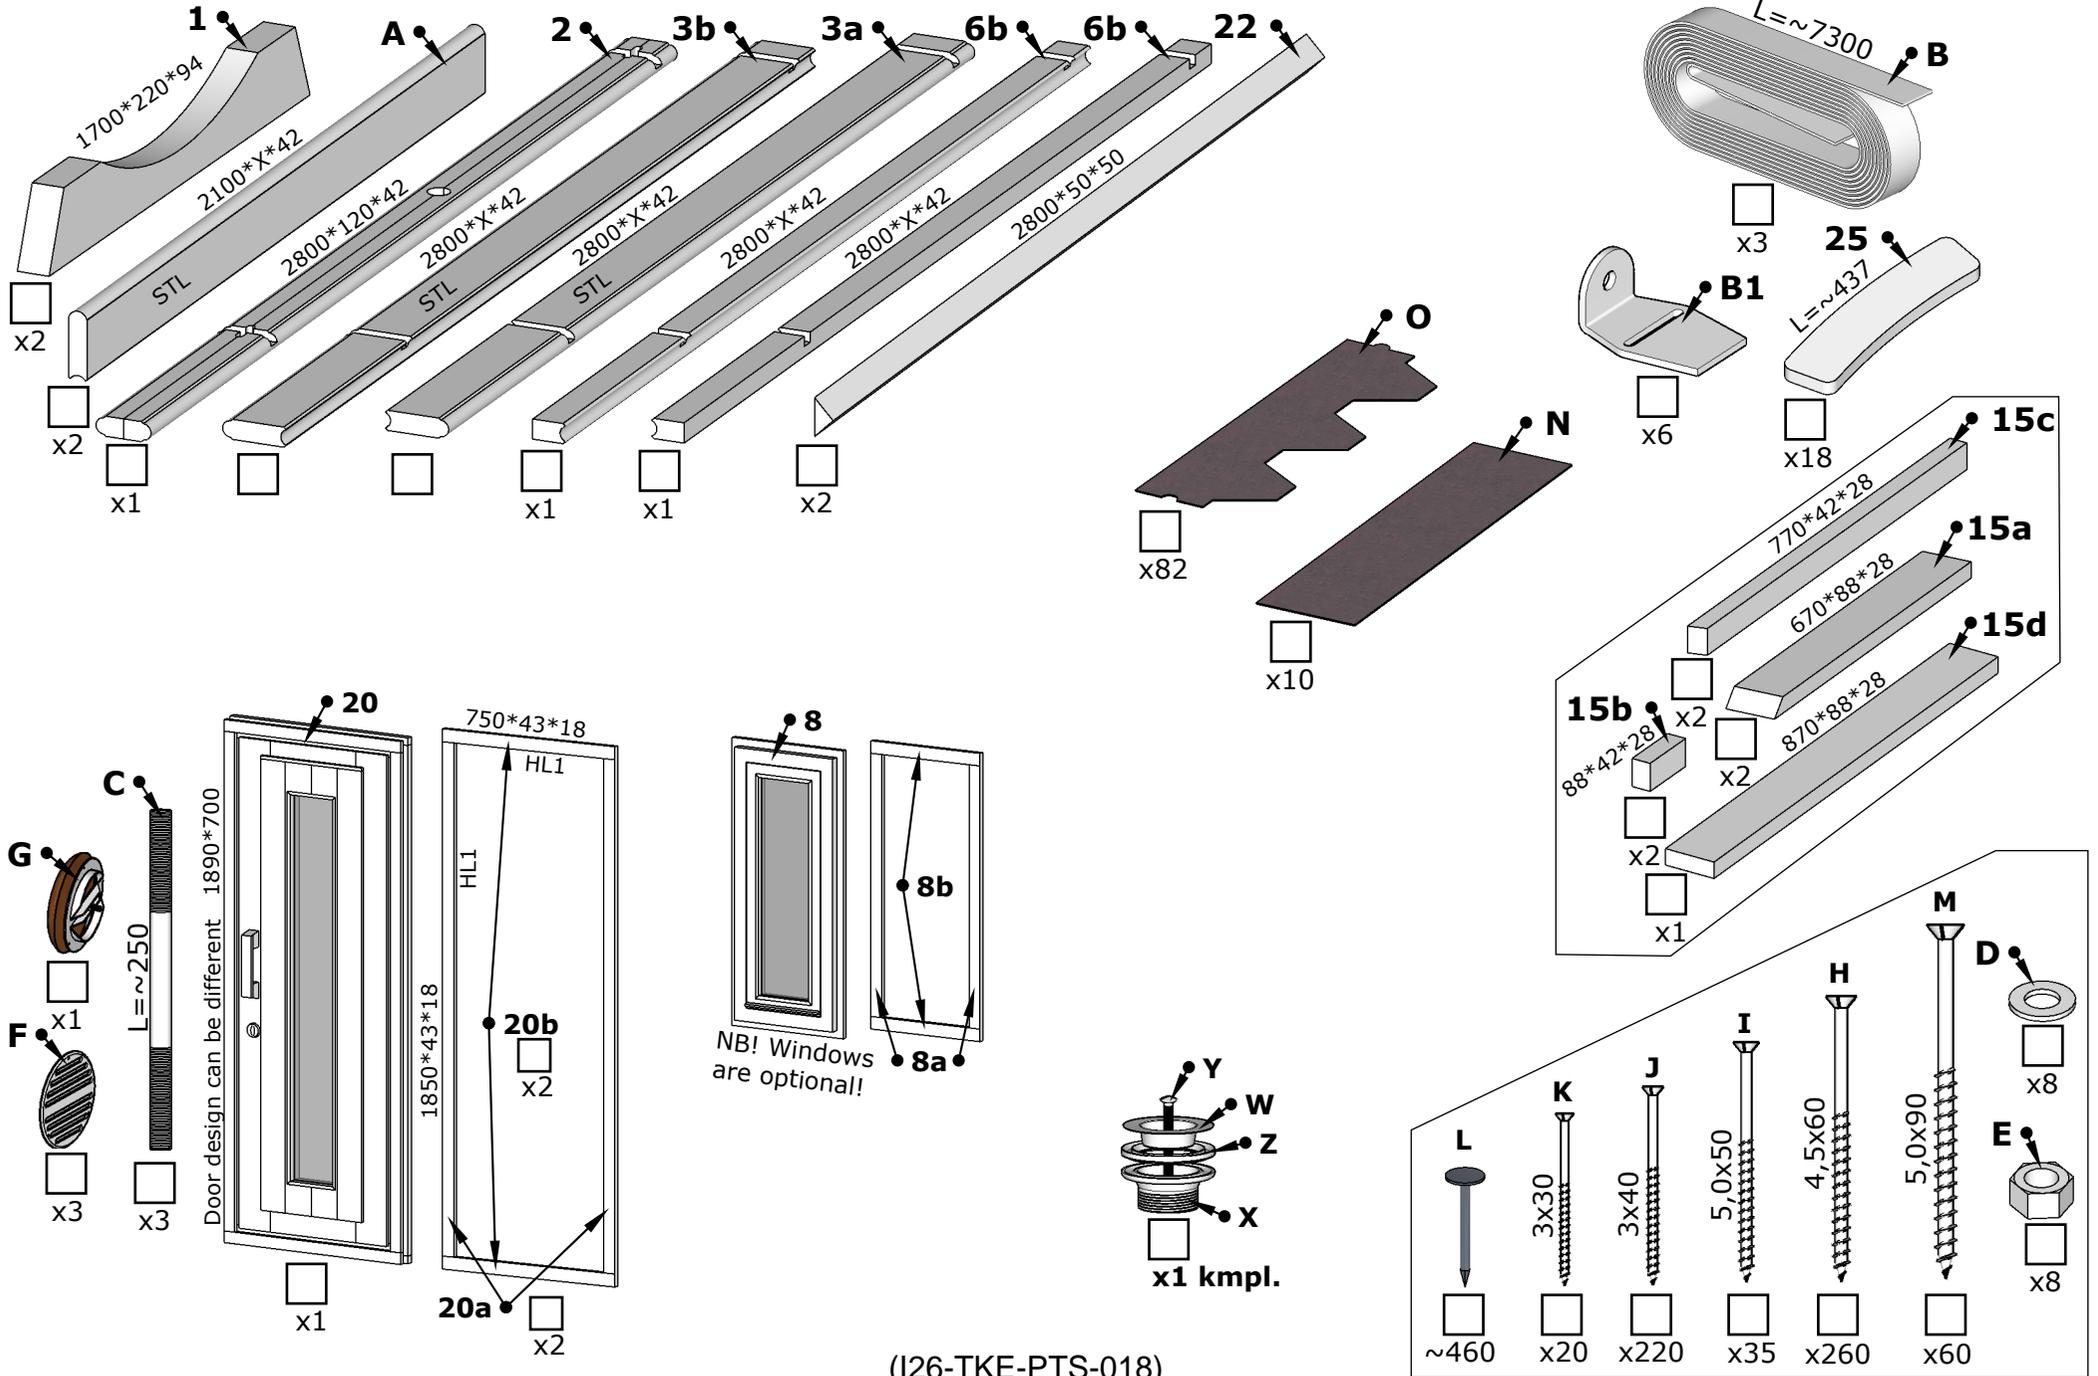


(I26-TKE-PTS-018)

Sauna 280, Ø226

Details list 2.

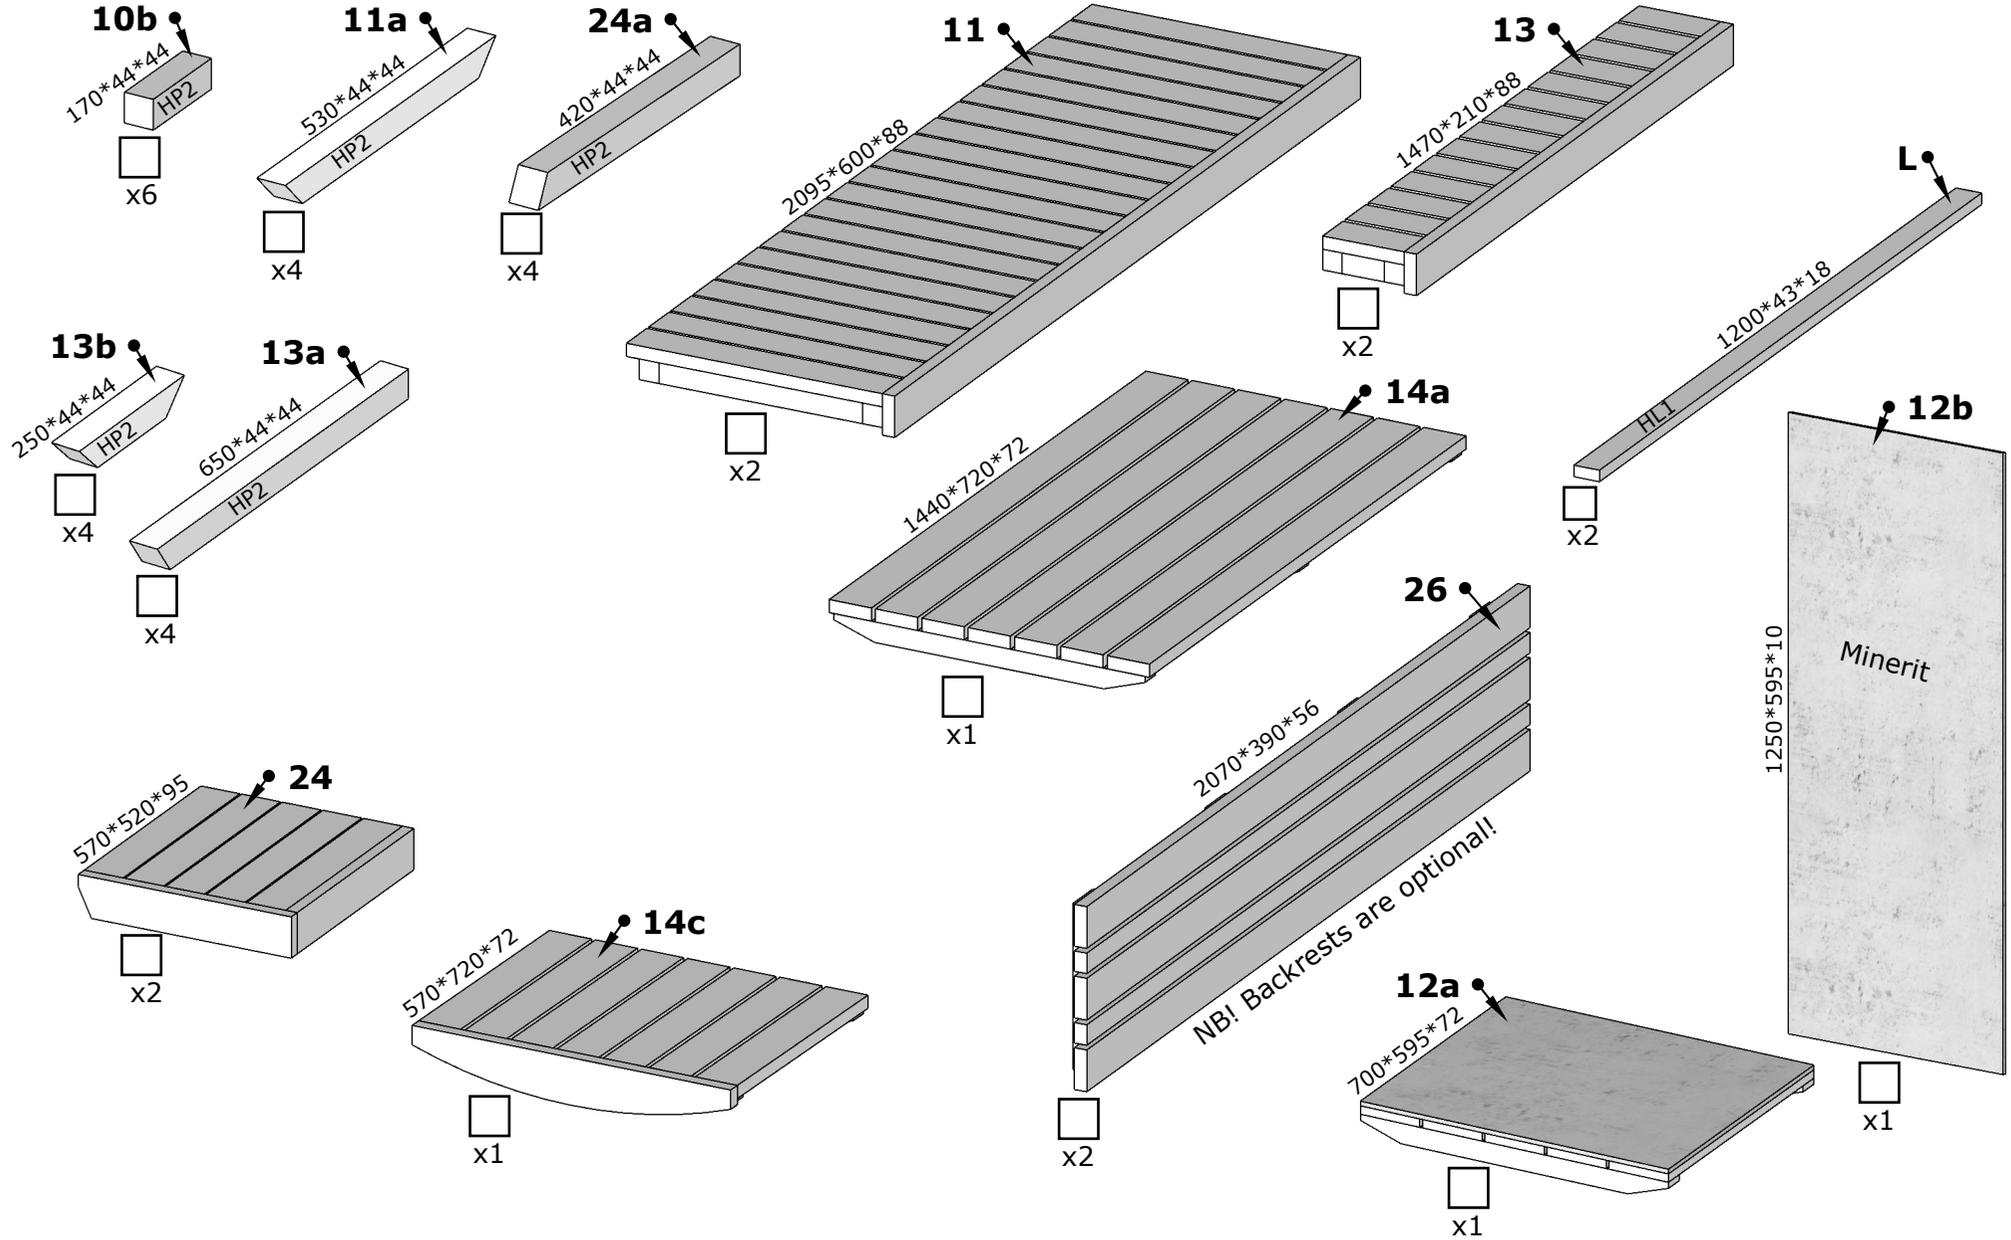





Sauna 280, Ø226

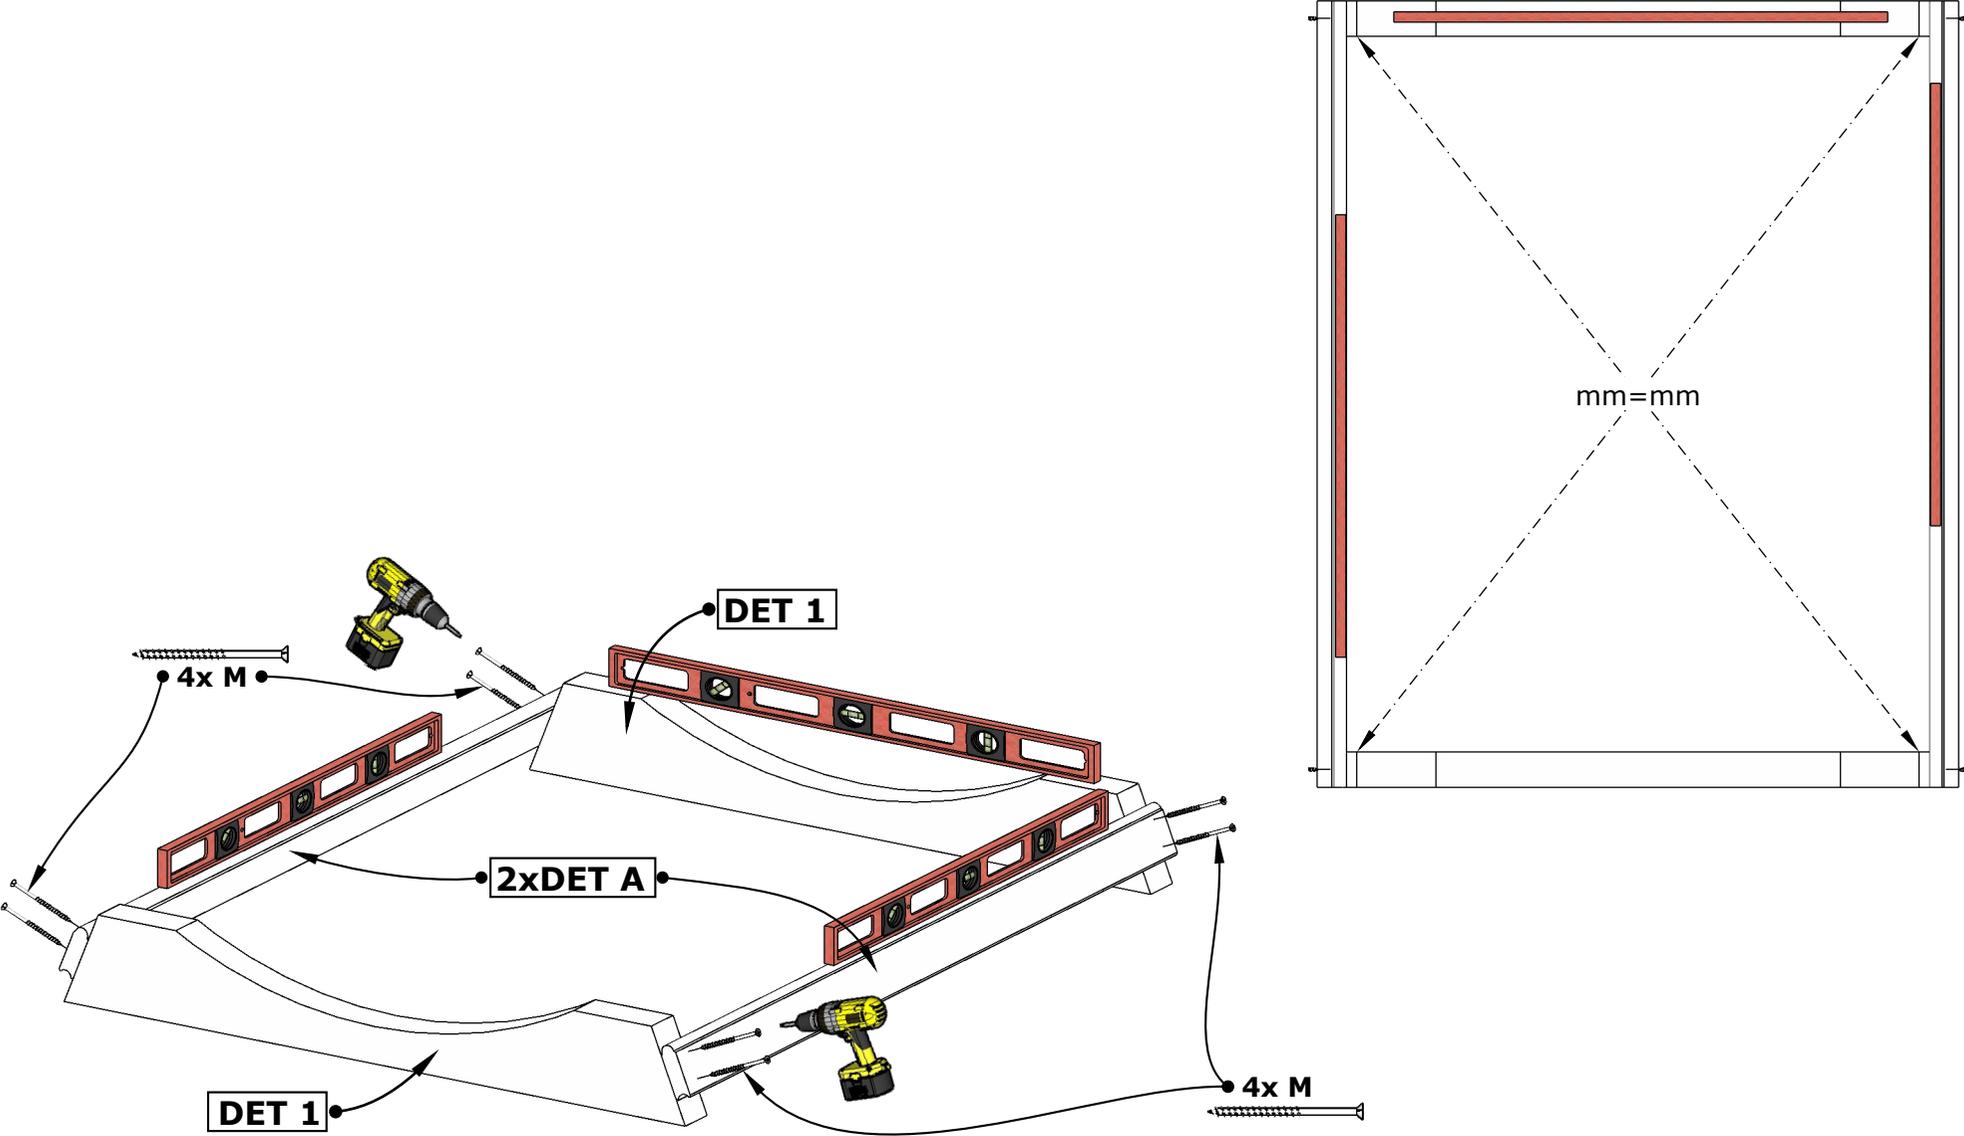


1.

(I26-TKE-PTS-018)

Sauna 280, Ø226

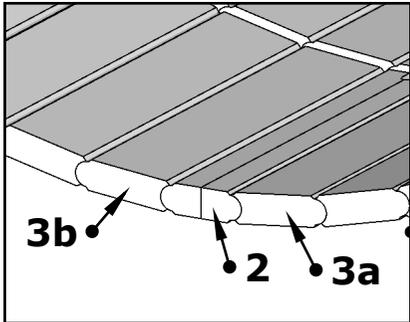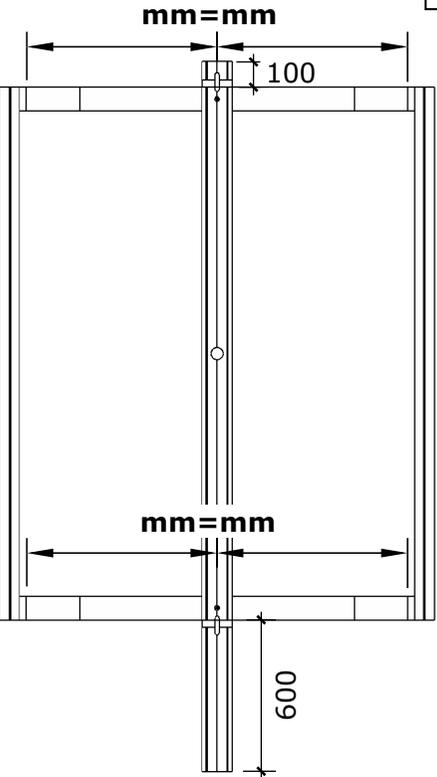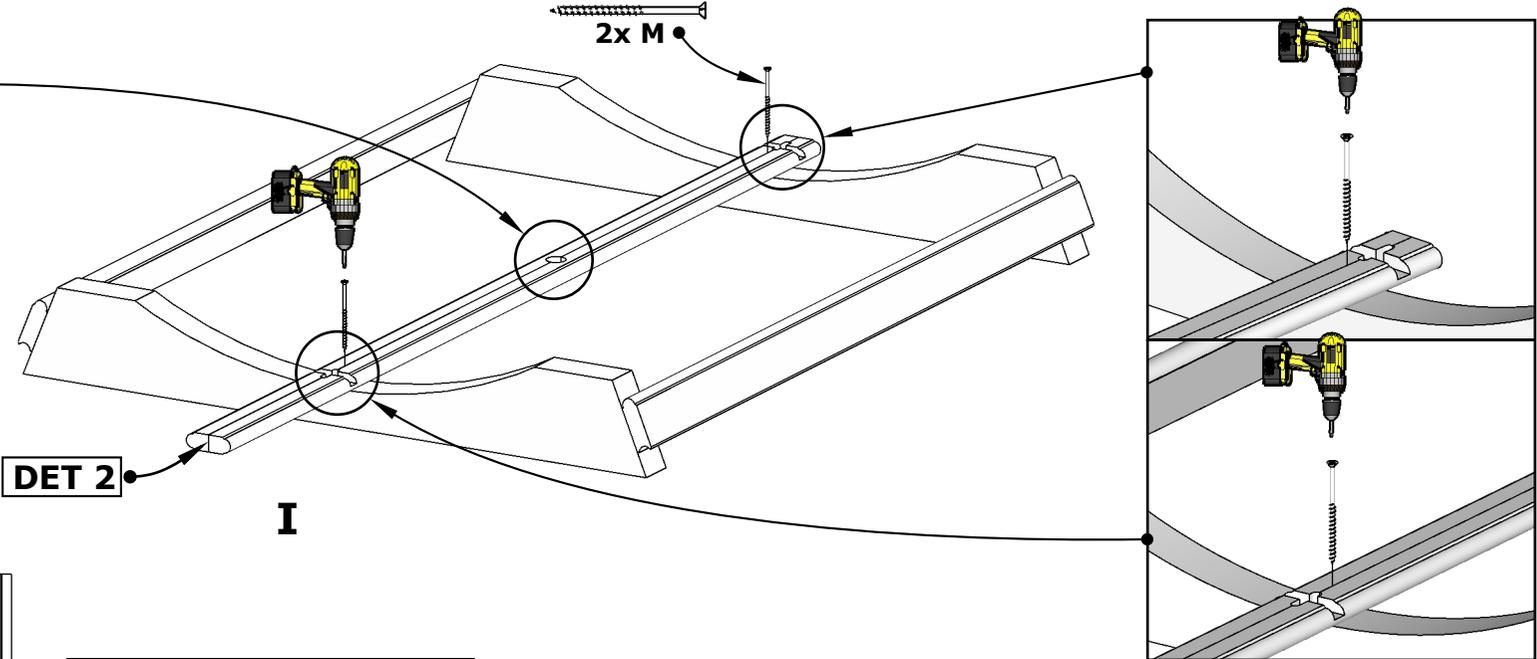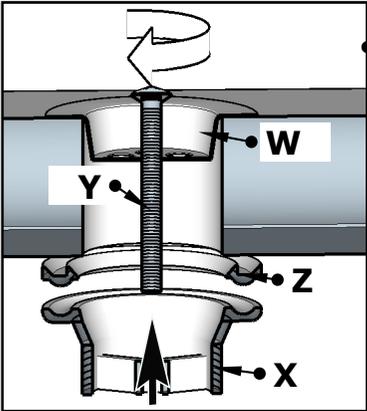


DET 3a
DET 3b

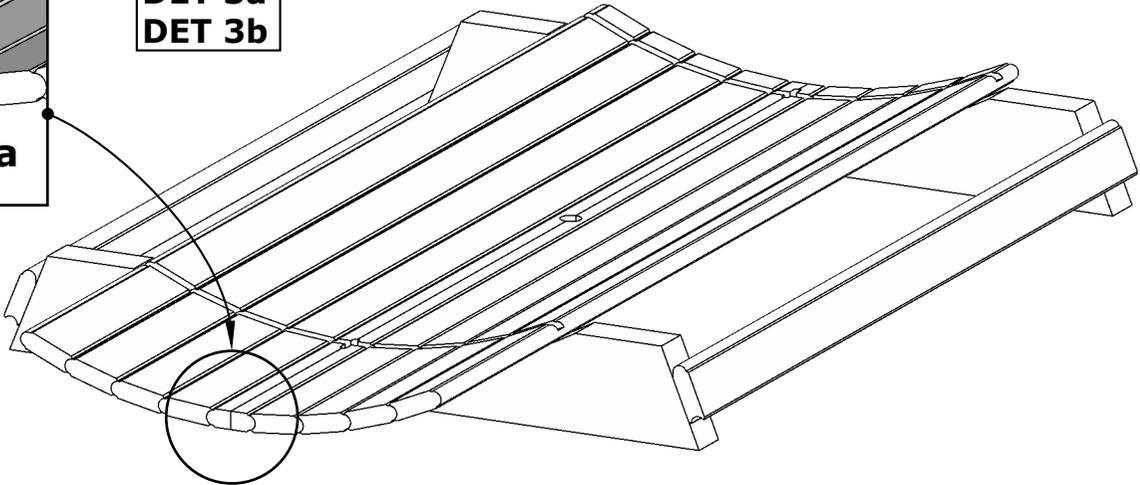


II


Sauna 280, Ø226

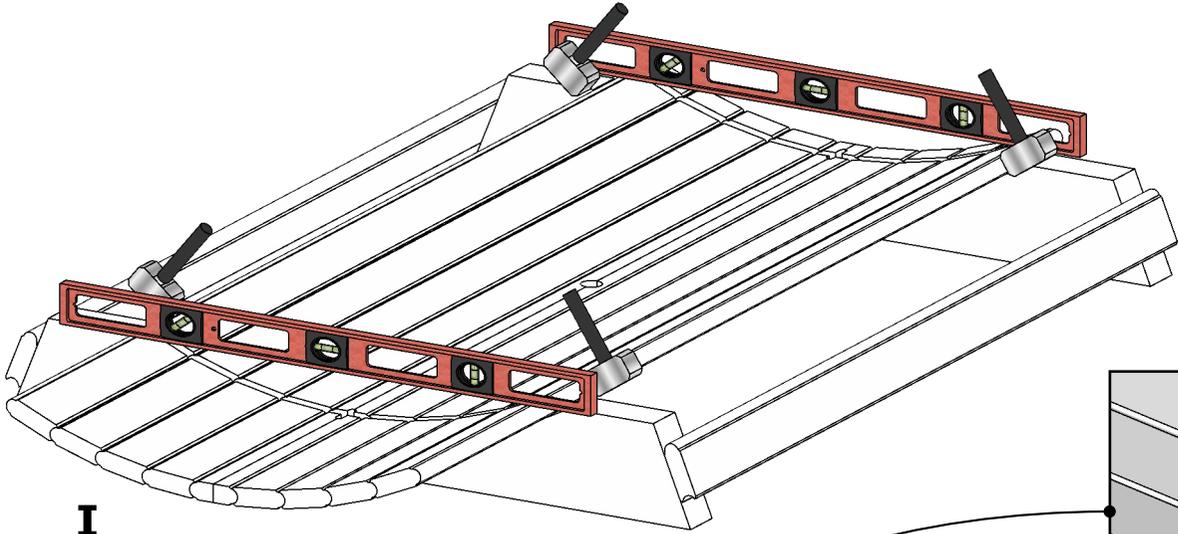

I

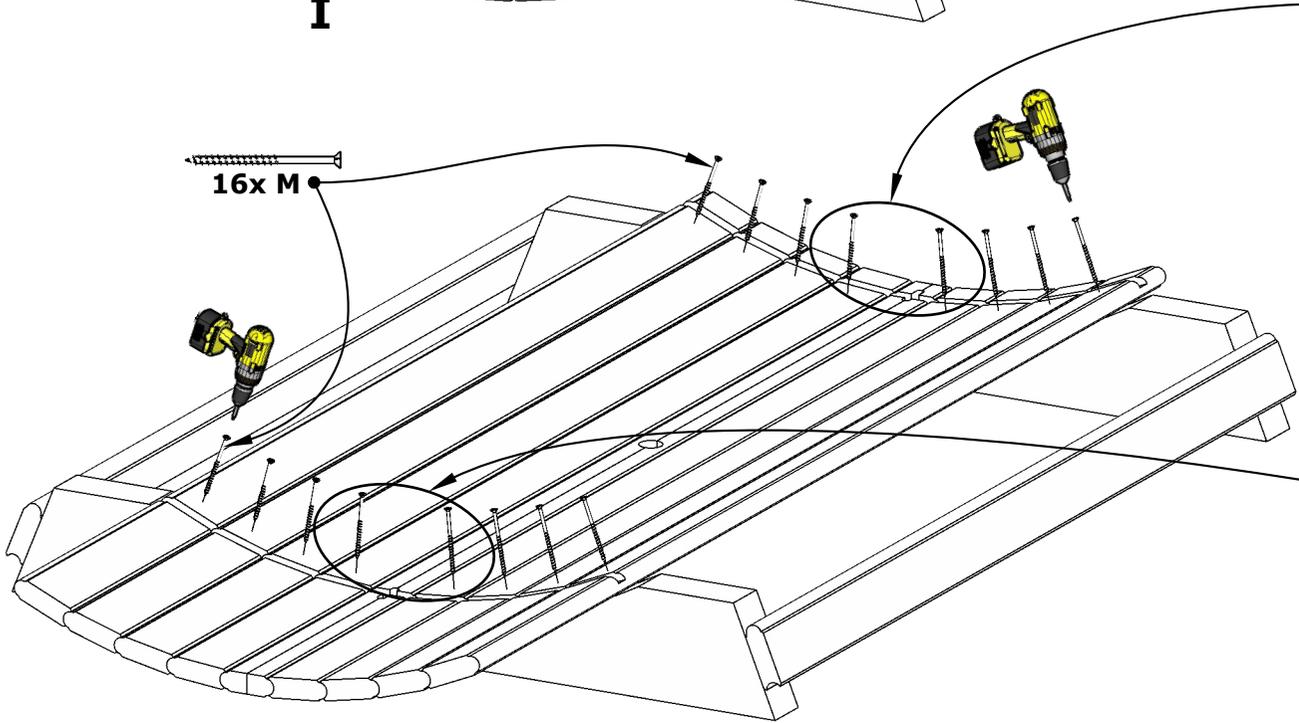

II

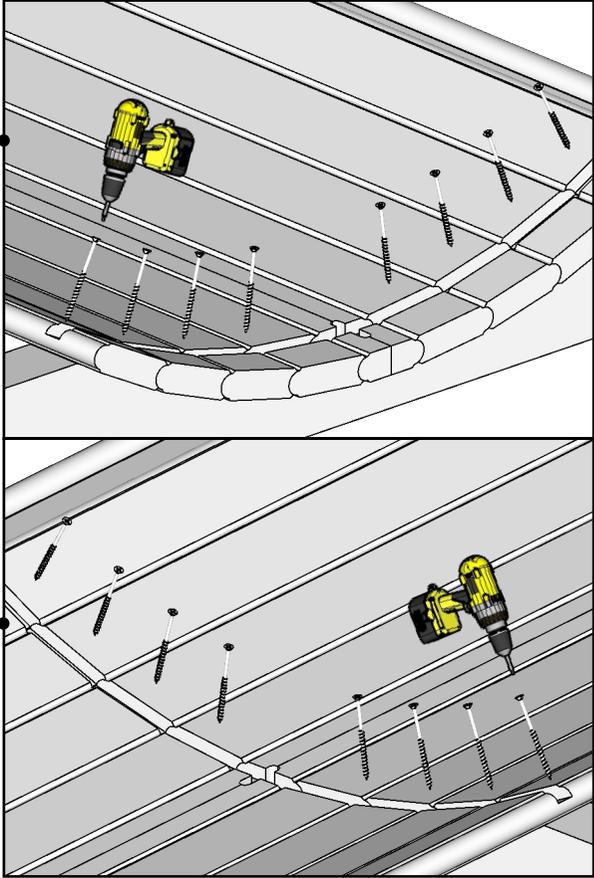

Sauna 280, Ø226


Use waterlevel




Check walls installation manual on extra pages!

Sauna wall configuration depends on Your model!


DET 3a
DET 3b
Fix temporarily to support walls.

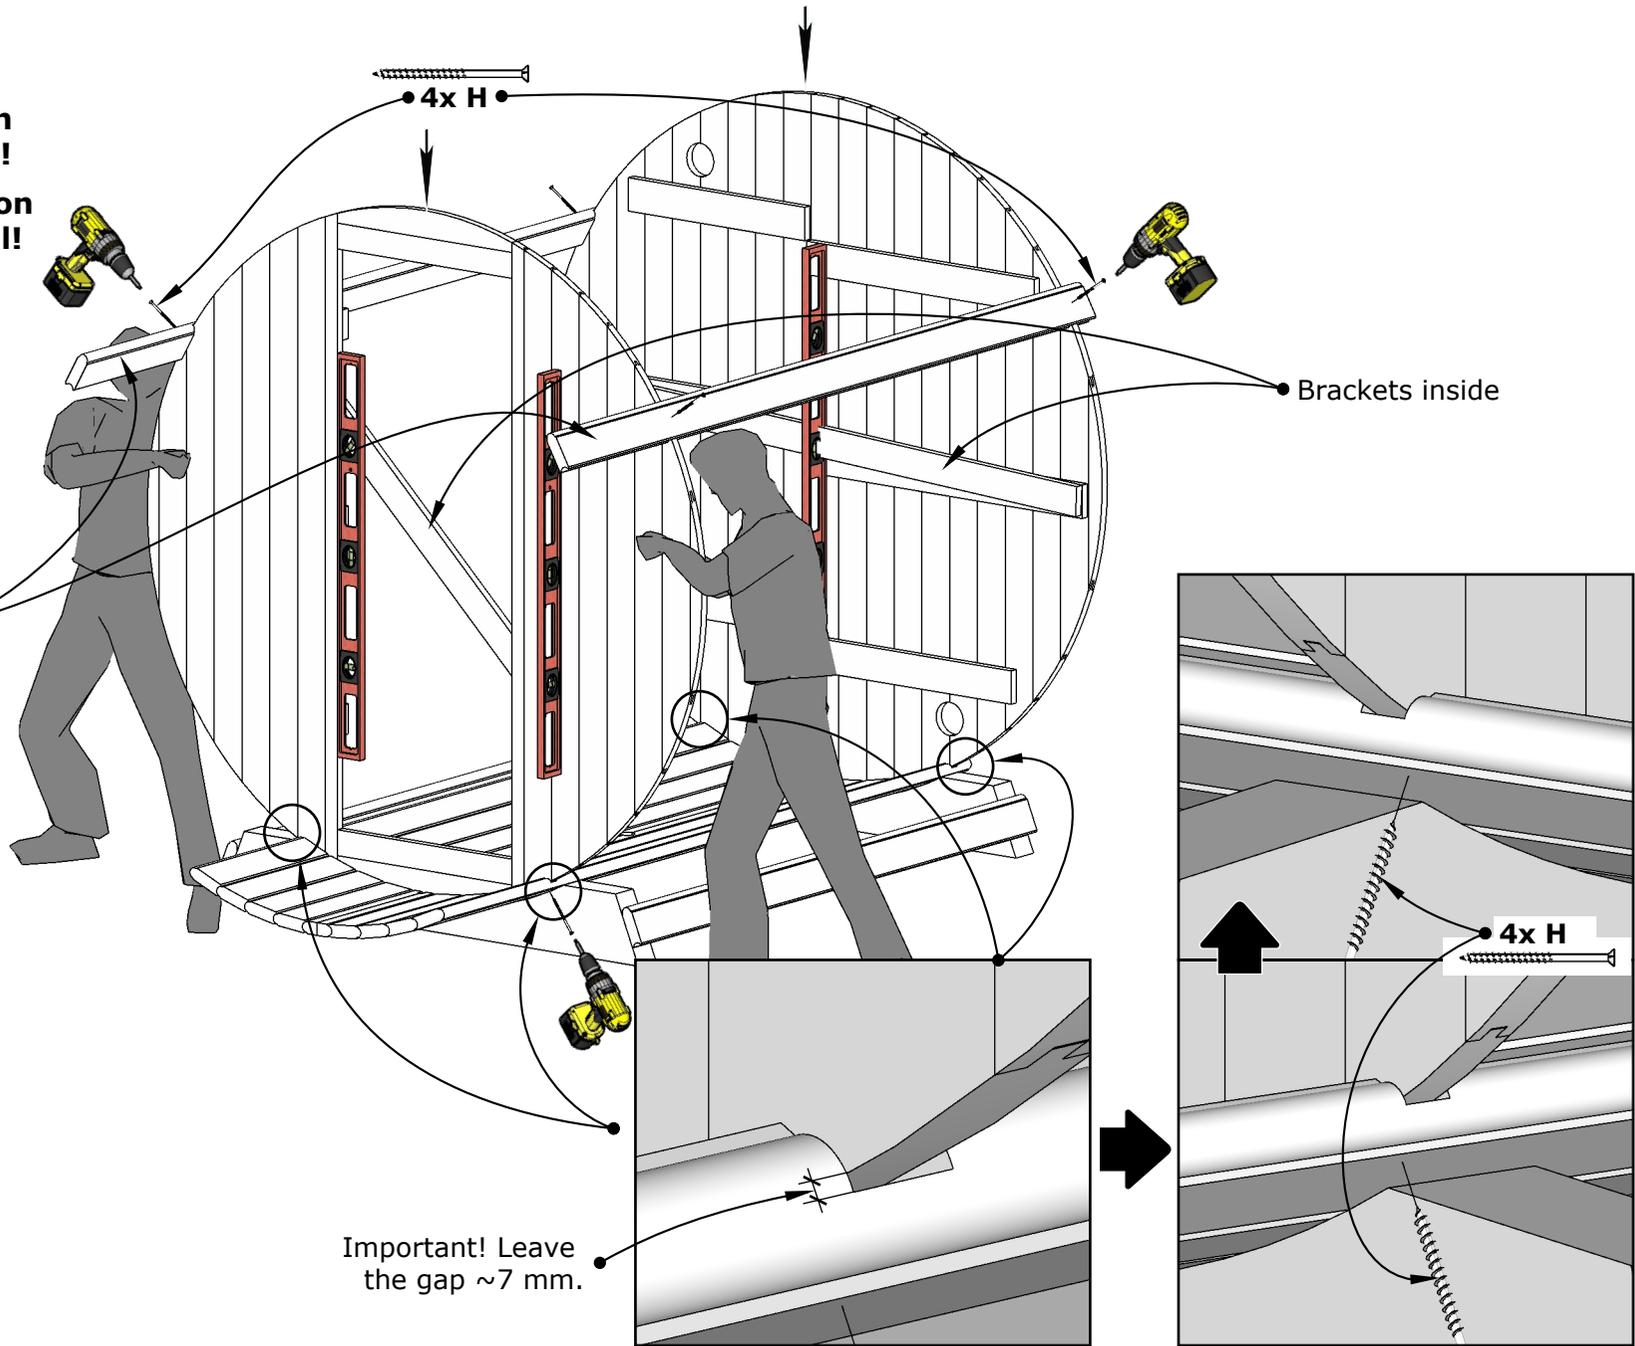

Important! Leave the gap ~7 mm.

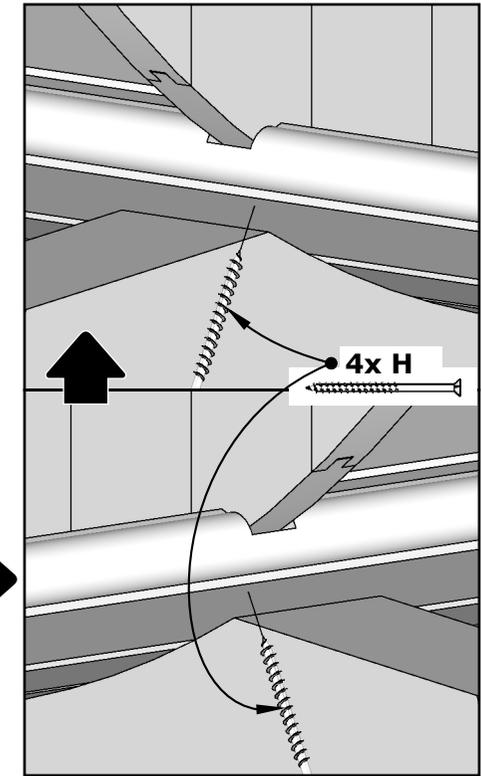


Sauna 280, Ø226

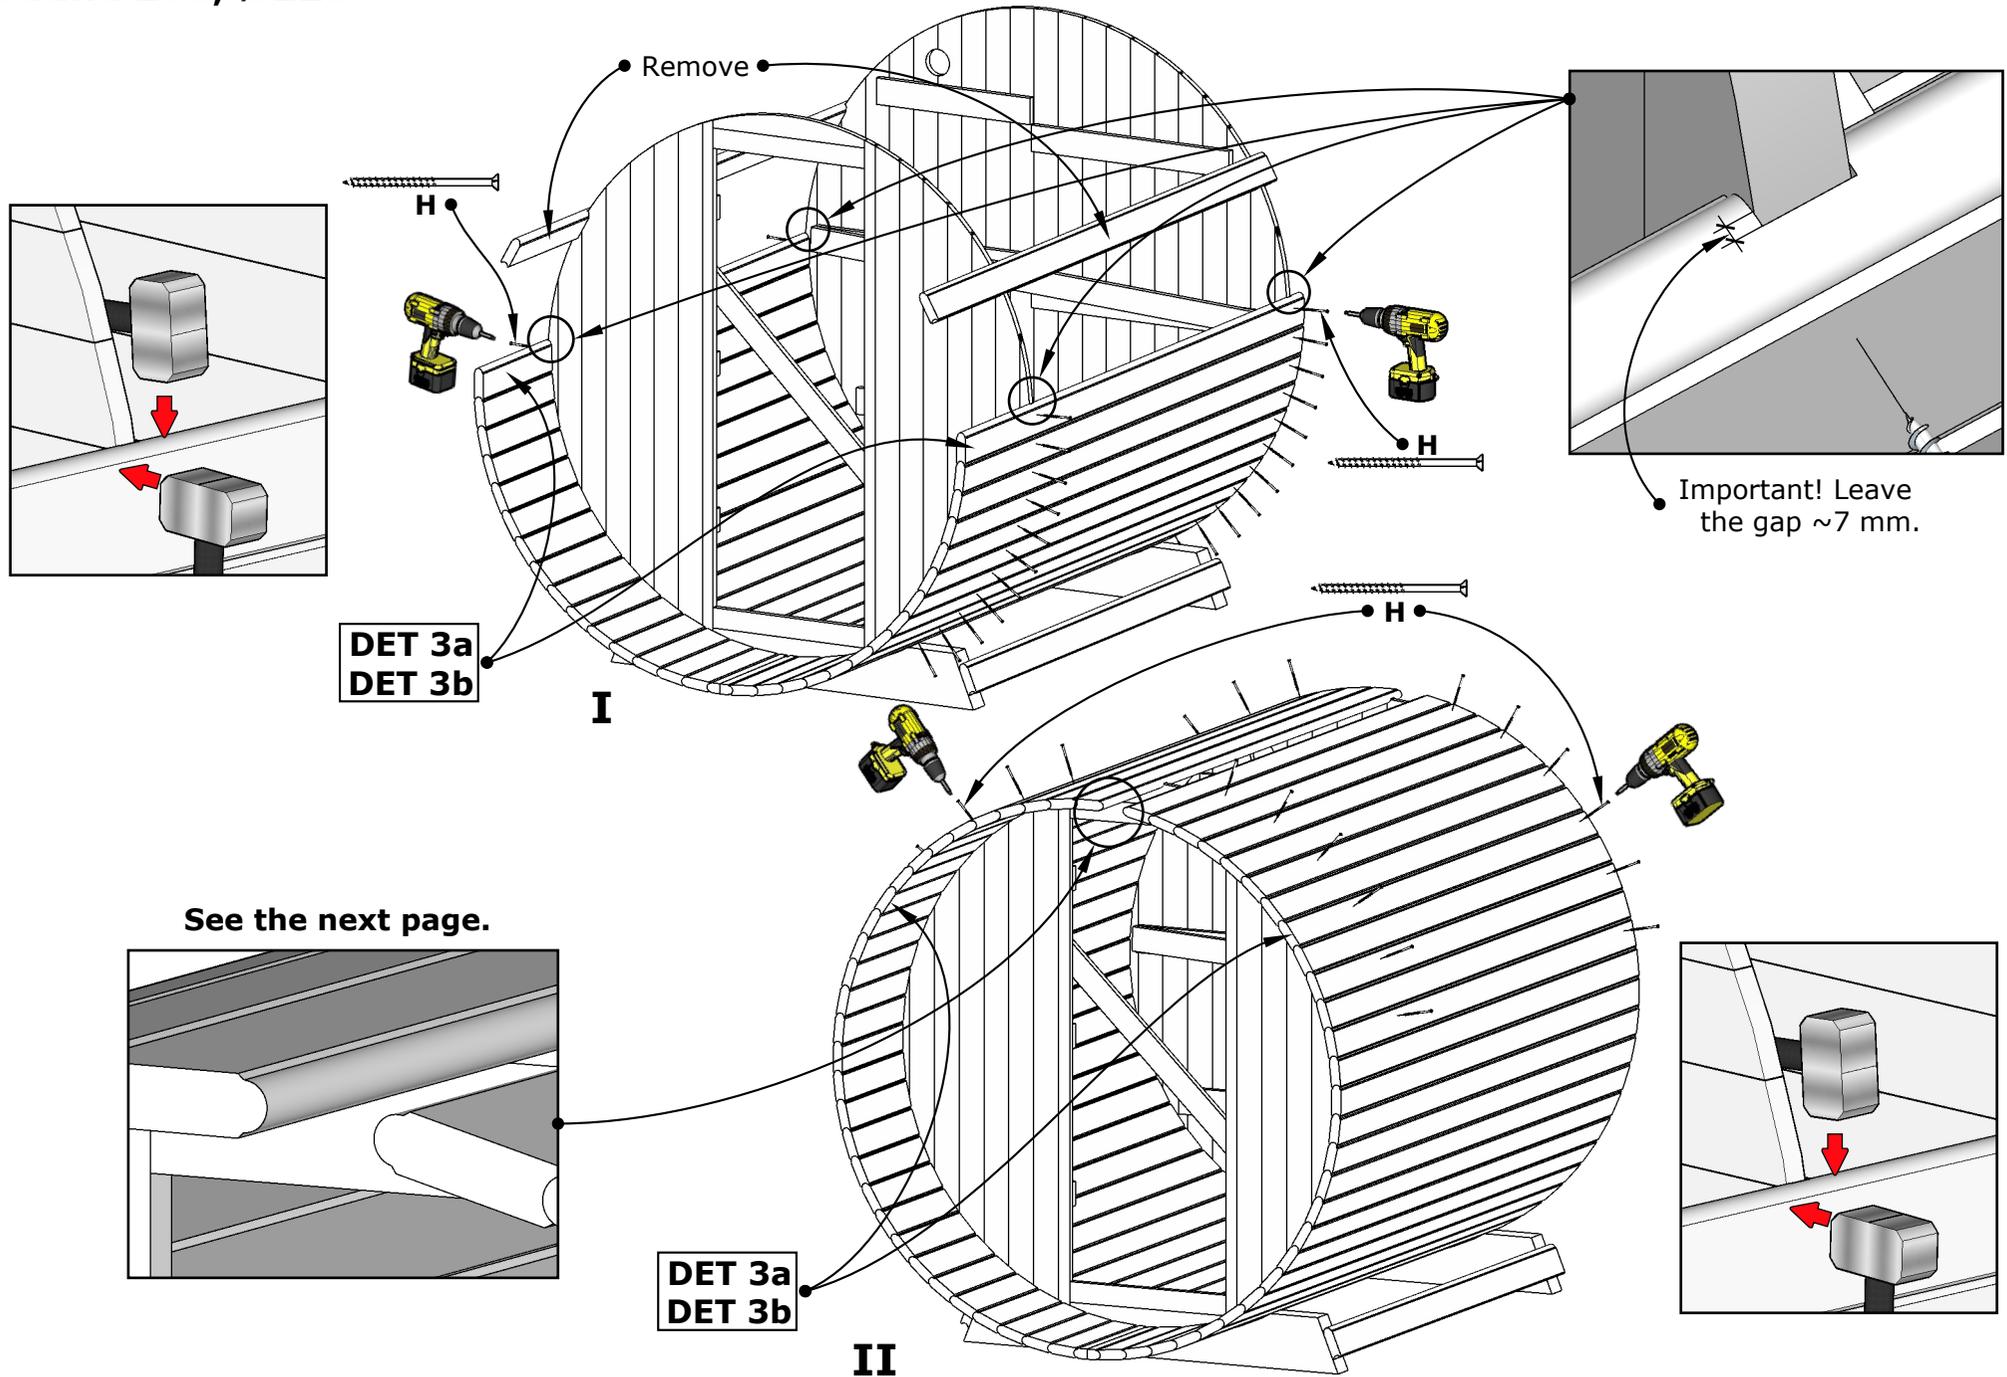


See the next page.

Sauna 280, Ø226

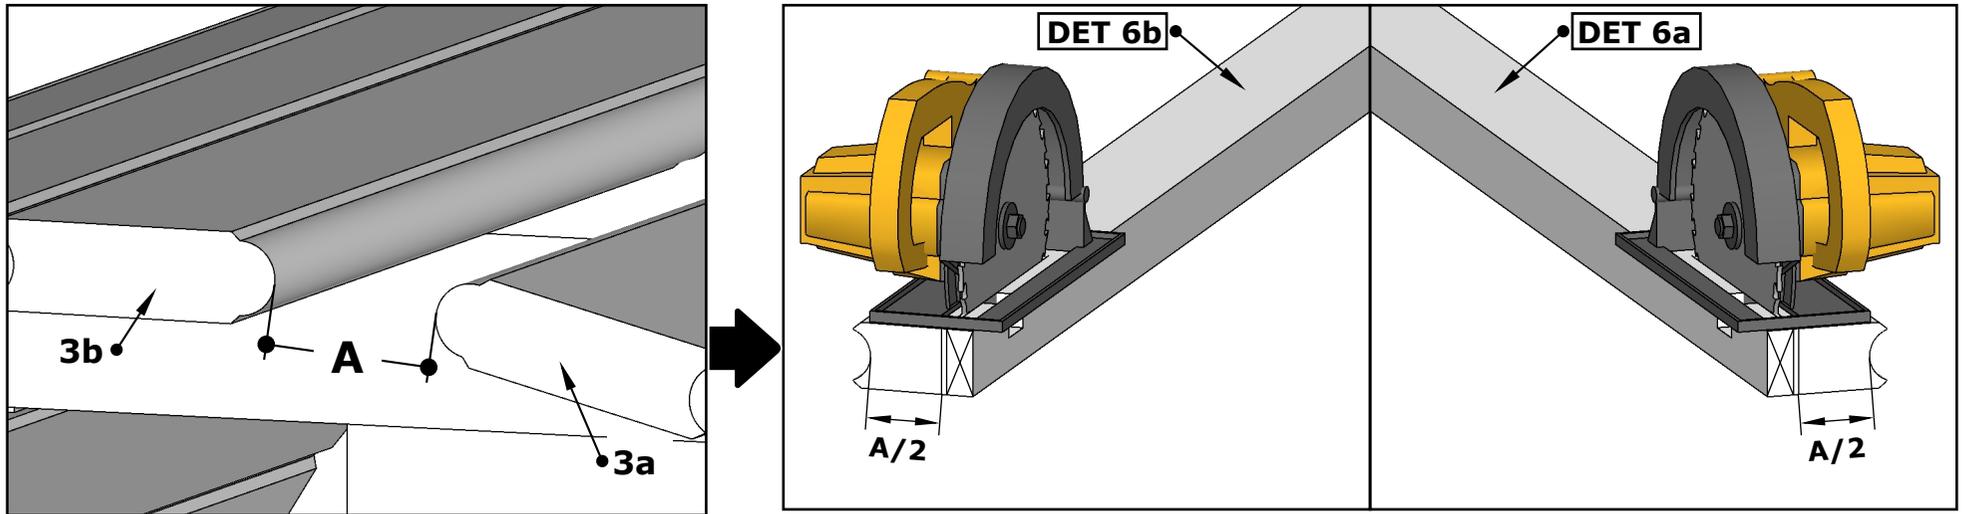

I


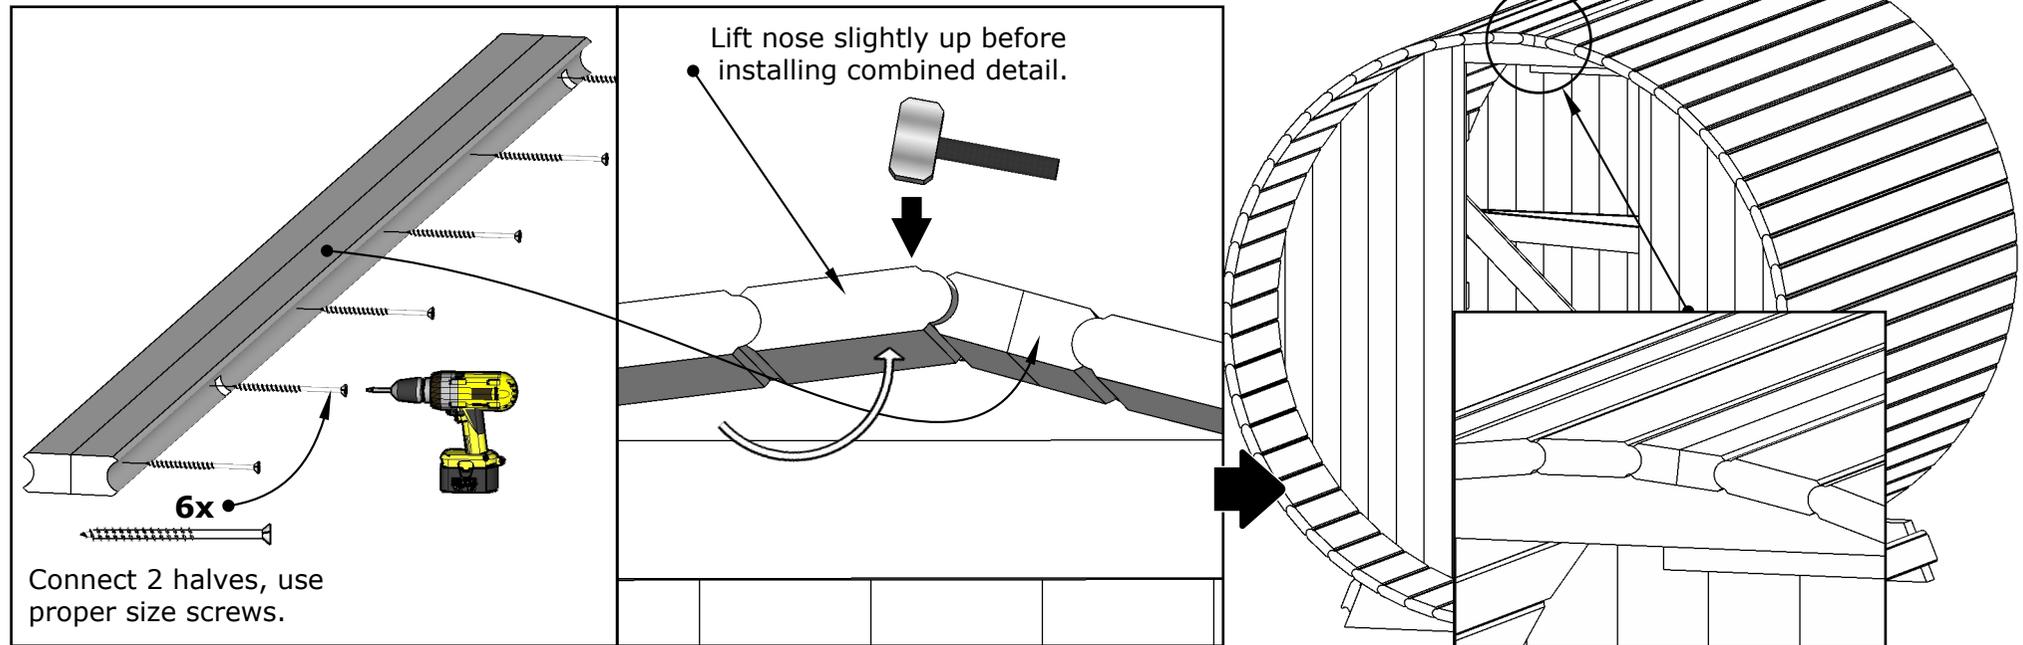


II


6.

(I26-TKE-PTS-018)



Sauna 280, Ø226

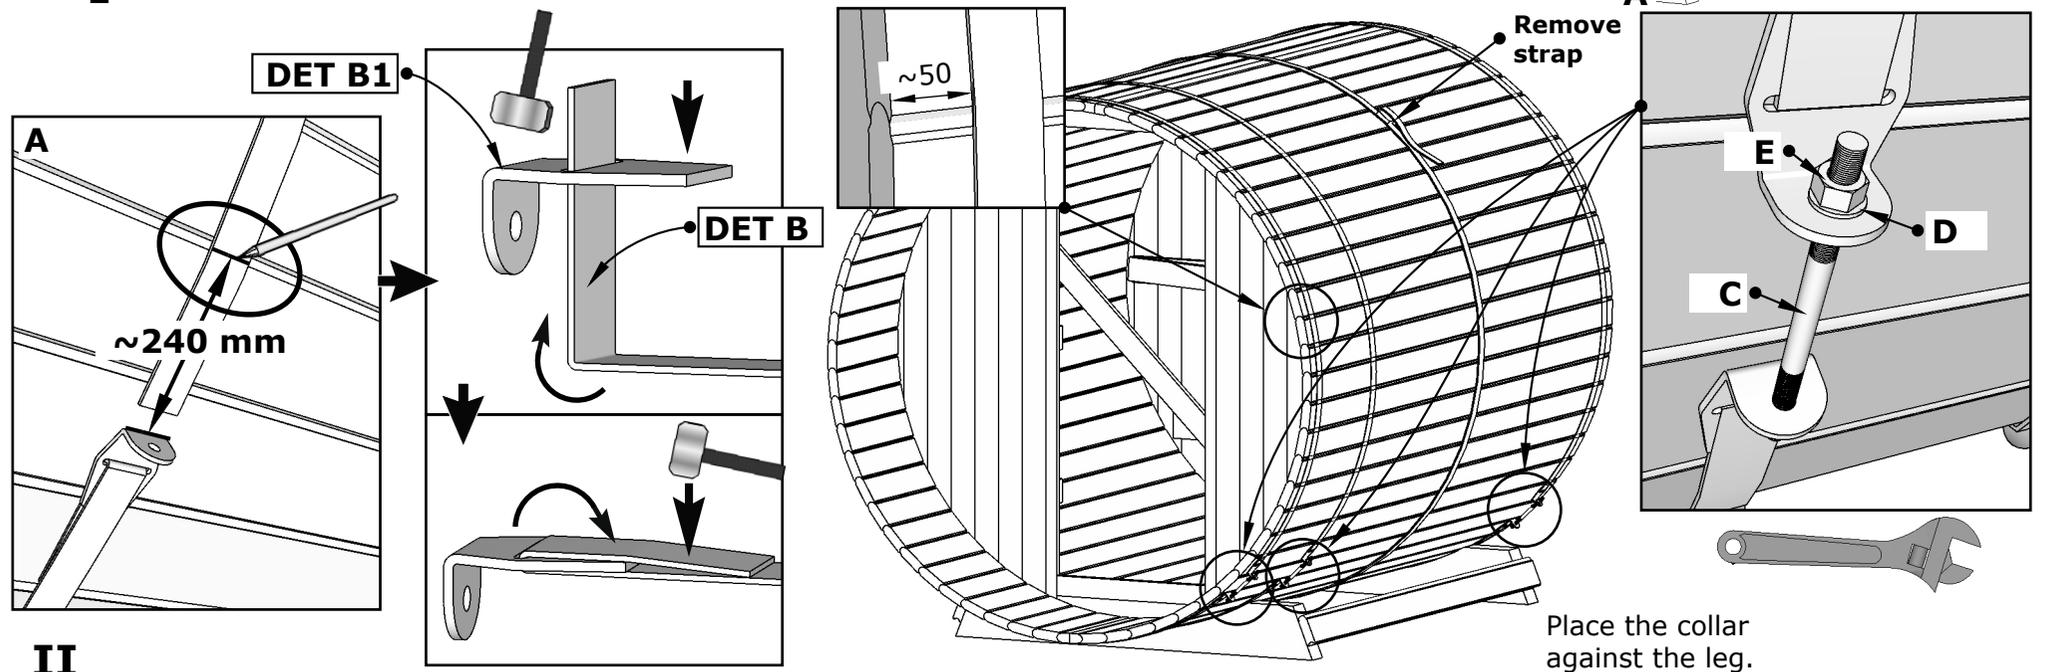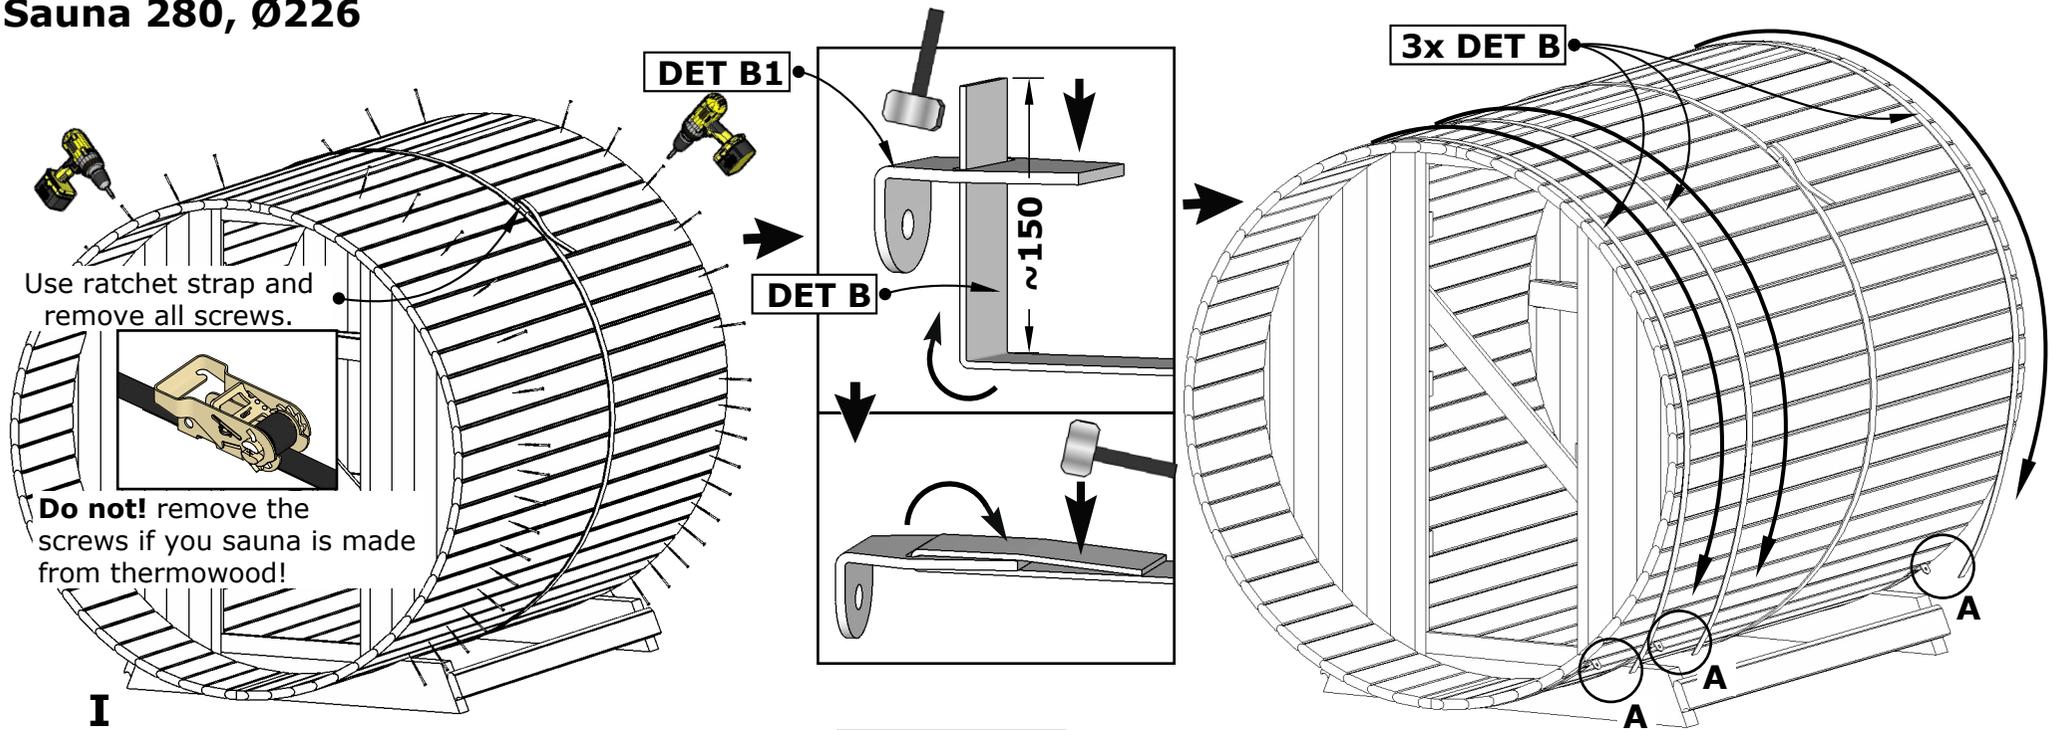





Sauna 280, Ø226

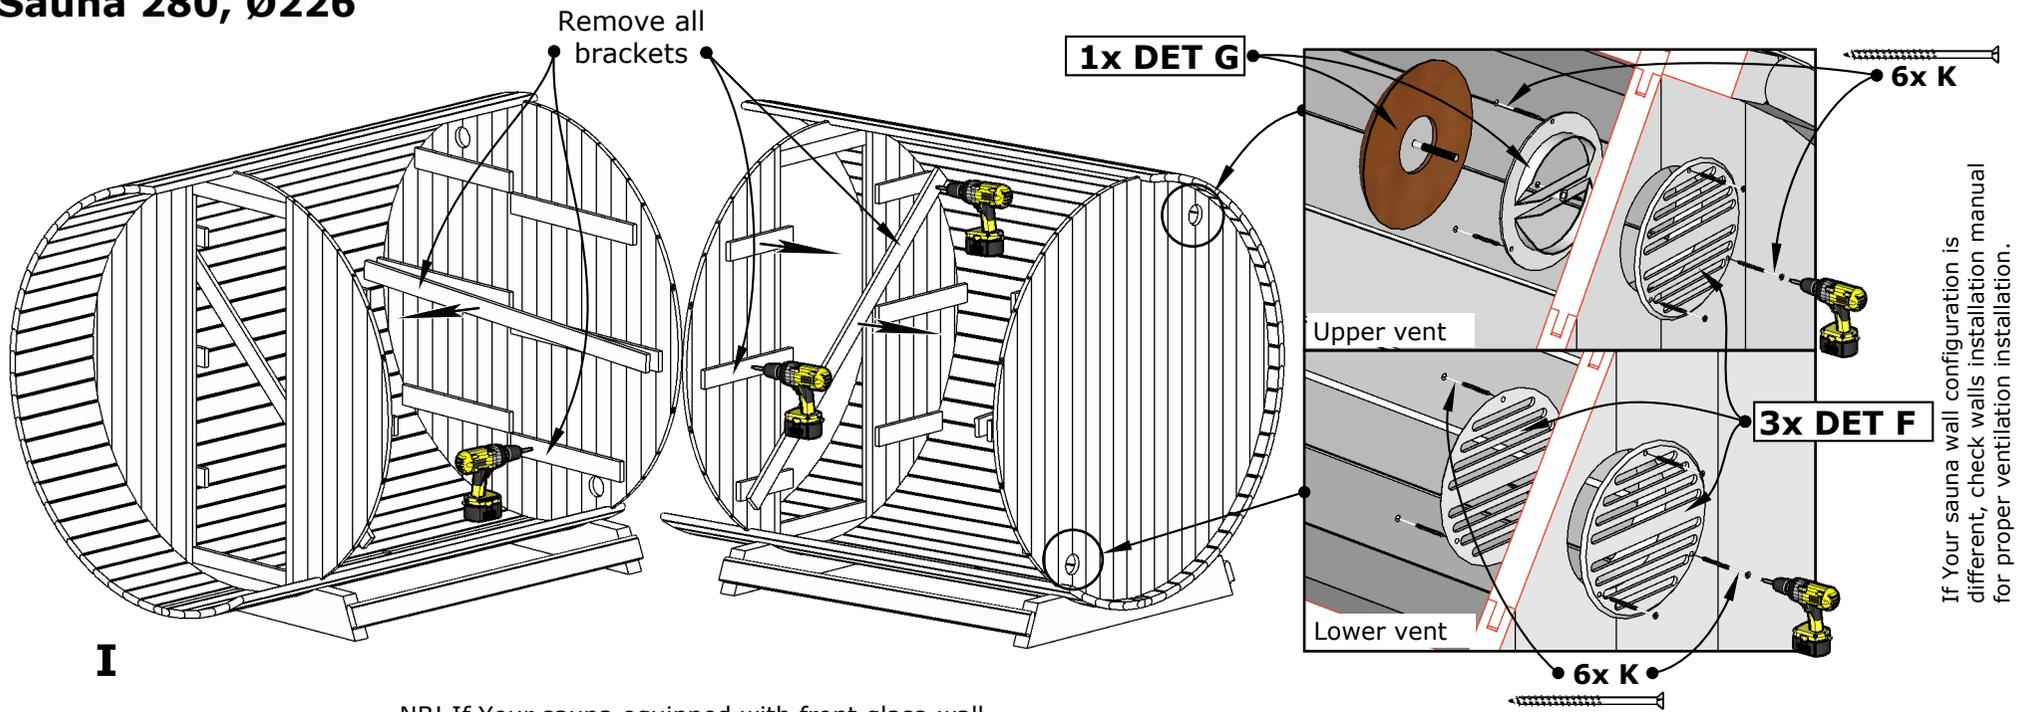




NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

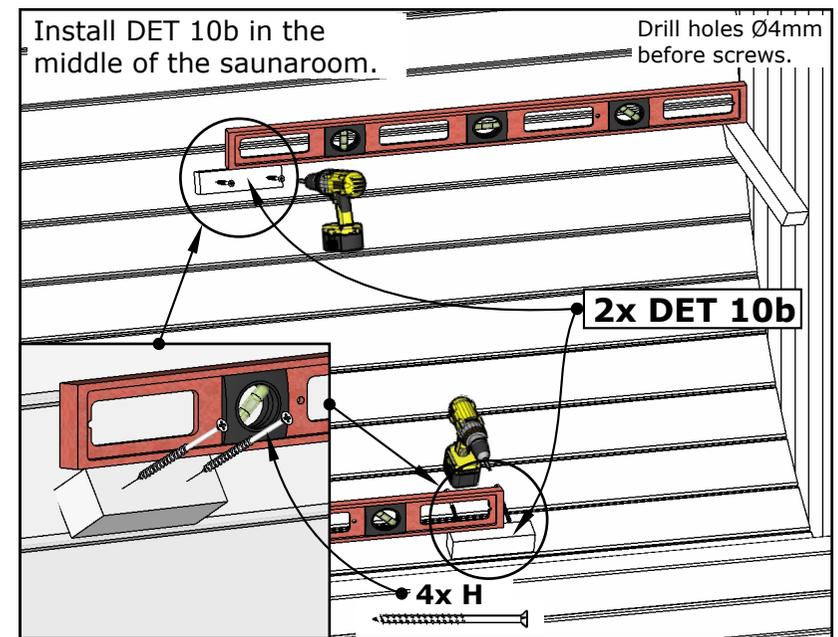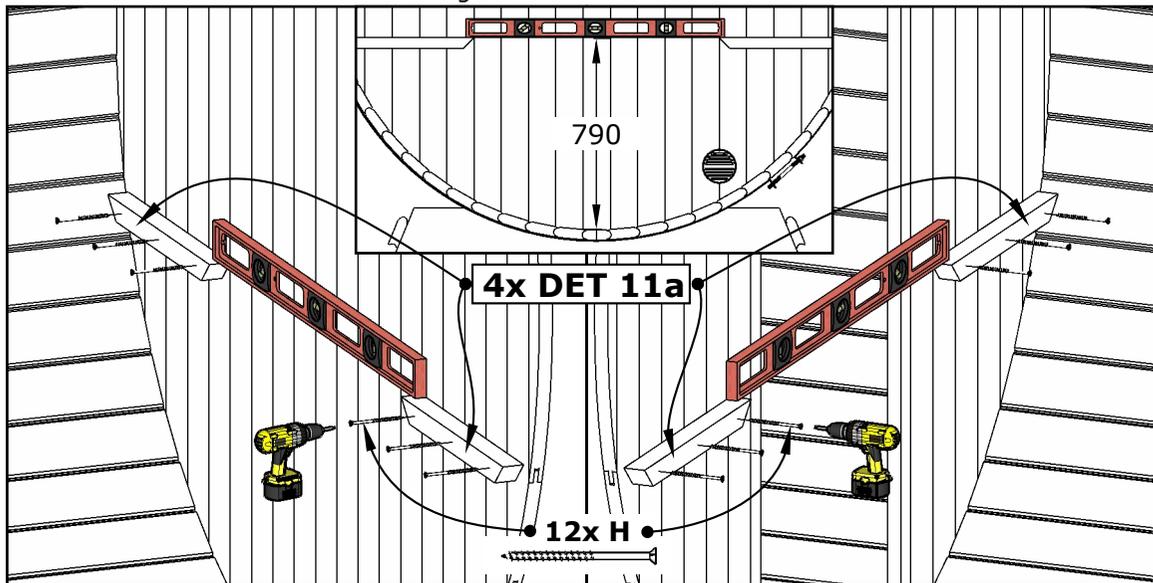

Sauna 280, Ø226

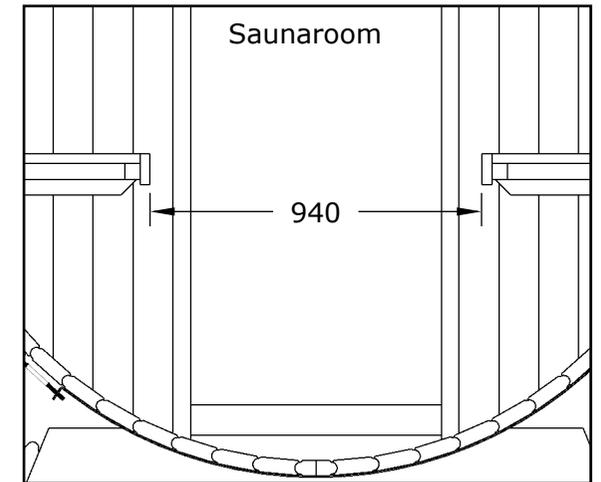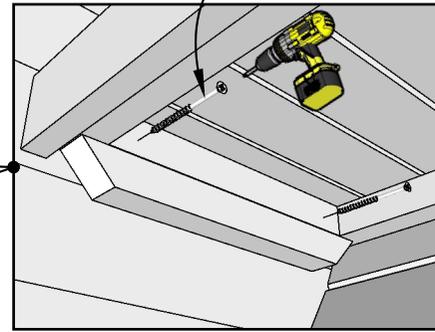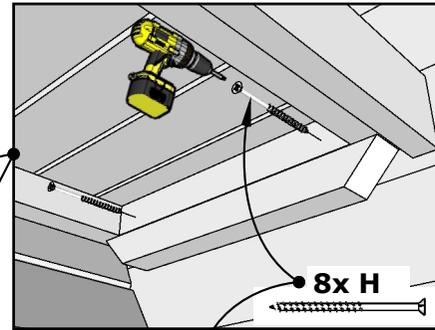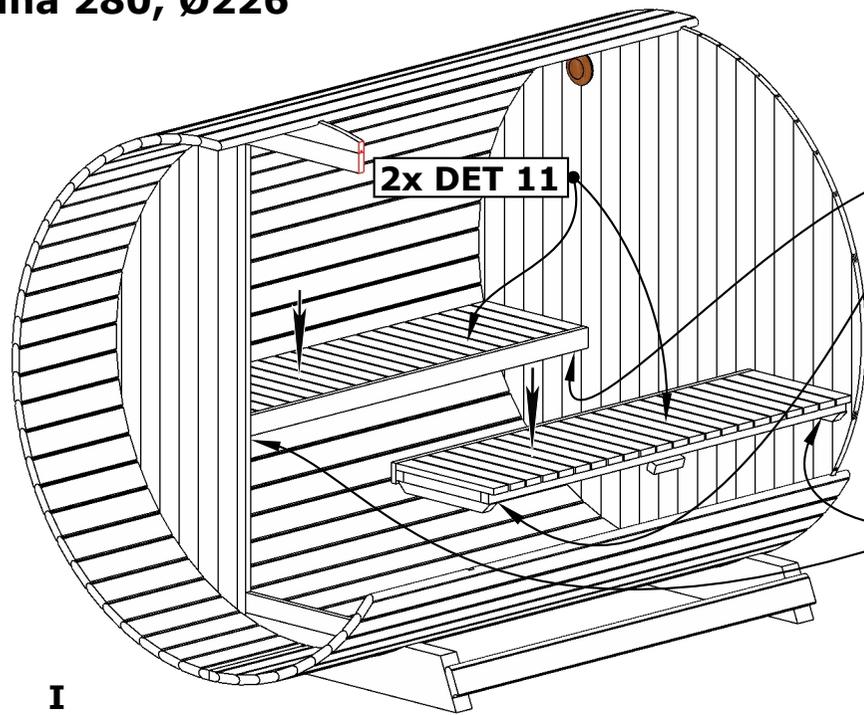

I

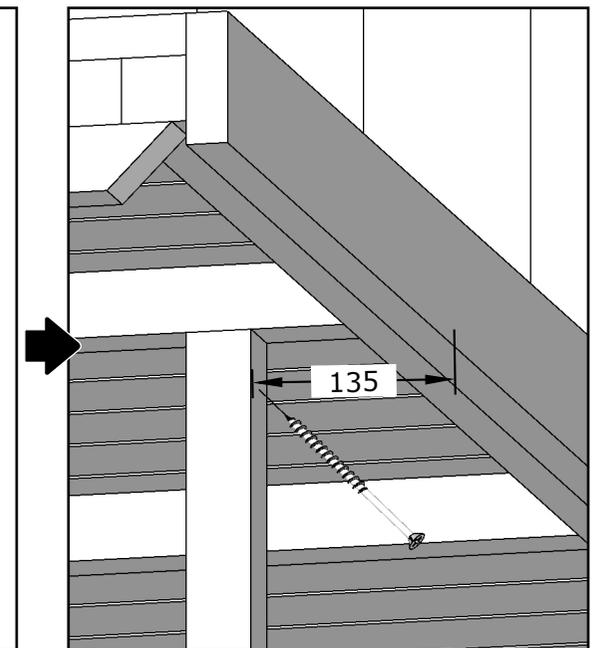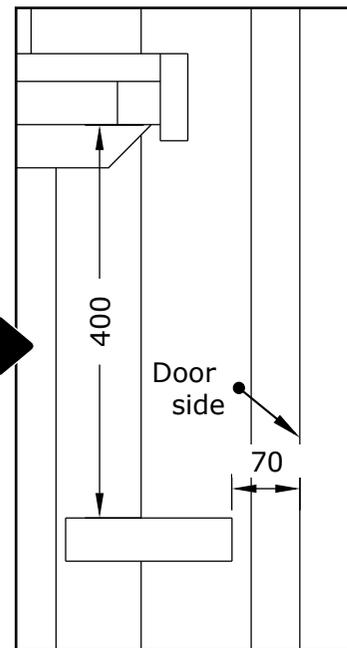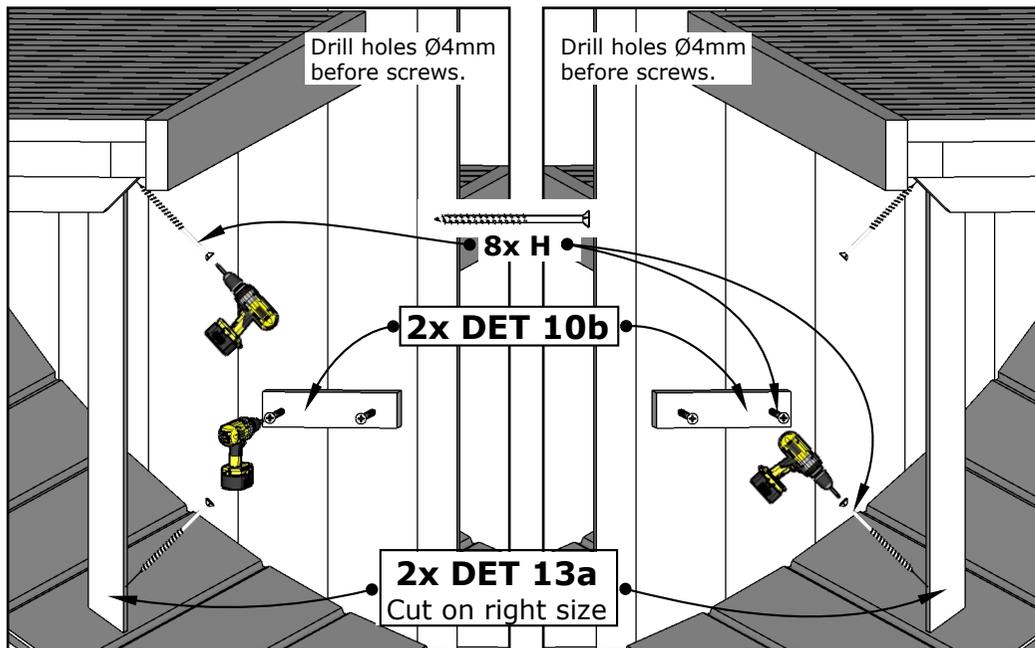


9.

II

(I26-TKE-PTS-018)



Sauna 280, Ø226

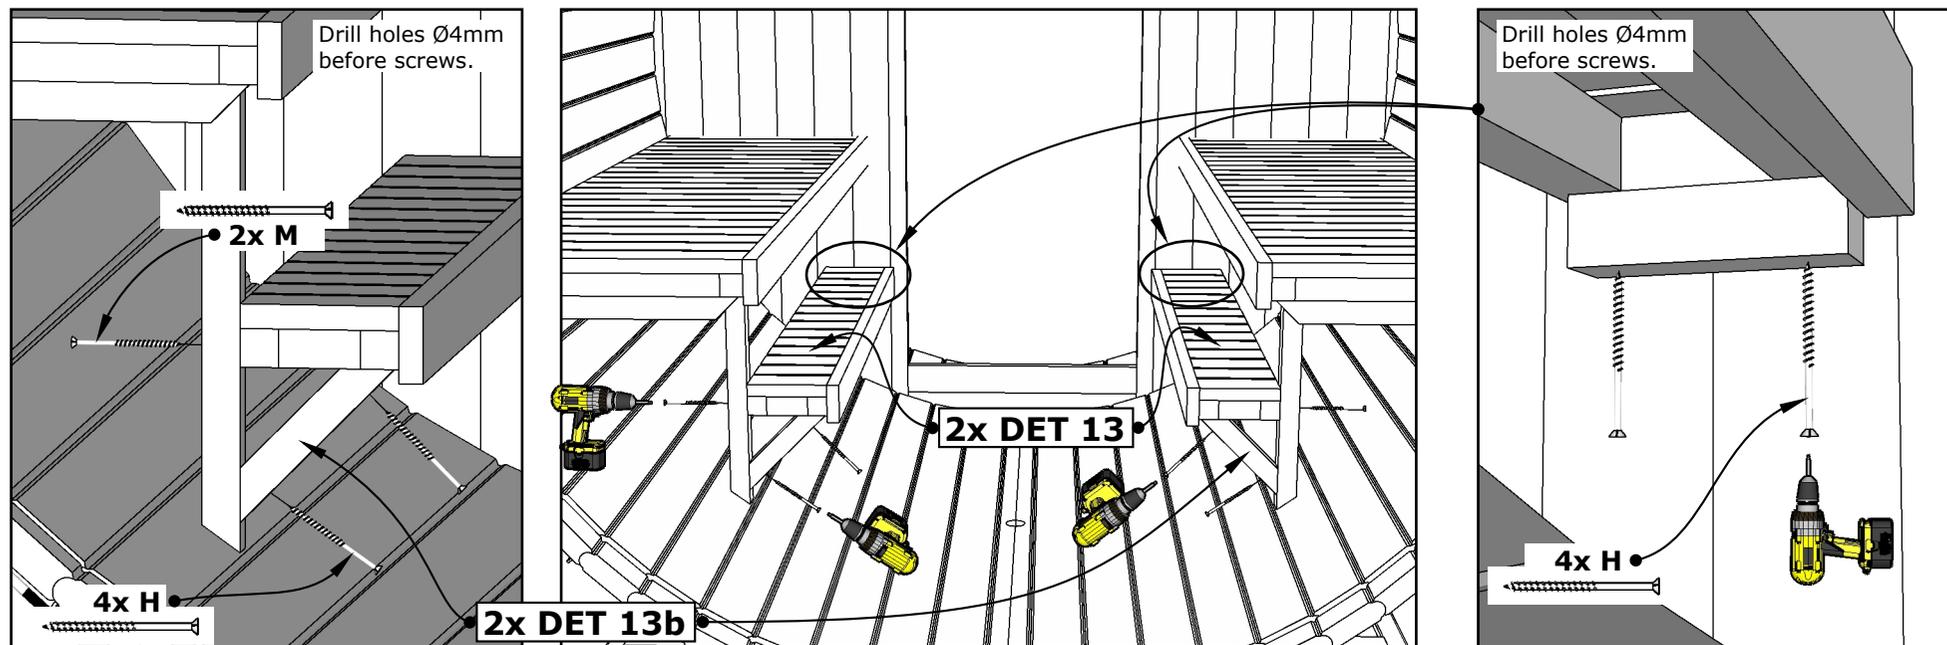

I

NB! Only if Your sauna equipped with front windows!


Mark windows opening! — Measure windows and add 5 mm. to each side

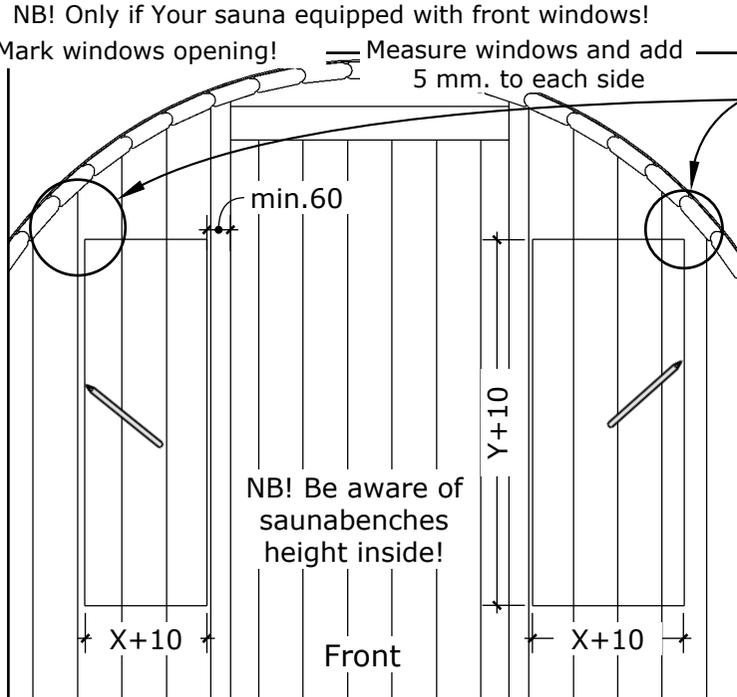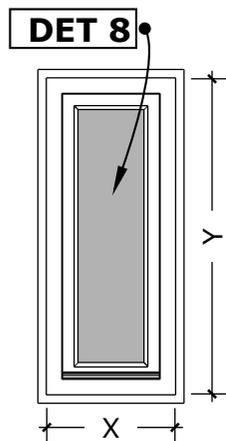

Front

NB! Only if Your sauna equipped with back windows!

Mark windows opening! — Measure windows and add 5 mm. to each side

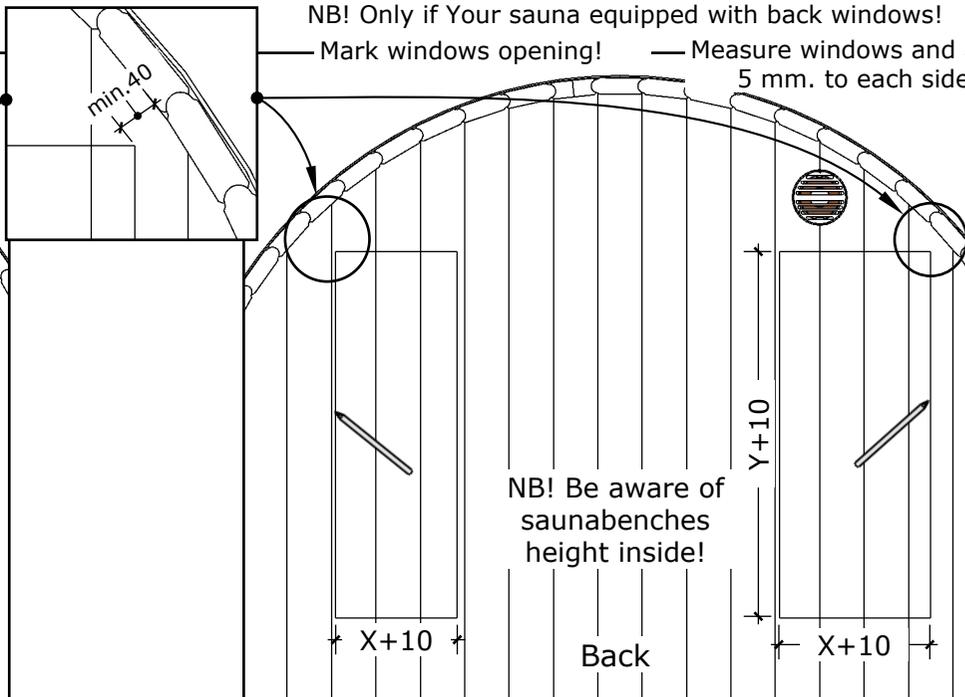

Back


NB! Pay attention to window casement fitting!

II


10.

(I26-TKE-PTS-018)

Sauna 280, Ø226

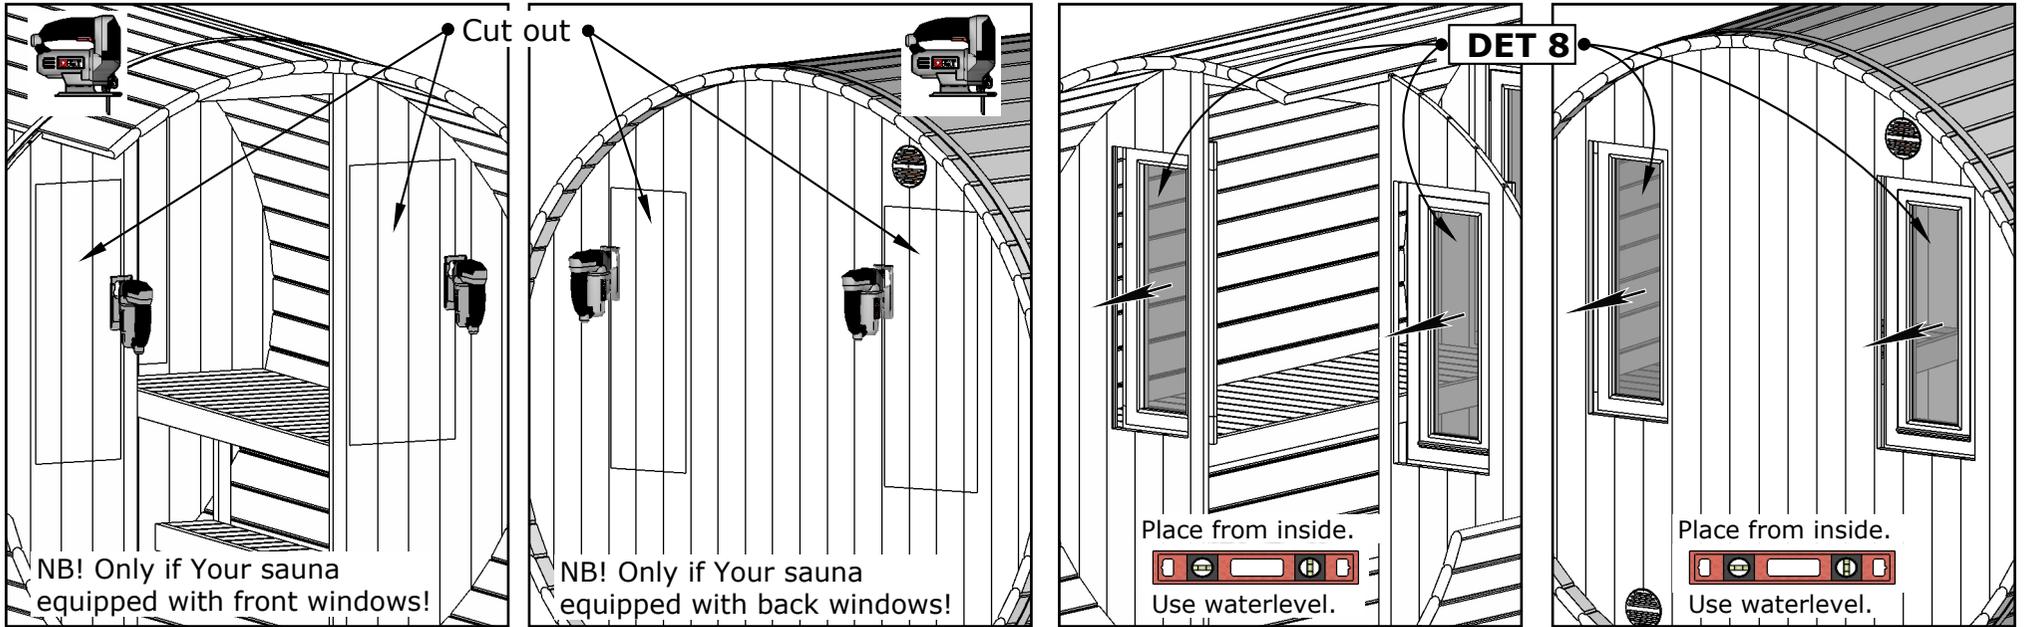

I



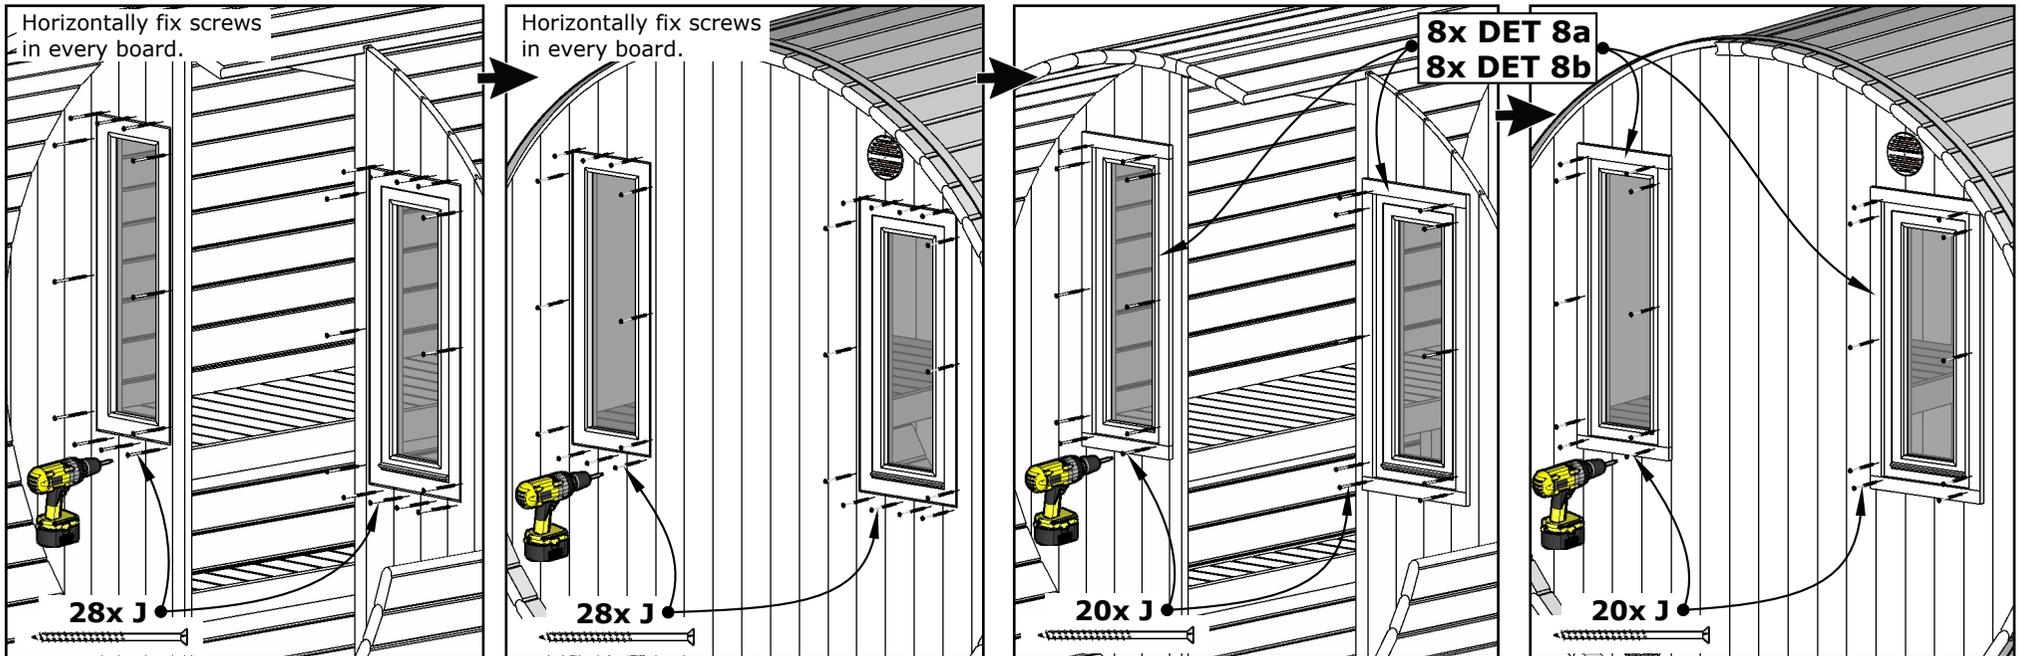


II


11.

(I26-TKE-PTS-018)

Sauna 280, Ø226

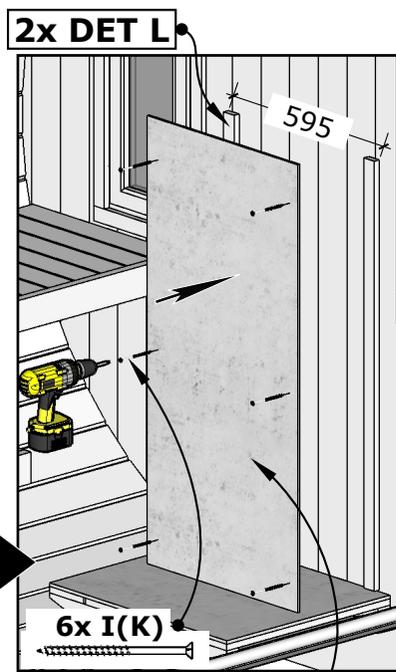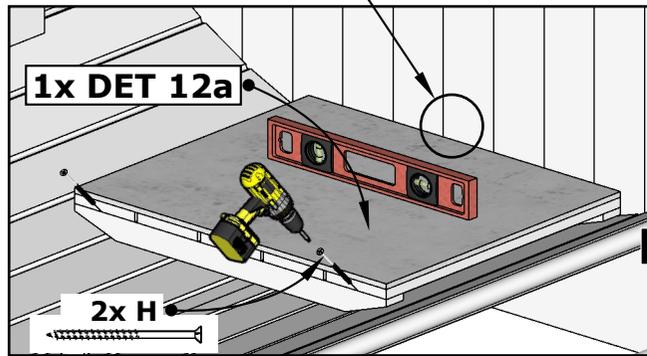
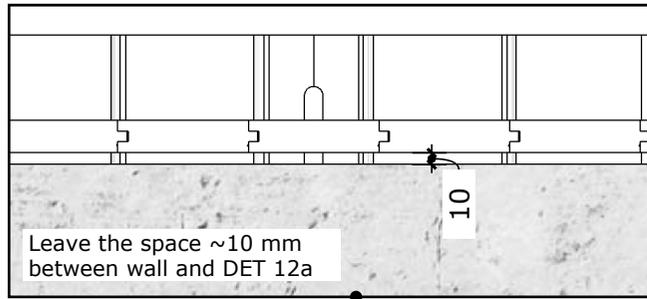


If Your sauna equipped with electrical heater, fix DET 12 b directly to the wall without DET L. Then use screws K.

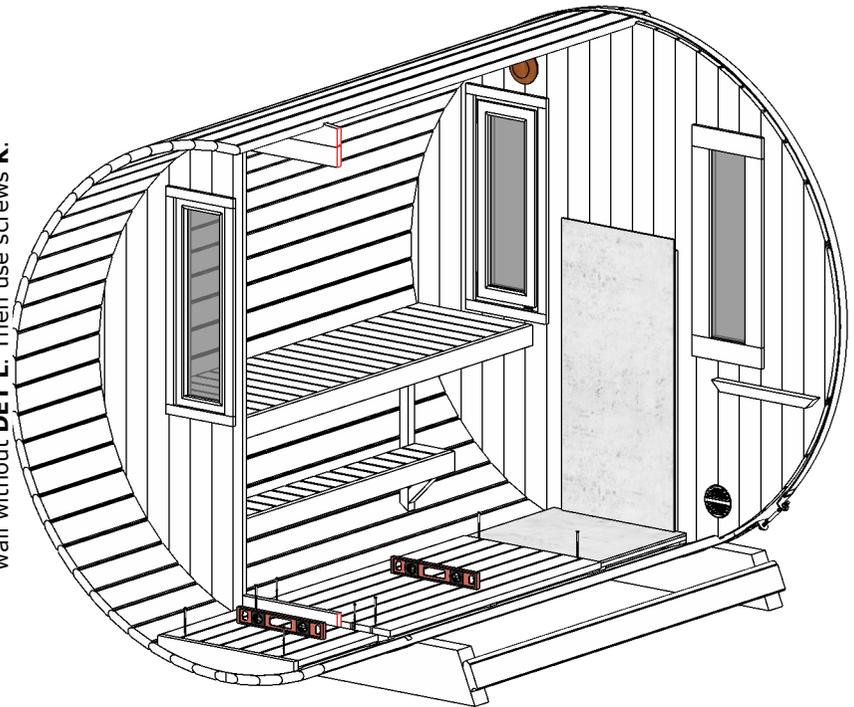

I


1x DET 12b

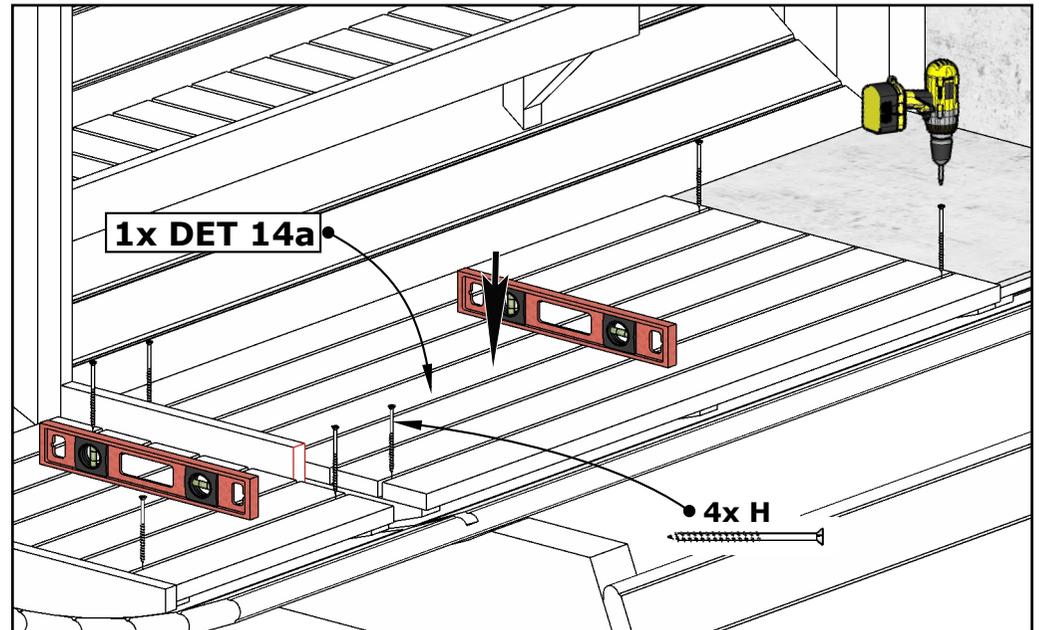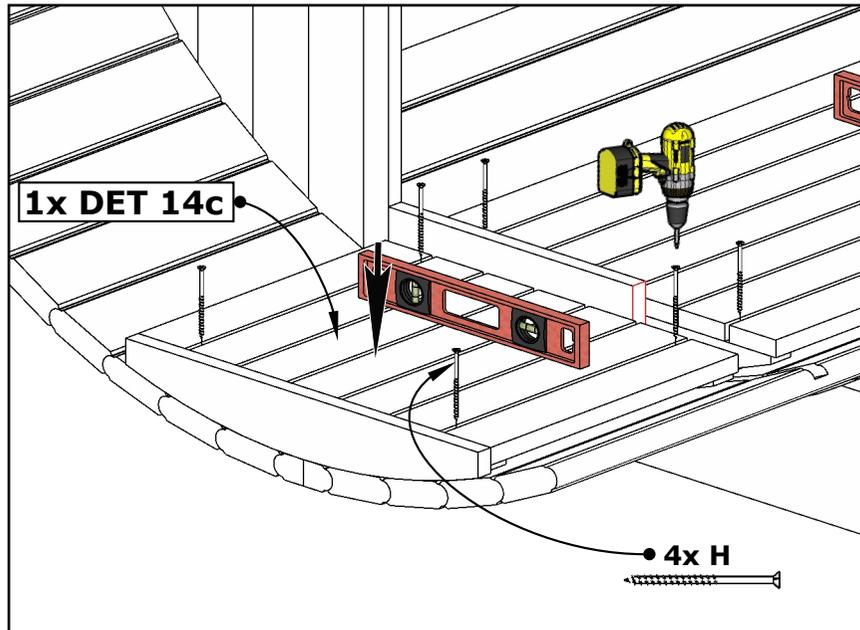




12. II

(I26-TKE-PTS-018)


Sauna 280, Ø226

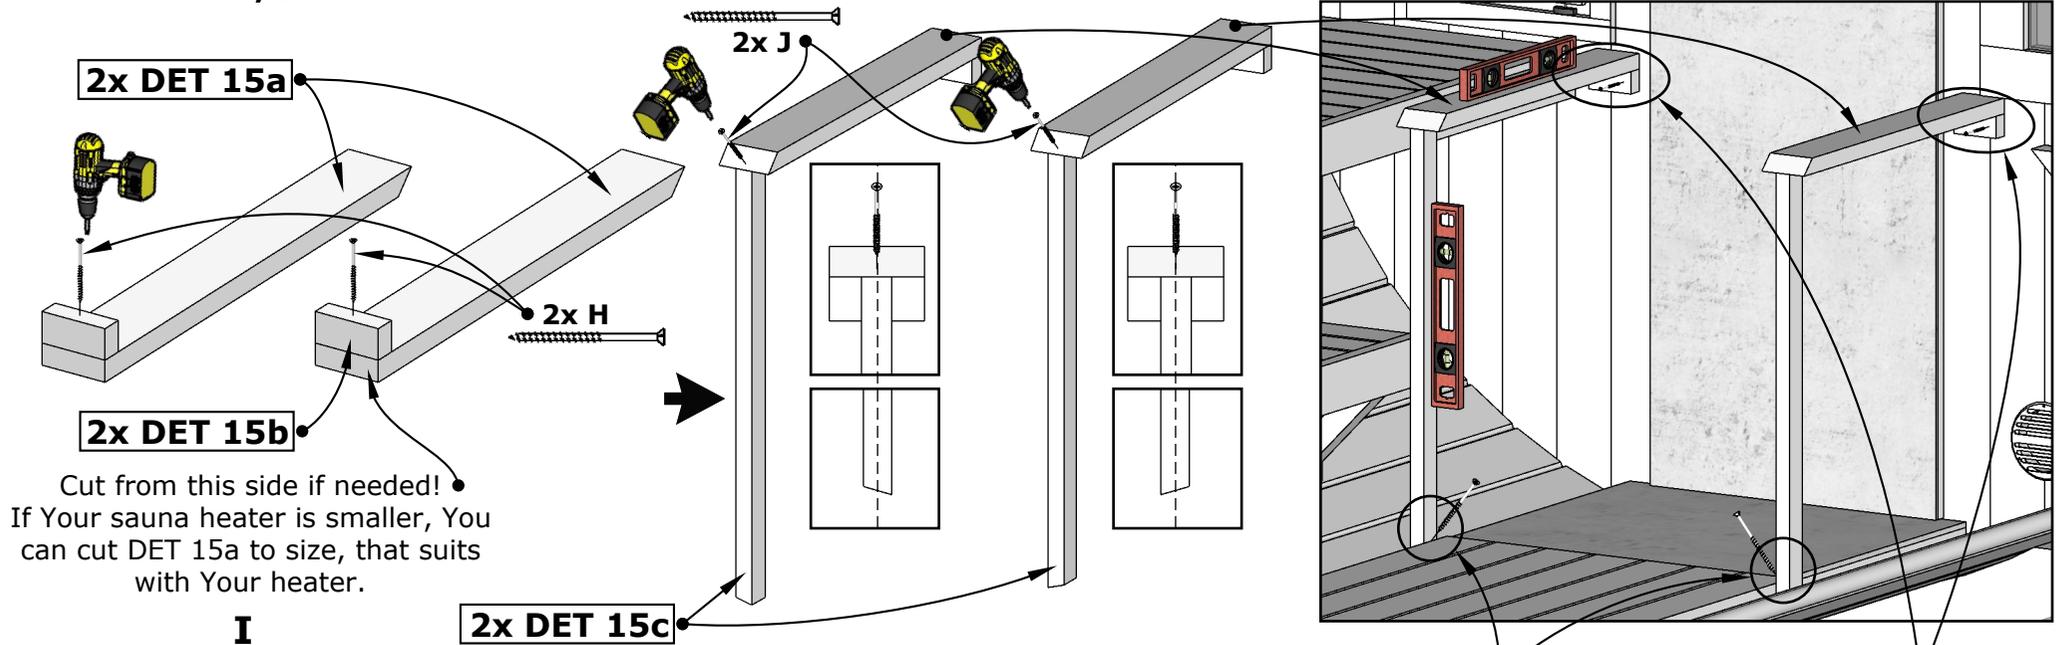




Cut from this side if needed!
 If your sauna heater is smaller, you can cut DET 15a to size, that suits with your heater.

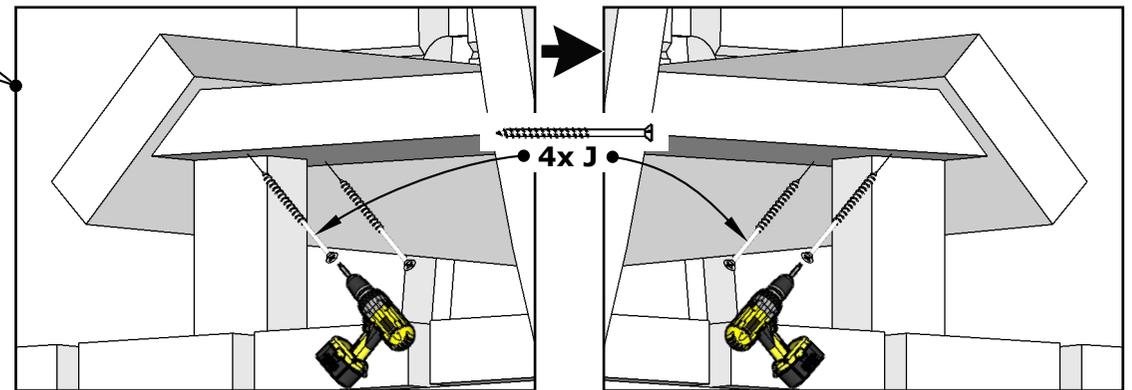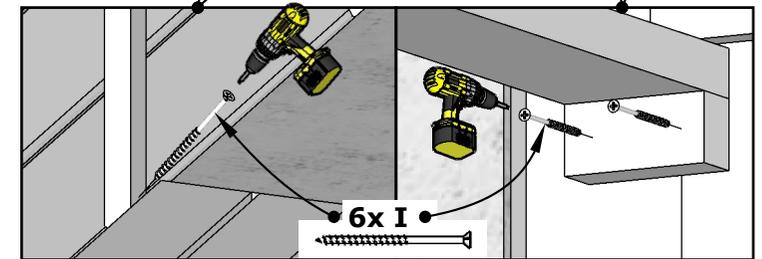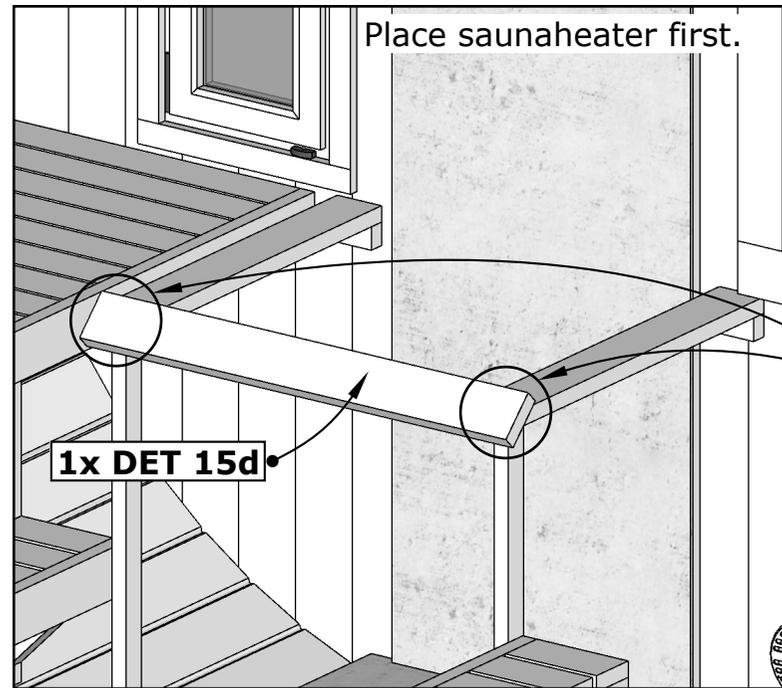



Sauna 280, Ø226

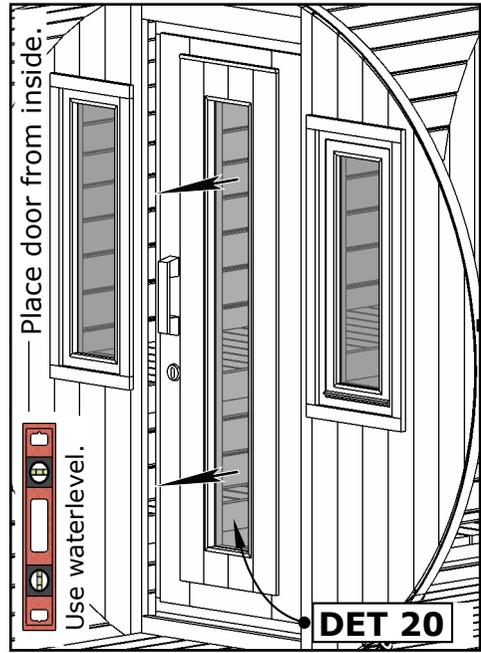


I

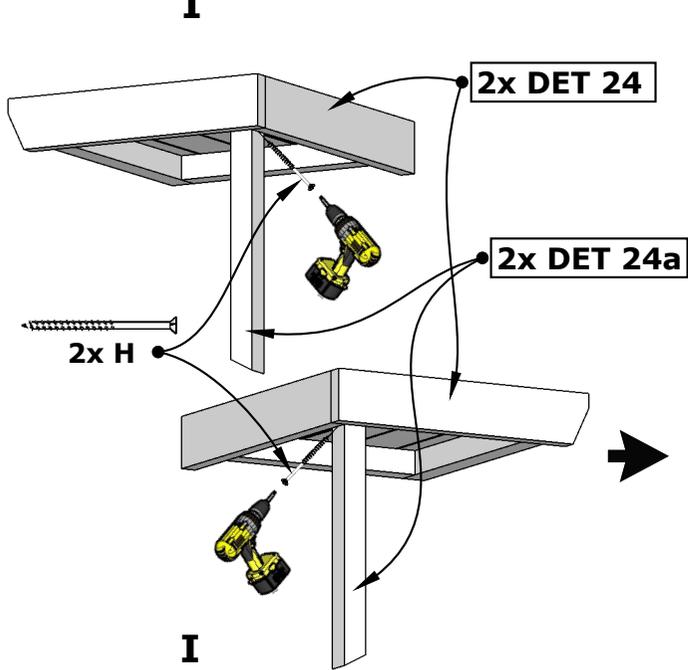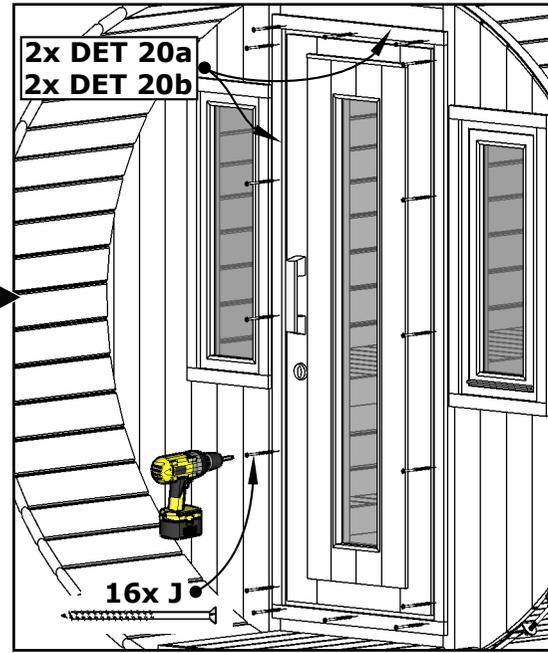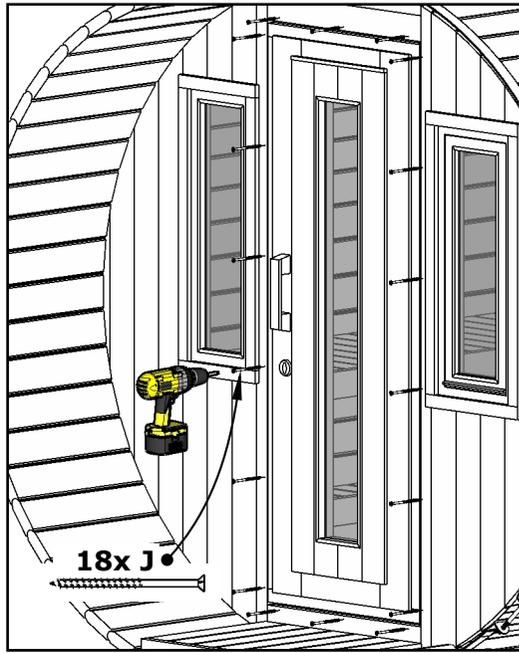


I

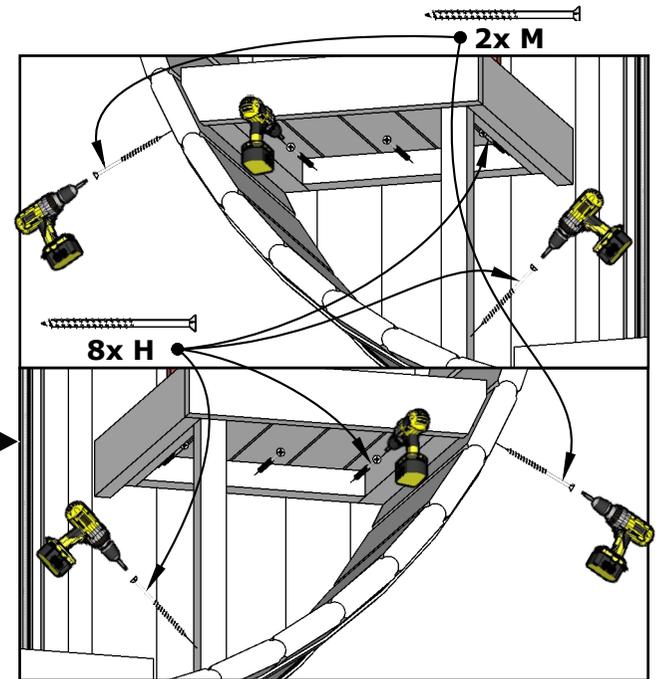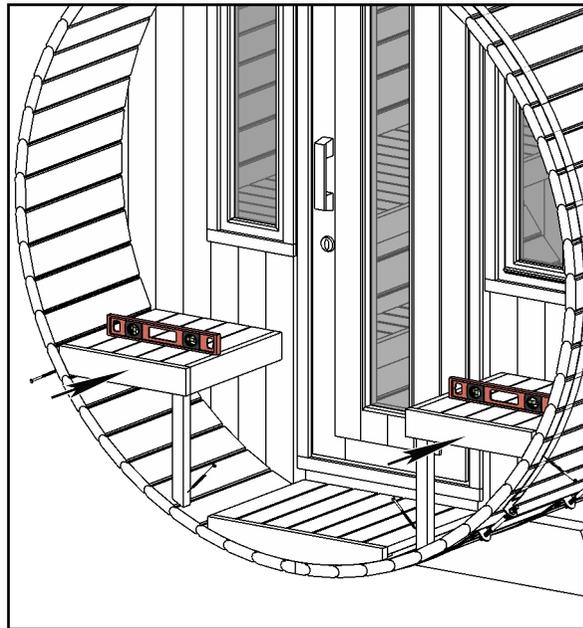


Sauna 280, Ø226

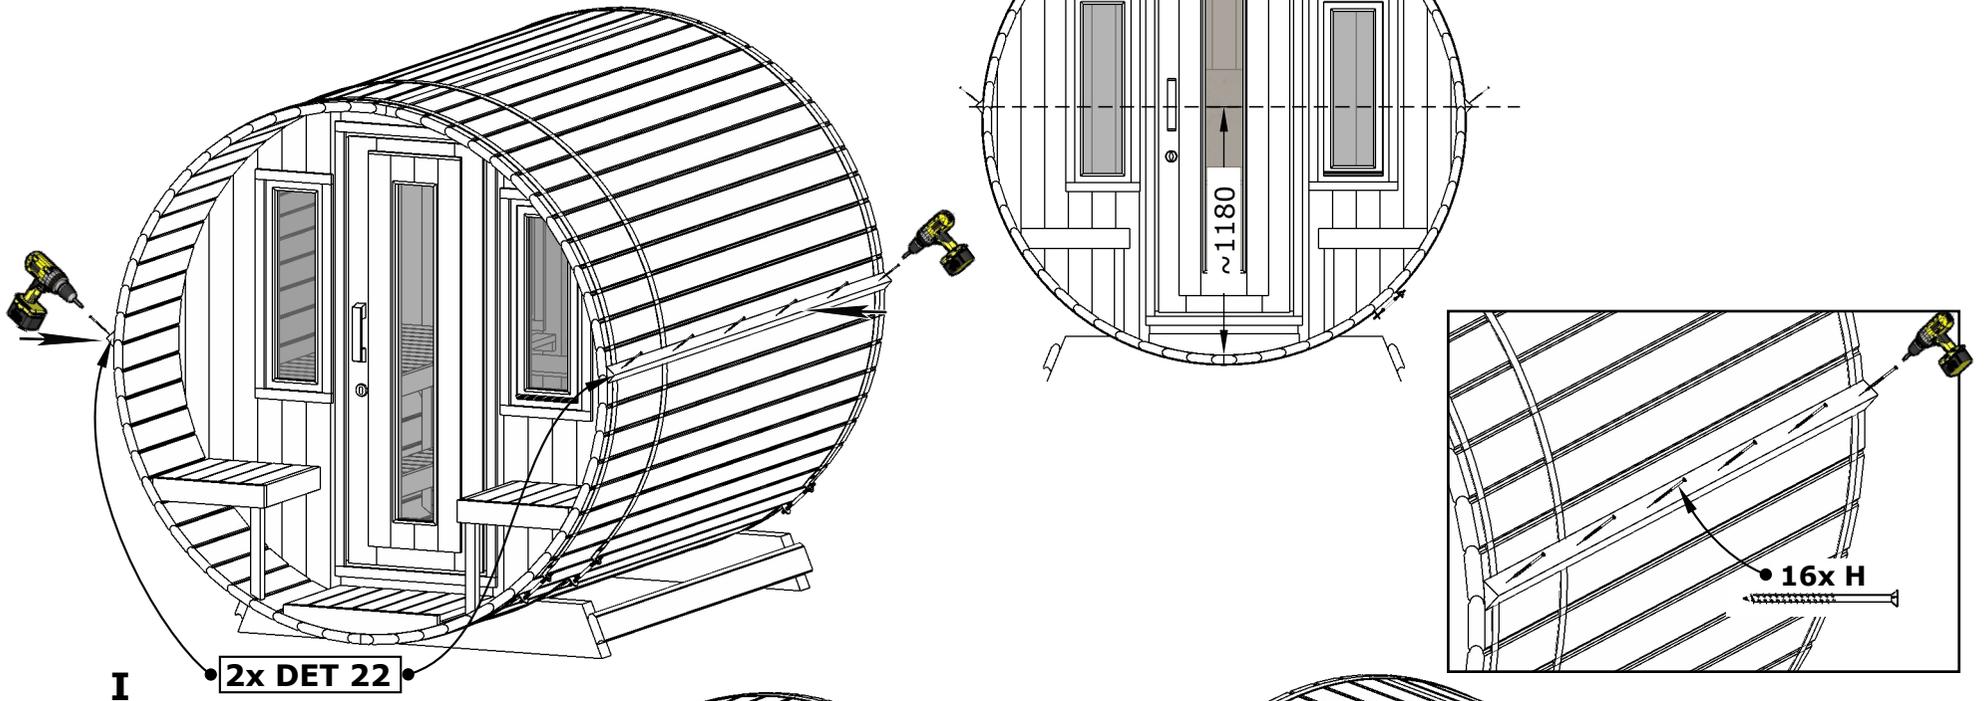




NB! Check also shingles installation manual inside shingles package.

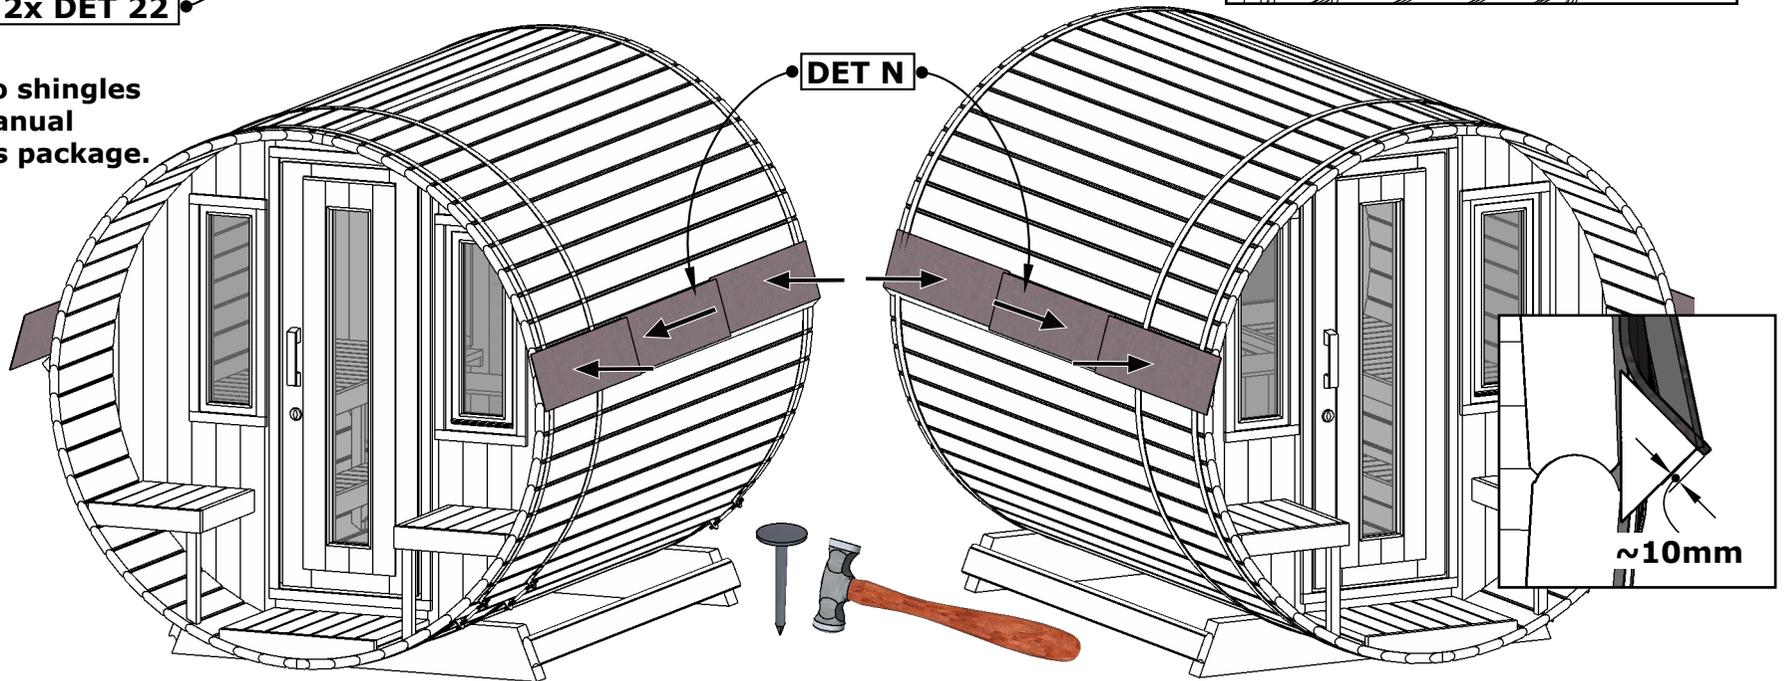


Sauna 280, Ø226

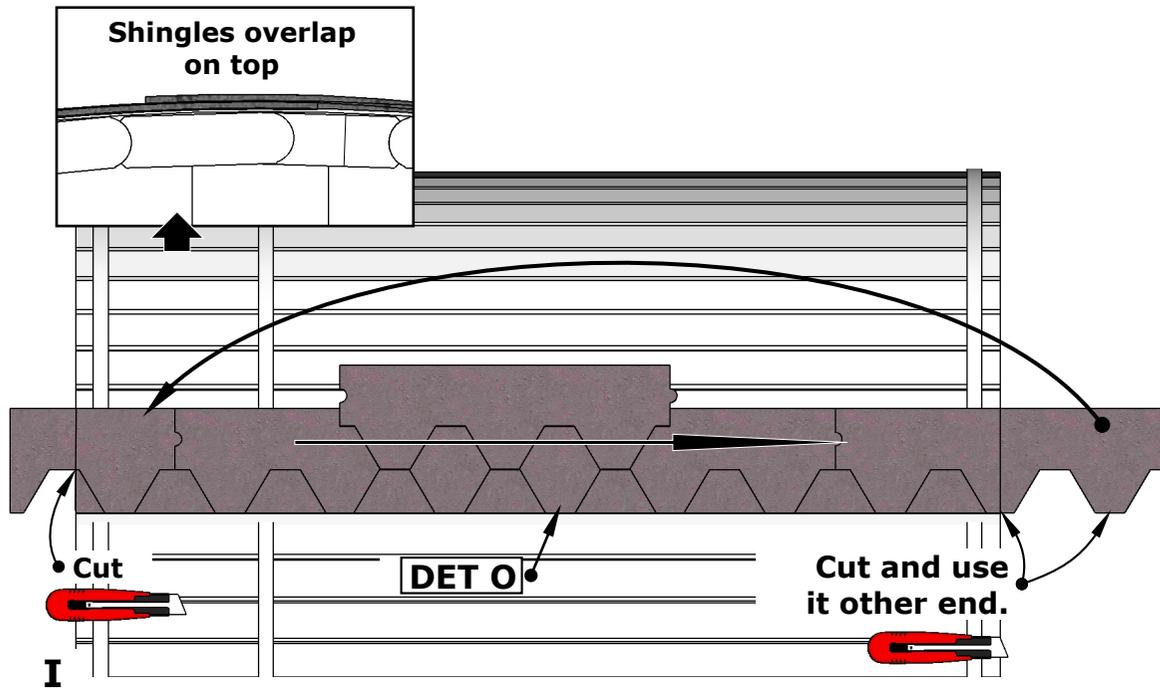

Check also roof shingles installation manual inside package.

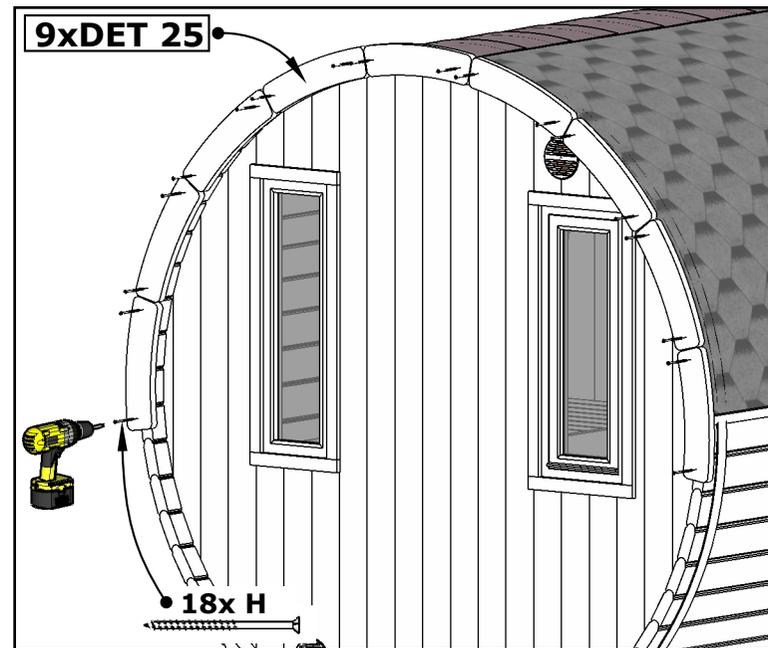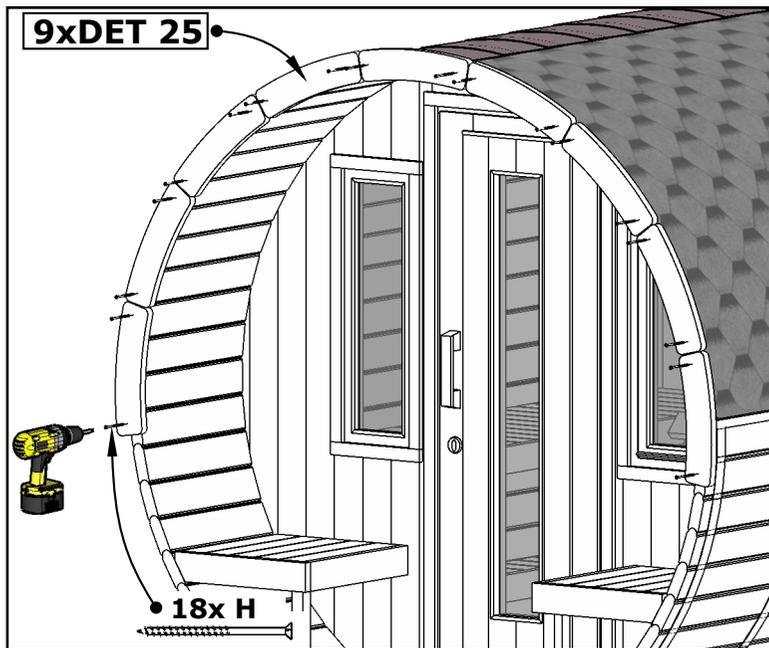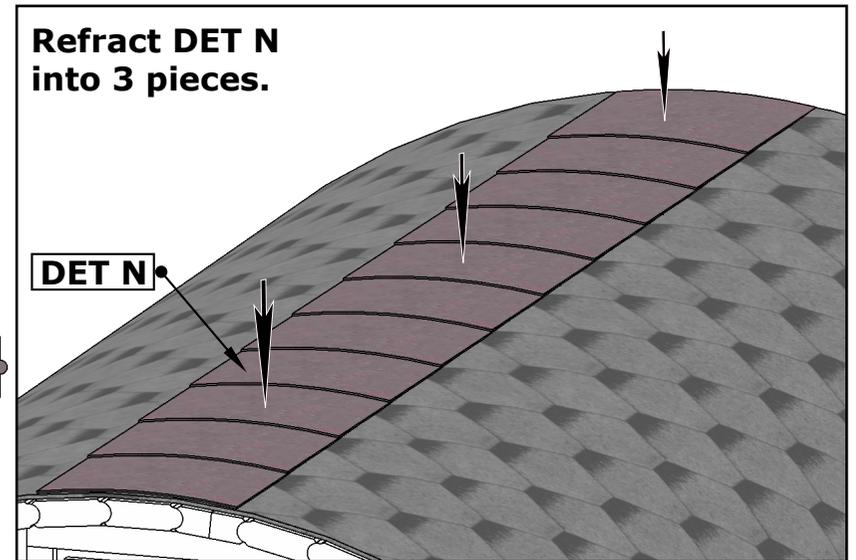

Sauna 280, Ø226

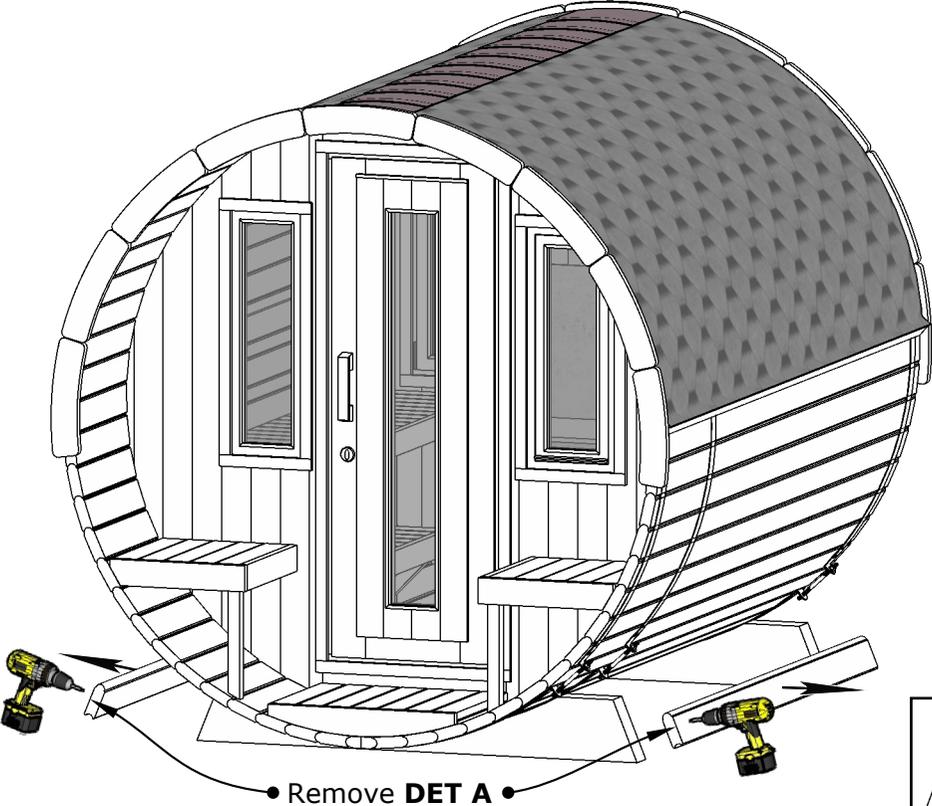

NB! Backrests are optional!

