



Luxe 3 2 room

**Please read whole manual before You start.
All given measurements are in millimeters.**

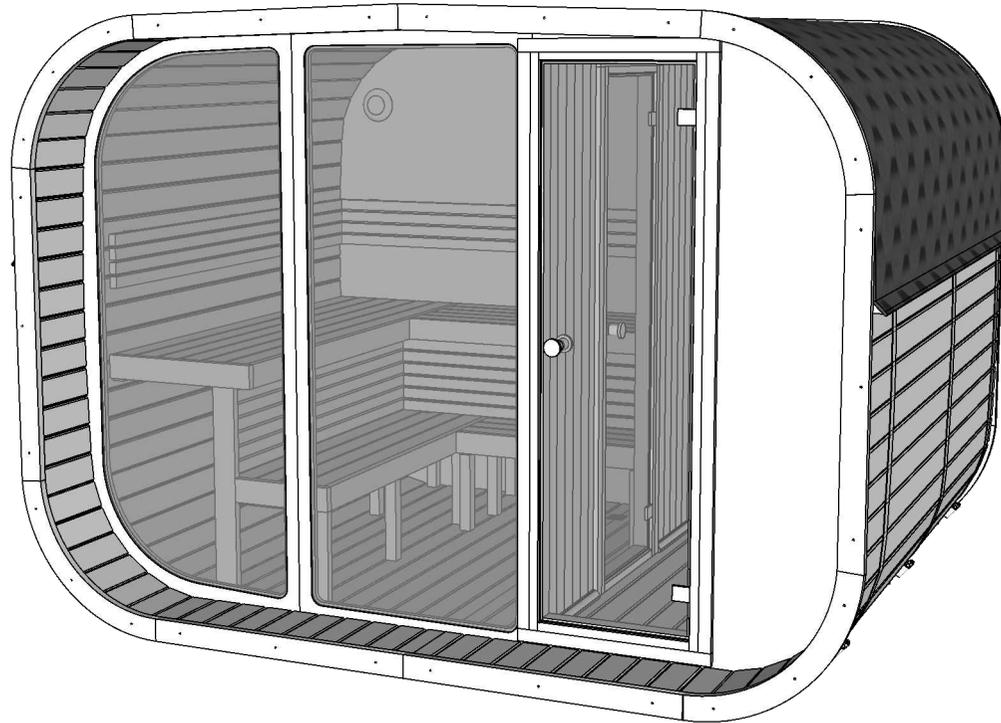


Luxe 3 2 room

Details list 1

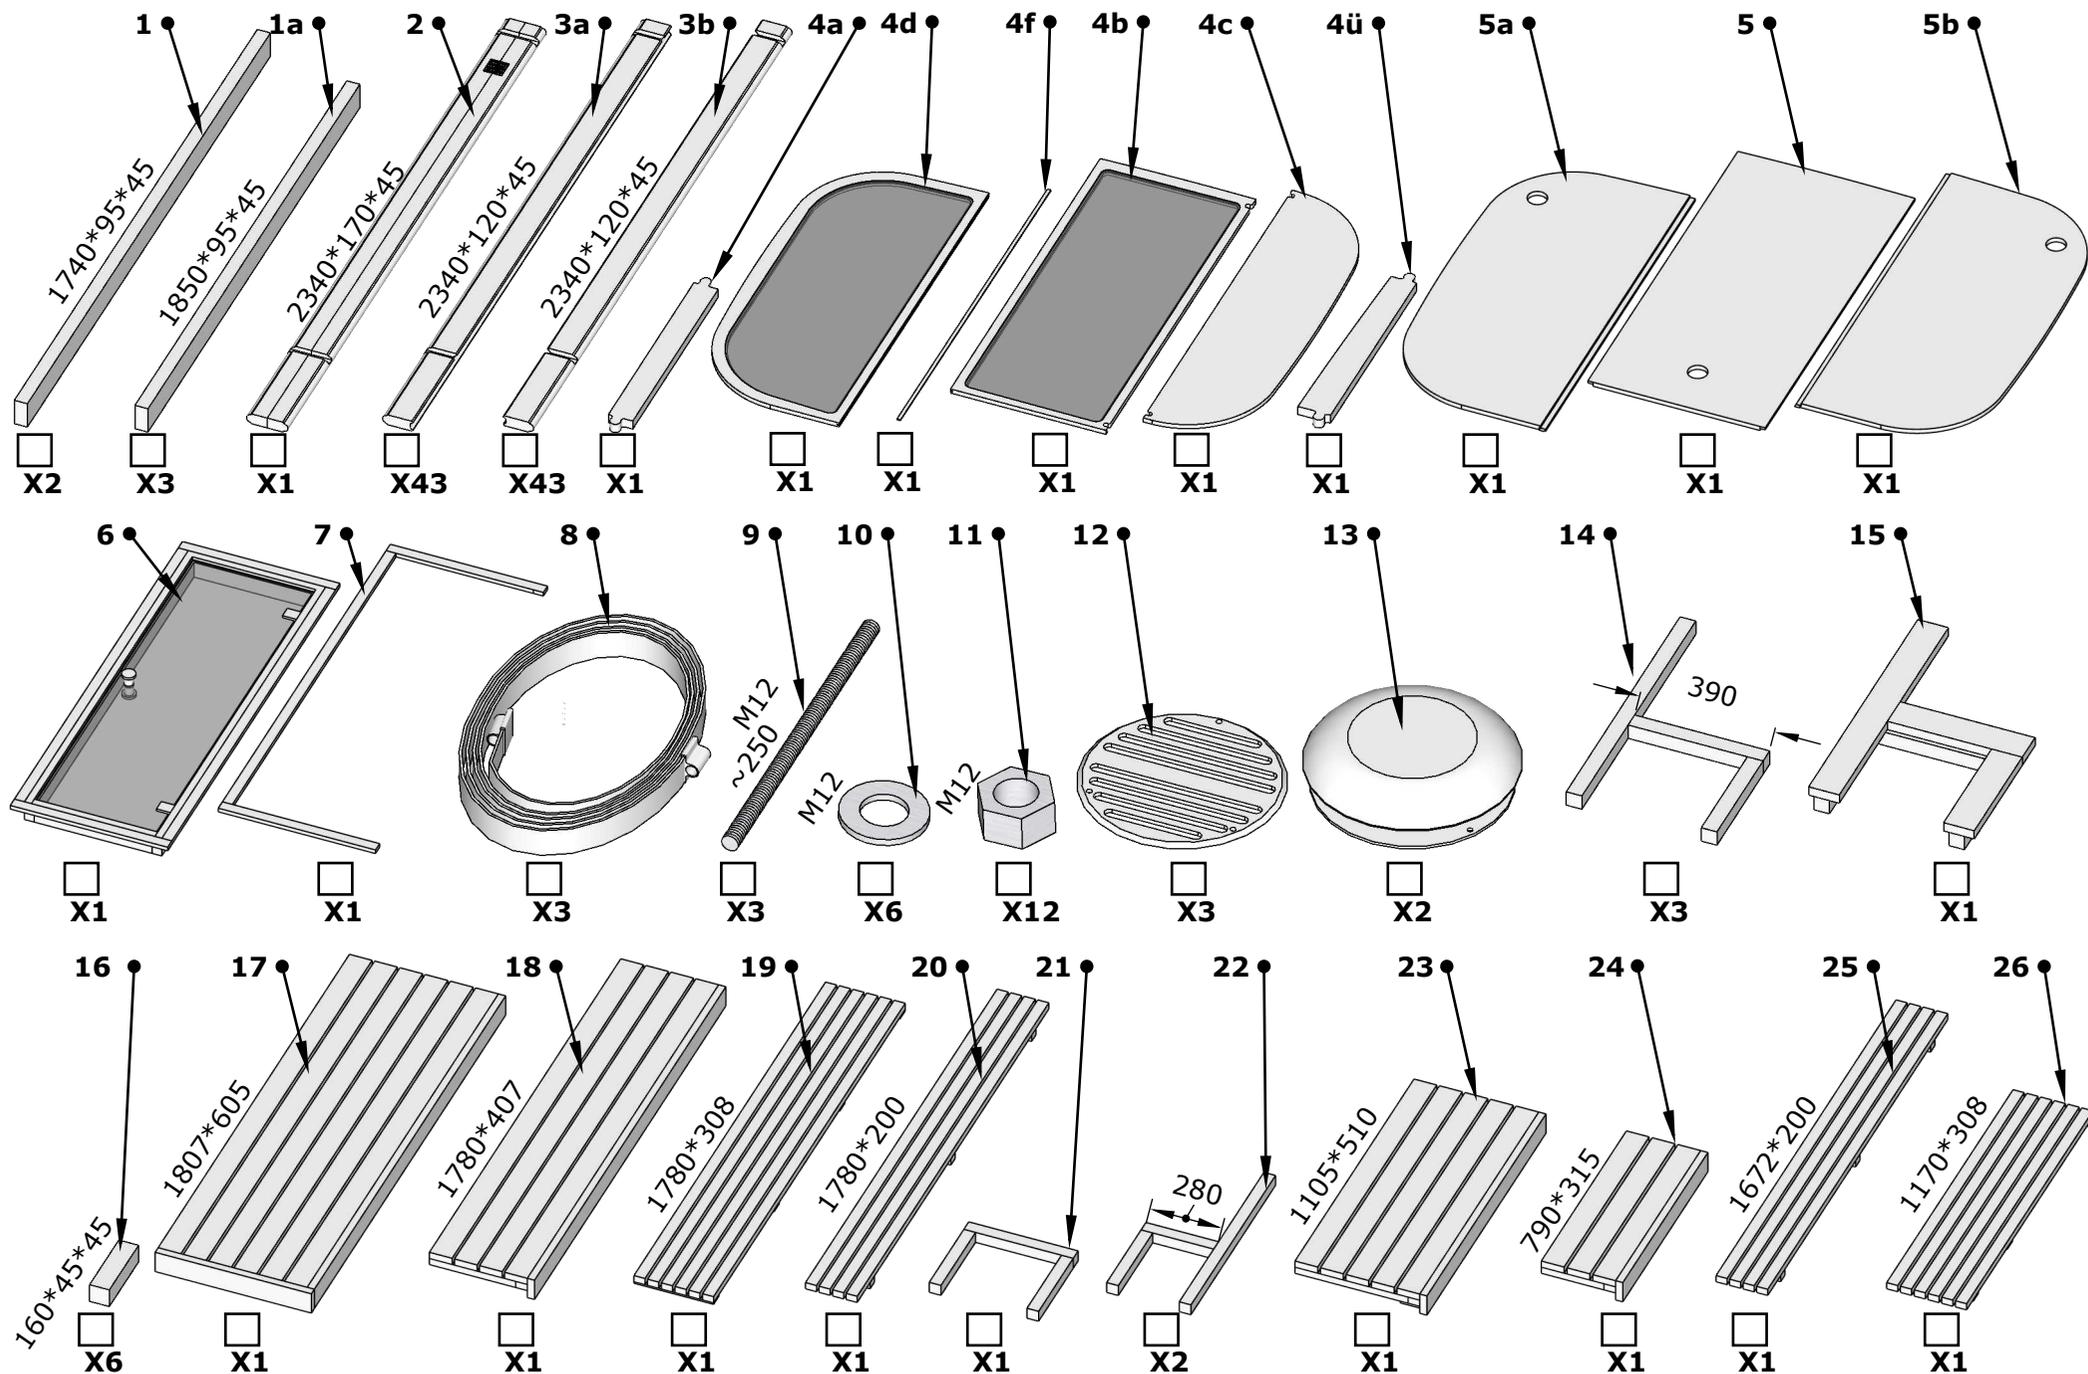


Luxe 3 2 room





Details list 2

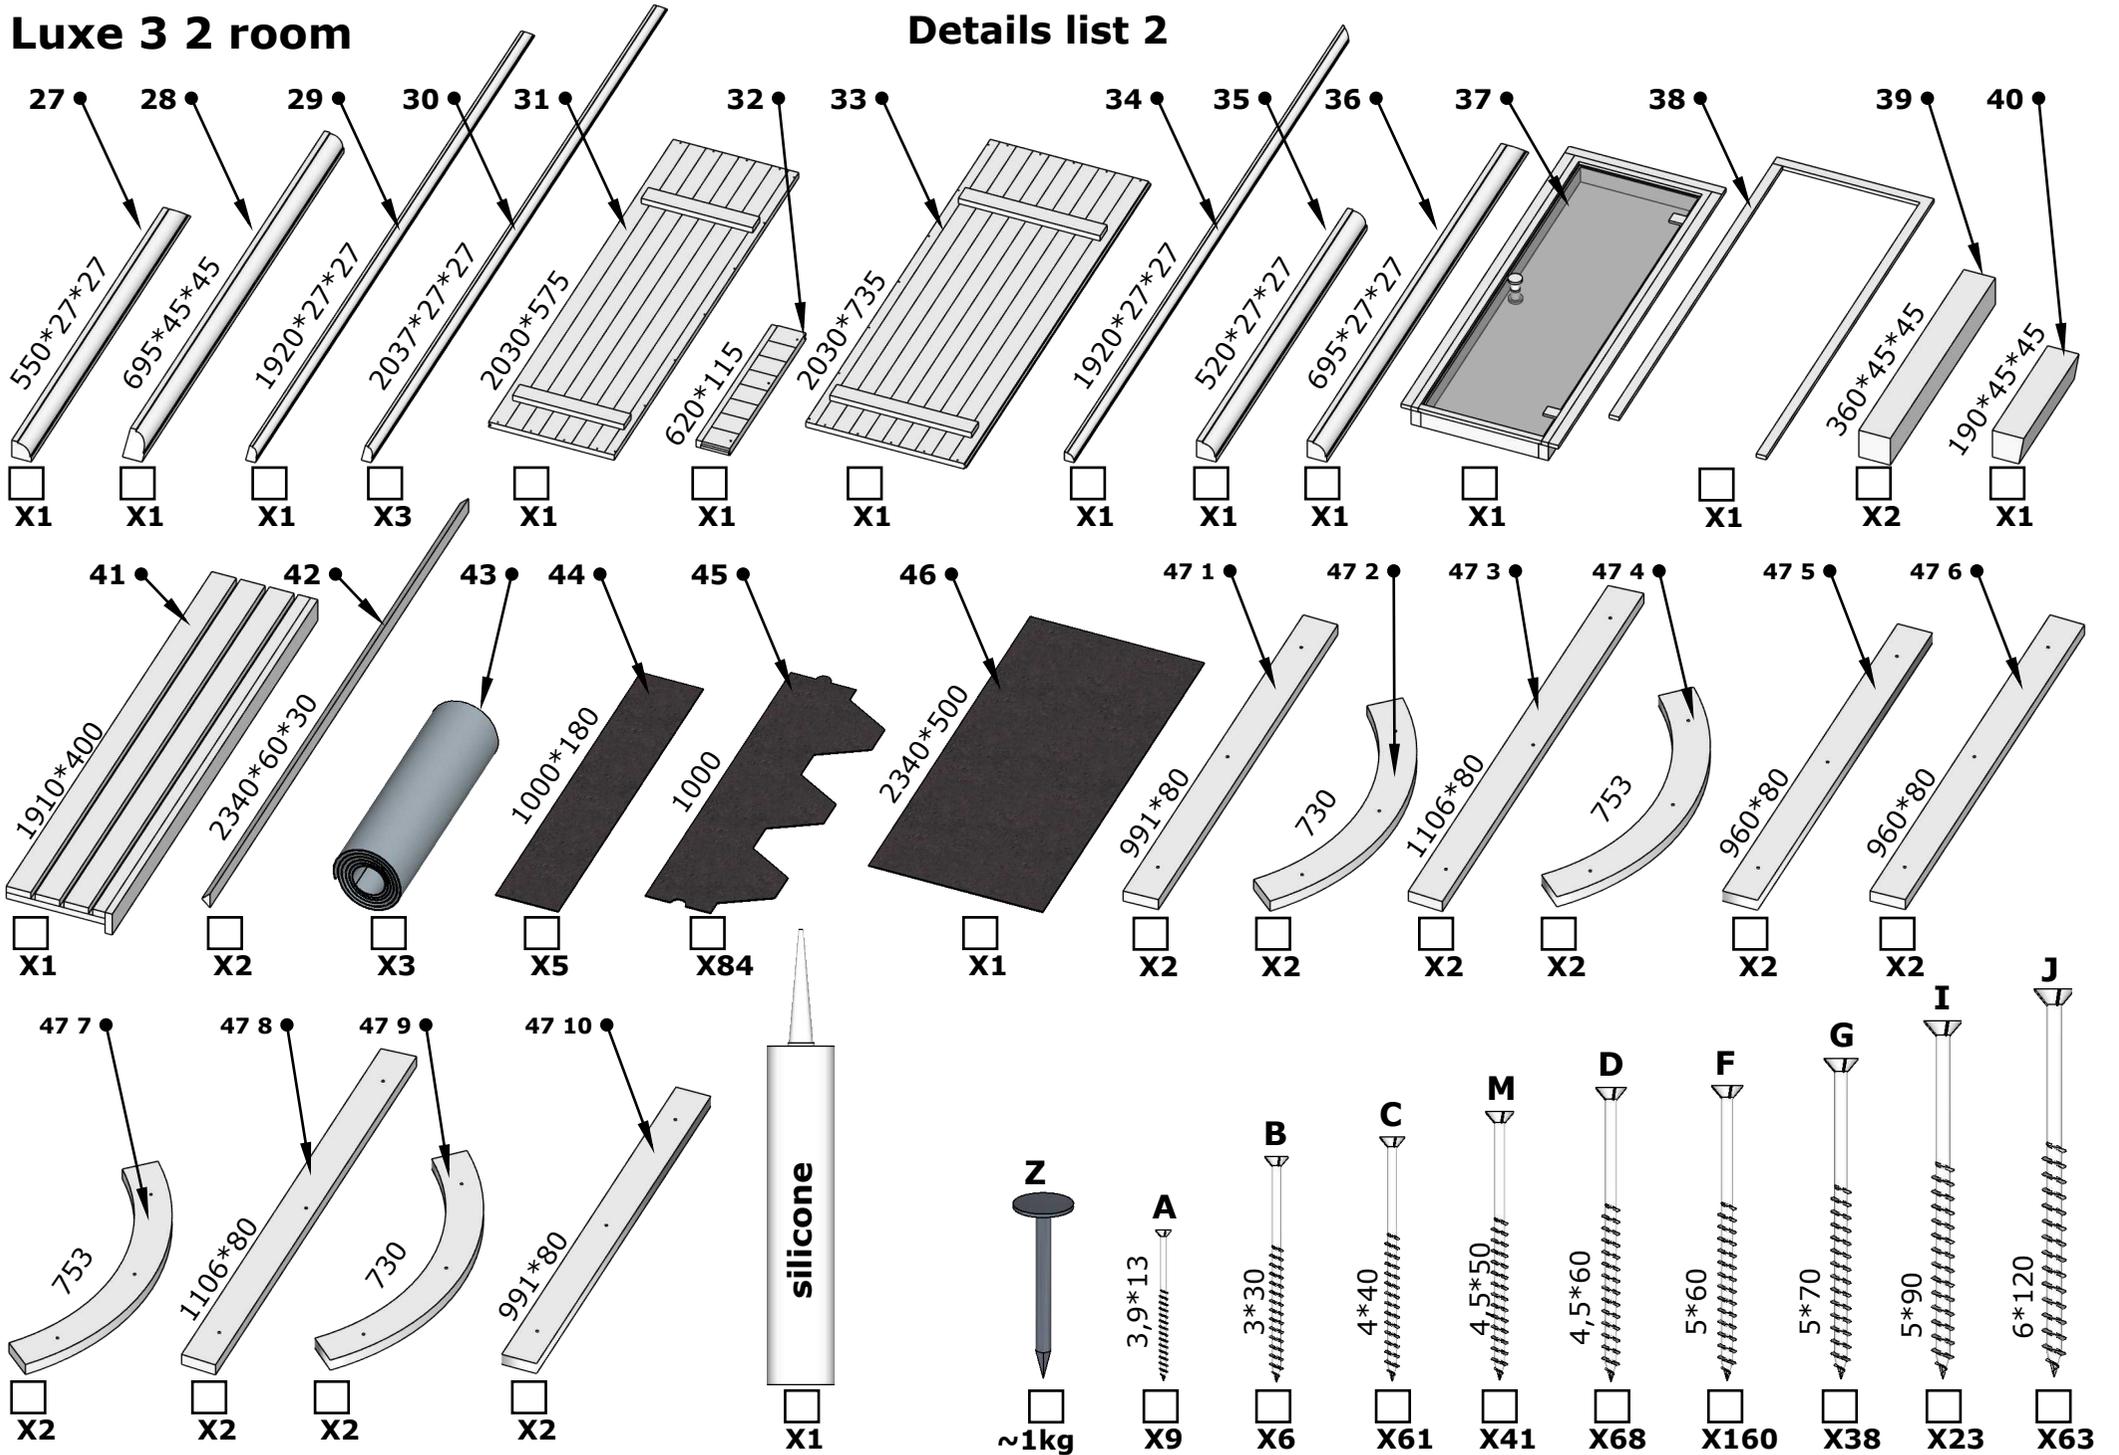




Luxe 3 2 room

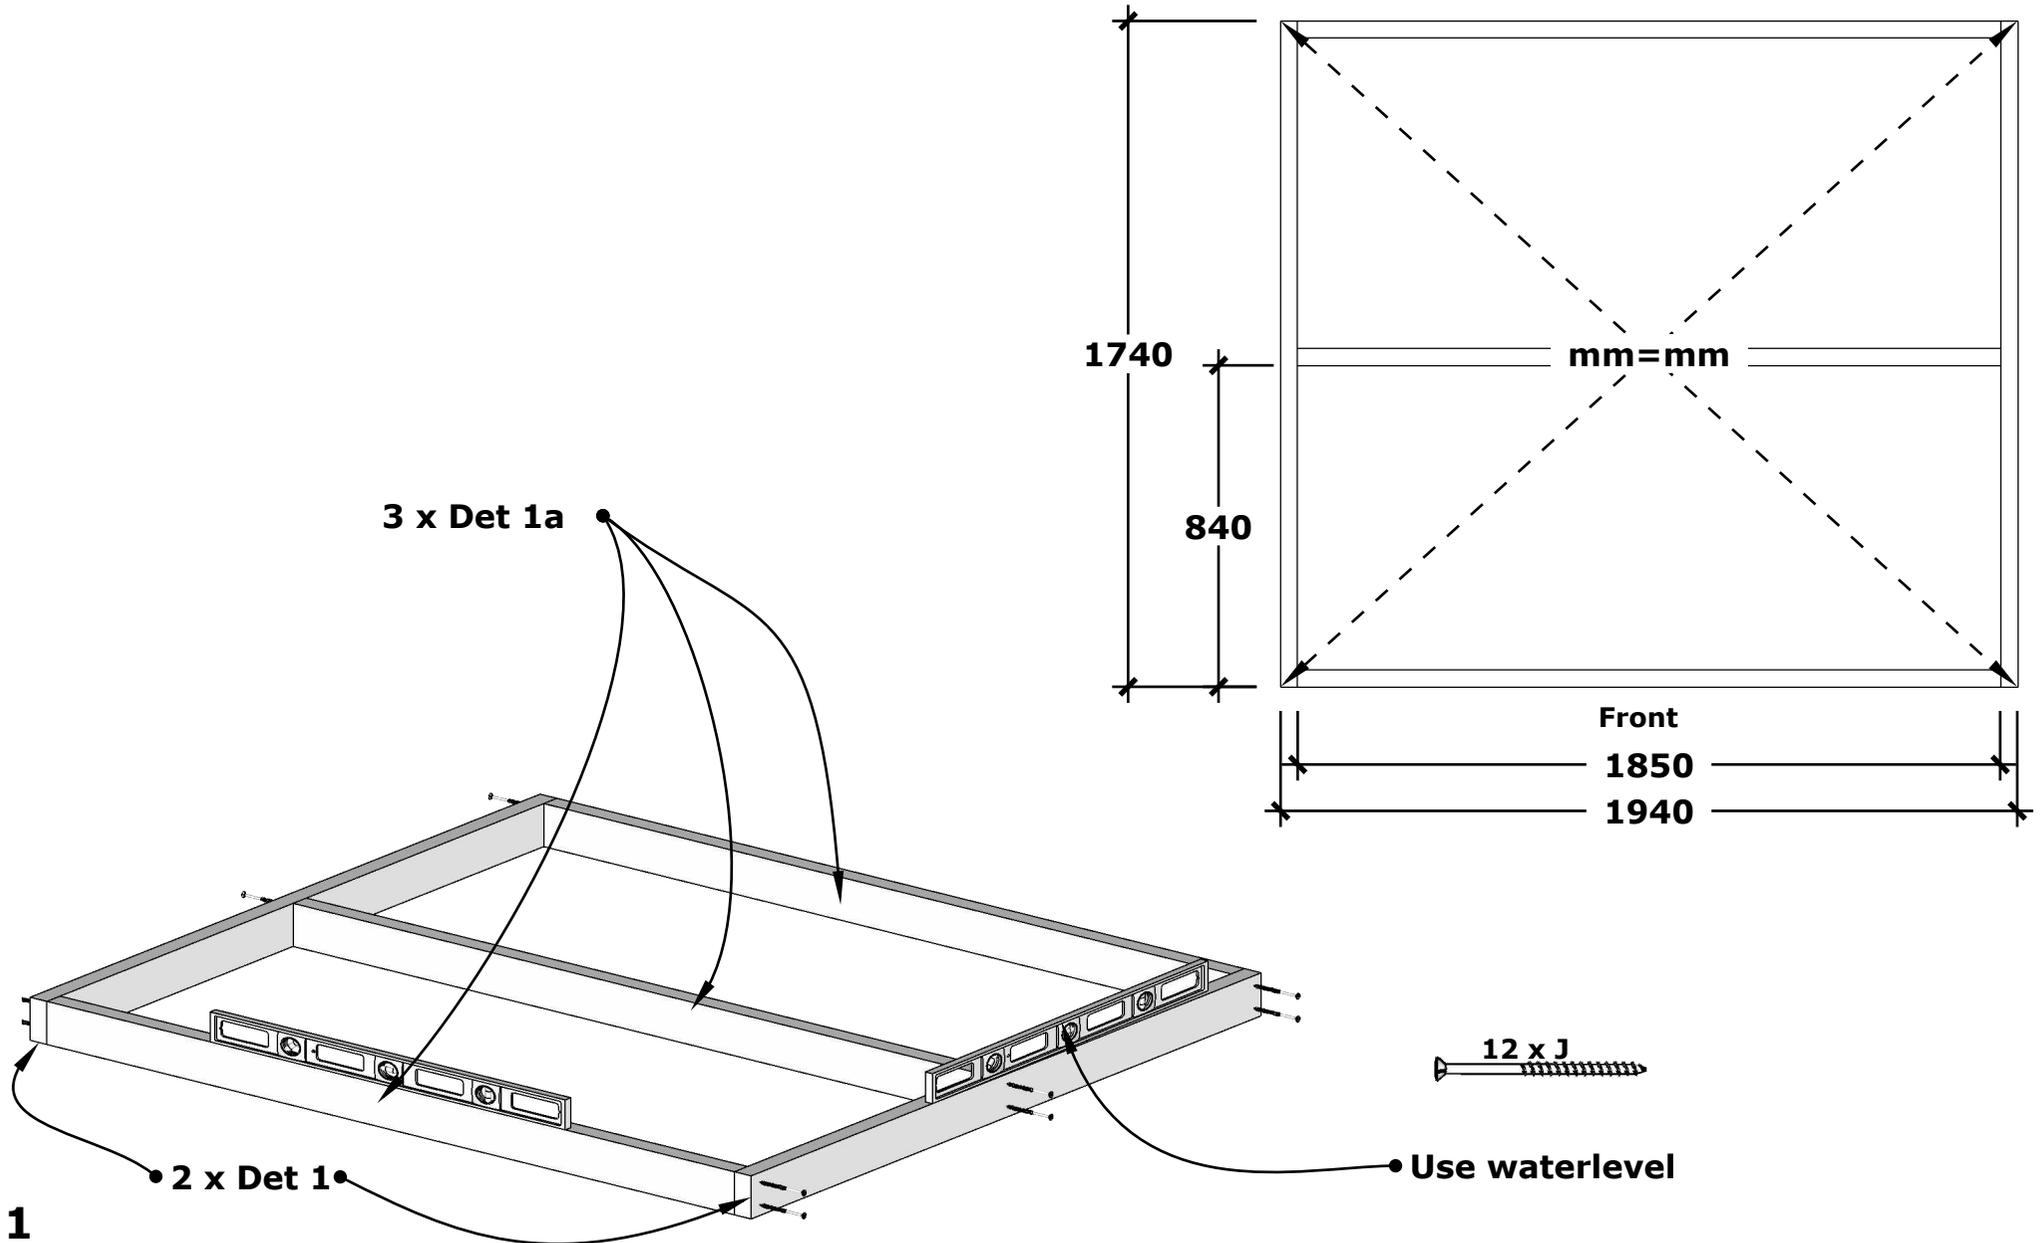




Luxe 3 2 room

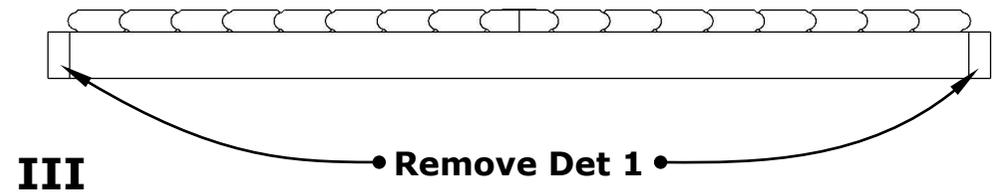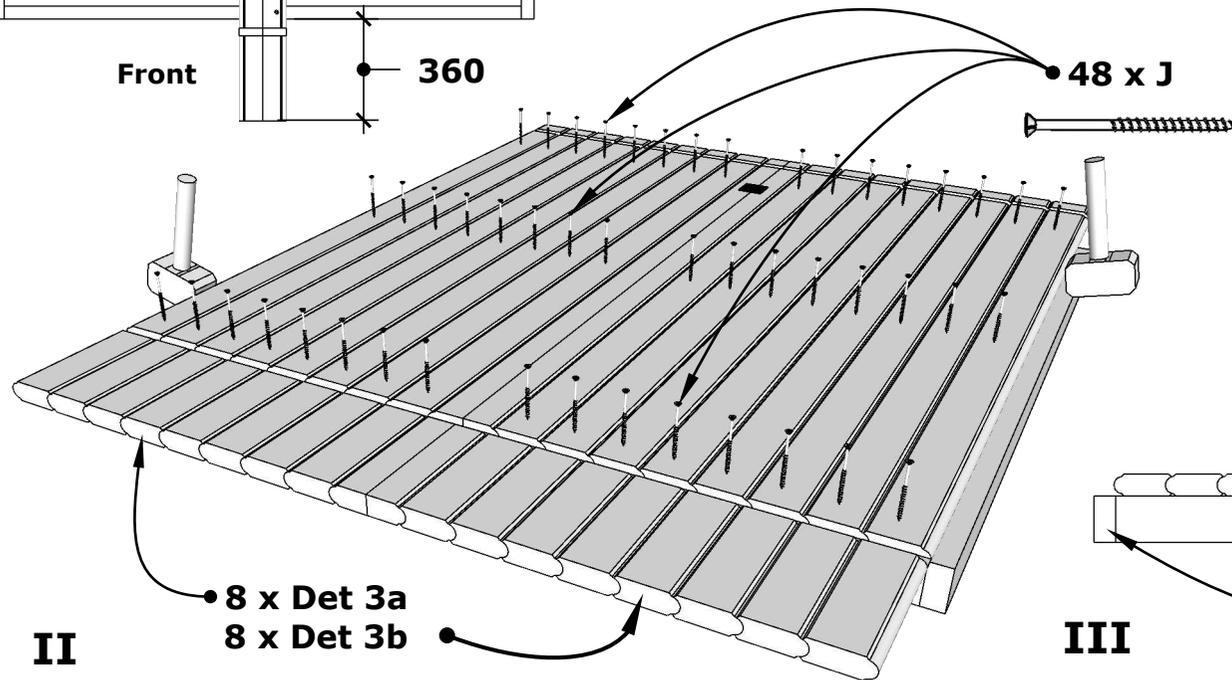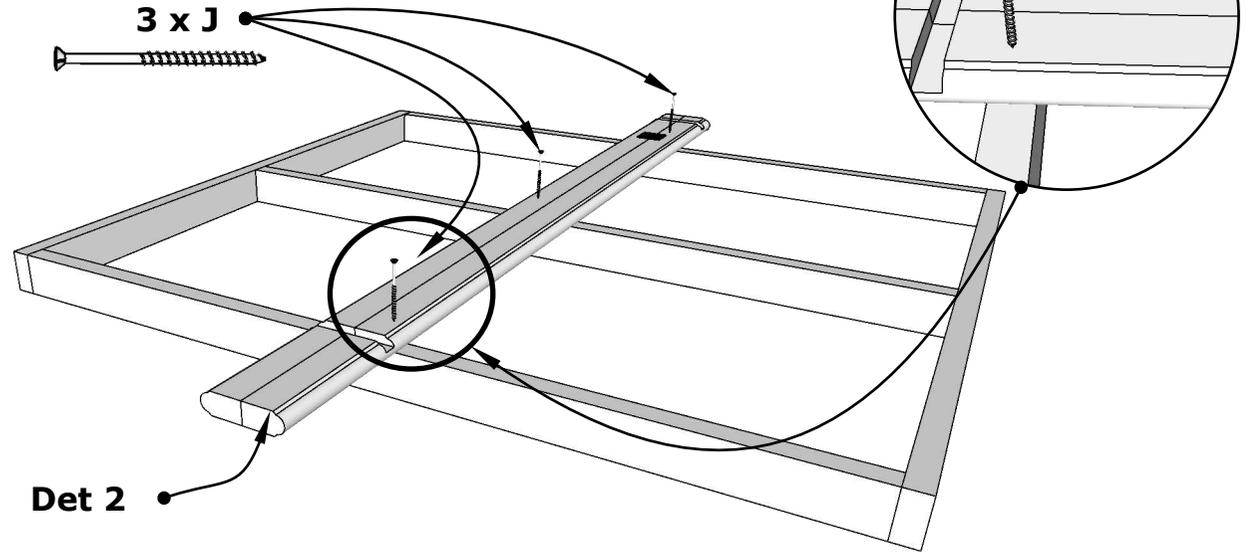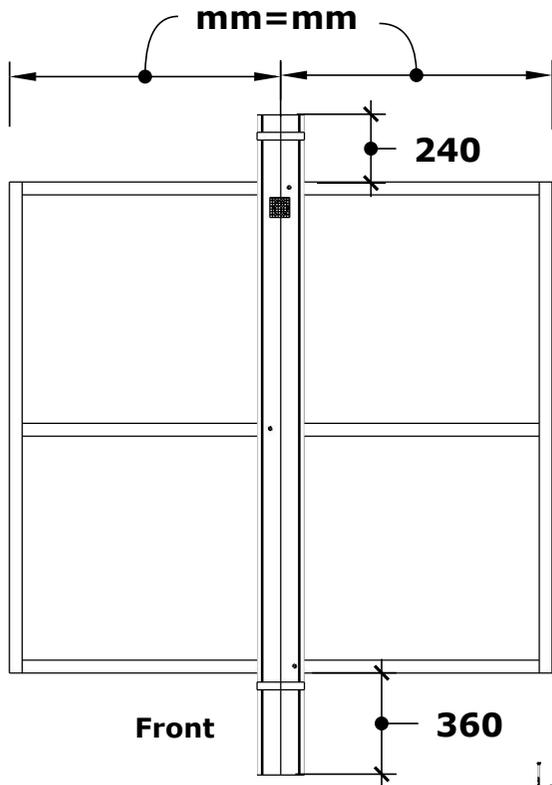

Luxe 3 2 room

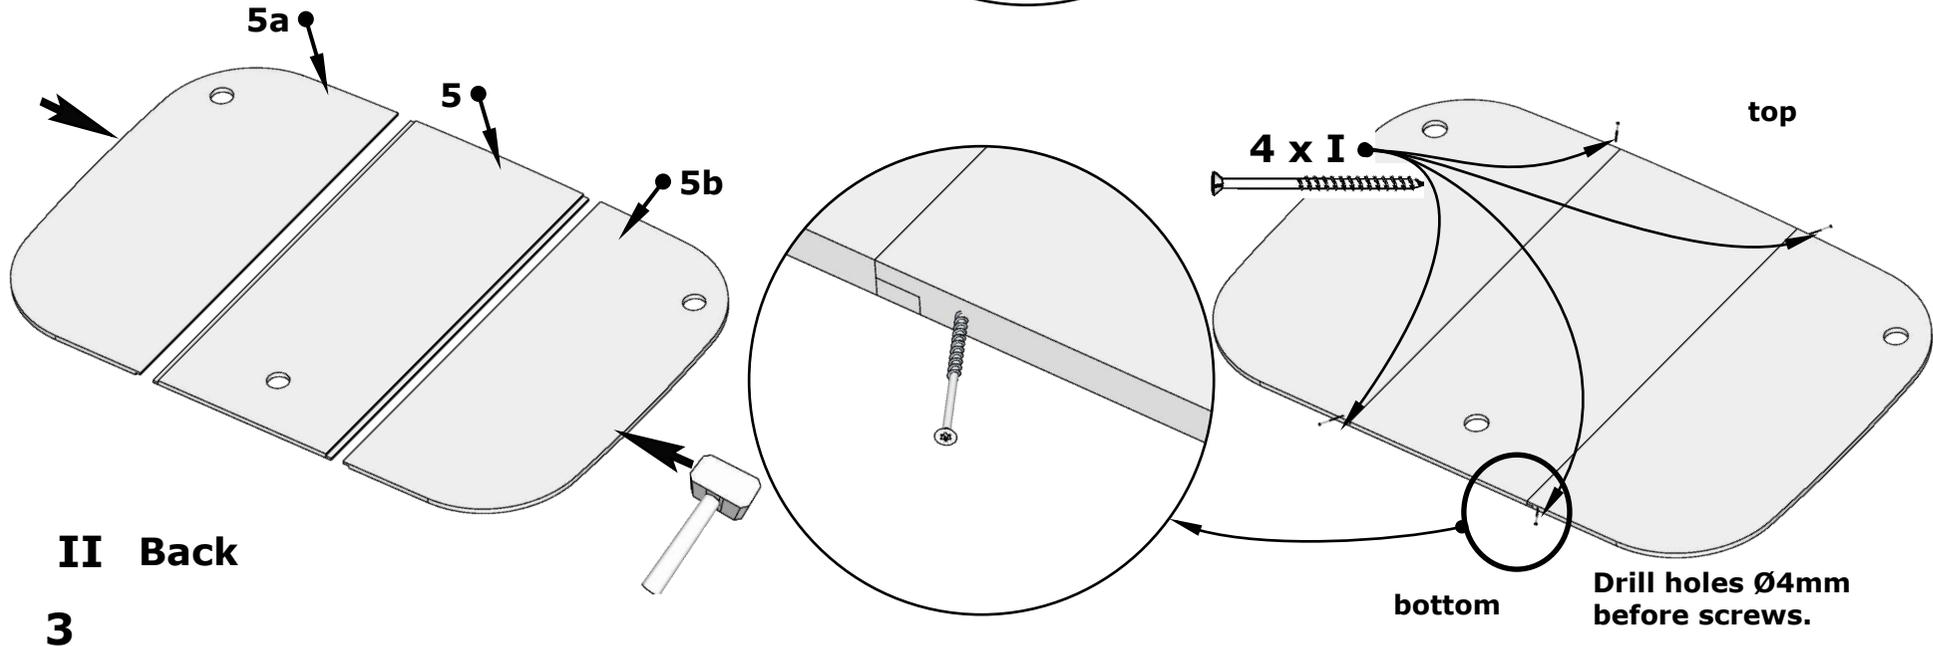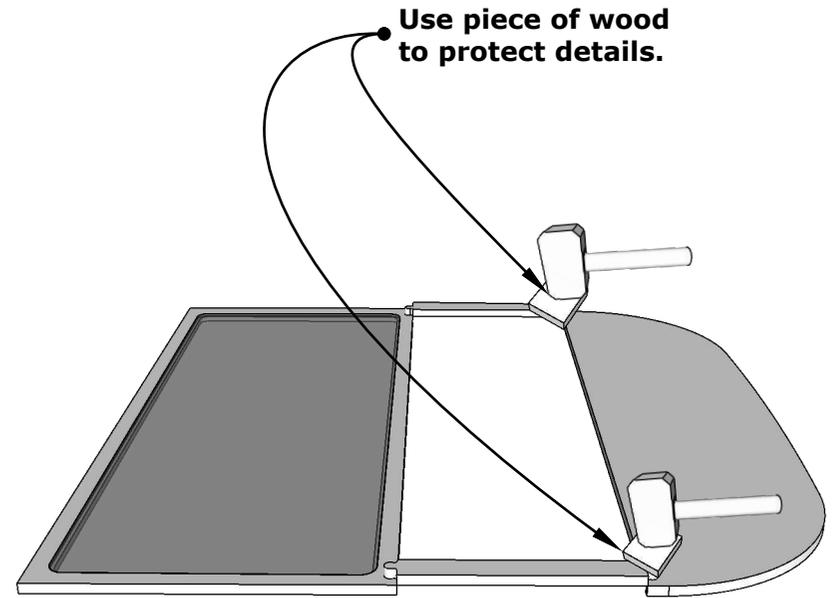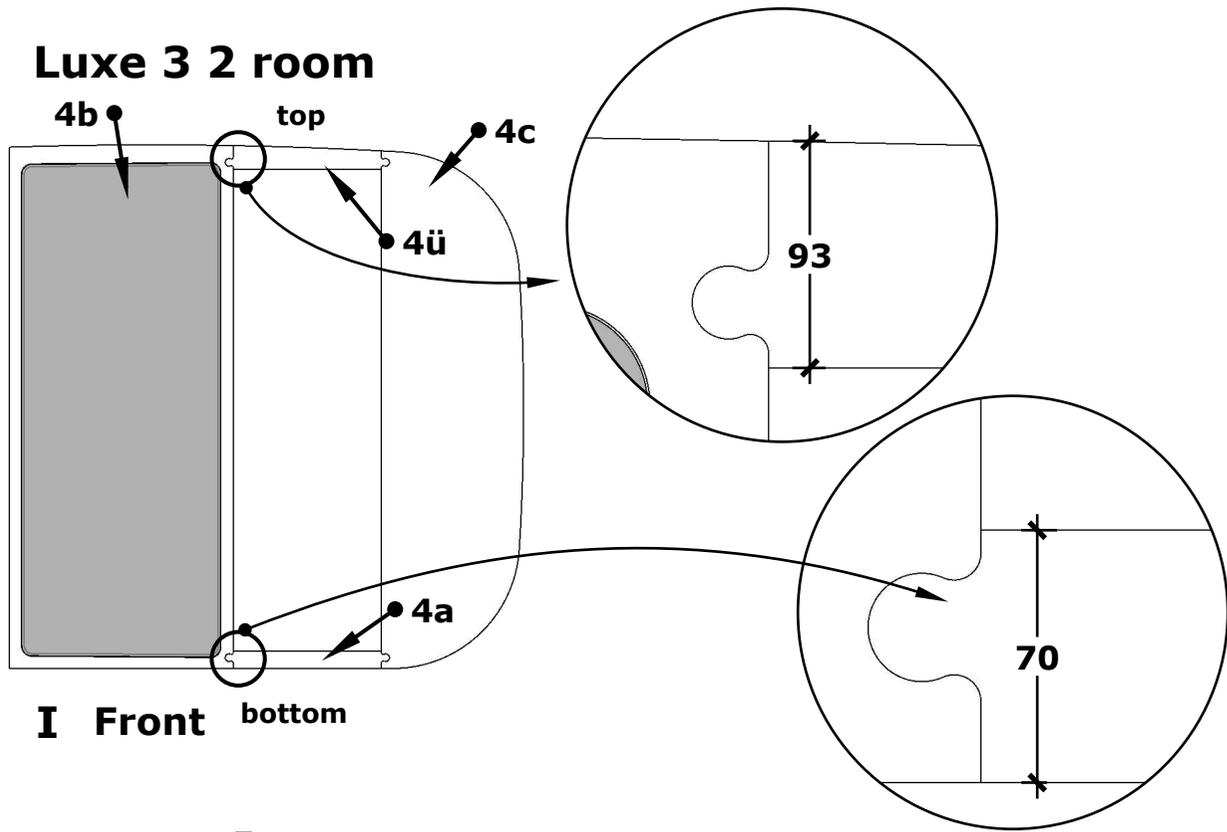

Luxe 3 2 room

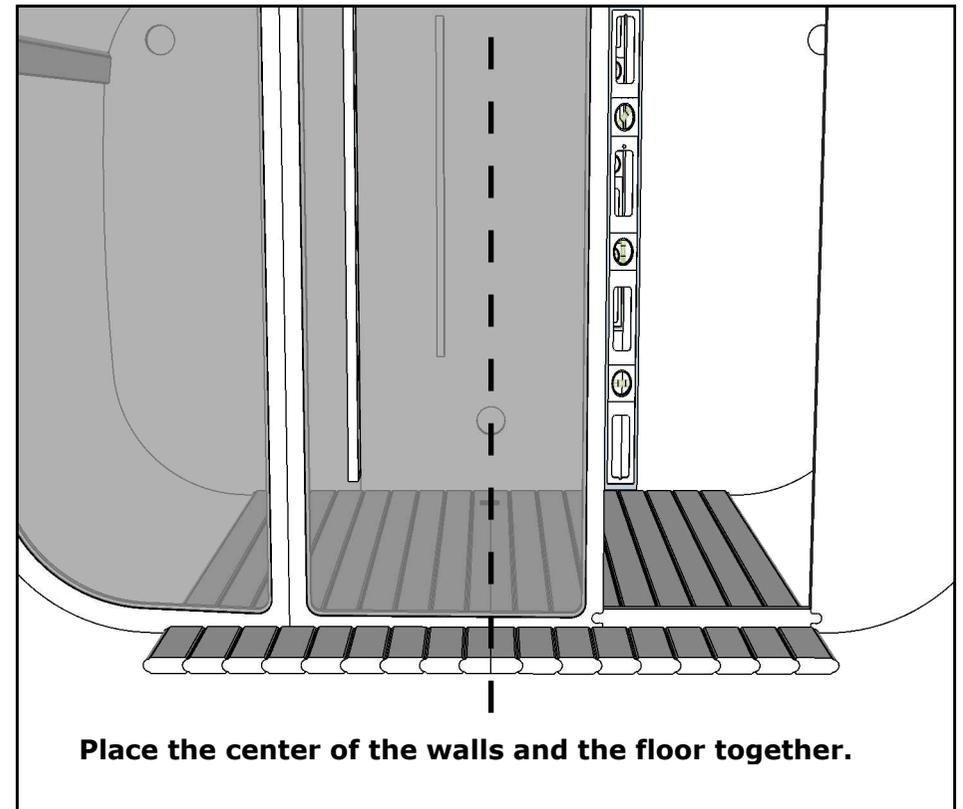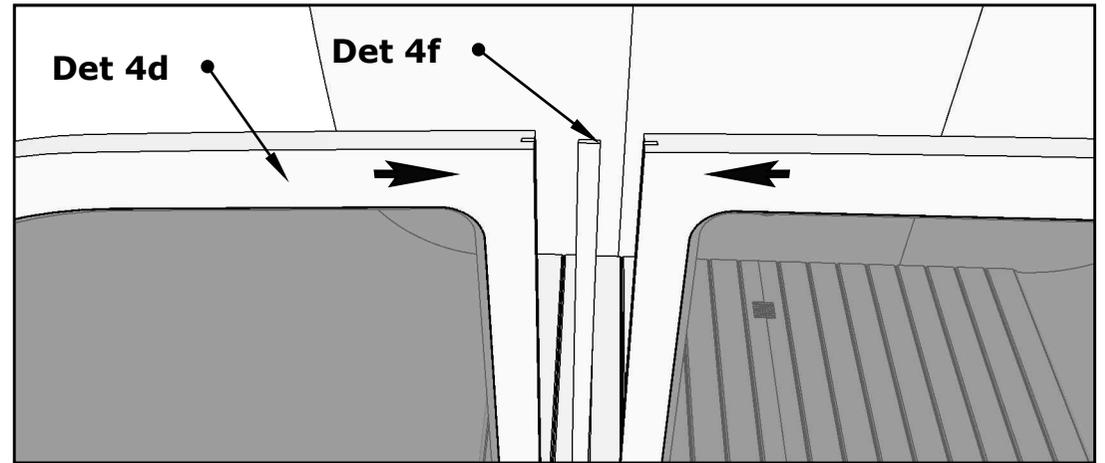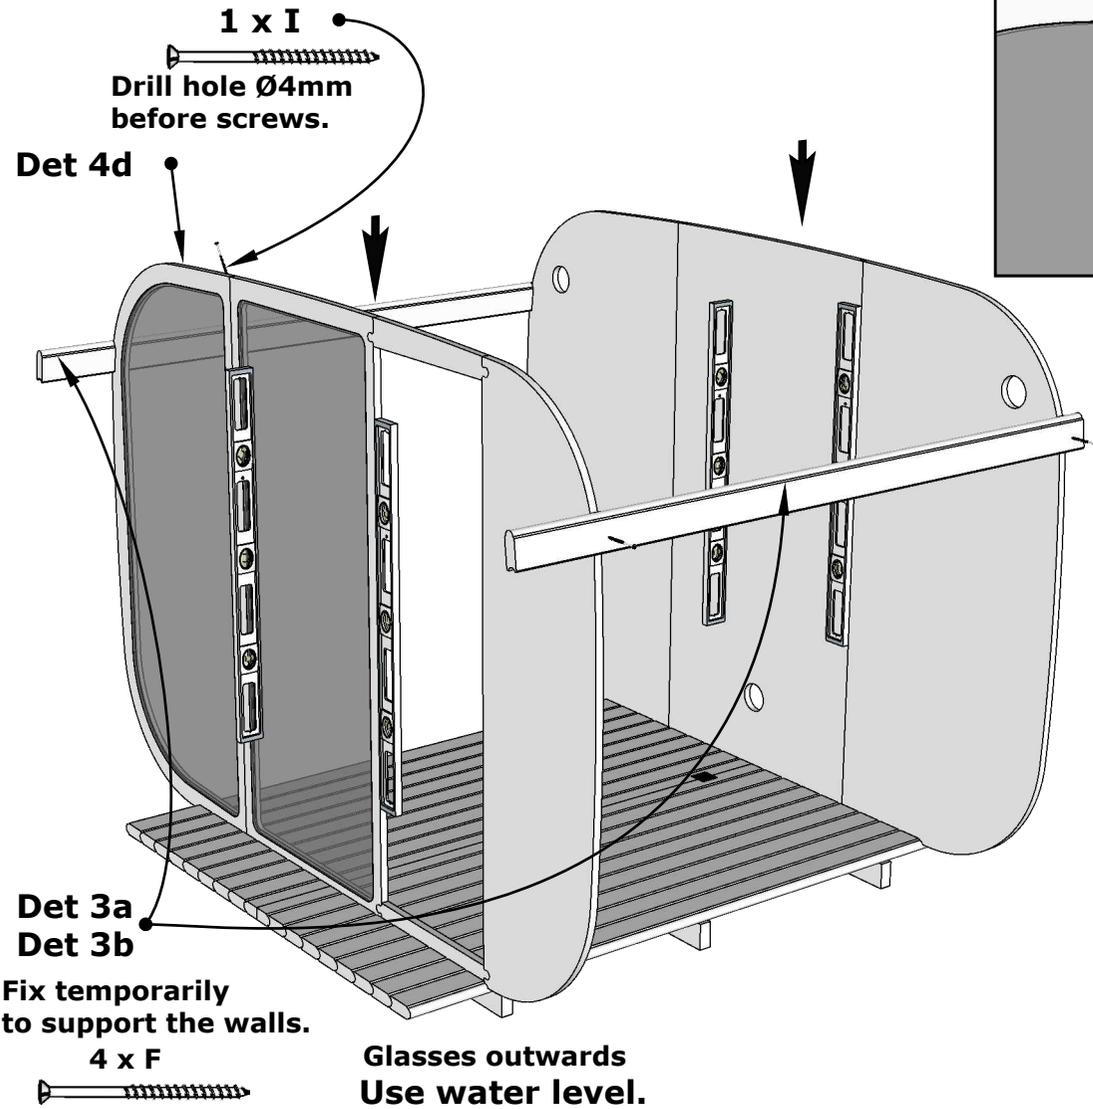

Luxe 3 2 room




Remove

Screw in the screws at an angle.



I

34 x Det 3a


34 x Det 3b

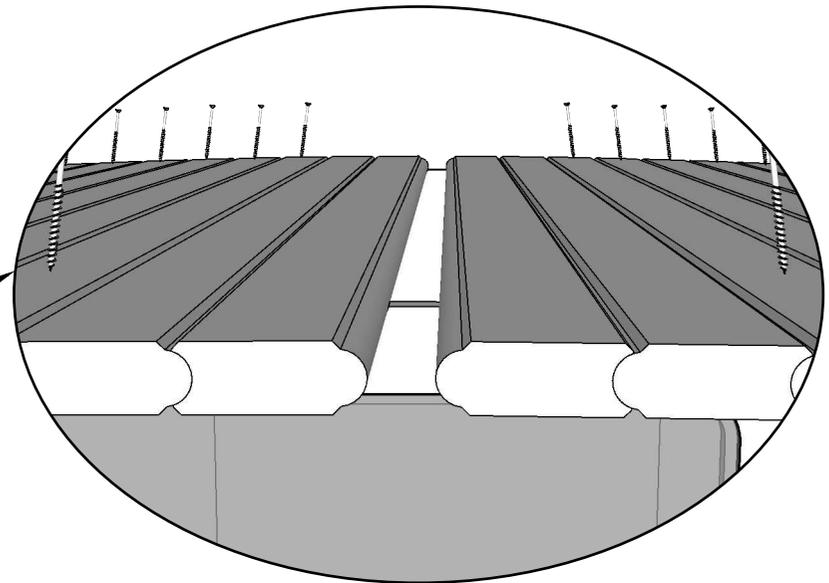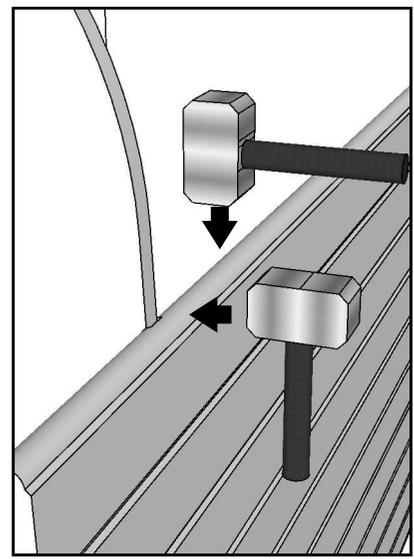

5

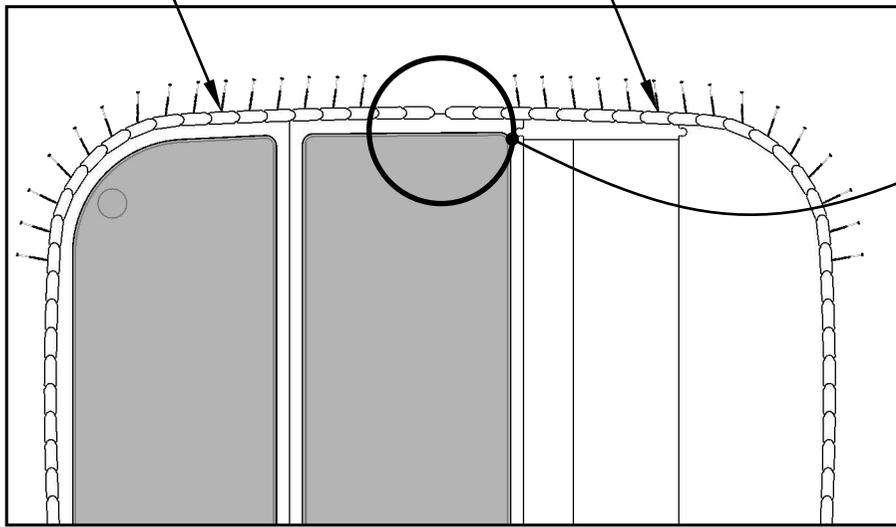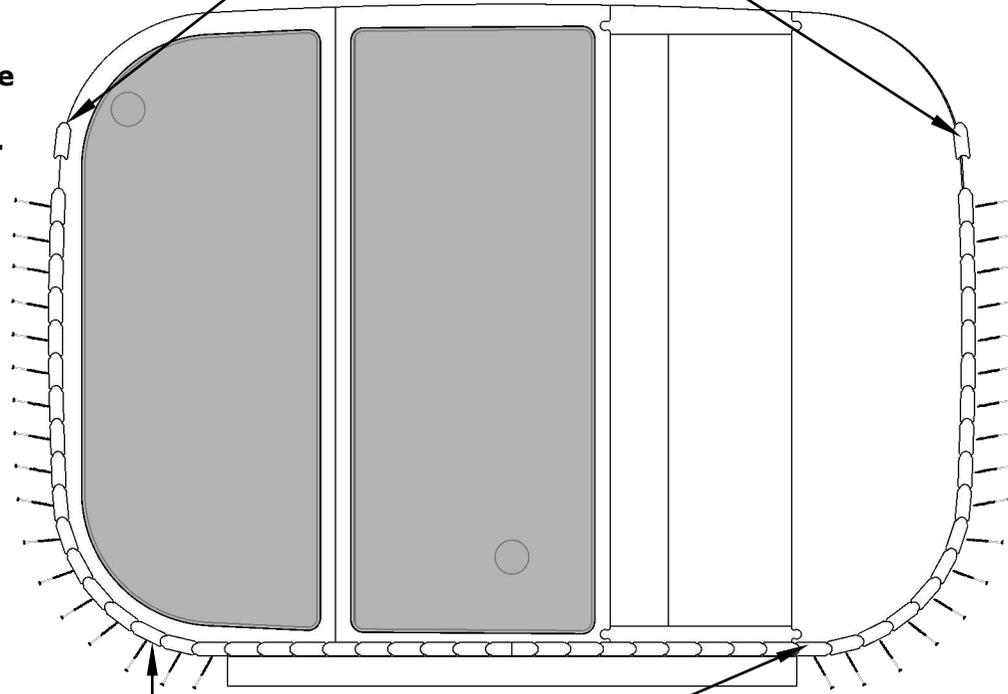


Luxe 3 2 room

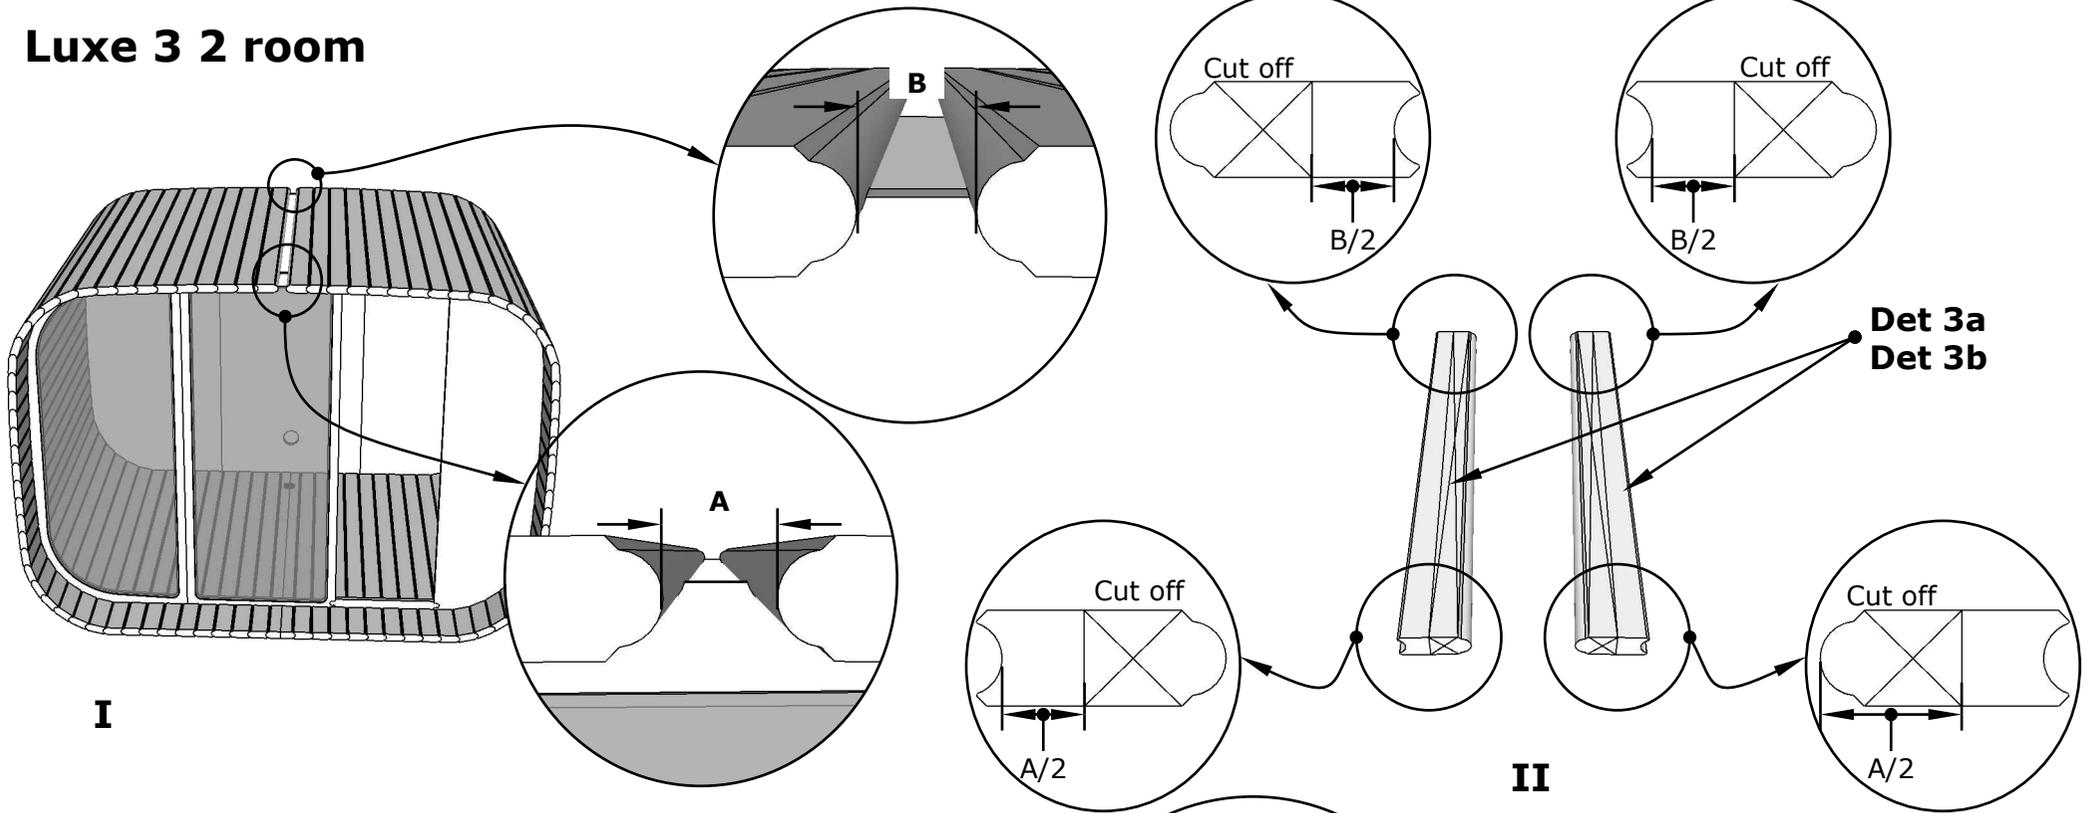


I


II

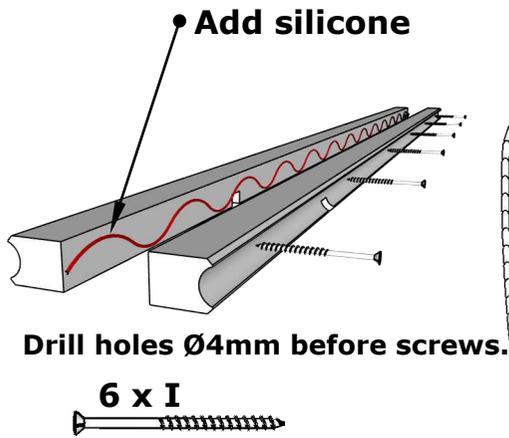


III

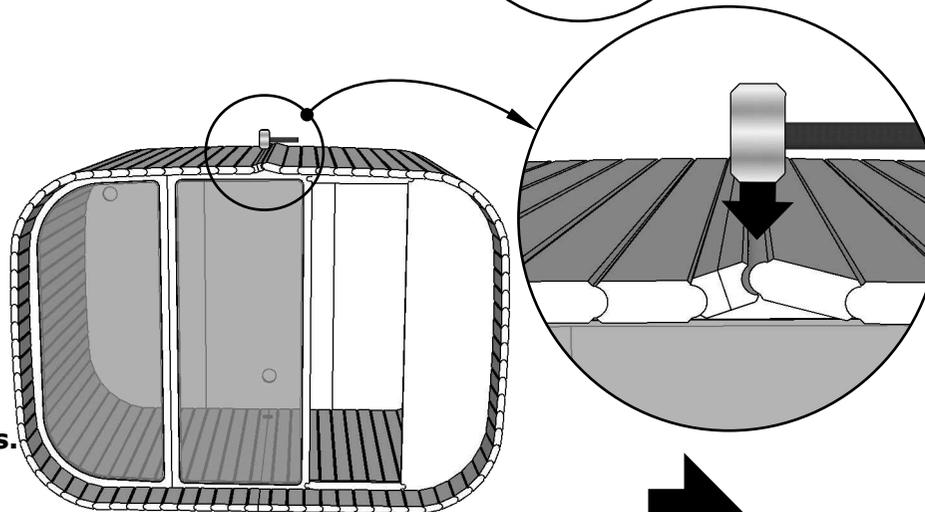


IV

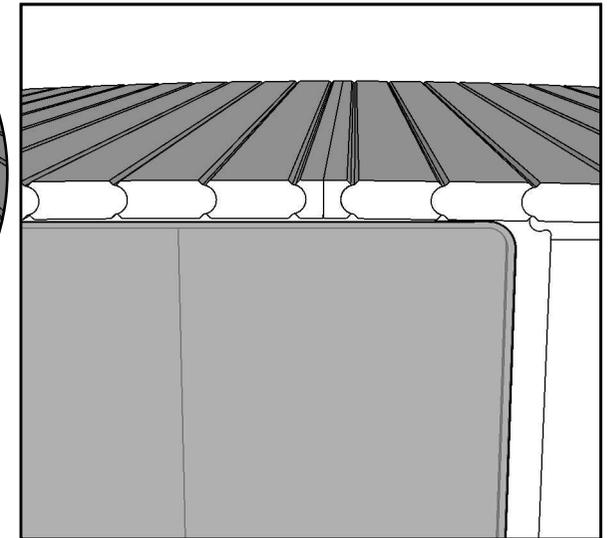


Luxe 3 2 room

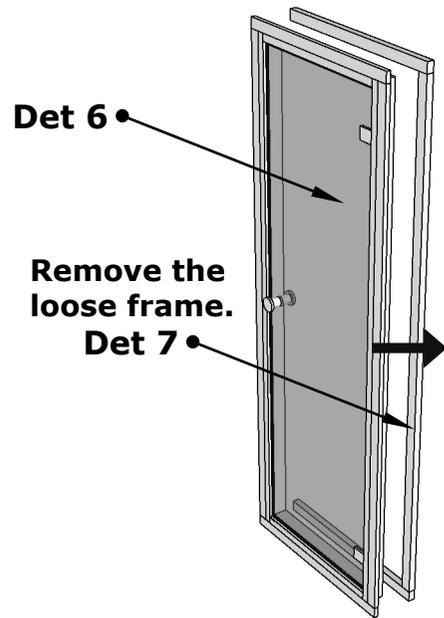

I

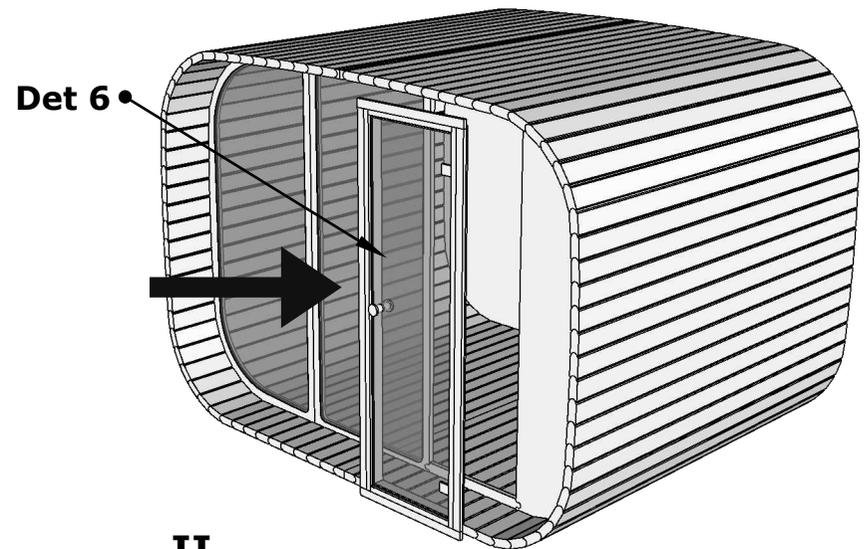


II

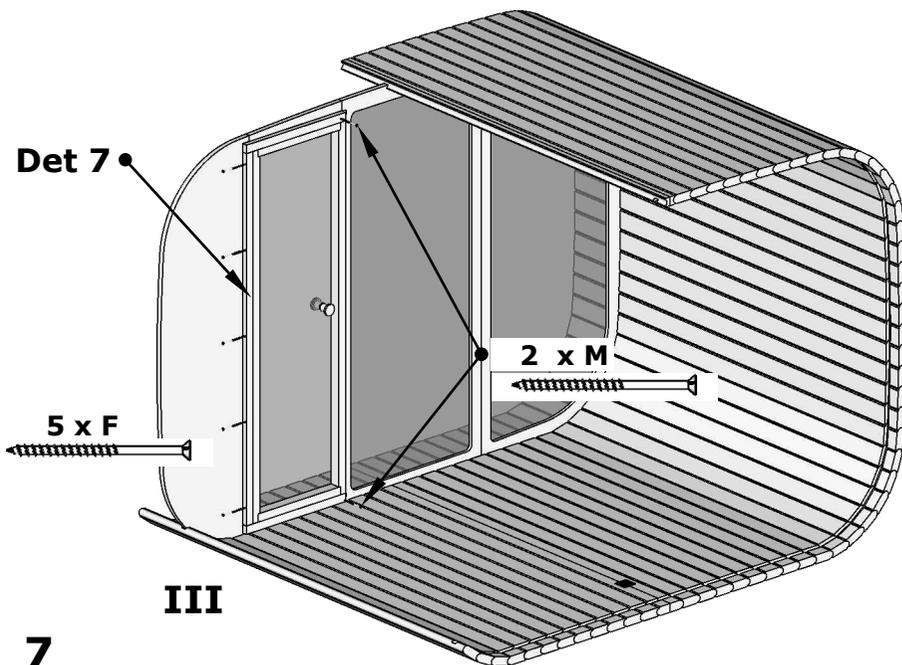

III



7

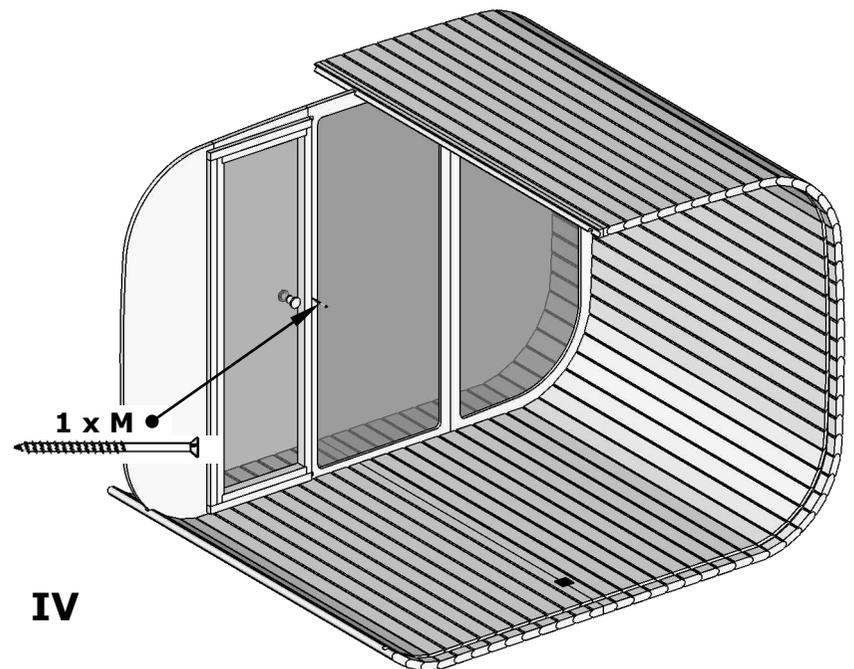

IV


Luxe 3 2 room

3 x Det 8

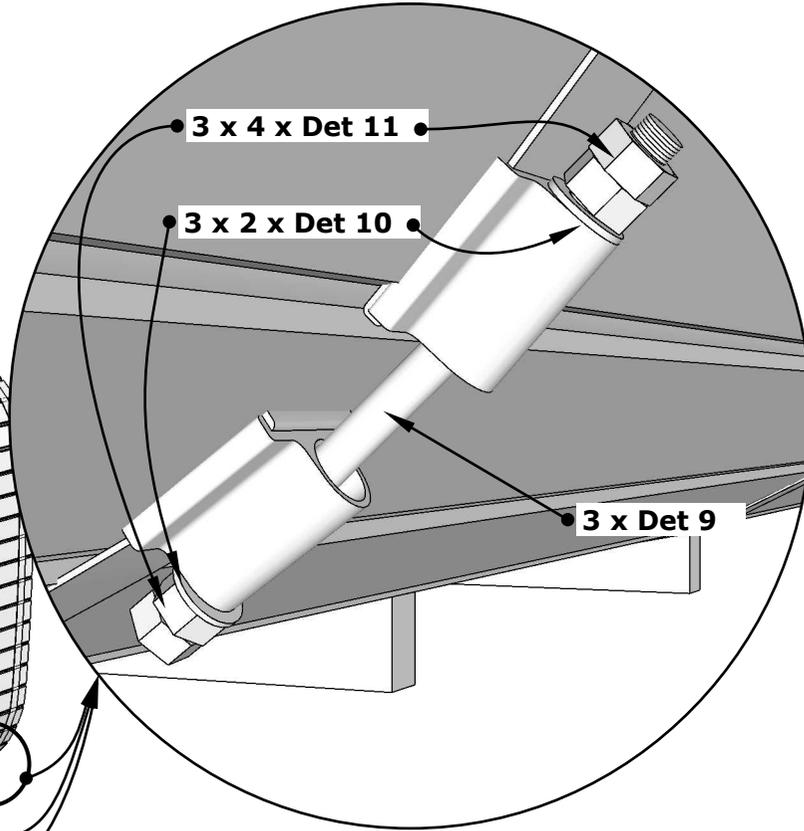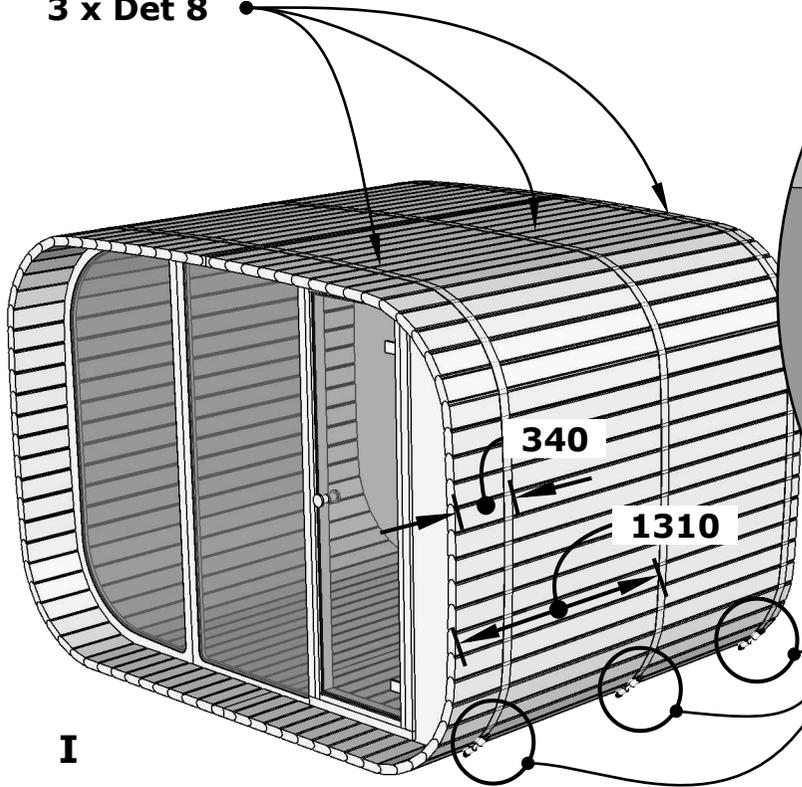


During assembly and retightening the threaded rods, use oil (Würth HSP 1400 or similar) to avoid "cold welding" and it is also easier tightening.

I

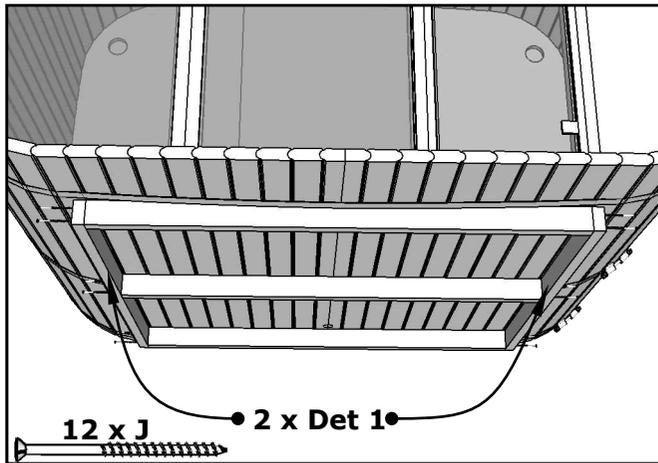


II

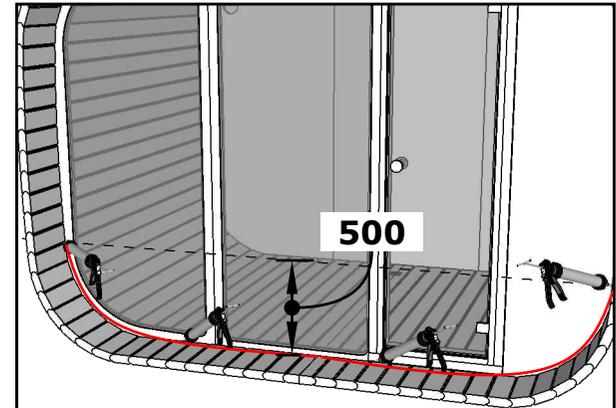


III Add waterproof silicone to the walls on both sides (in- and outside).

Luxe 3 2 room


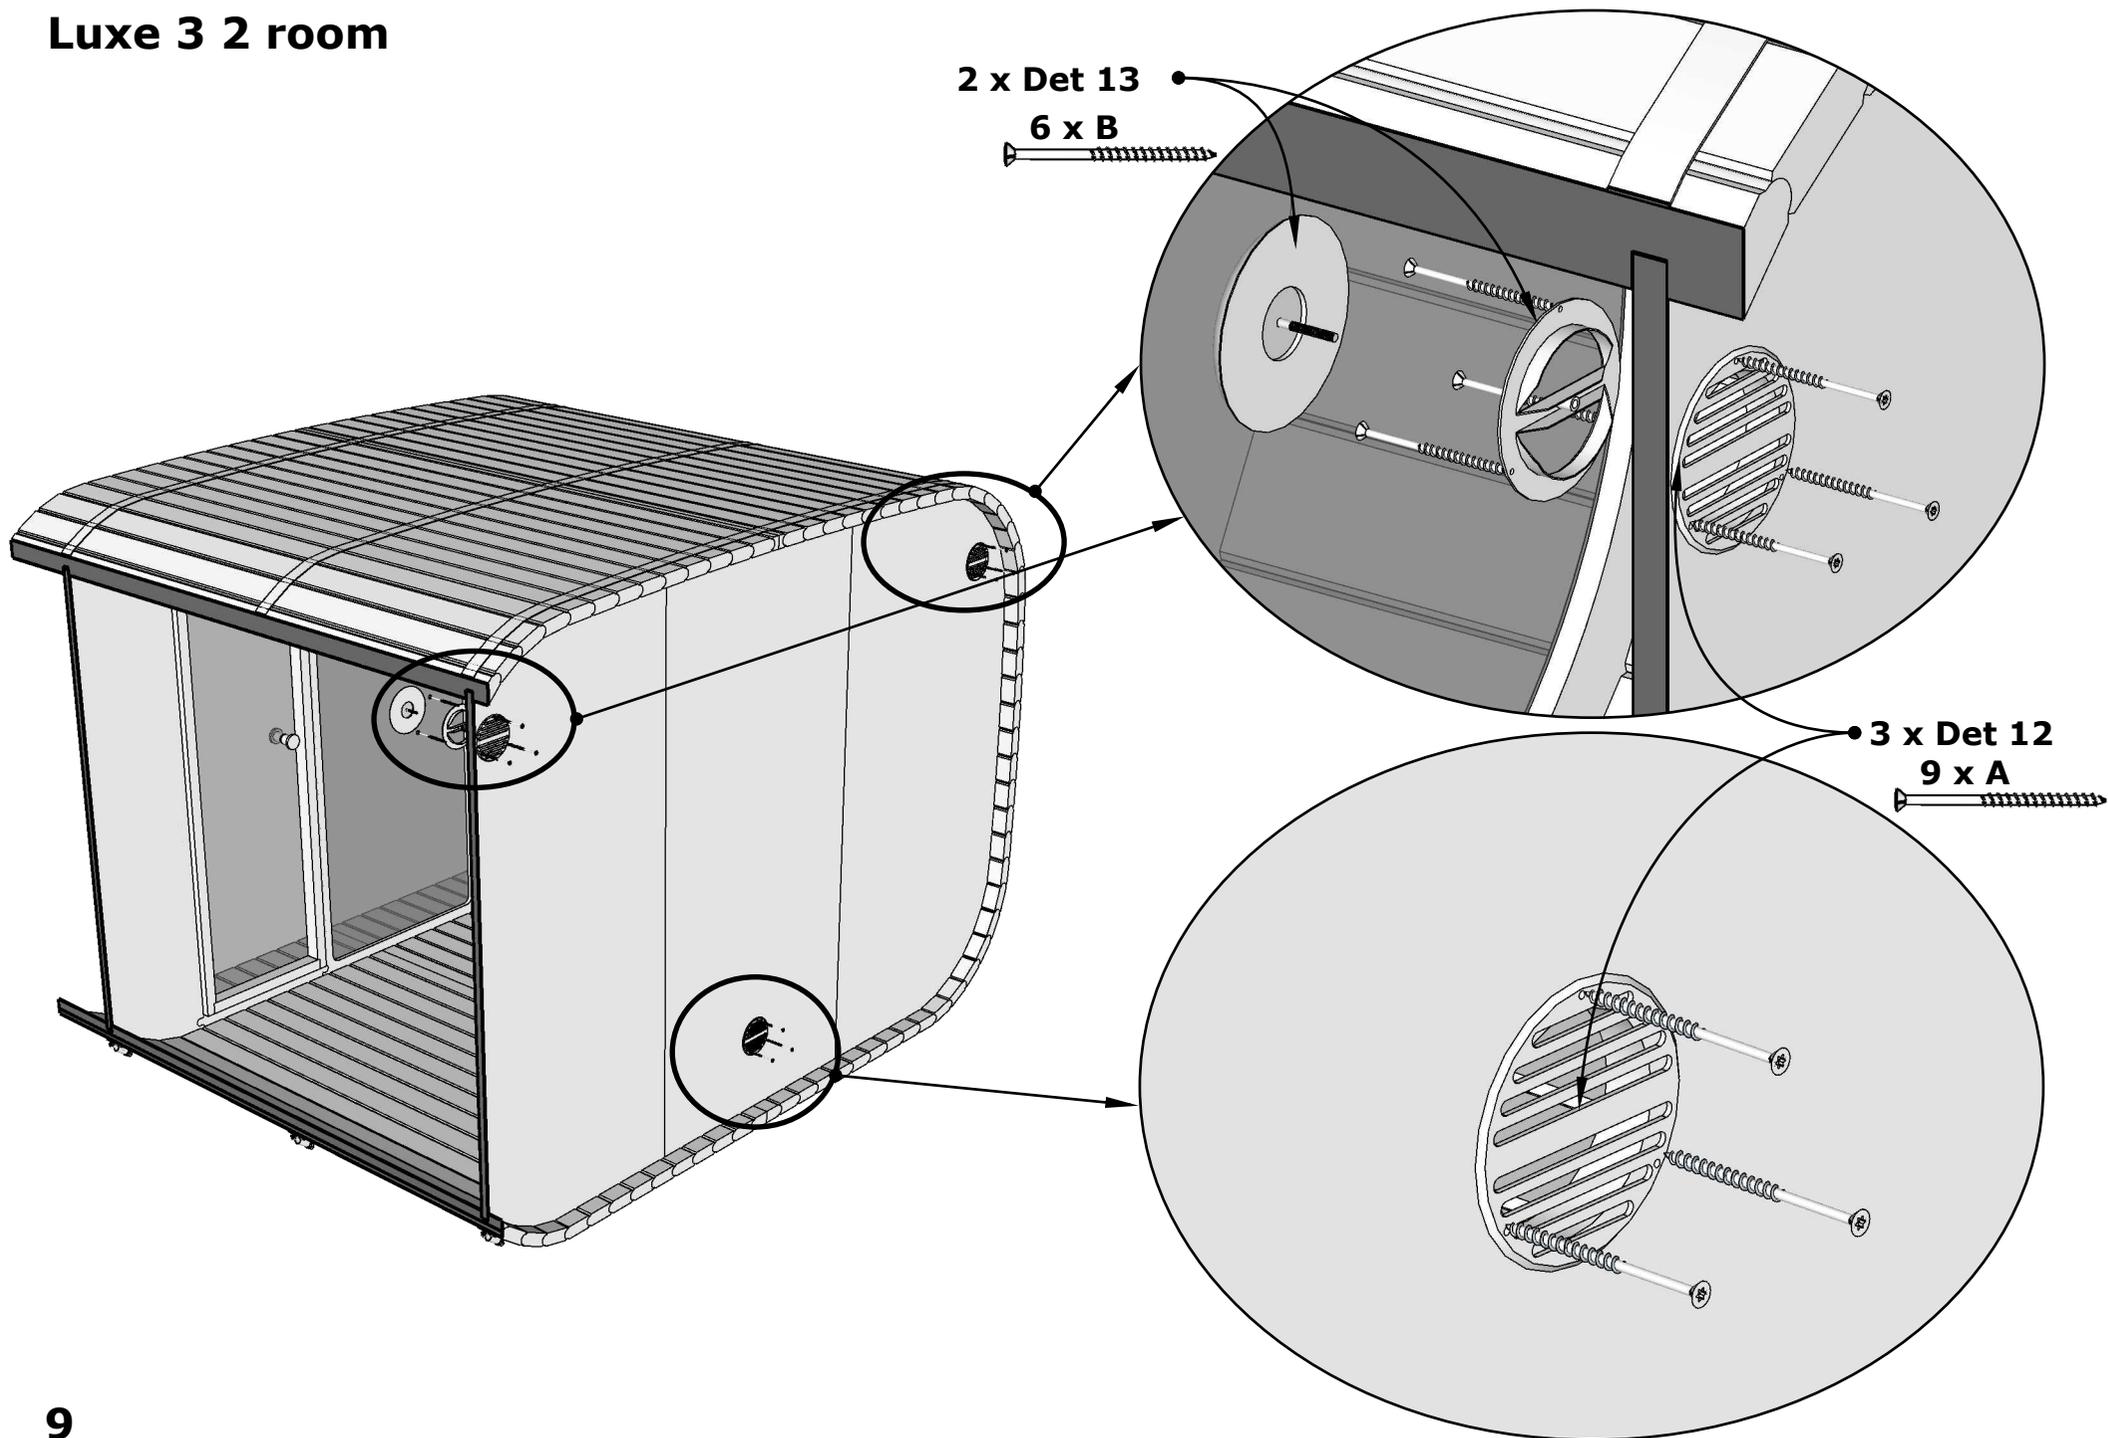


Luxe 3 2 room

Use water level

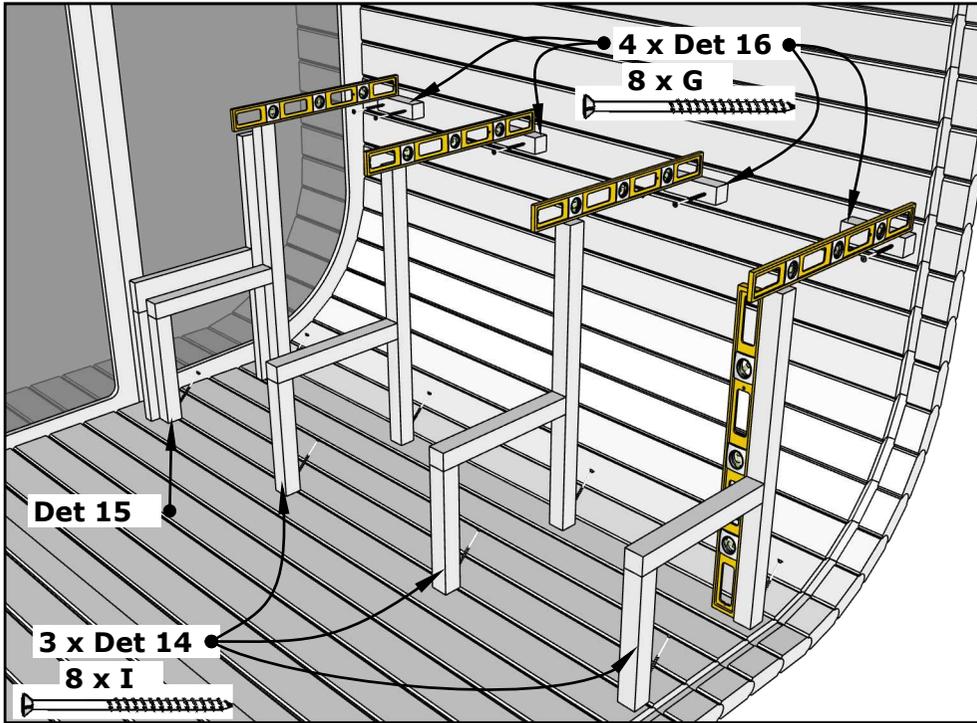


I Drill holes 40mm before screws.

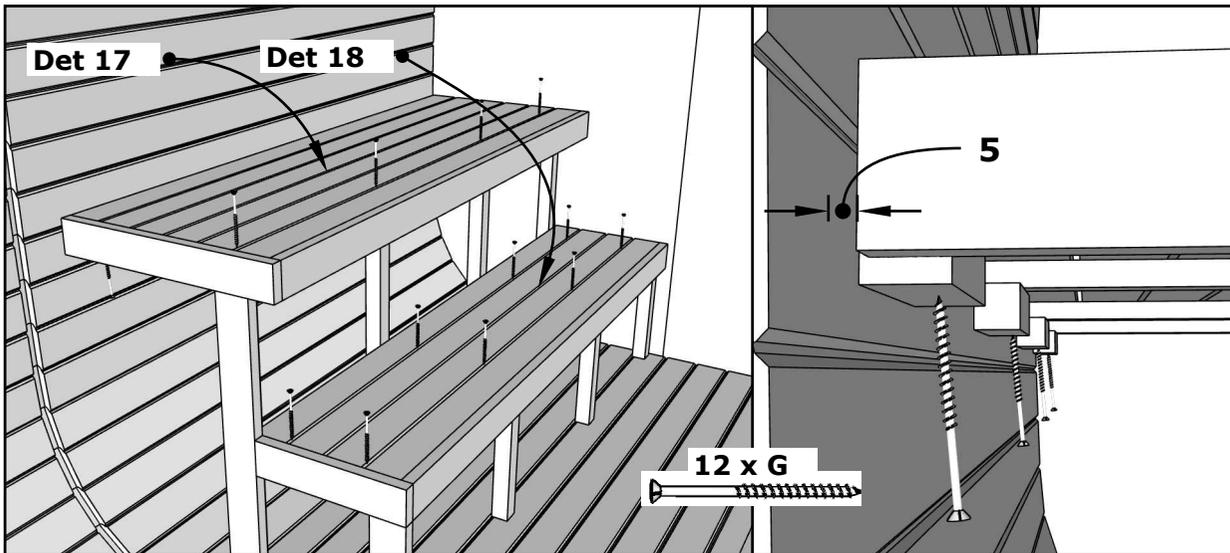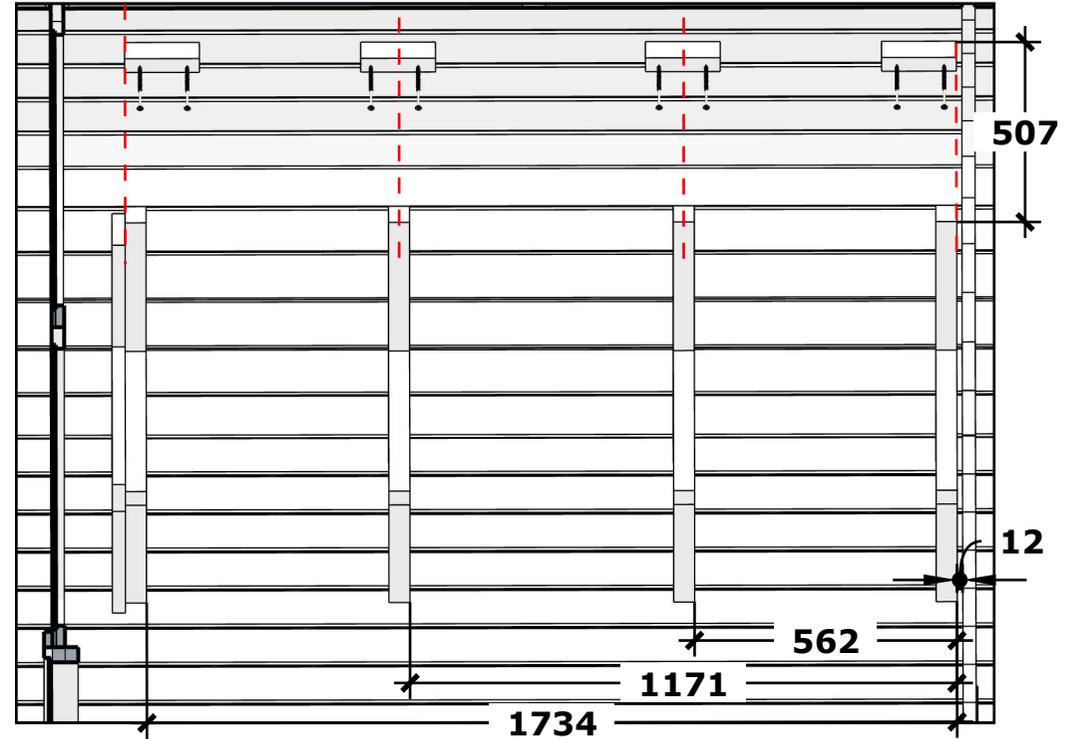

10 II


Drill holes 40mm before screws.

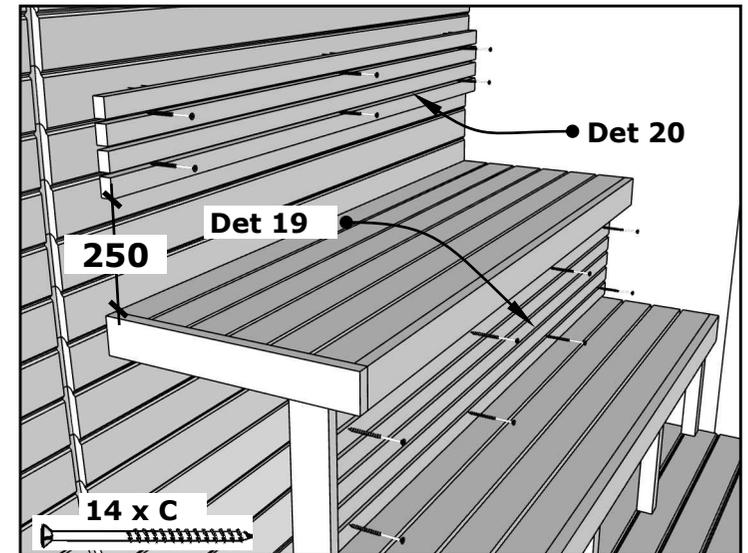


III

Luxe 3 2 room

Use water level


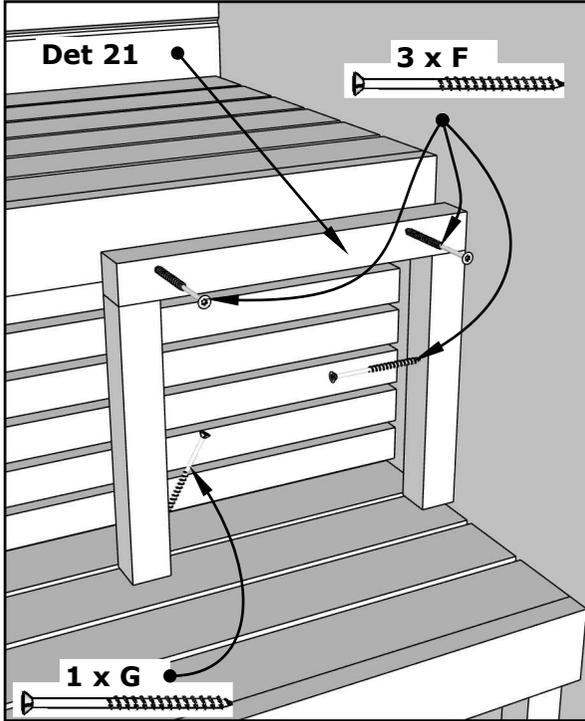


I


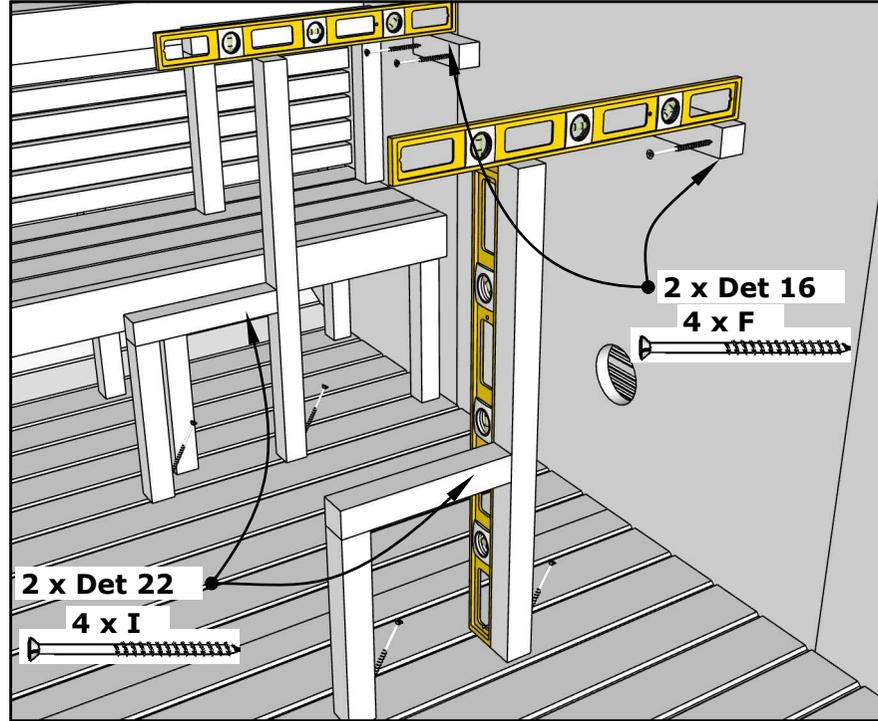


II

Drill holes 40mm before screws.

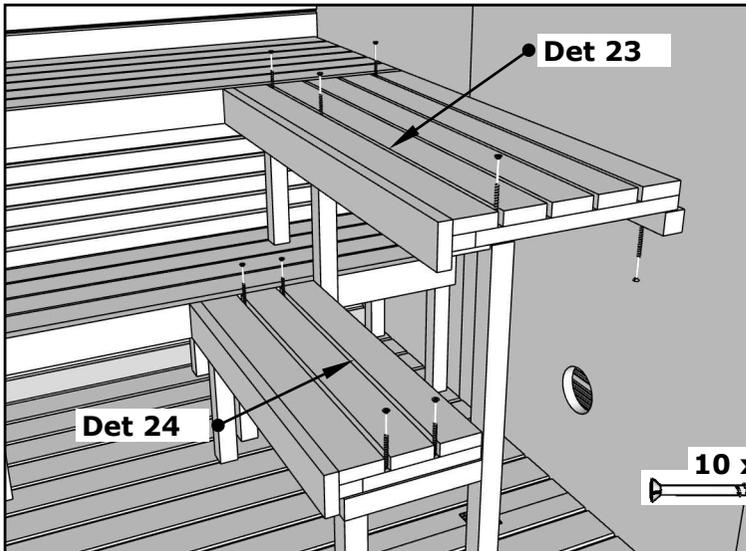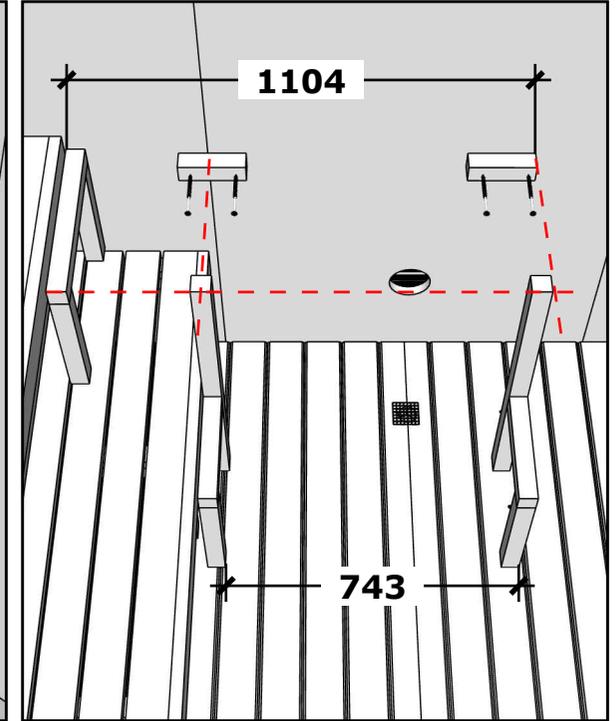


11 III




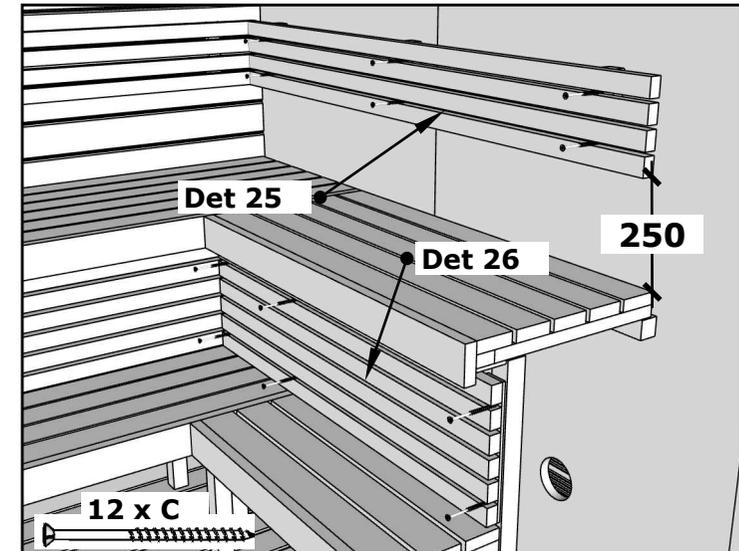
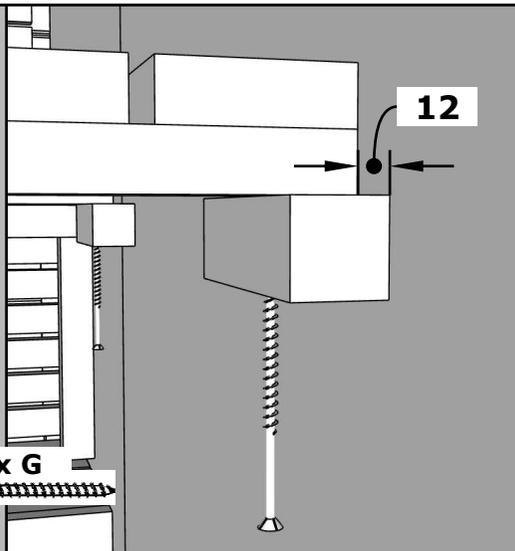


IV

Luxe 3 2 room


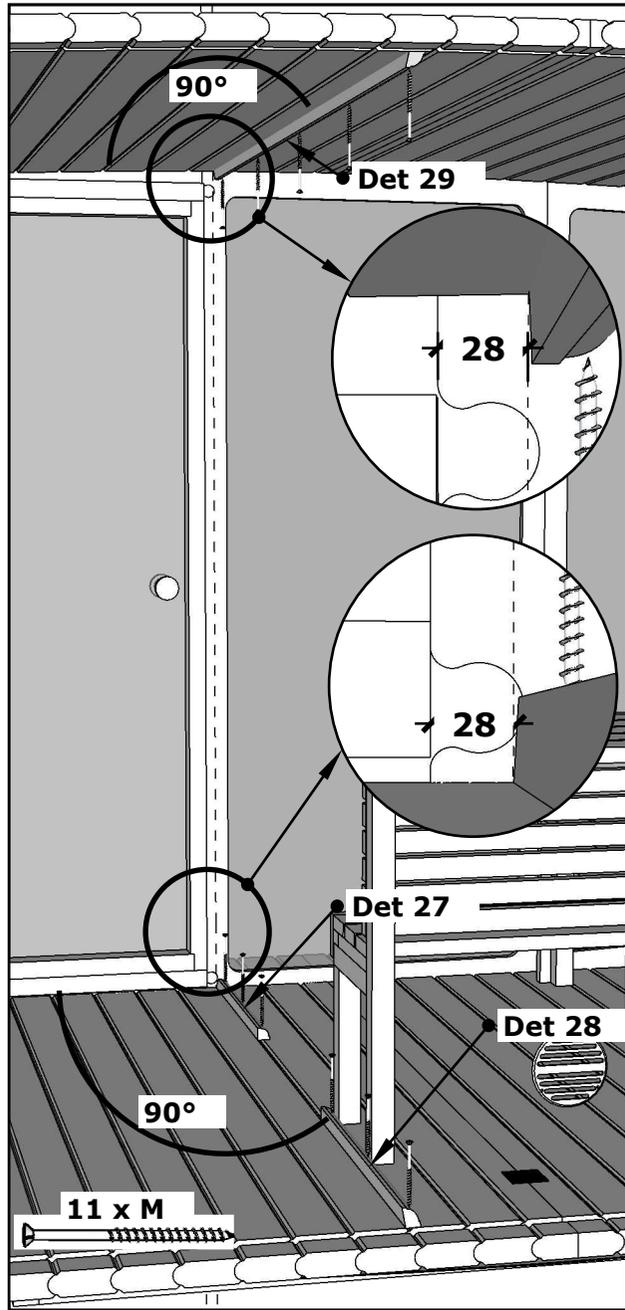


12 I

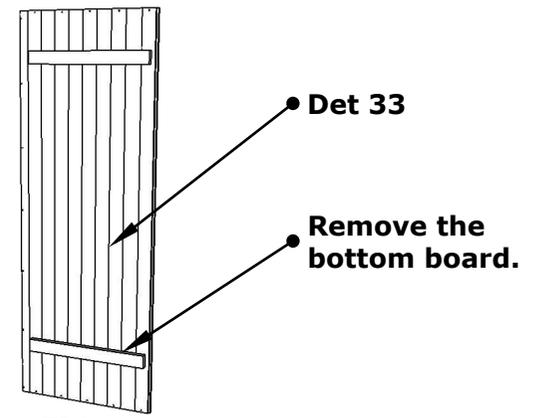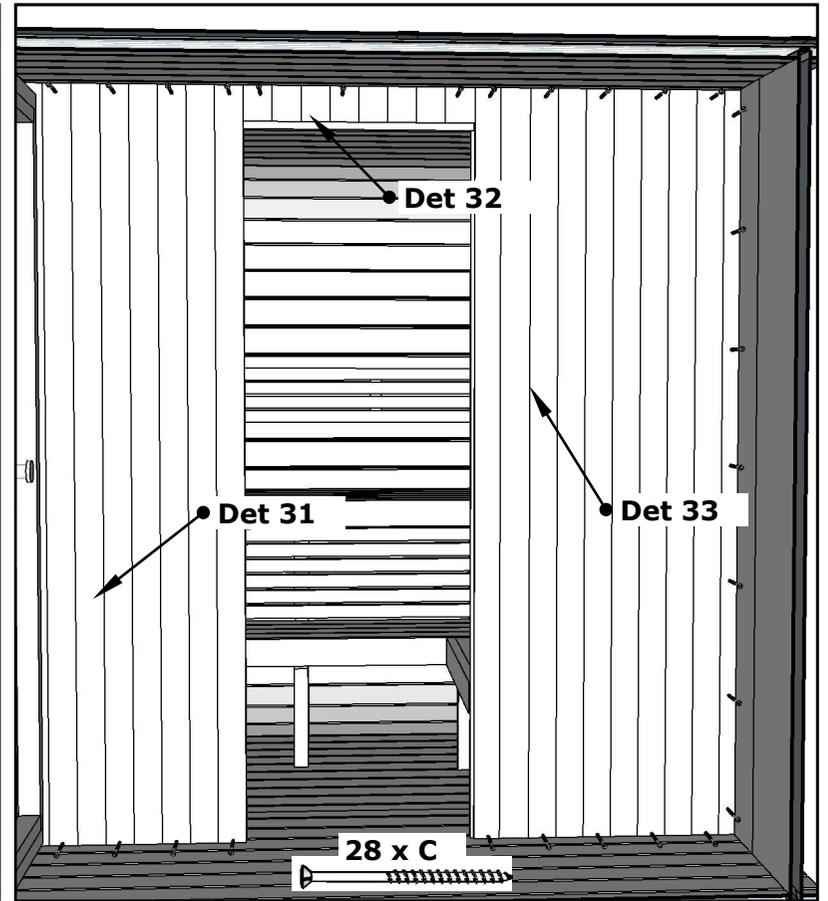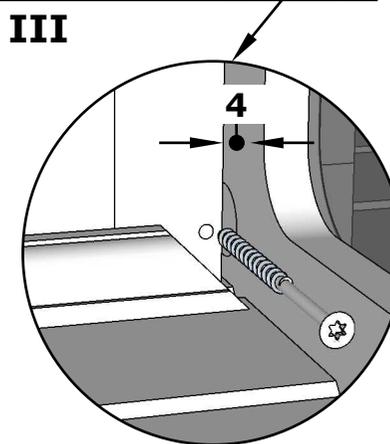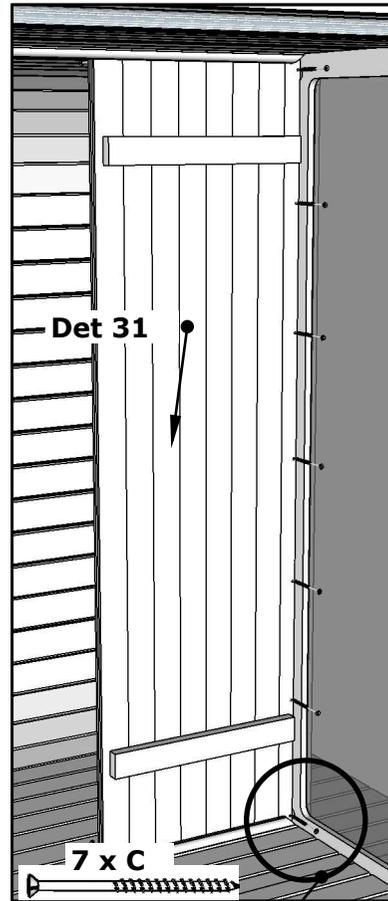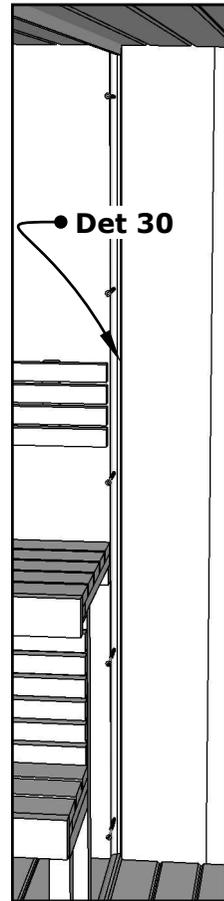


IV


Luxe 3 2 room

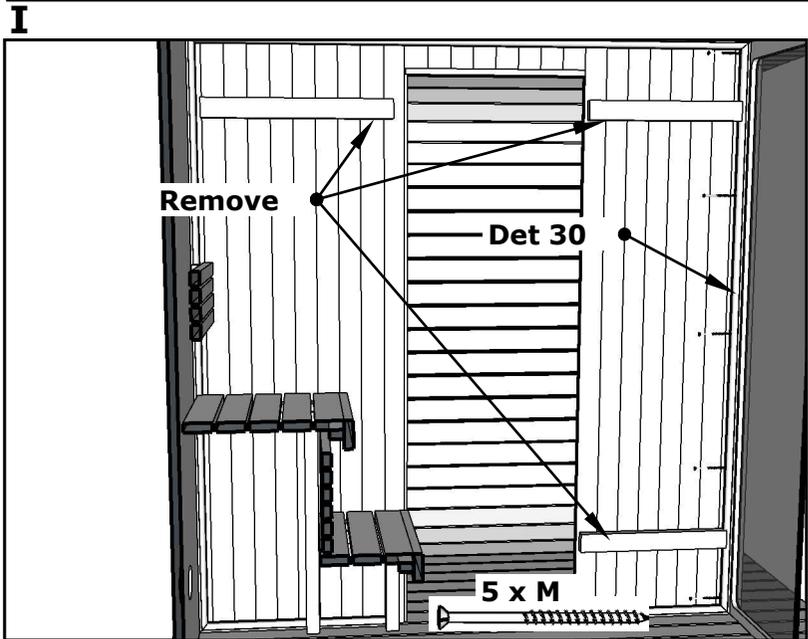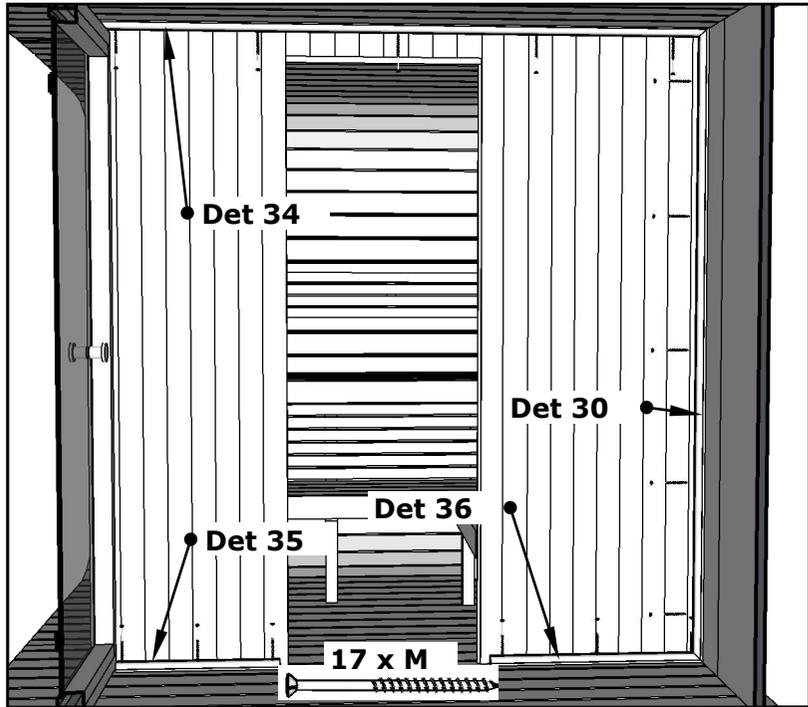


13 II

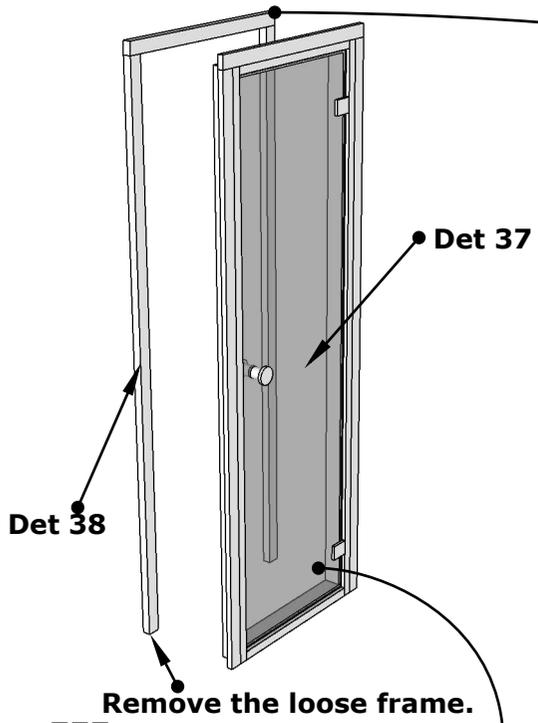


III

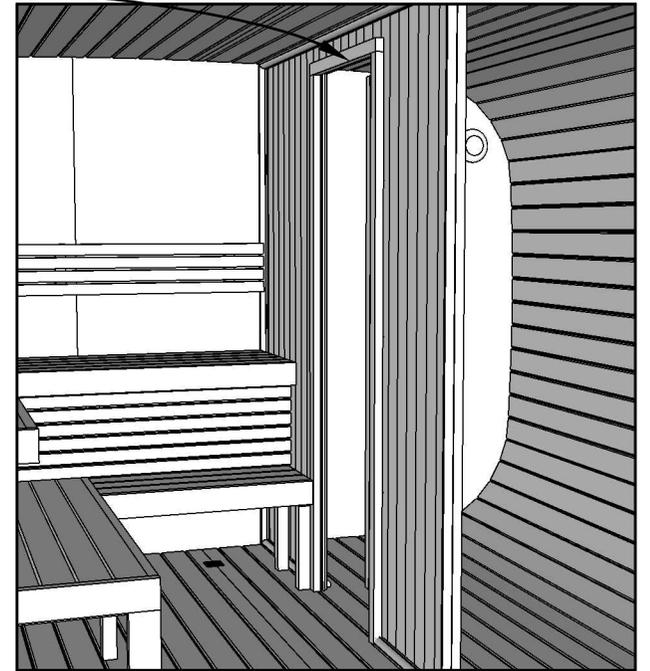

IV

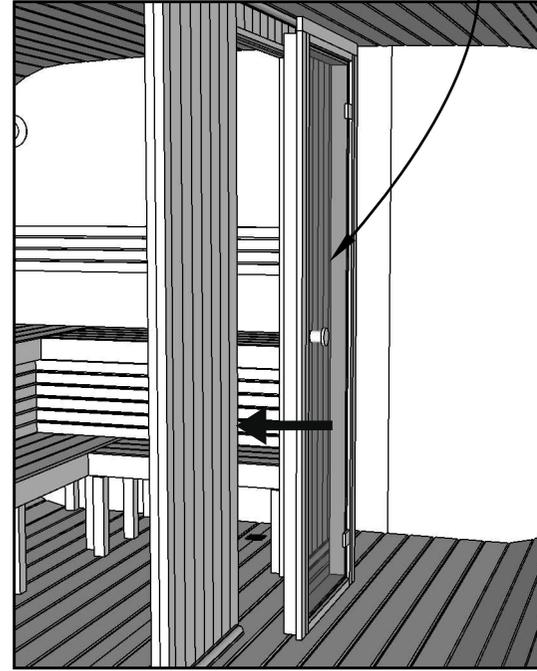


V

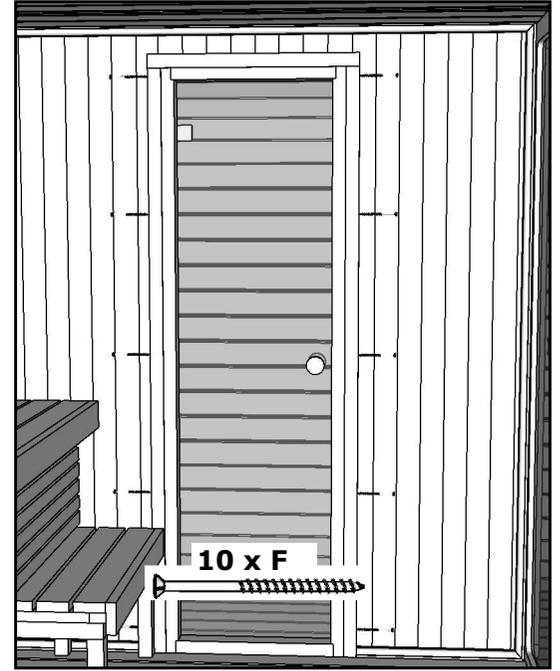


VI


Luxe 3 2 room

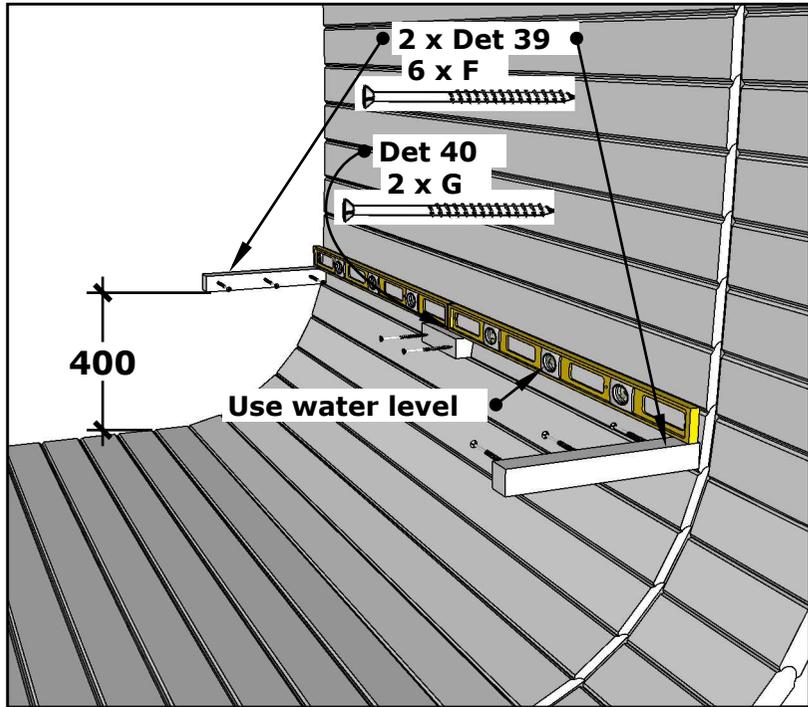


I

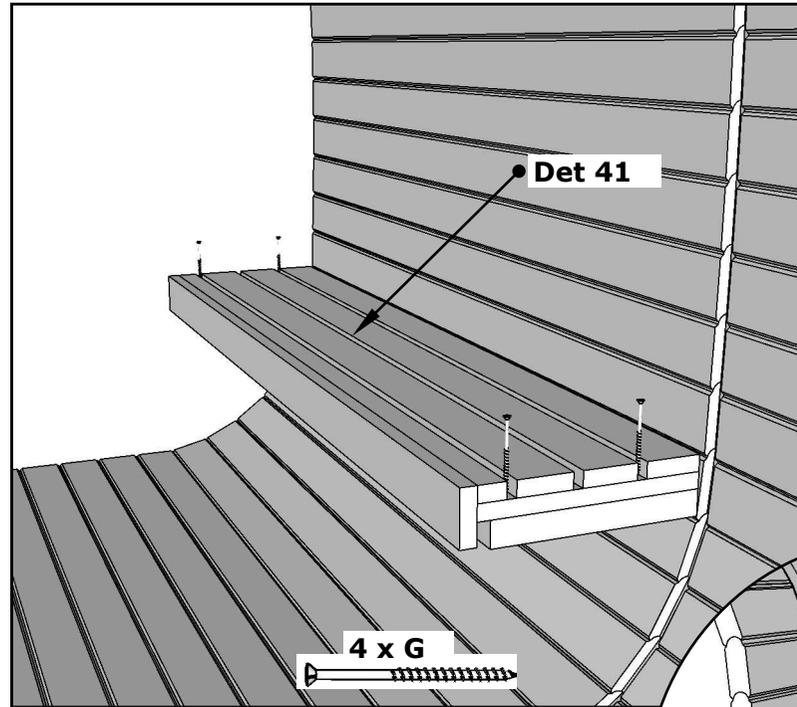

II

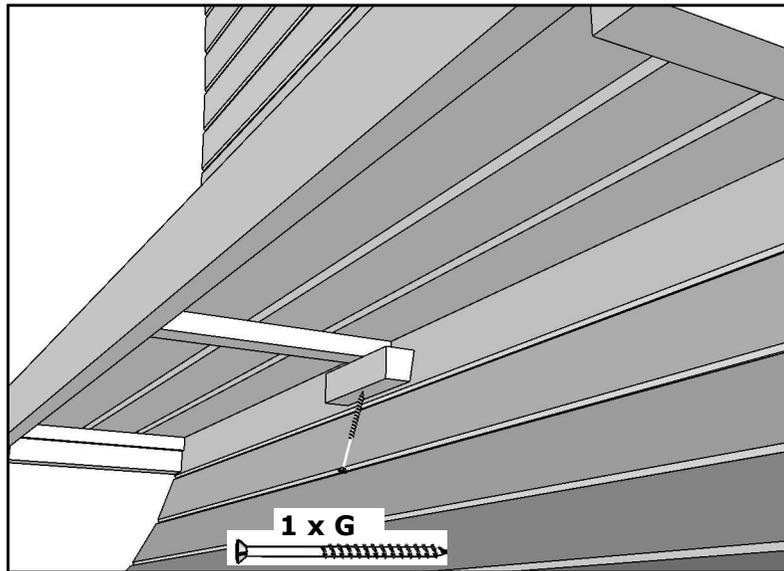


14 III

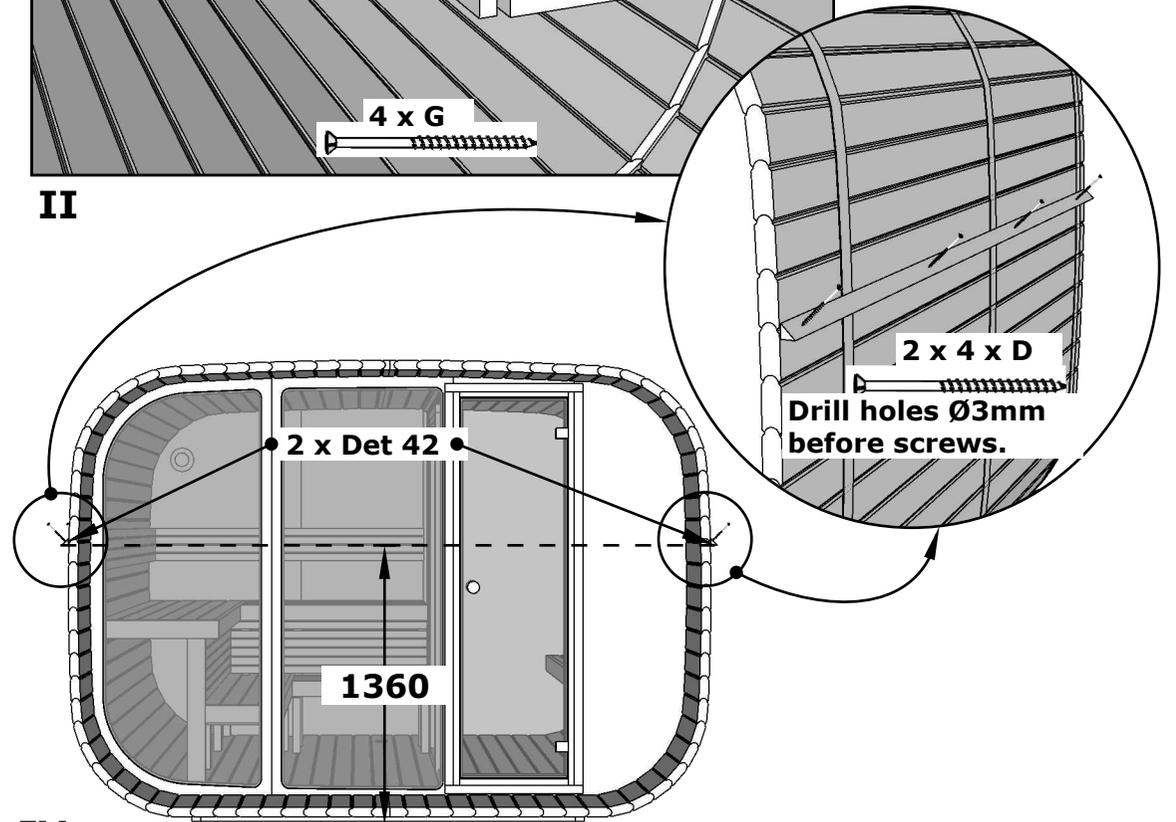

IV


Luxe 3 2 room

3 x Det 43



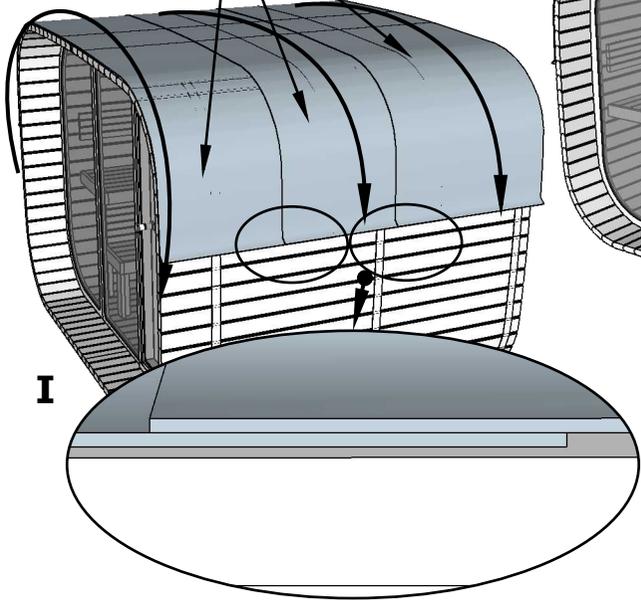


I

5 x Det 44

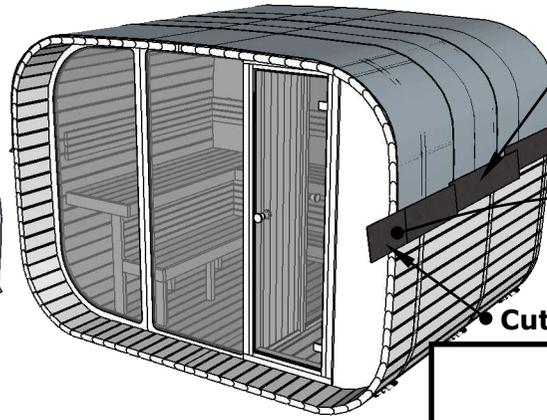


Cut and use on the other side.

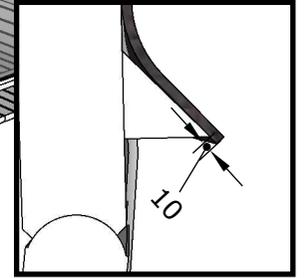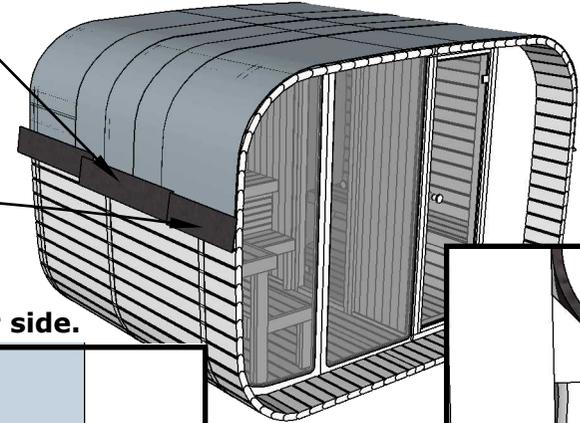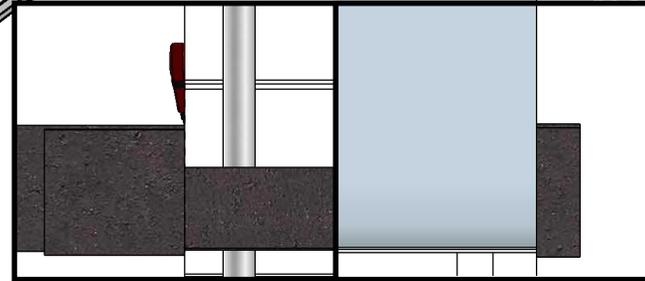

Check also shingles installation manual inside shingles packages.


Cut and use on the other side

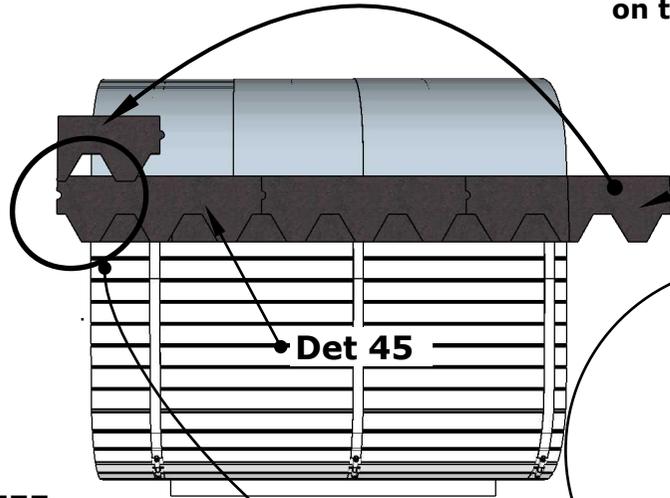


Det 45

III


15

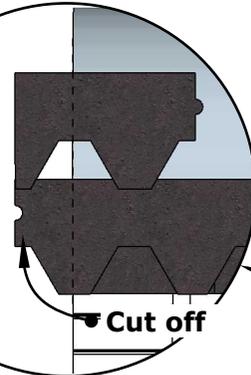

Cut off


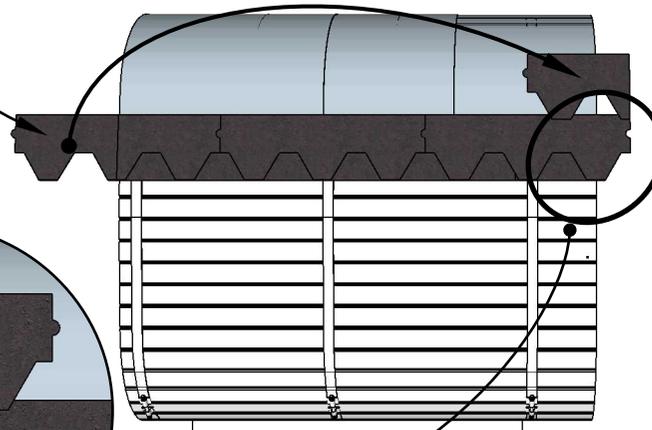


IV



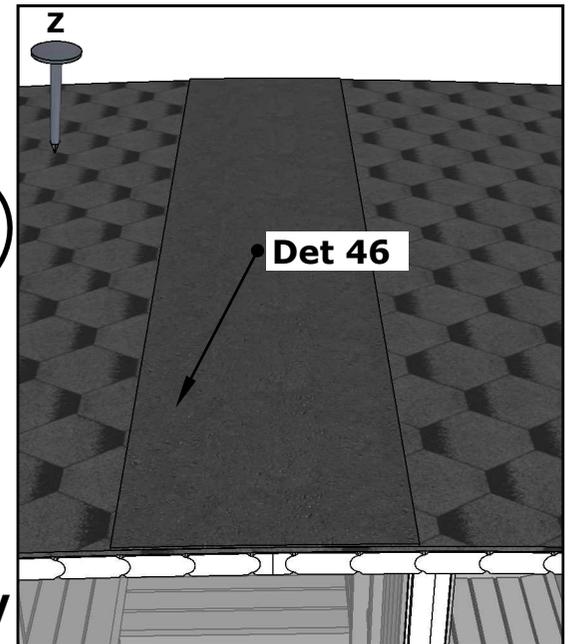


Det 46

Luxe 3 2 room

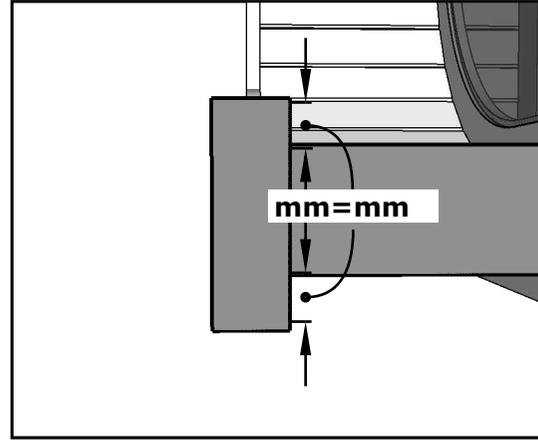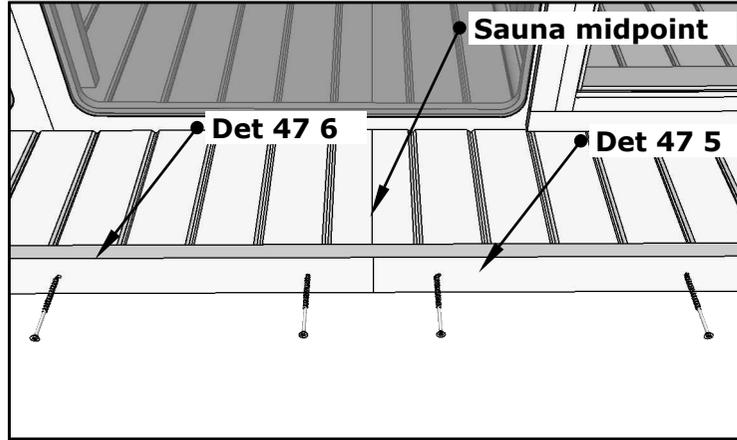

60 x D

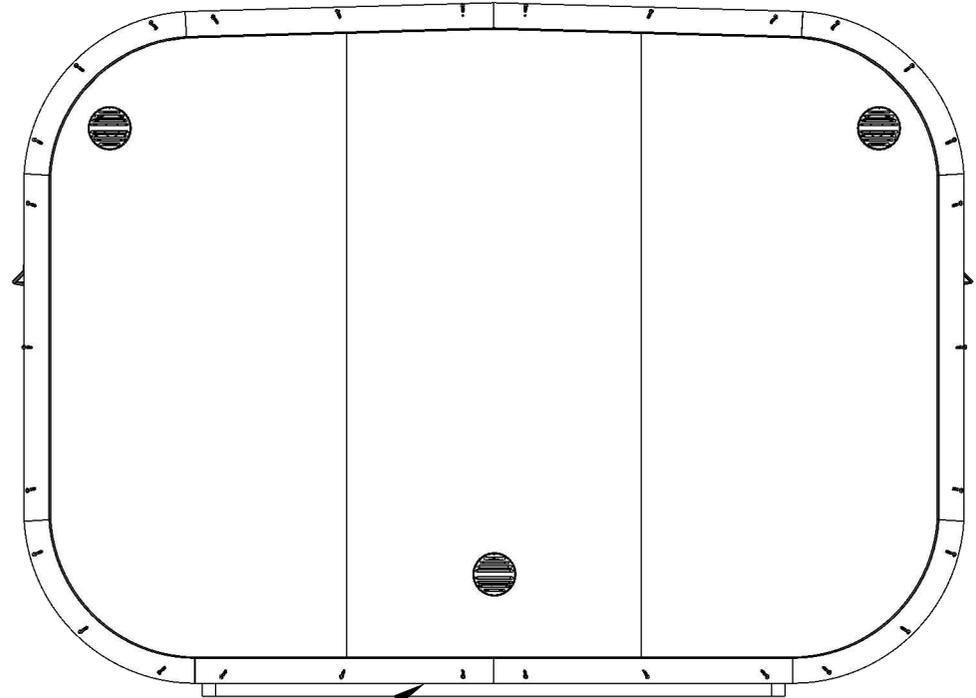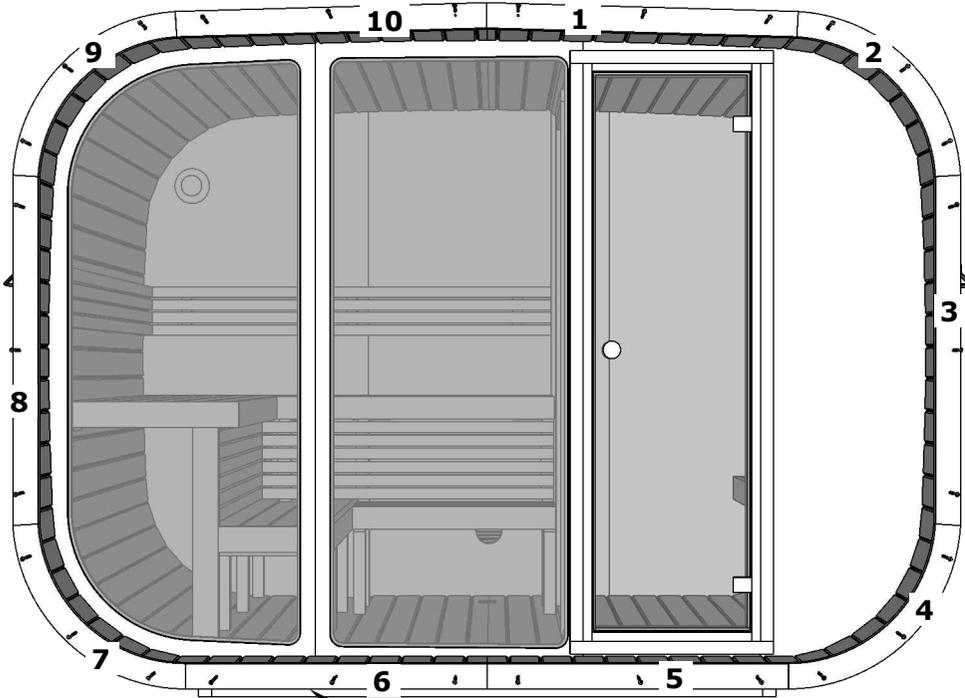

16

Start with Det 47 6