



Luxe 3

**Please read whole manual before You start.
All given measurements are in millimeters.**

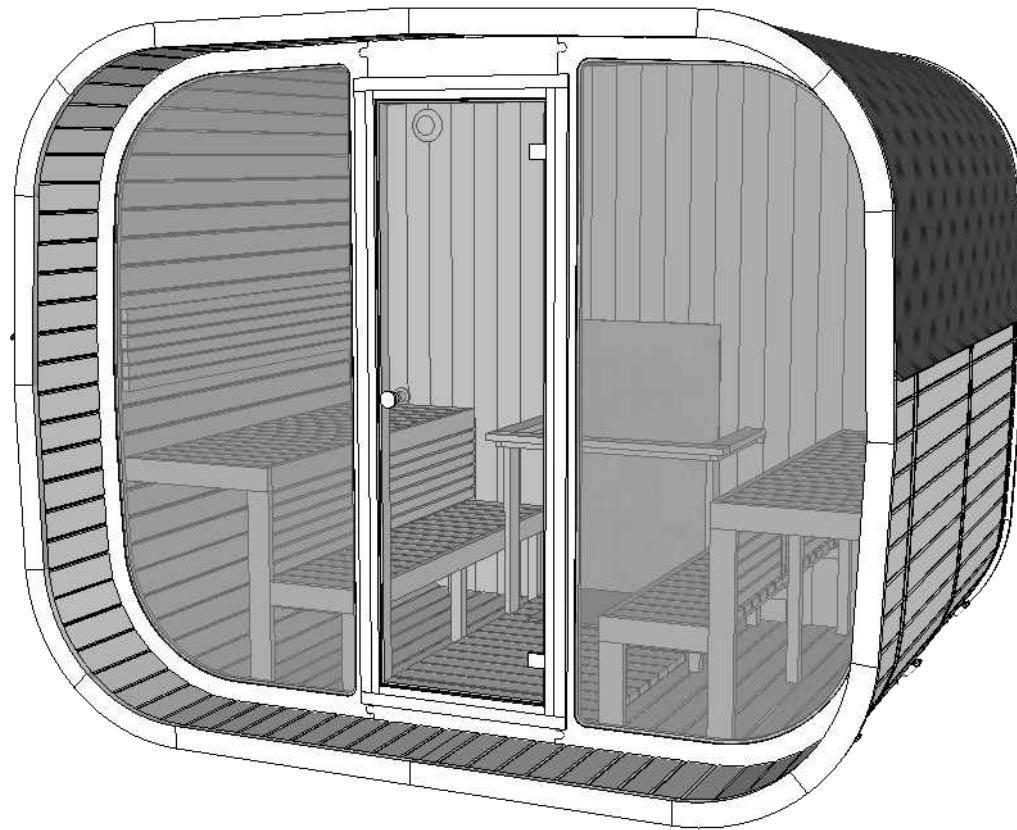



Luxe 3

Details list 1


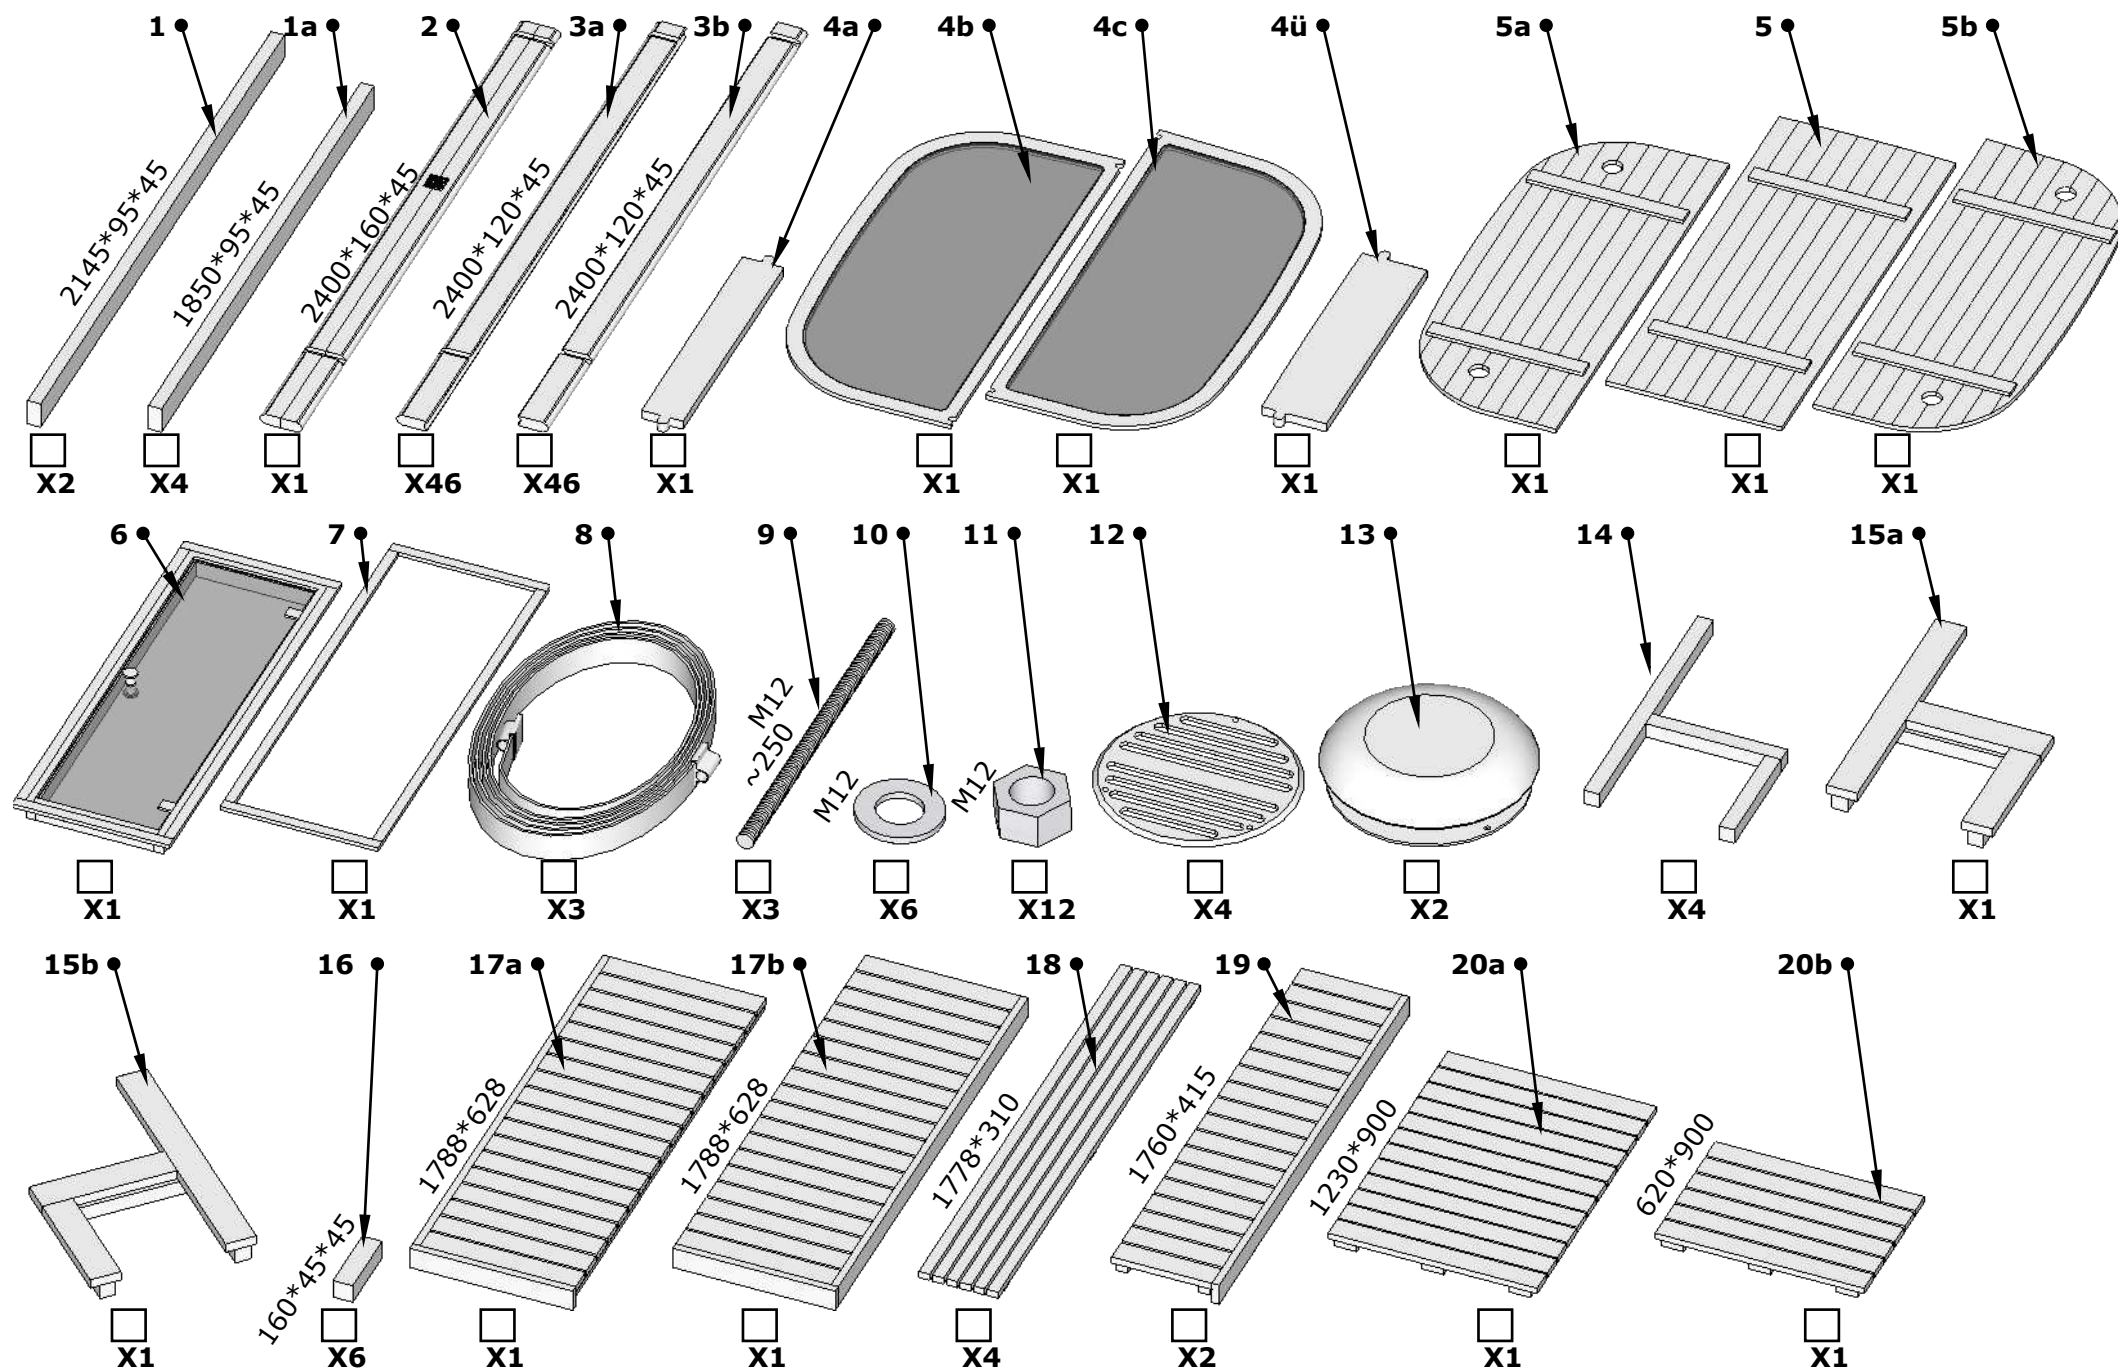


Luxe 3


Details list 2

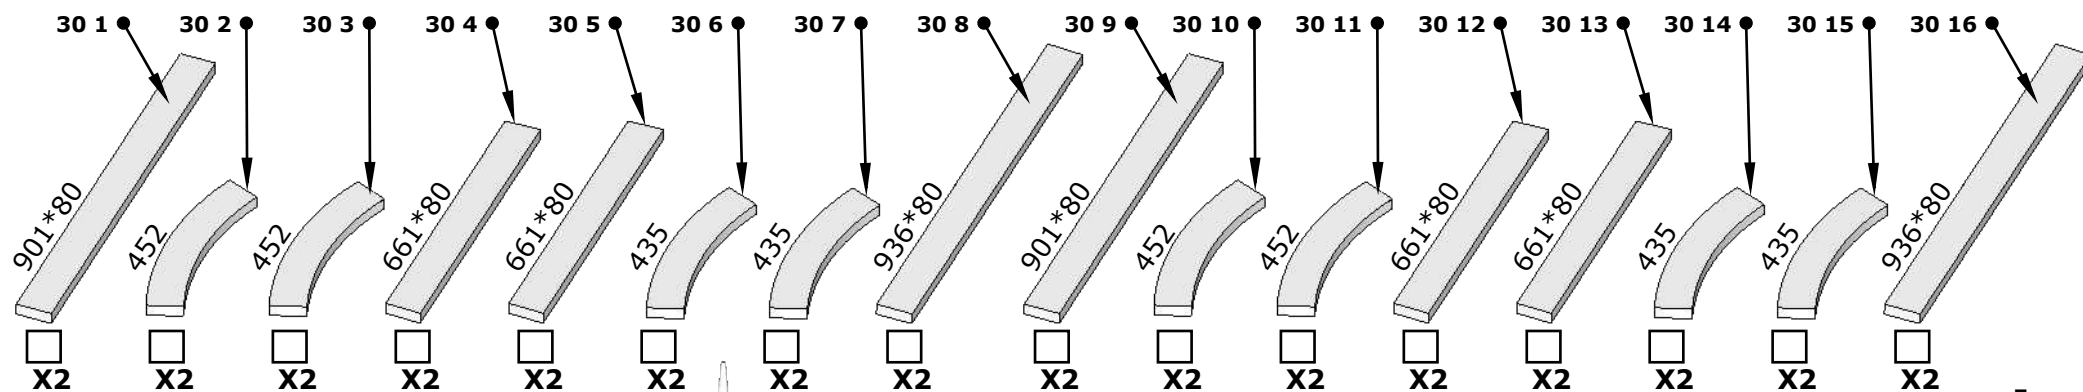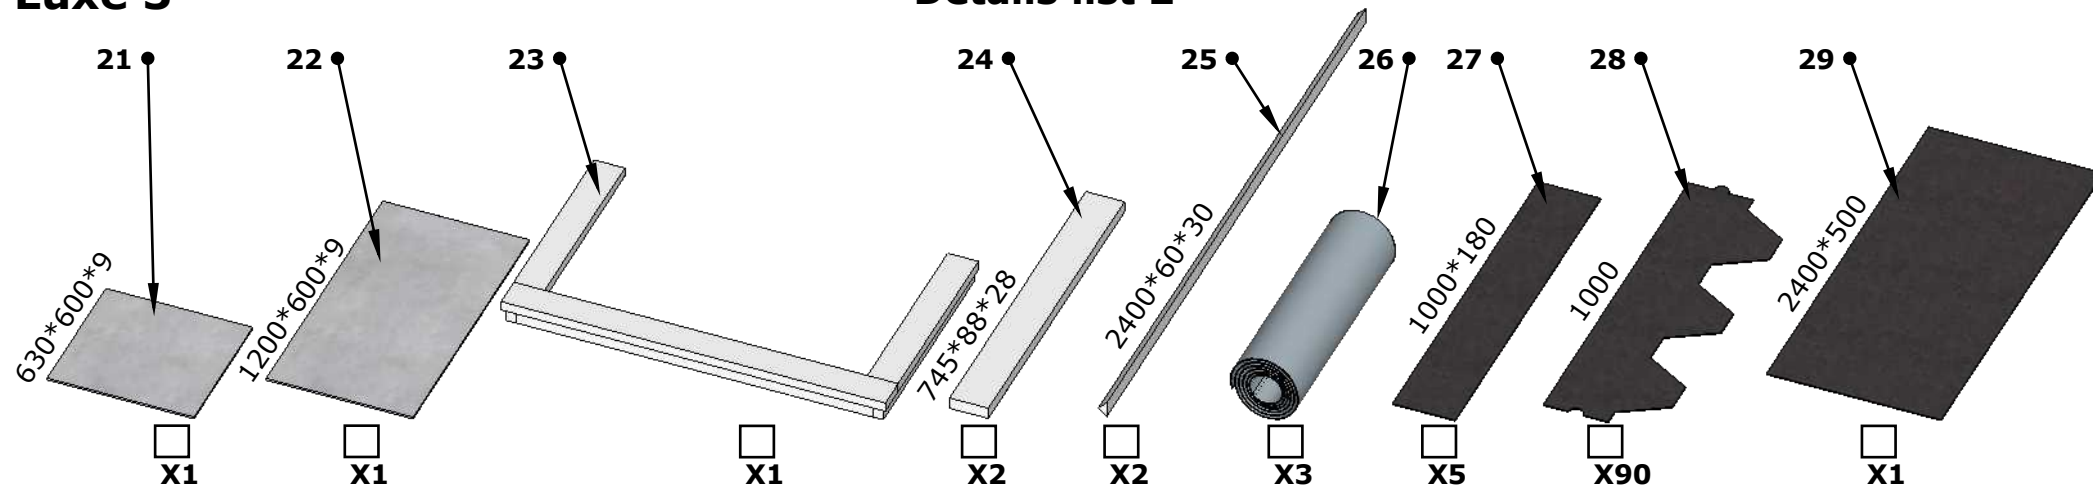


Details 30 1 - 30 16 may
require sanding.



Luxe 3

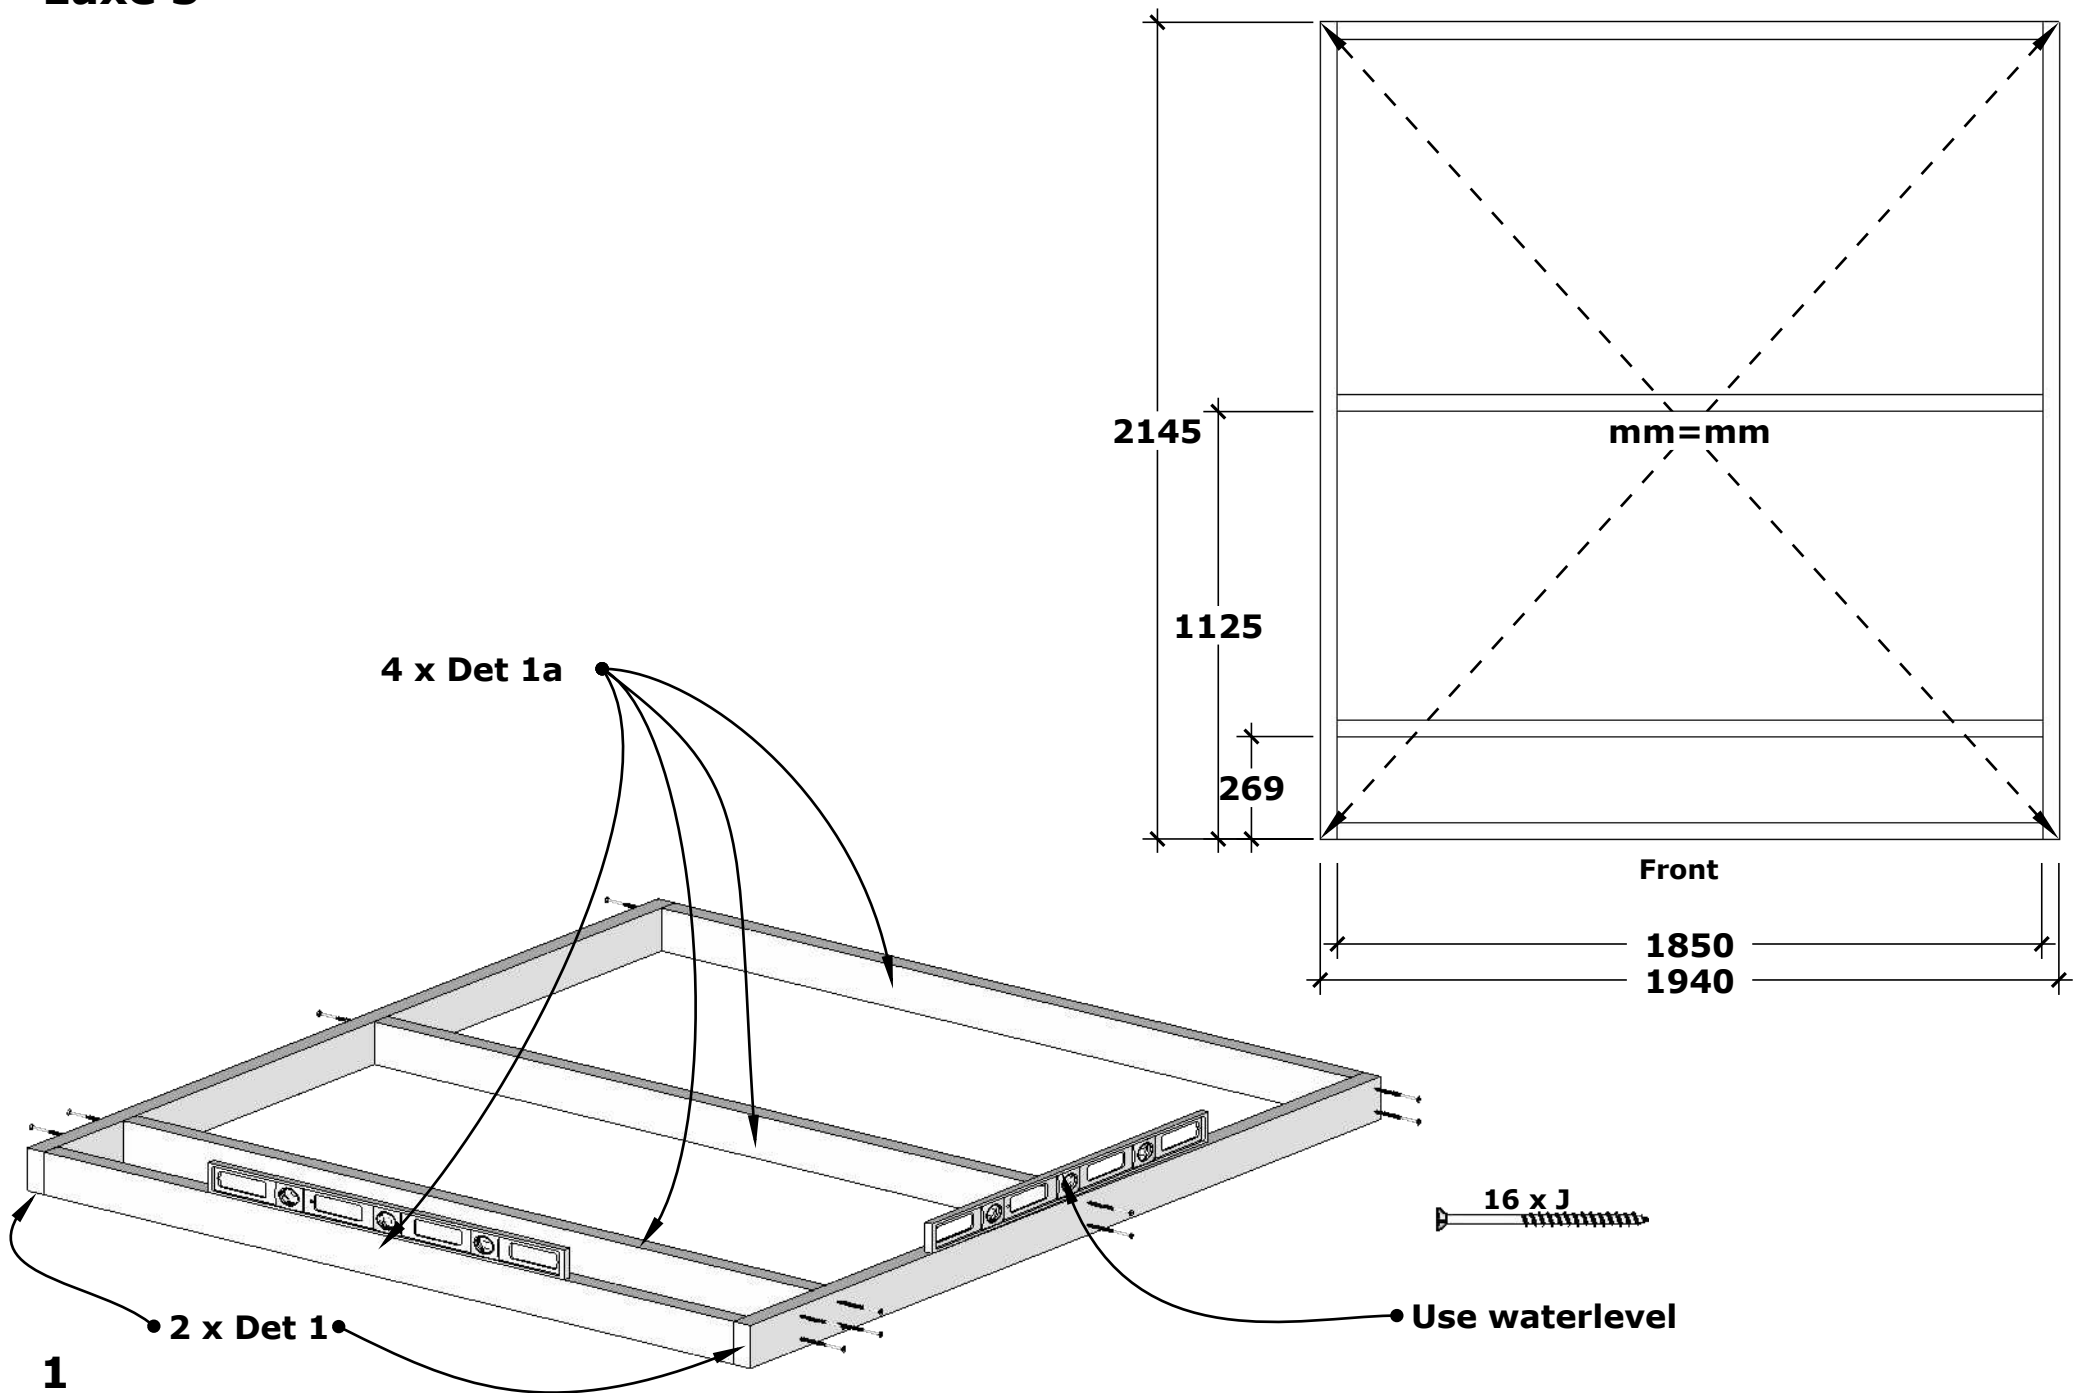



Luxe 3

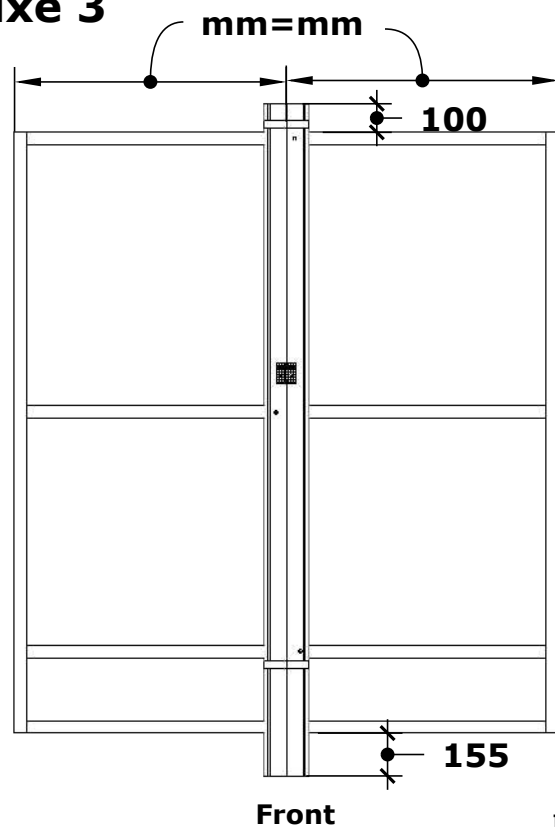


I

Det 2

3 x J

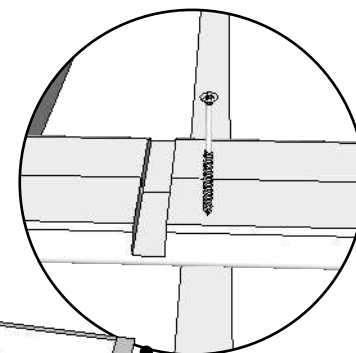

48 x J




8 x Det 3a
8 x Det 3b

Remove Det 1


III

II

Luxe 3

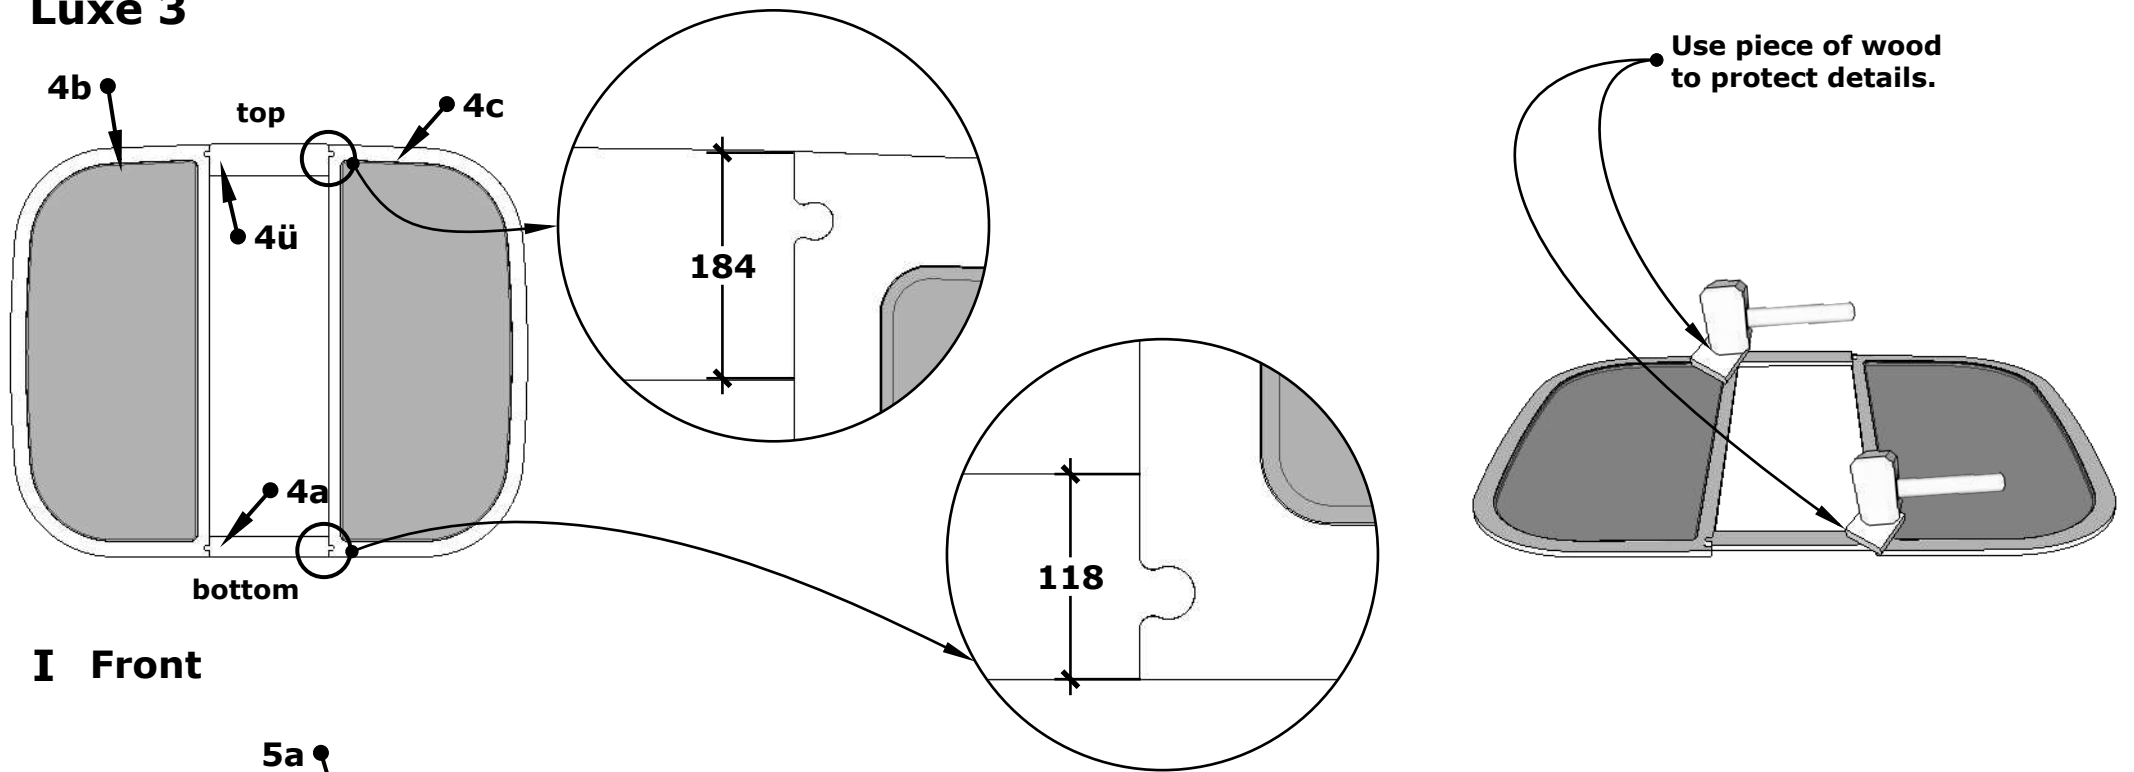


I Front

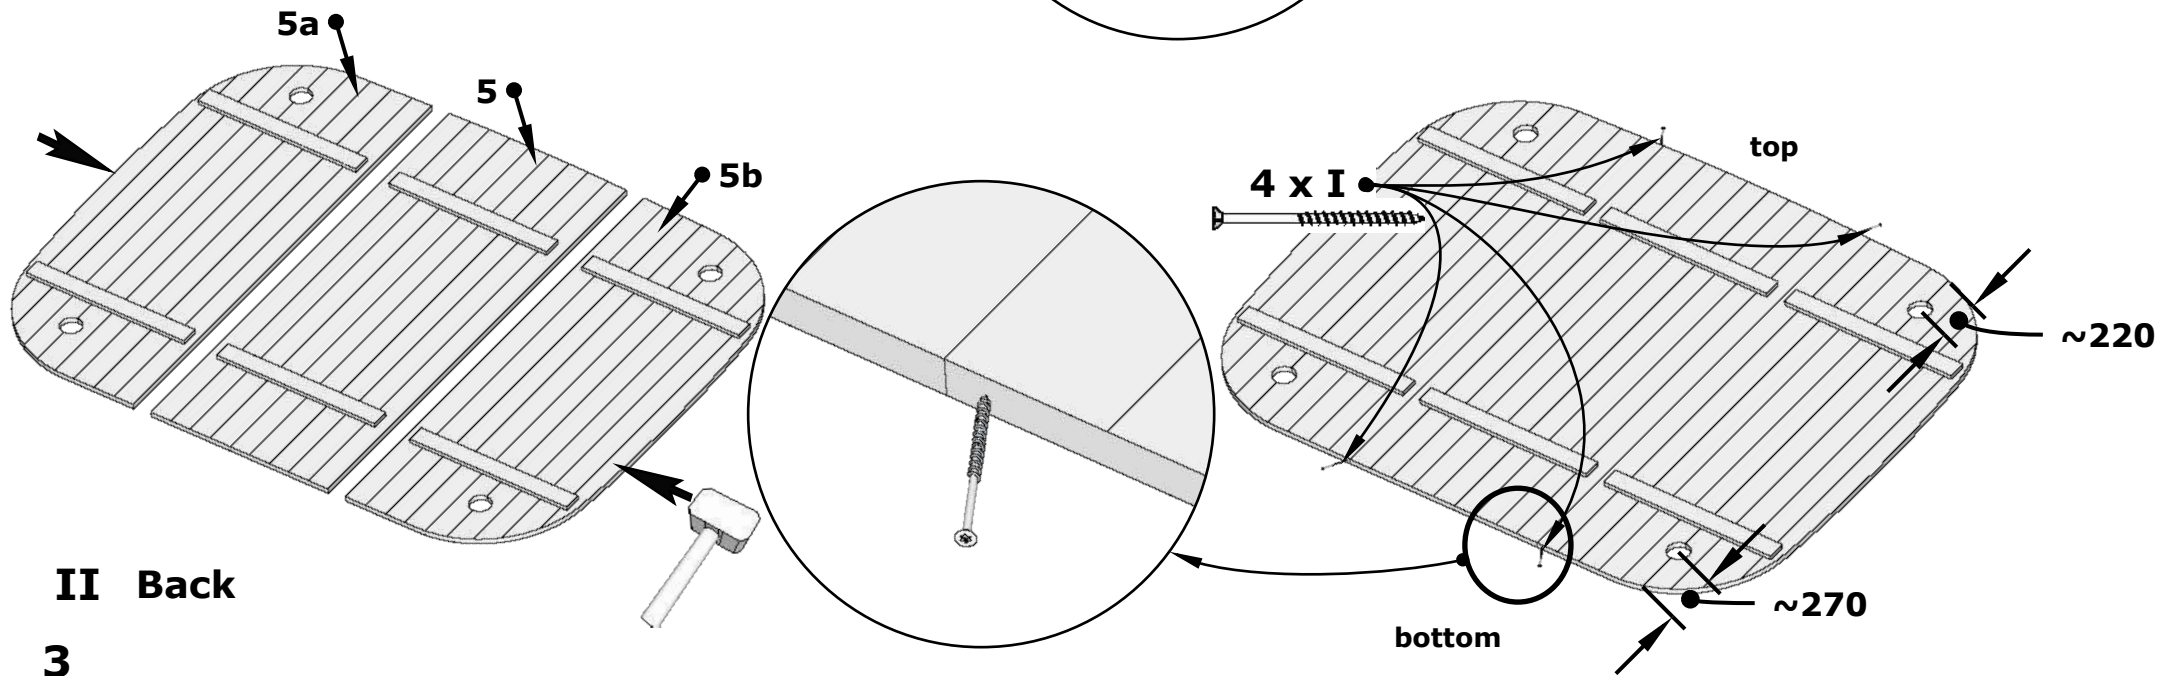

II Back


Luxe 3

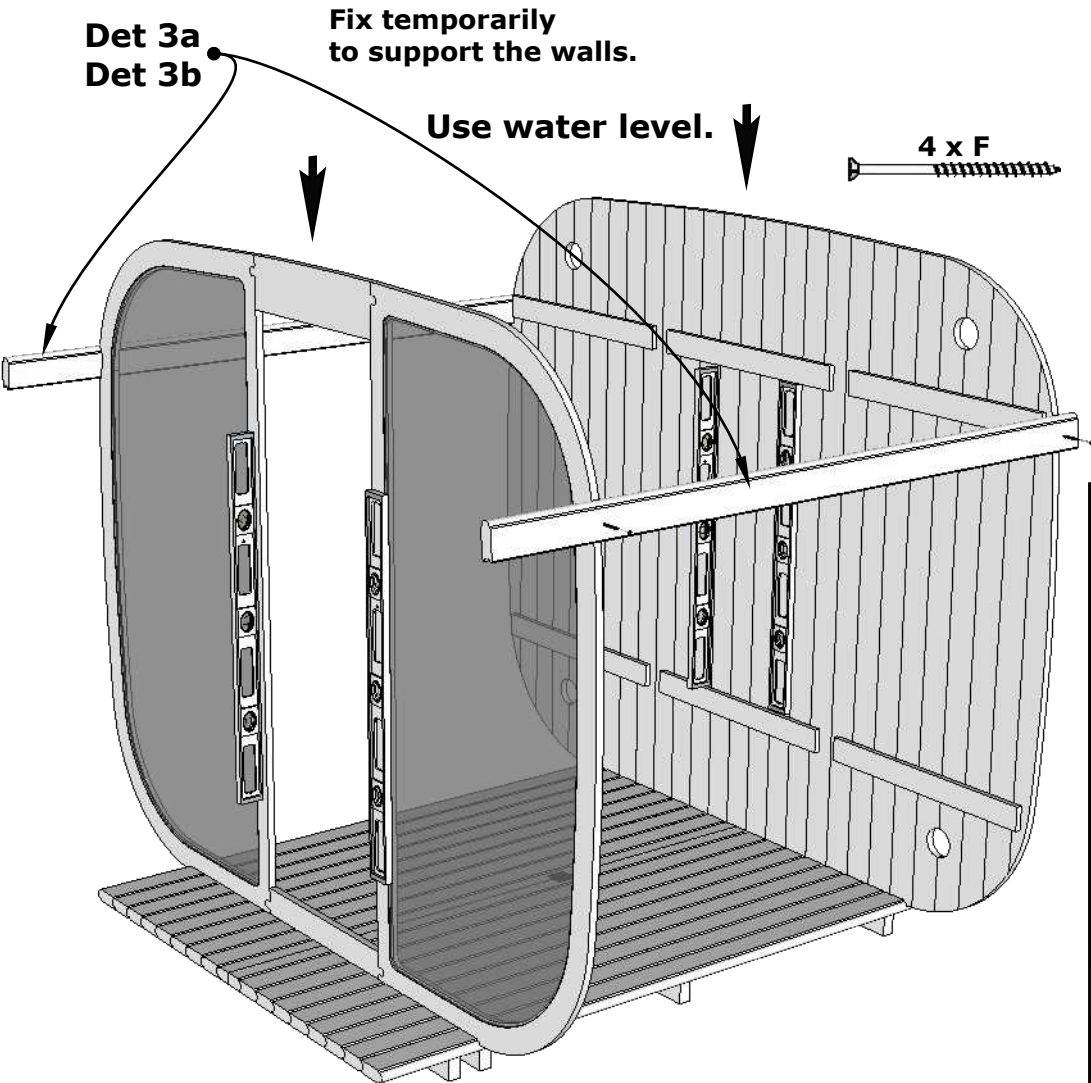




Glasses outwards

I

4


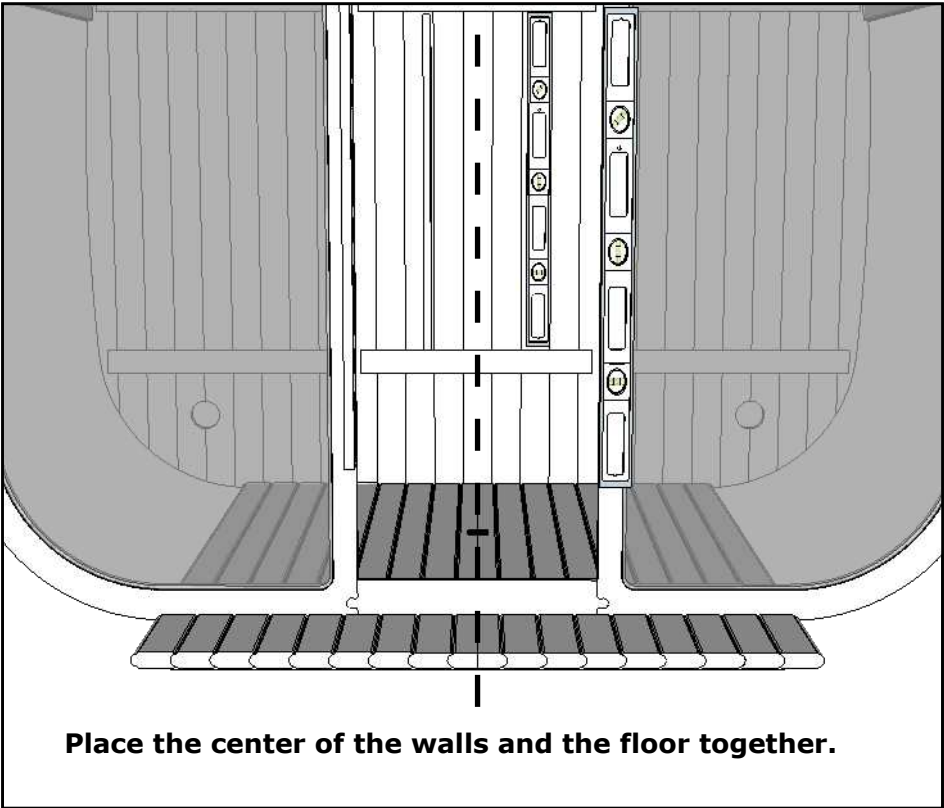


Luxe 3

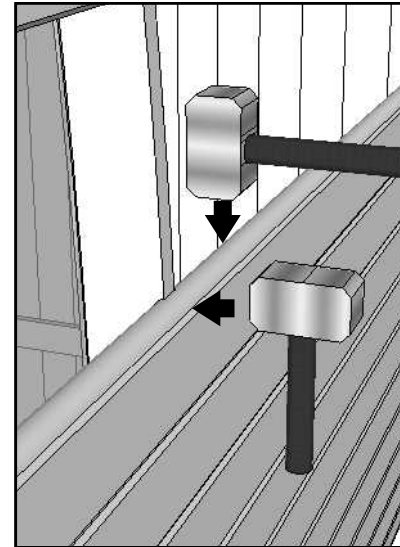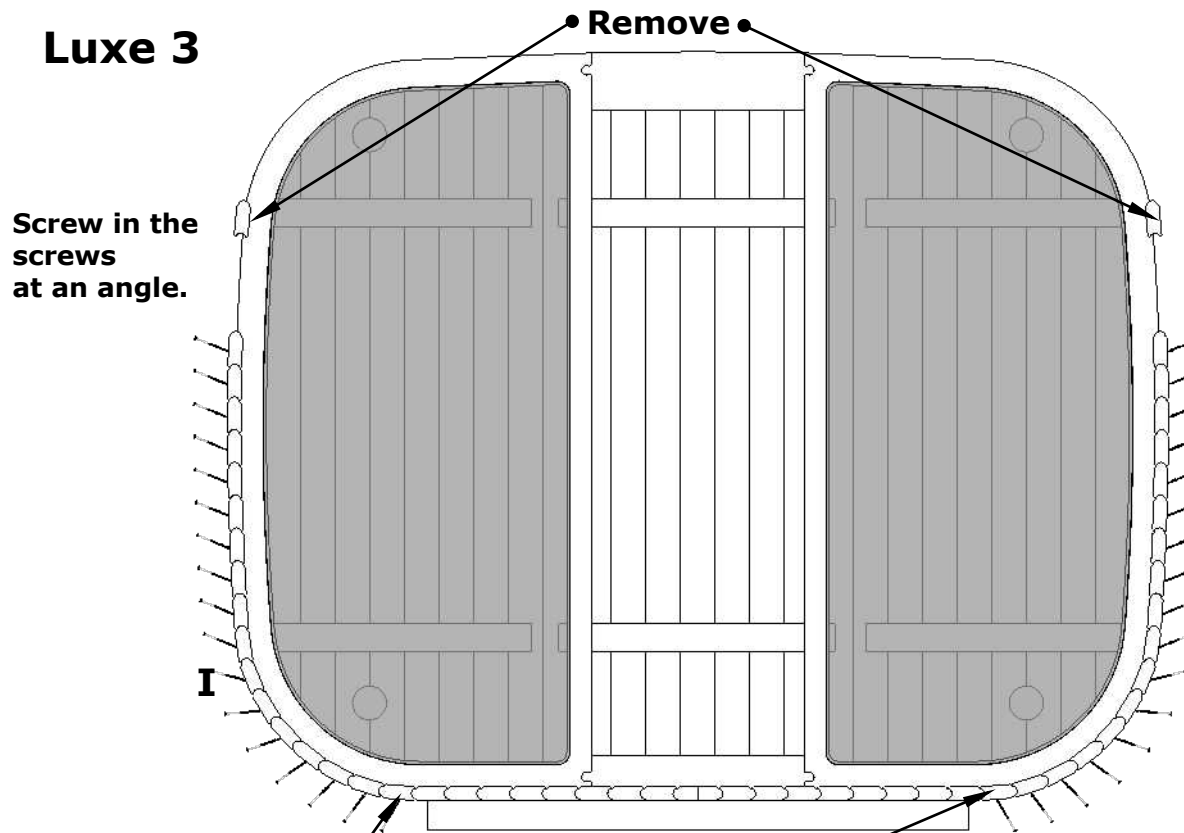


37 x Det 3a


37 x Det 3b

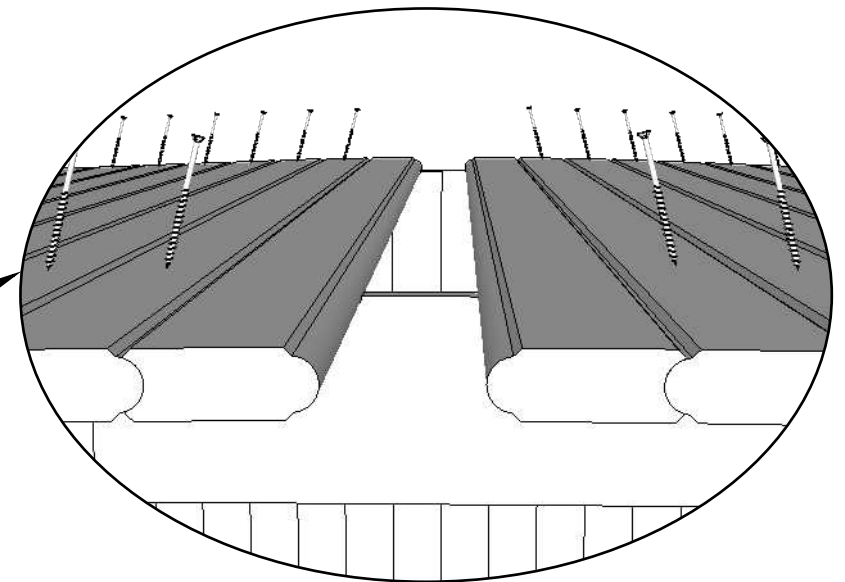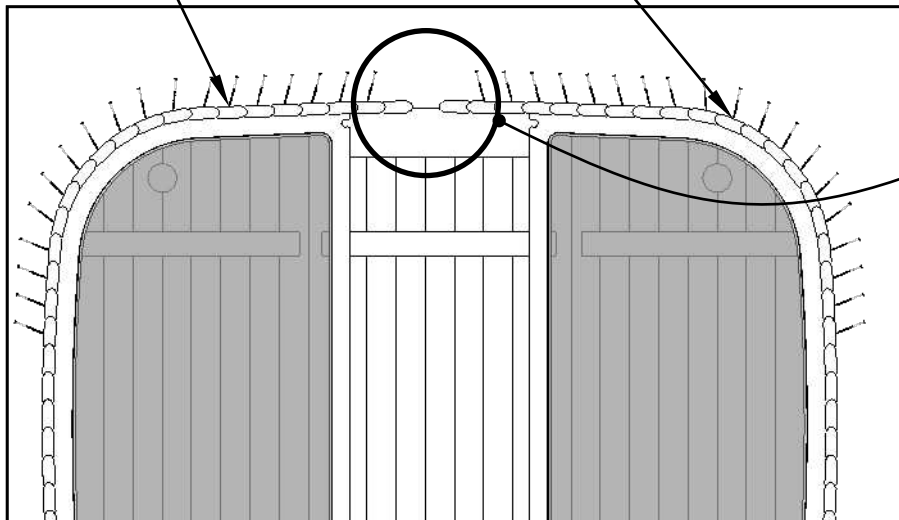


Luxe 3

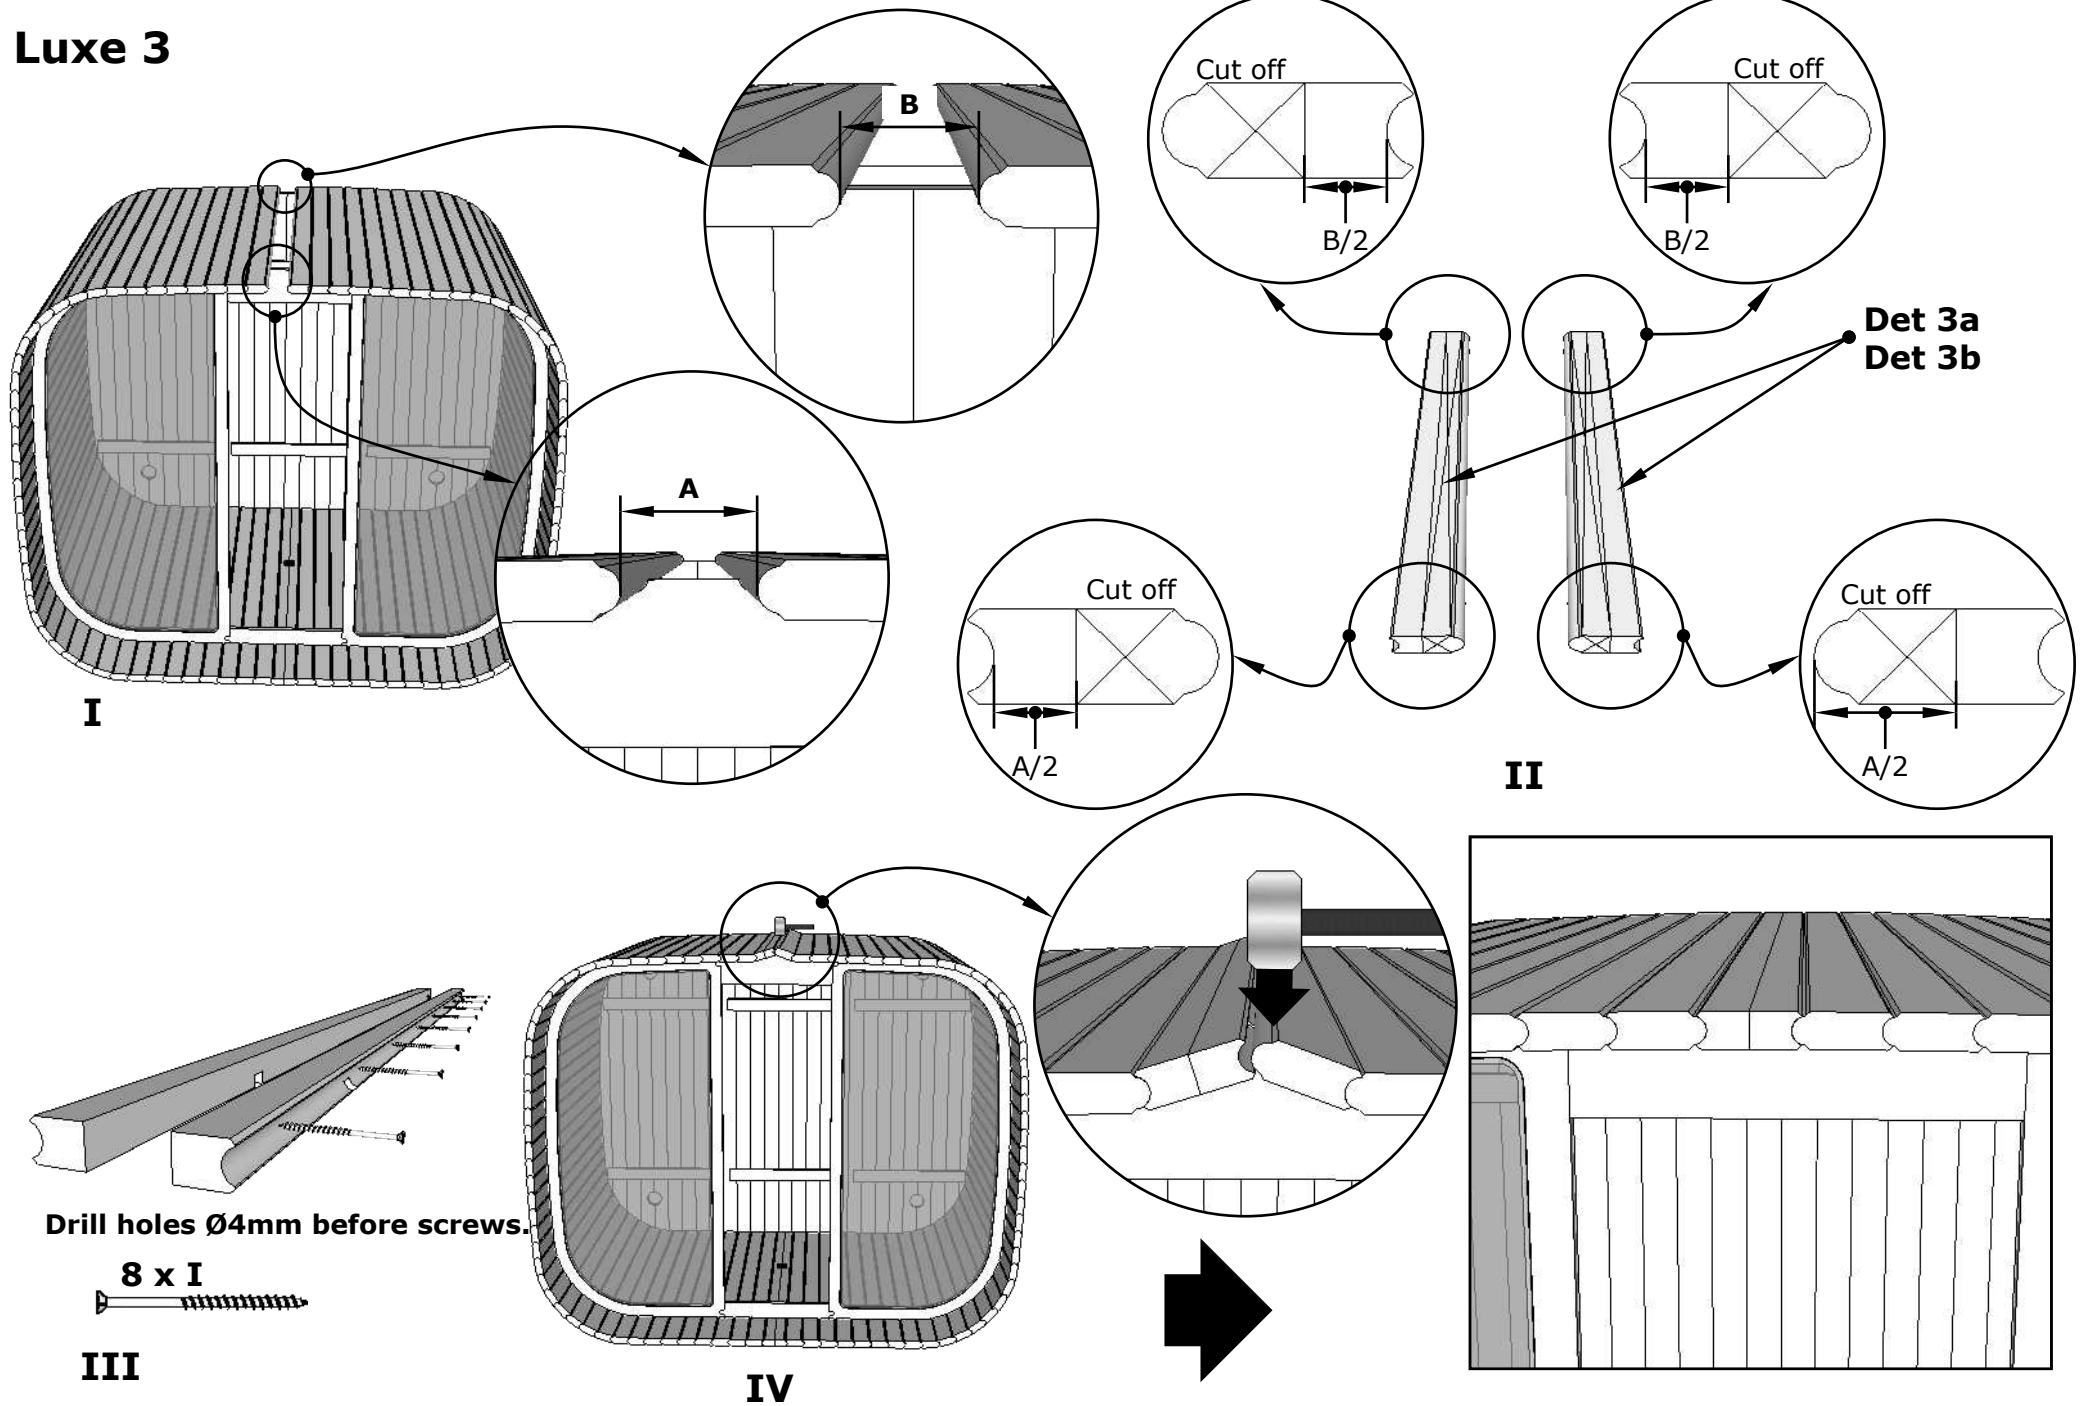


Luxe 3

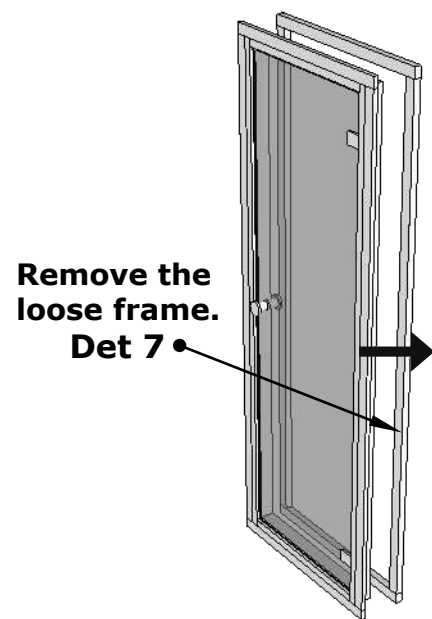


I

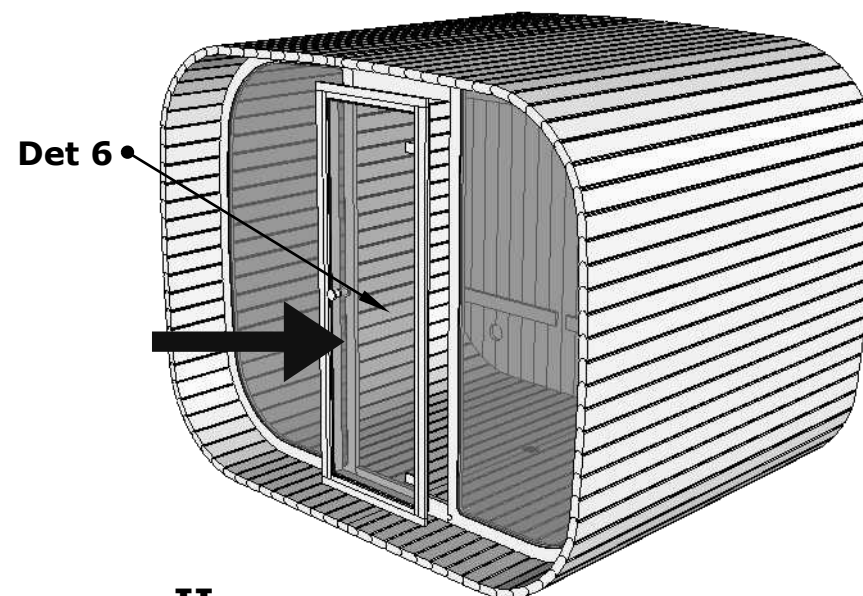

II

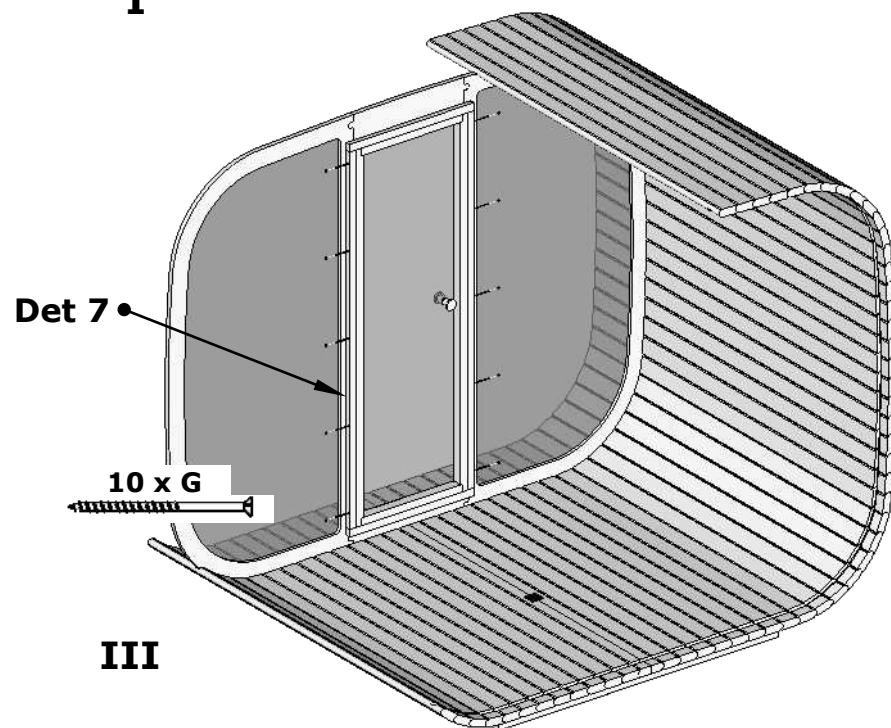


III

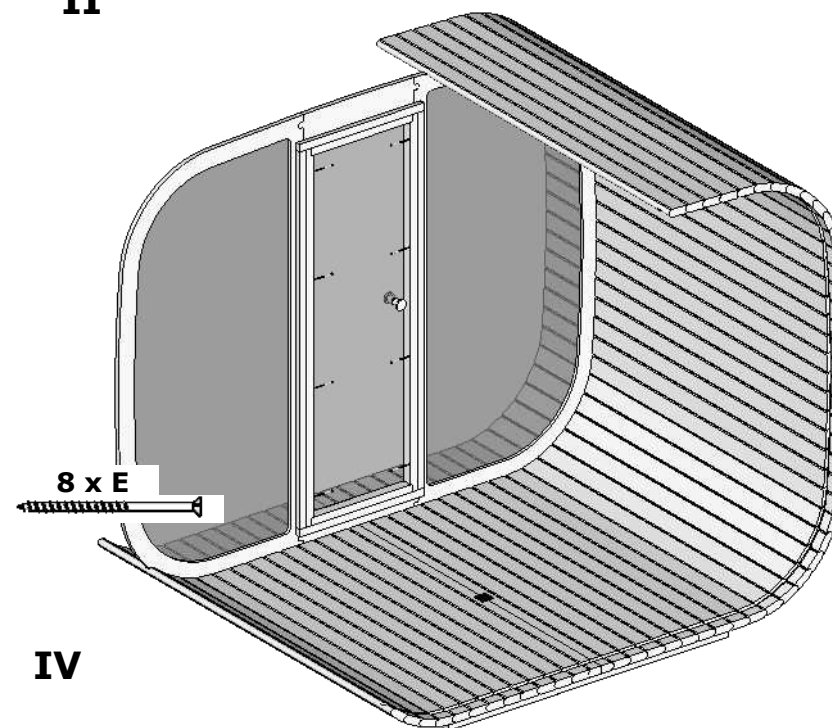


IV

Luxe 3

3 x Det 8

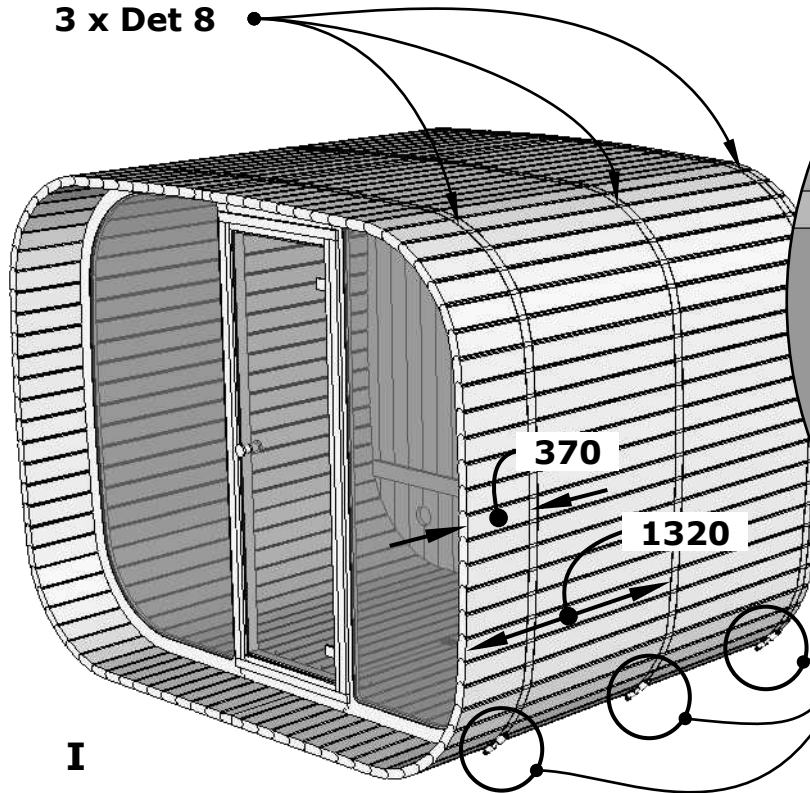


I

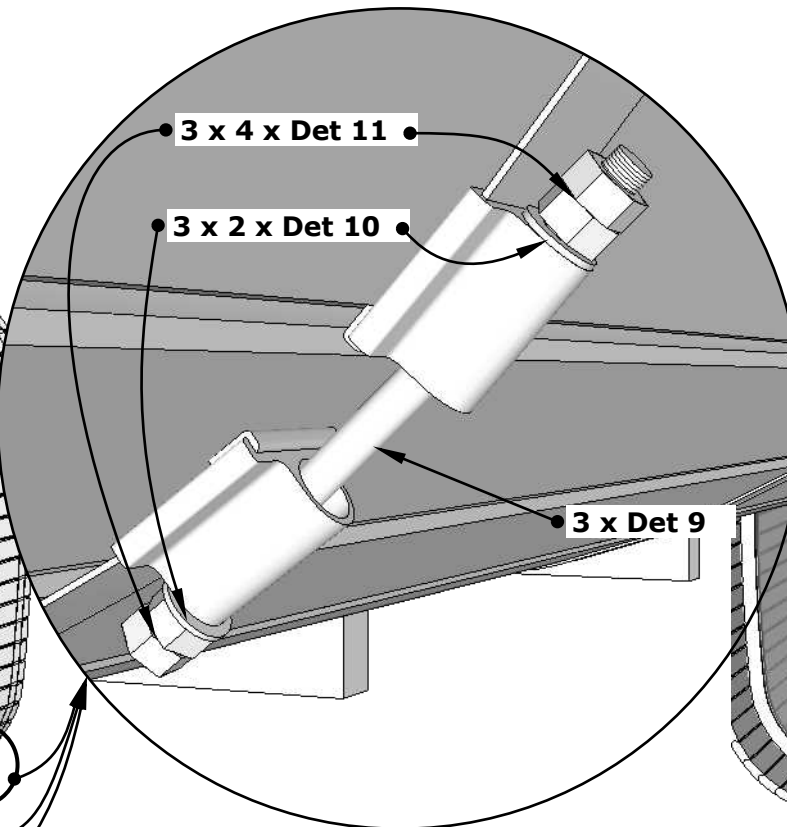

Remove boards



II

During assembly and retightening the threaded rods, use oil (Würth HSP 1400 or similar) to avoid "cold welding" and it is also easier tightening.

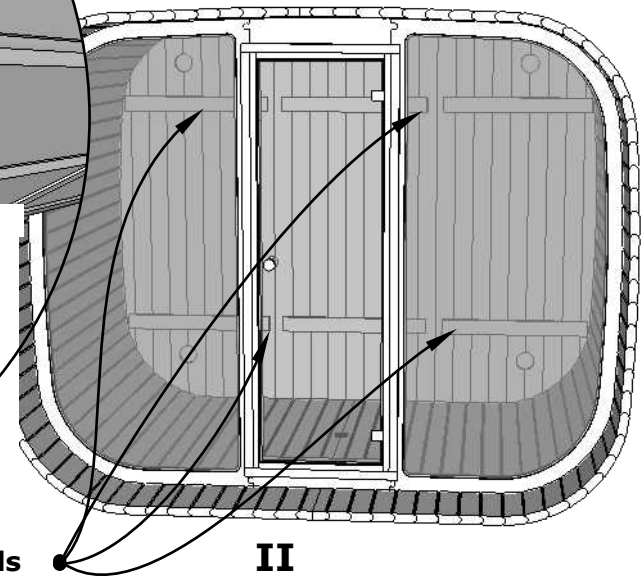

III


8

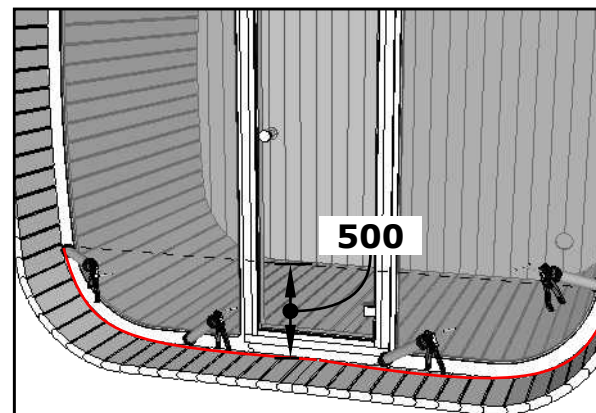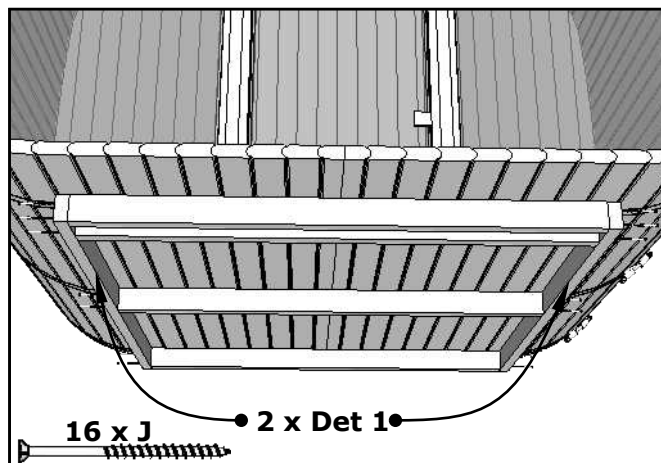

IV





Add waterproof silicone to the walls on both sides (in- and outside).

Luxe 3

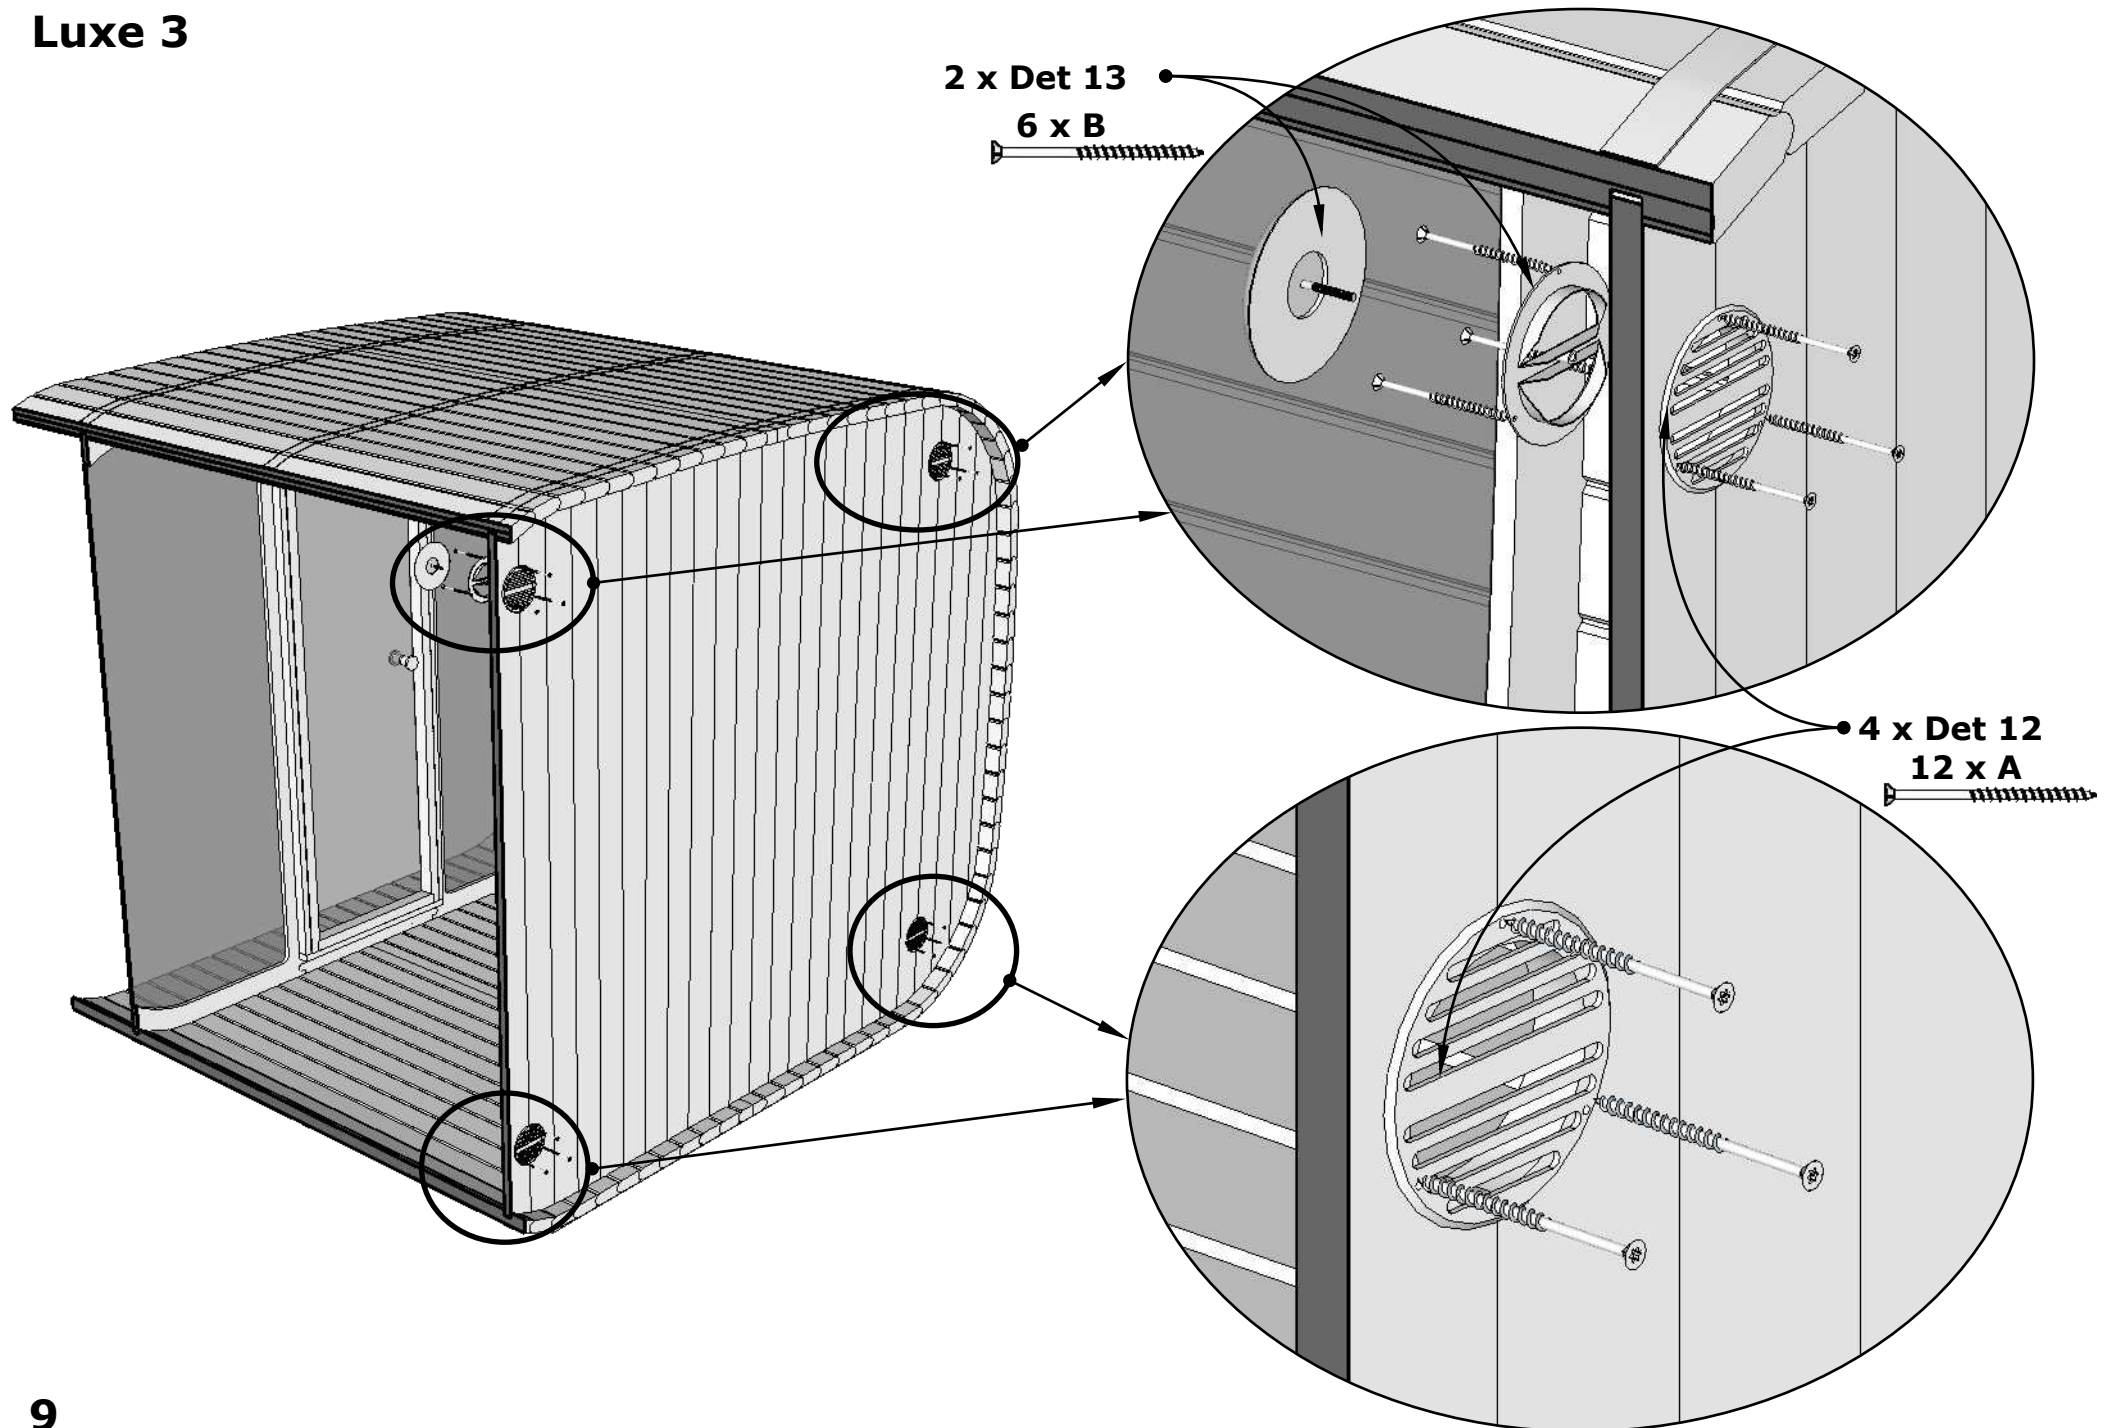


Luxe 3


Use water level

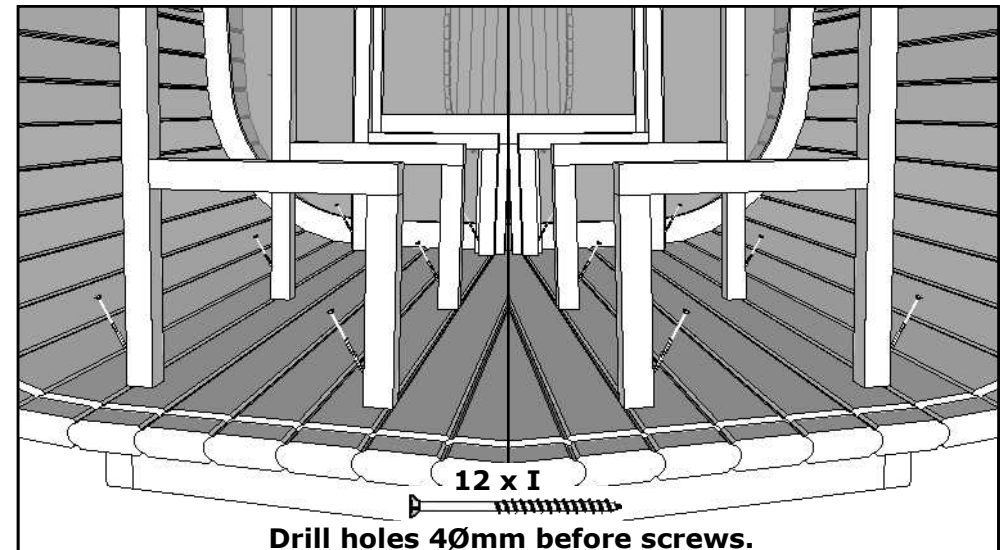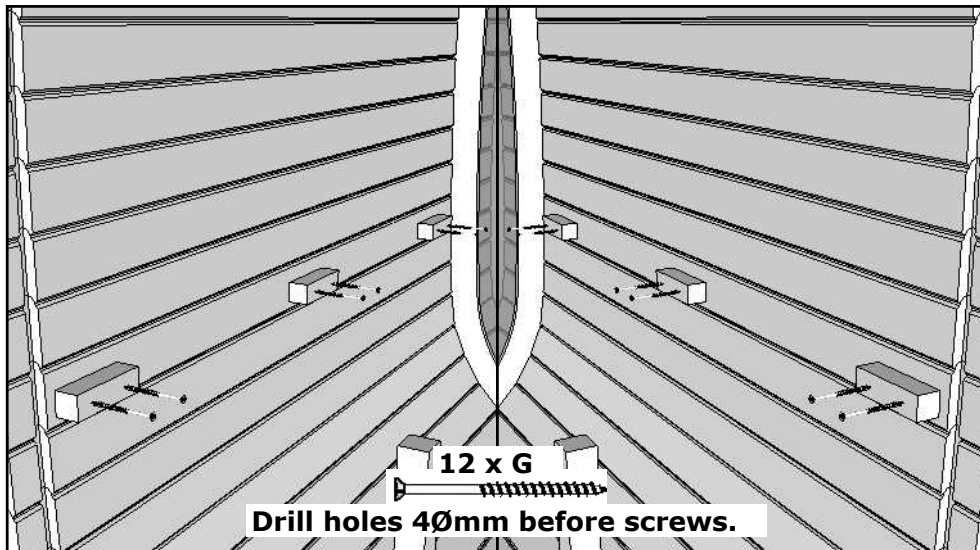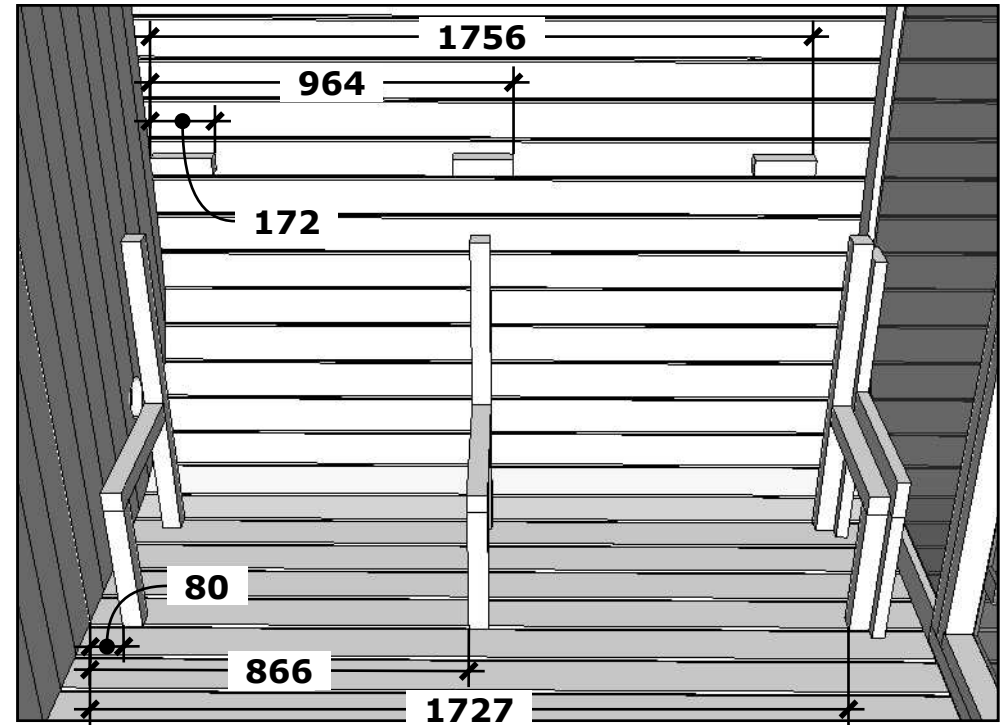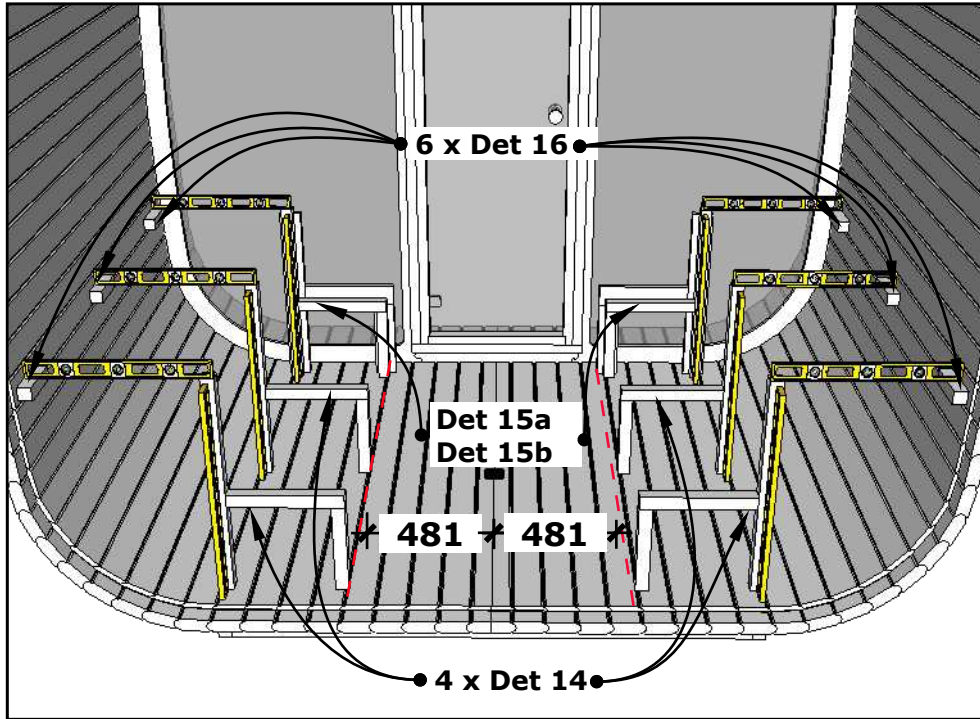



Luxe 3

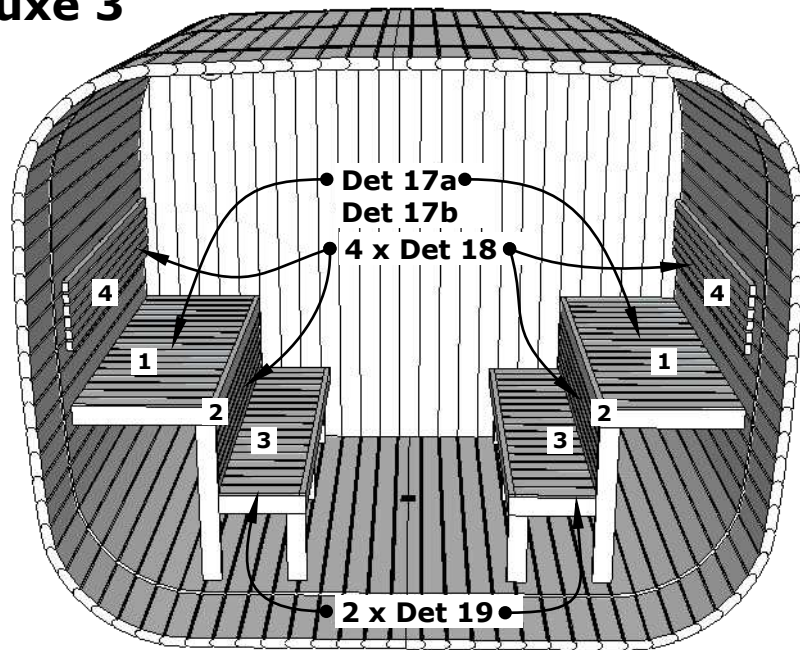

I

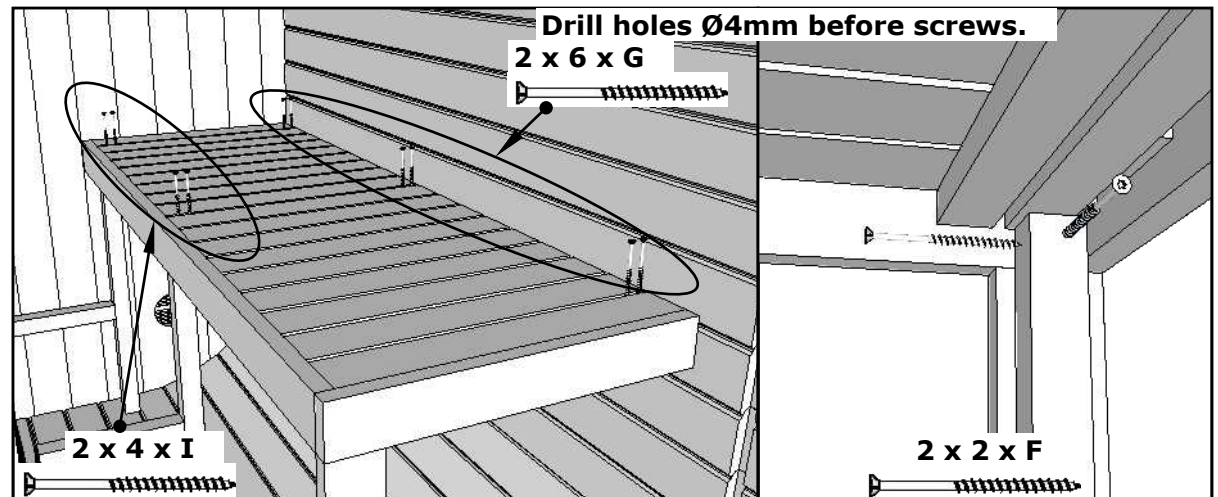


II

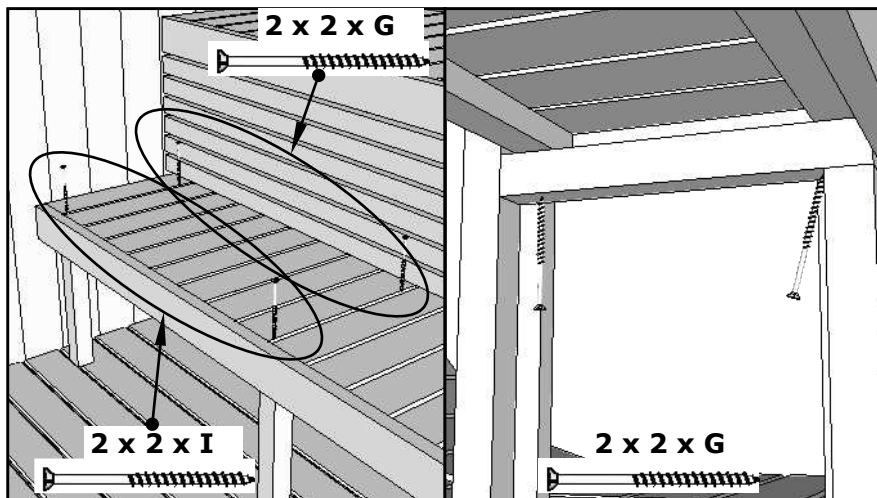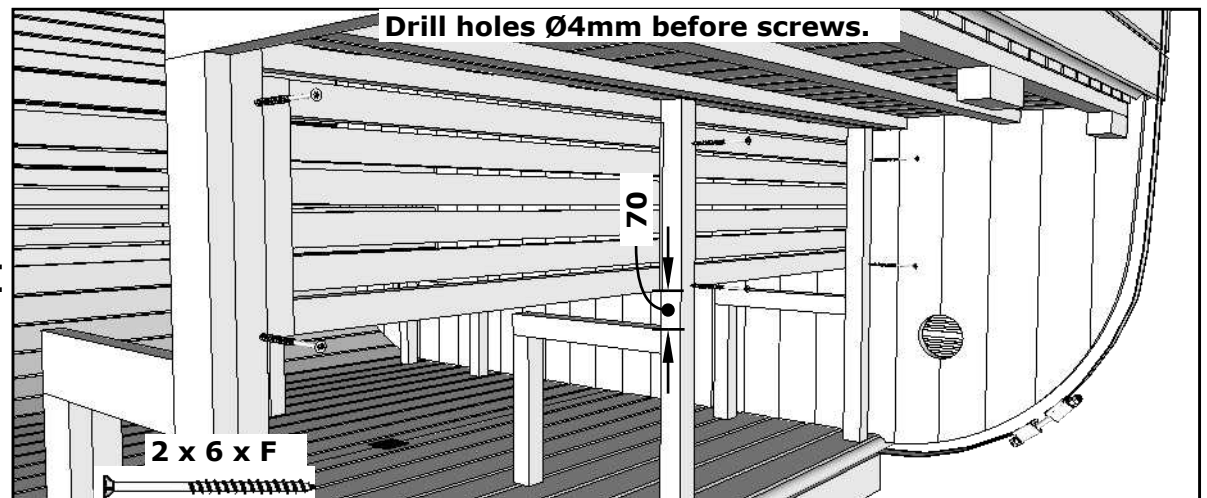


III



IV

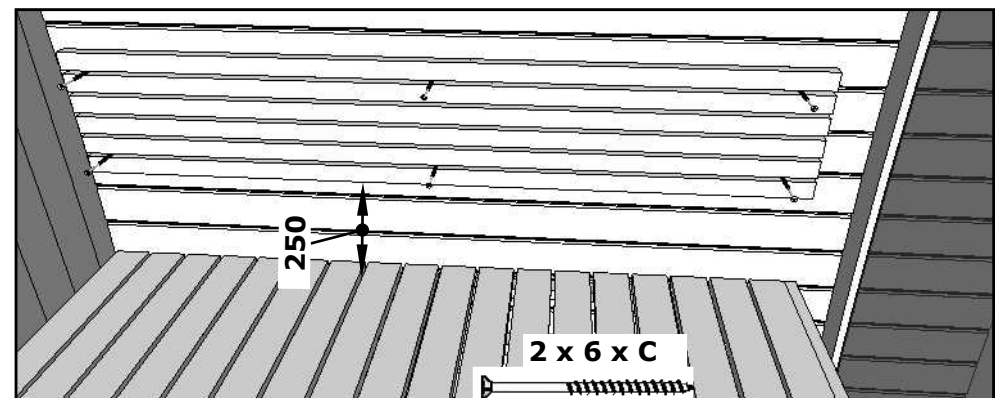


Luxe 3

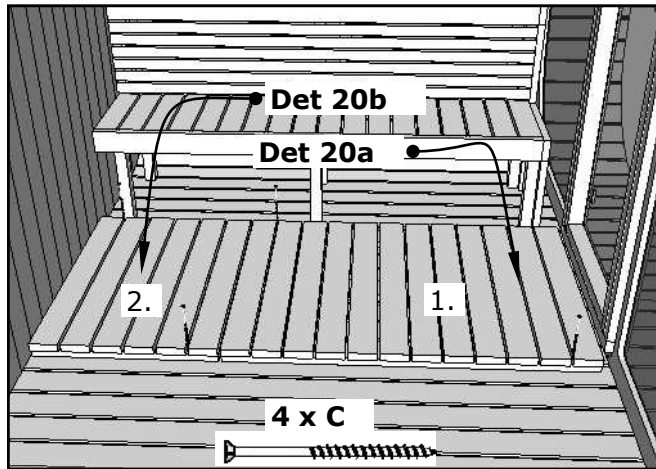

I

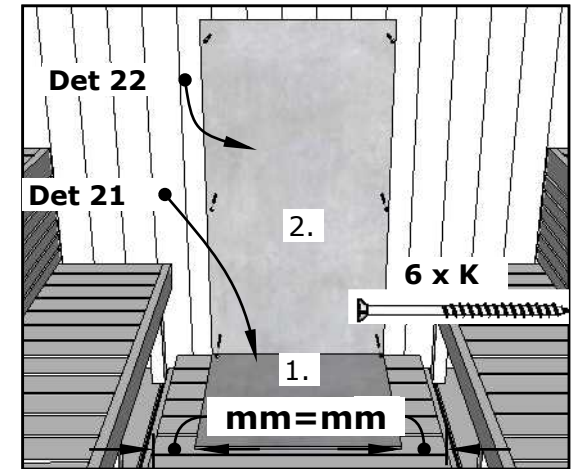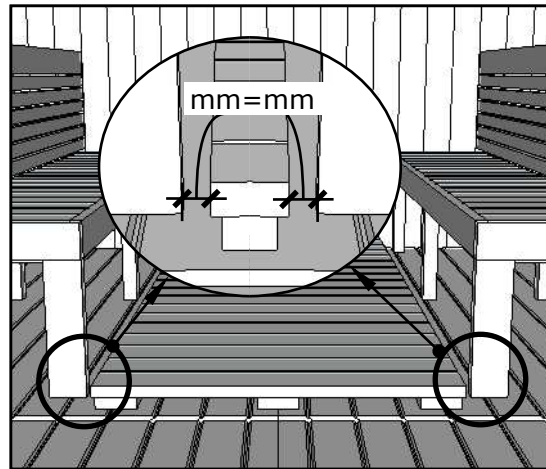


II

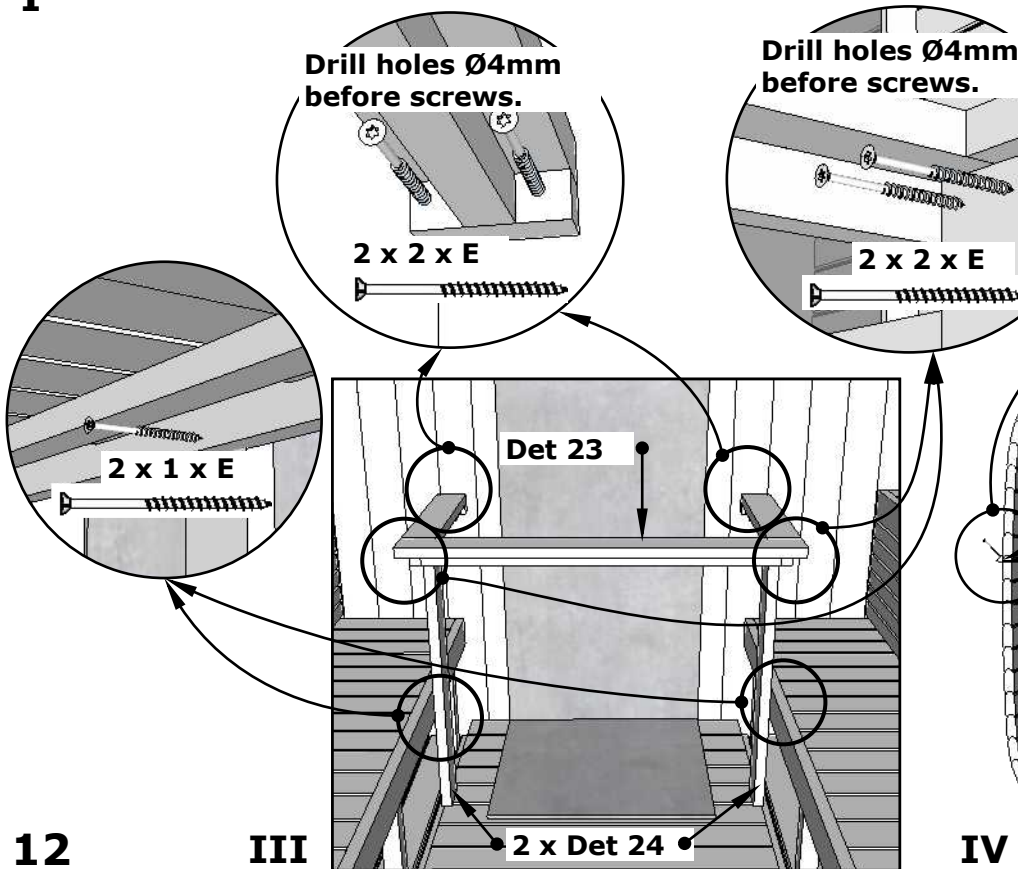



12

III



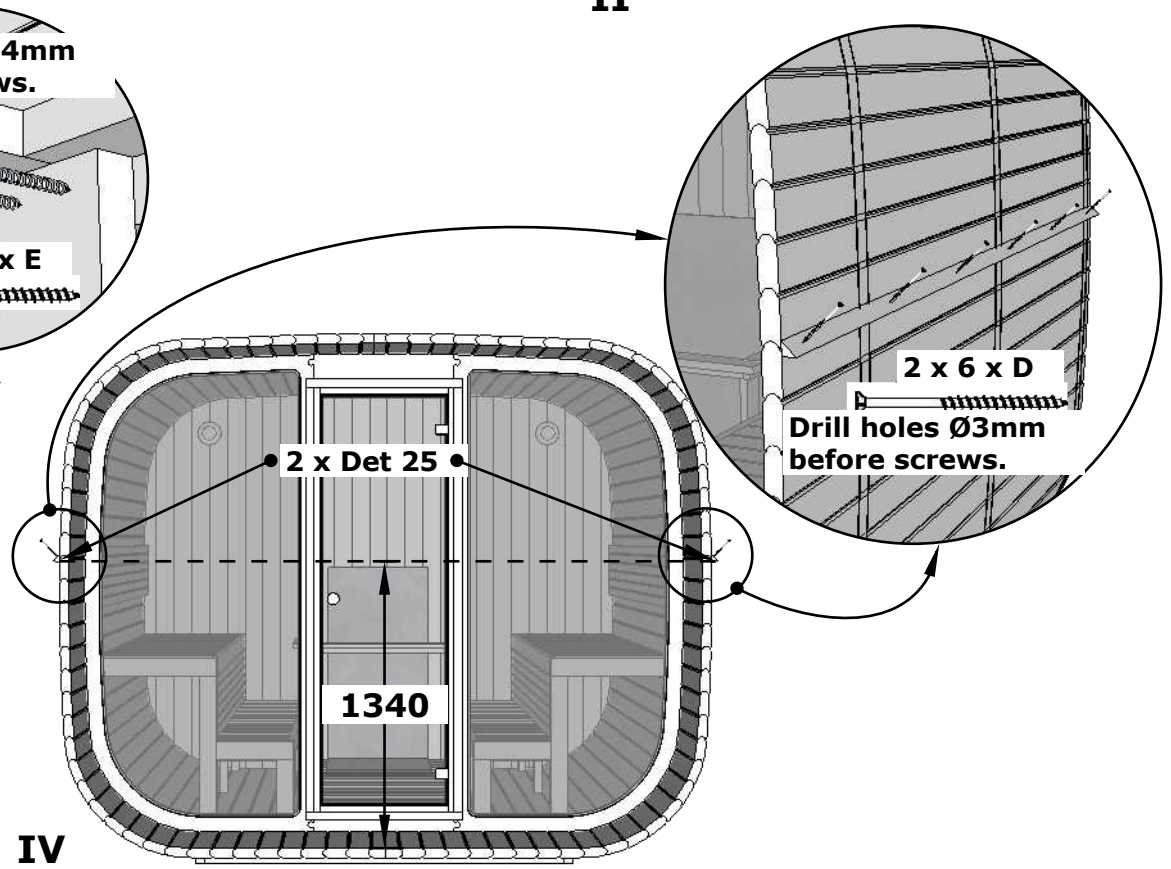


IV

Luxe 3

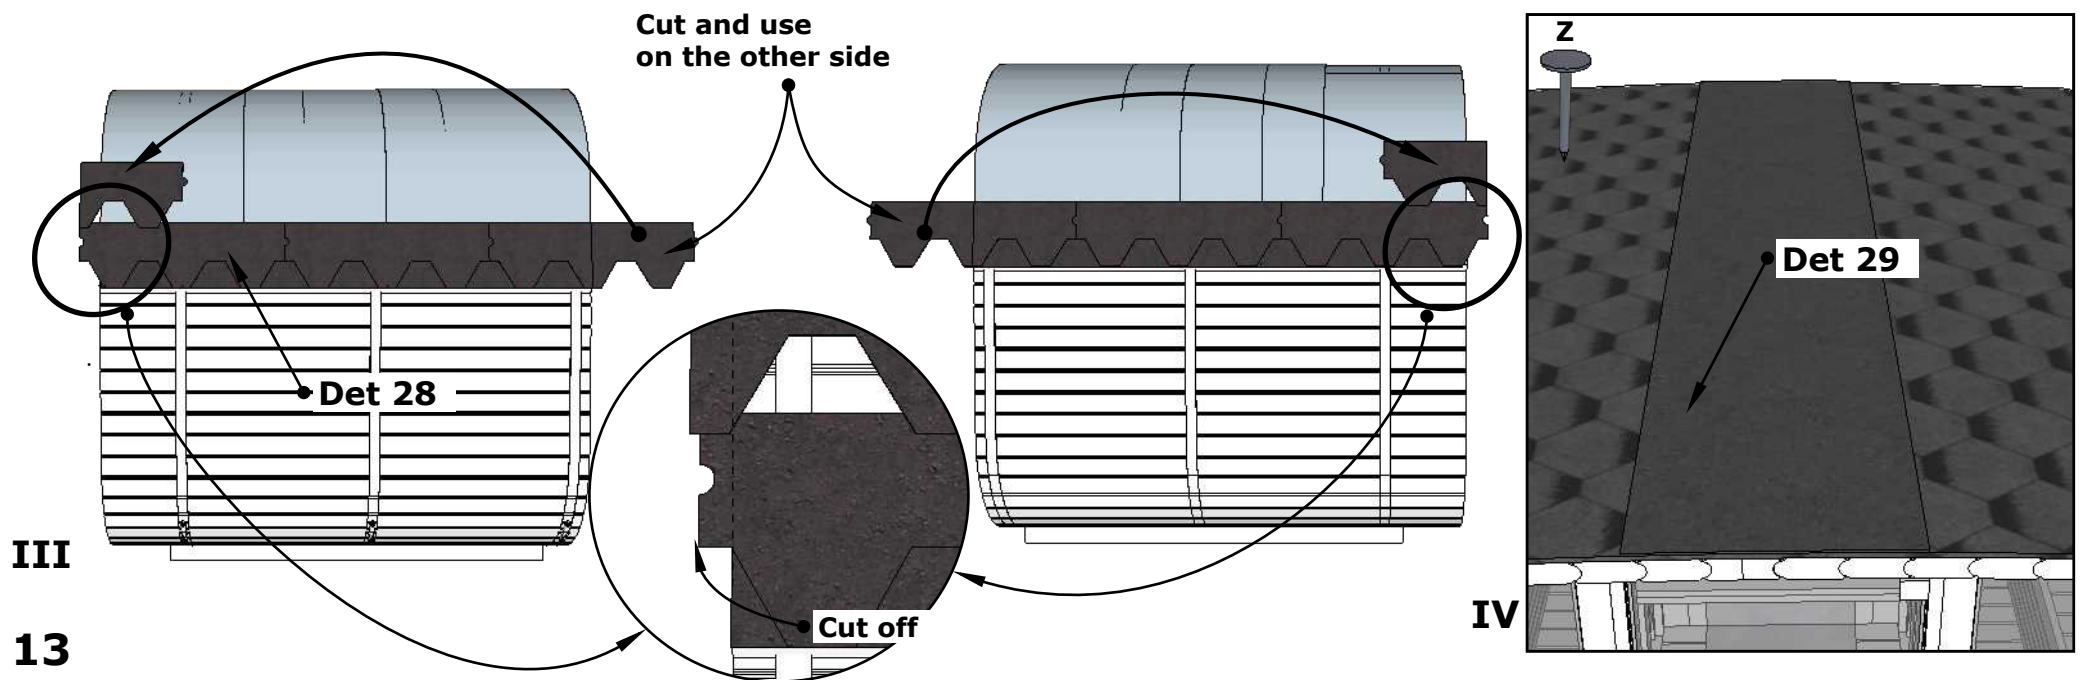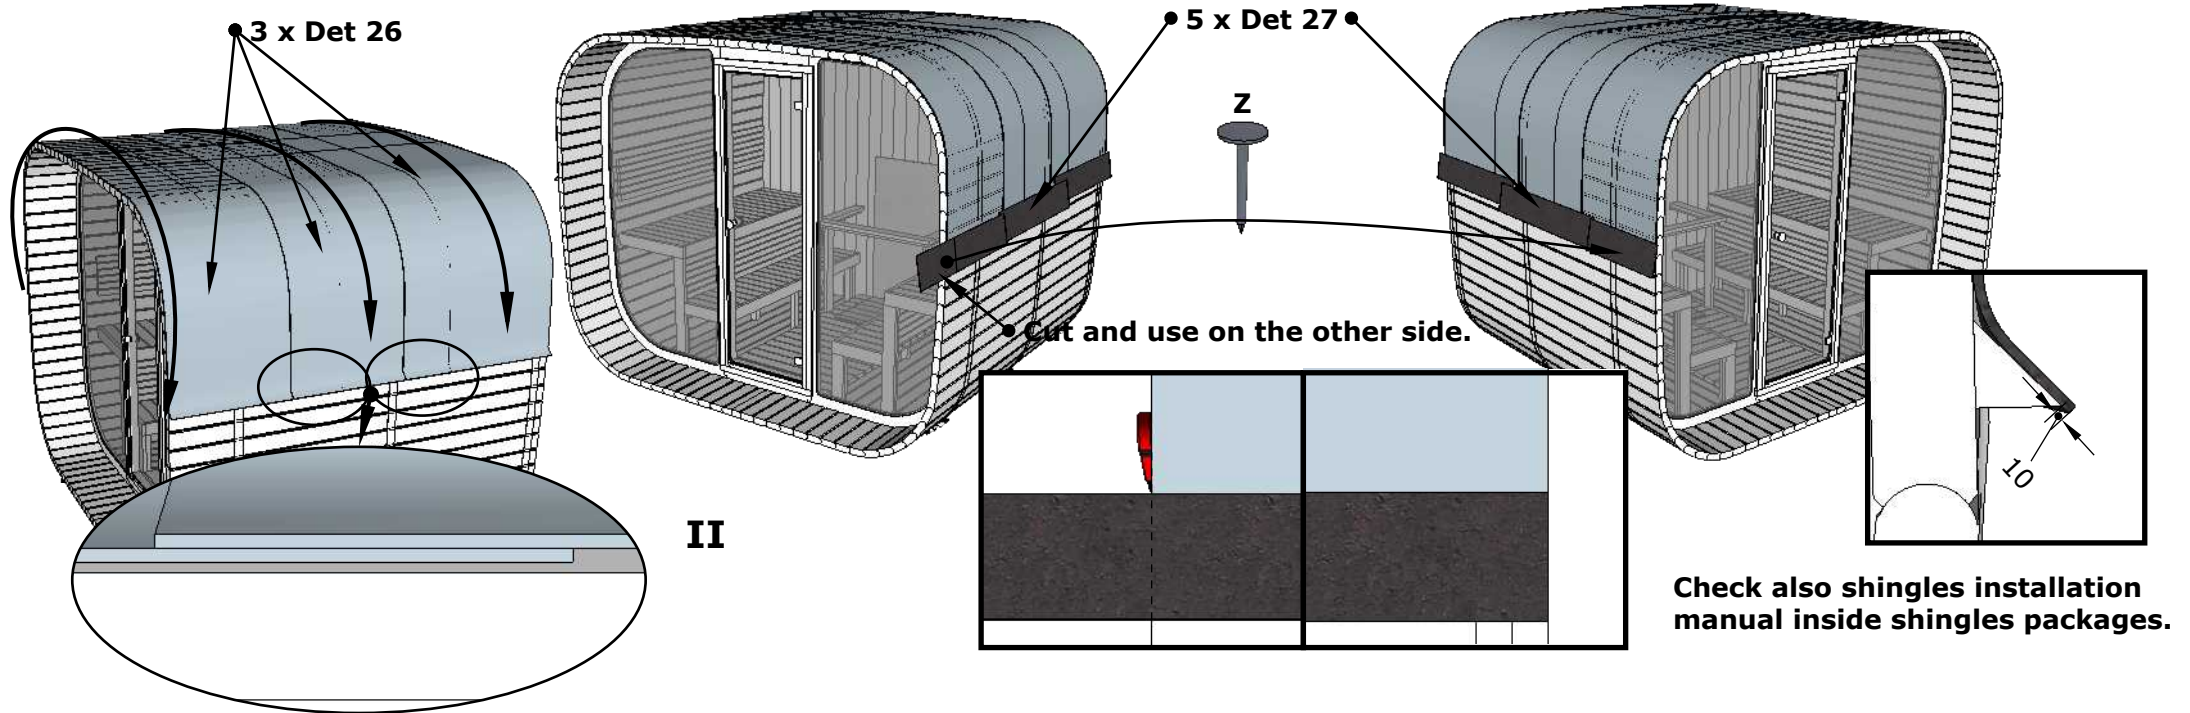

Luxe 3

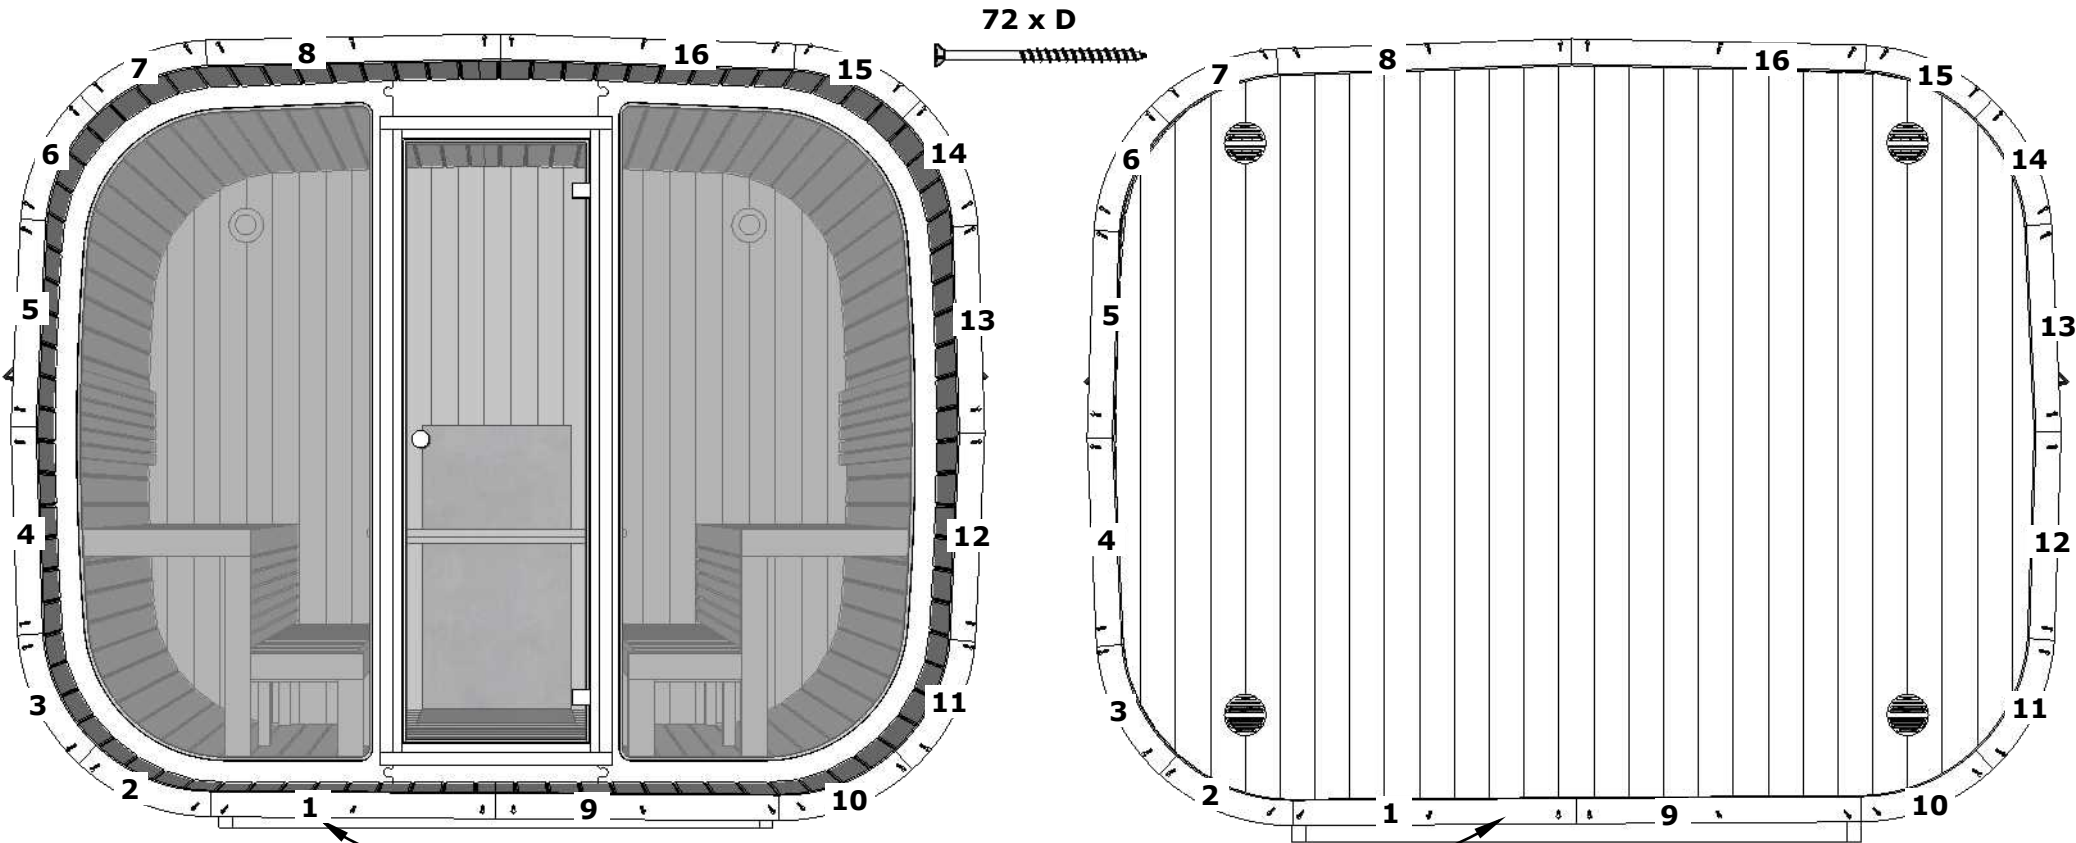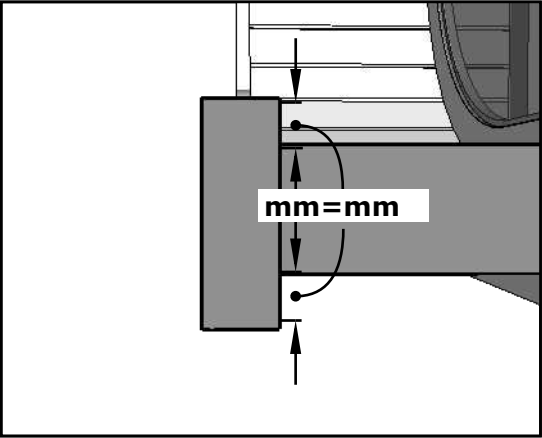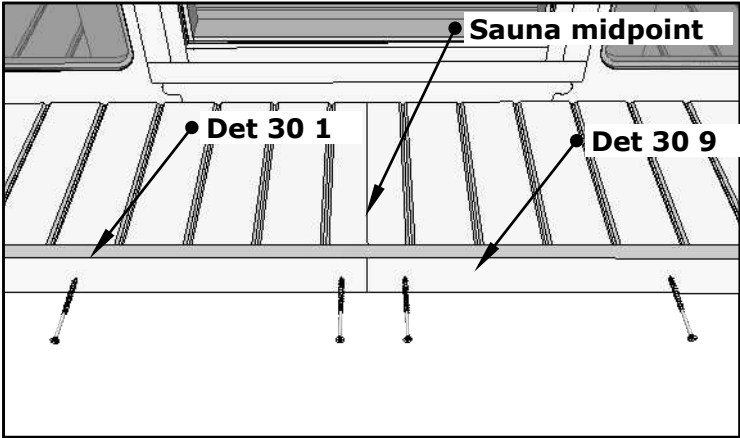

14

Start with Det 30 1