

**GRILLHOUSE
ASSEMBLY GUIDE**

2

LIST OF DETAILS

Wall elements **8pc** Door **1pc**

Roof elements **8pc** Roof hat **1pc**

Corner cover elements



Fluted brim planks



Triangle details



Door posts



Inner corner strips







Roof's inner strips




Door strips



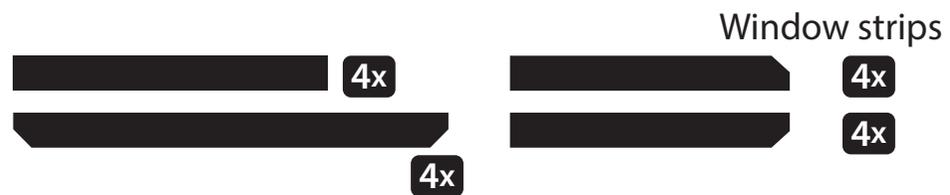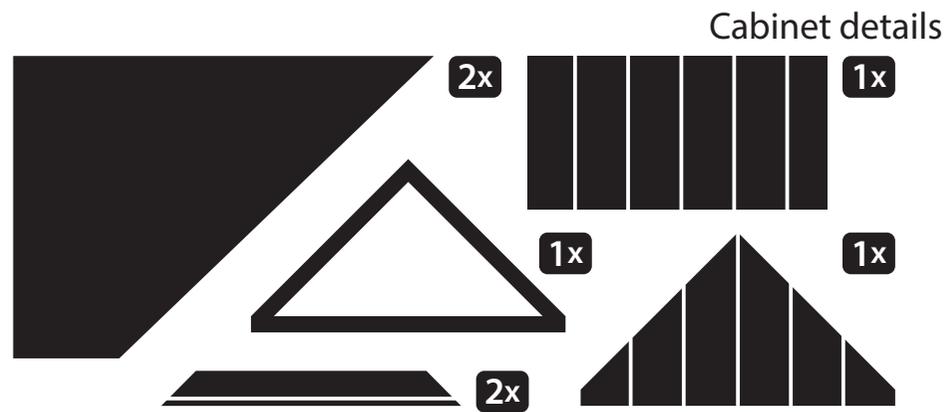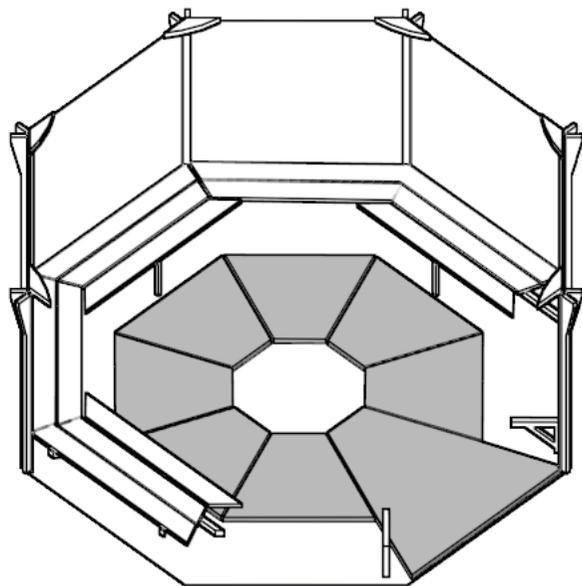


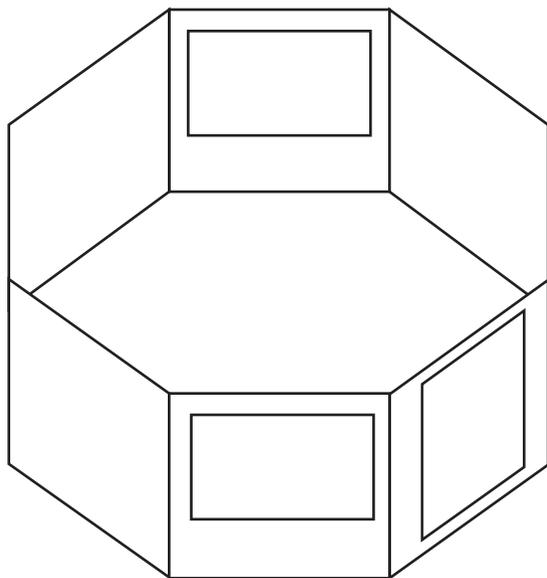


Attach wall elements to each other with 8 screws per corner. Place the wall element where the window can be opened opposite the door. Make sure that the distances between all the walls match the measurements on the figure.

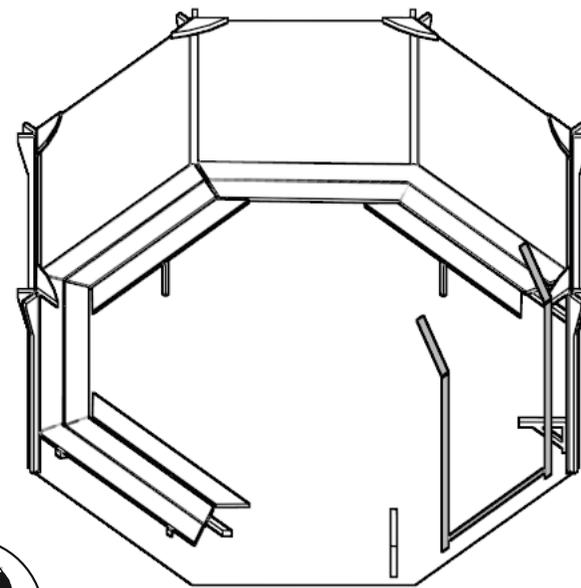


Attach door strips inside the grillhouse. The strips are attached to the door frame, wall element and roof element with 3 screws per detail.

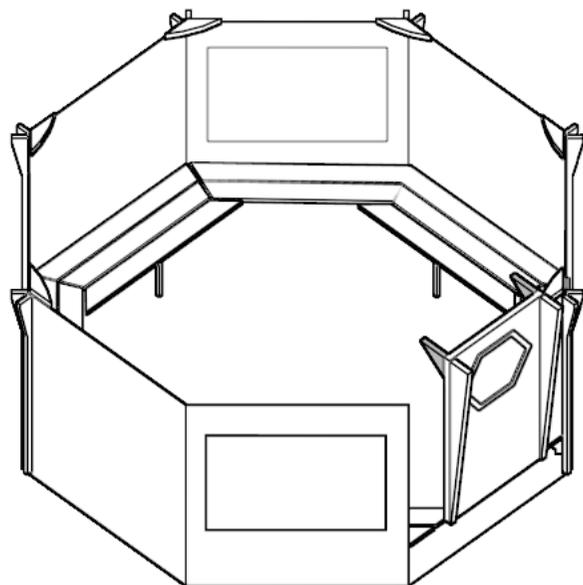


Attach triangle details next to the door to the door frame with 2 screws. The detail needs to connect to the door post and to the bottom of the cabinet.

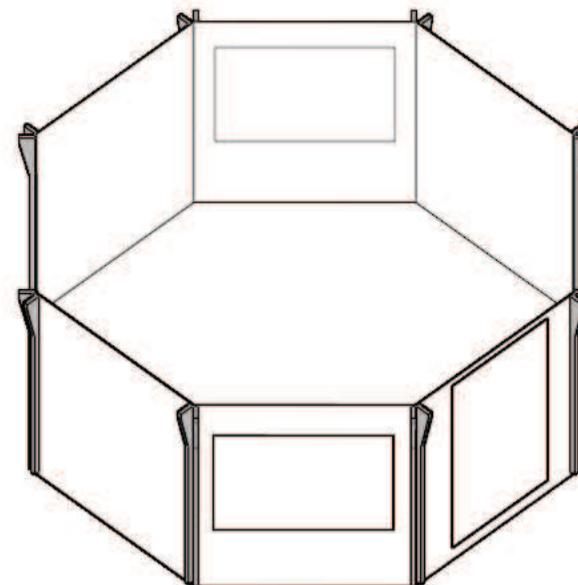


Attach corner cover elements to the outer corners of walls with 4 screws per corner.

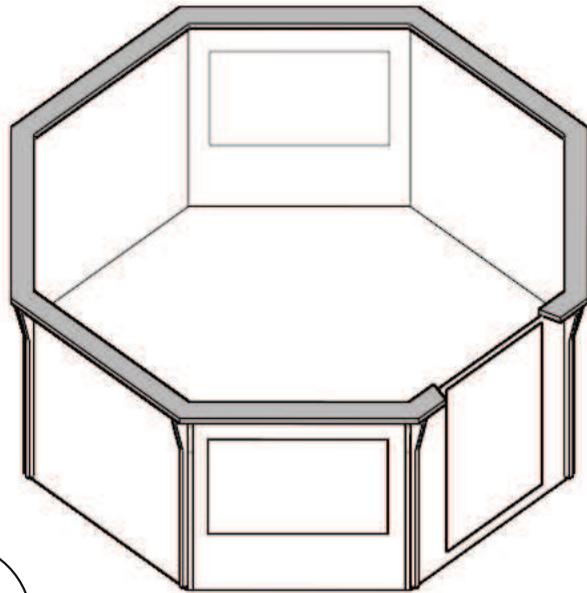


Fluted brim planks go on top of the wall element with inner brim matched to the walls inner surface. 4 screws are used to attach one plank to the wall element. Make sure that the corners connect nicely.

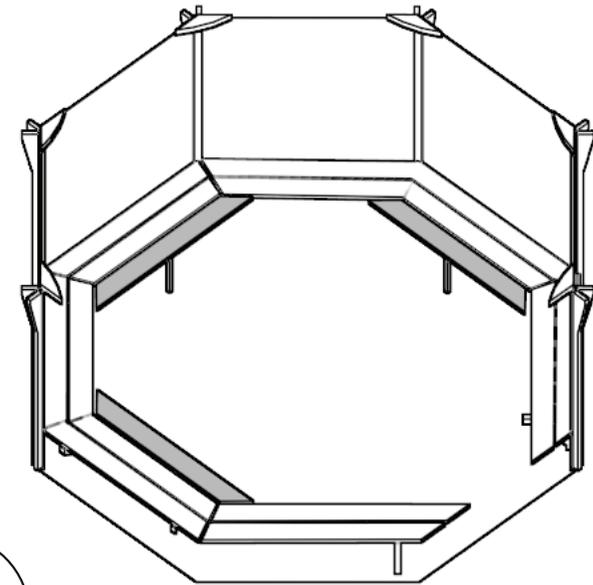


Attach the support foot to the extra bench plank and then attach the element to the already attached benches.

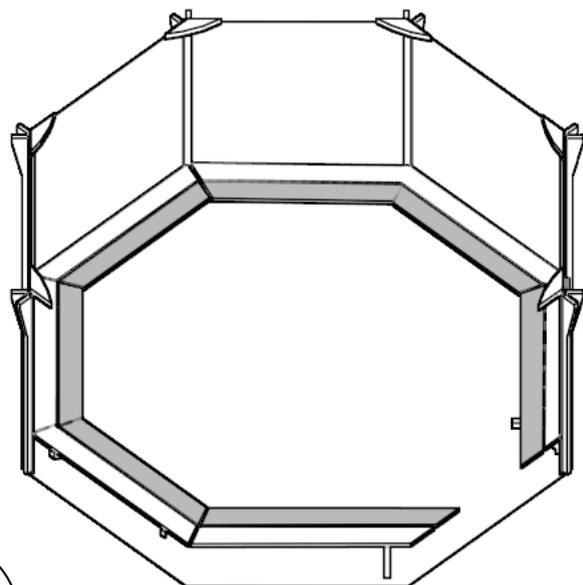


Attach the inner round of the bench planks to the beams with 4 screws per plank. The gap between the inner and outer planks should be 1 cm.

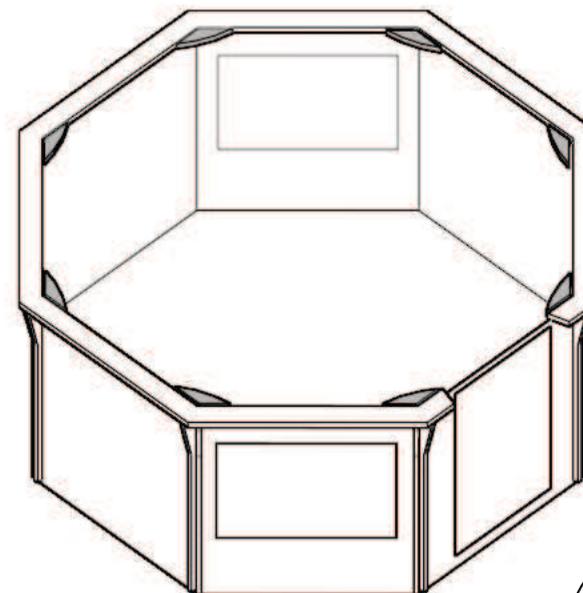


Attach the triangle details to the inner corners of the fluted brim planks with 2 screws per detail.

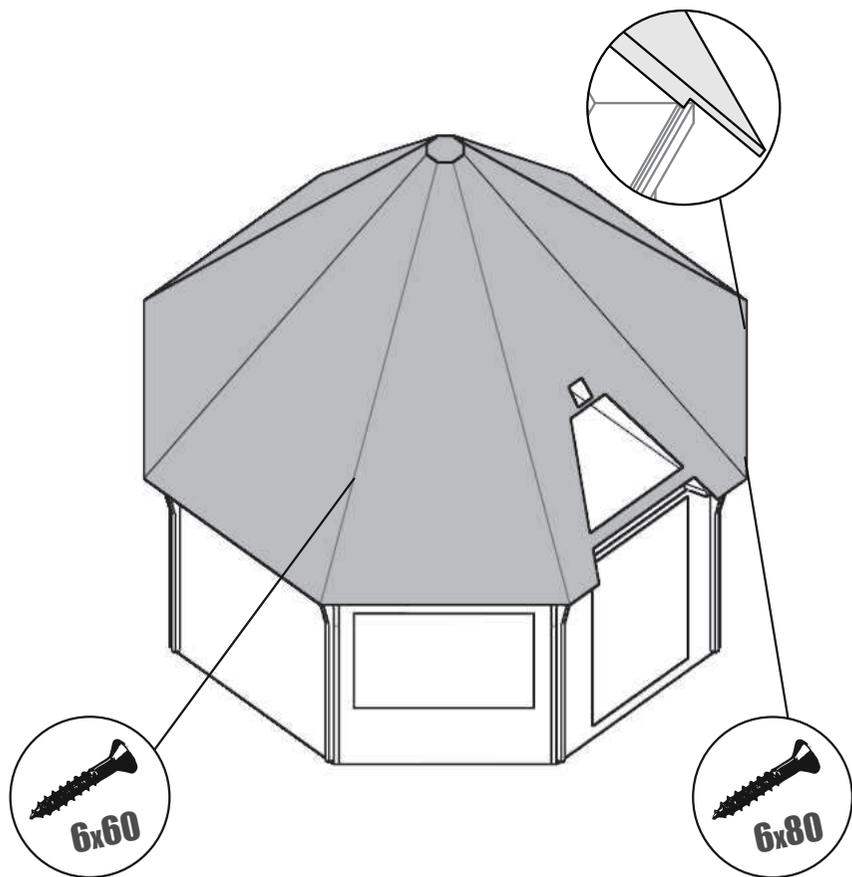


Attach the roof elements. Roof elements have to fit nicely into the flute of the brim planks. When attaching the roof element be sure to provide inner support for each element. 8 screws are used to attach two roof elements to each other, plus another 4 screws to attach to the brim planks from below. When attaching the roof element with the door gap make sure that the gap matches nicely with the gap in the wall element.

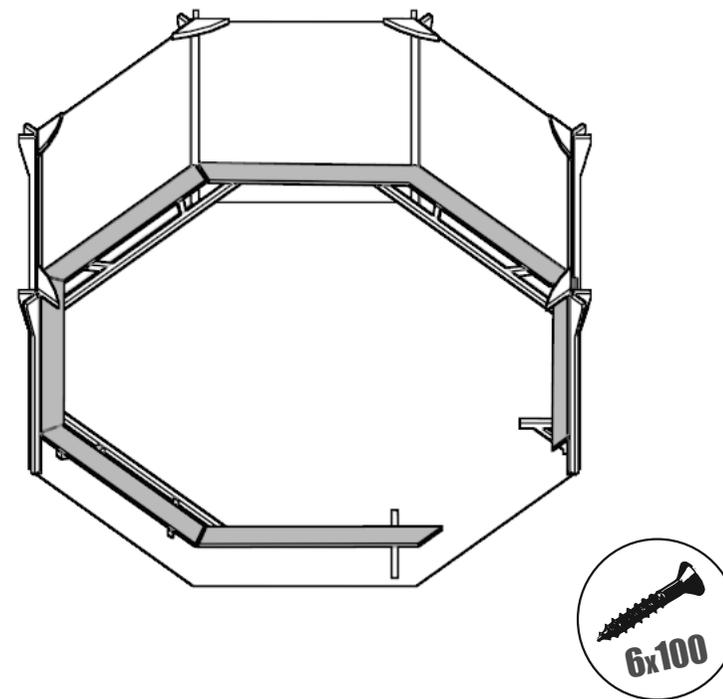


Attach the bench planks outer round to the beams with 4 screws. Leave a 4cm gap between the planks and the wall. The gap between the planks should be 1cm.

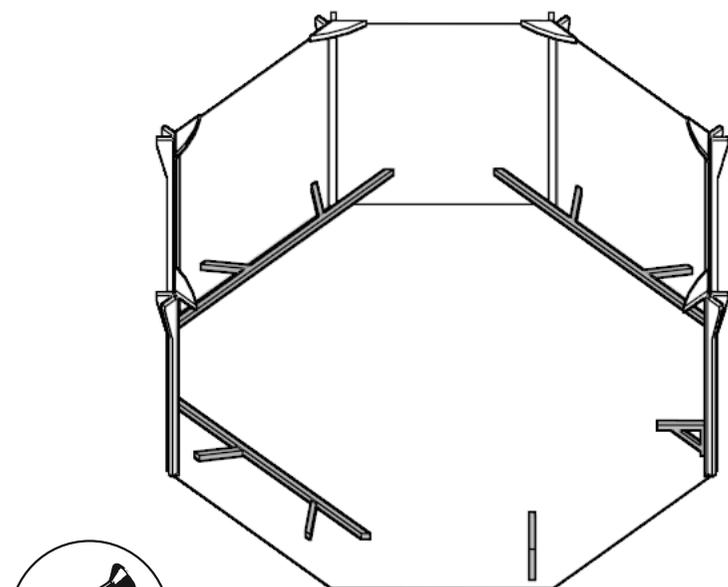


Attach the bench beams by first attaching the longer detail to the wall elements from the ends. Make sure they are parallel to the wall. Then attach the two shorter details to the previously attached detail and to the wall with 10 screws total. Beams should be placed 39cm above the floor.

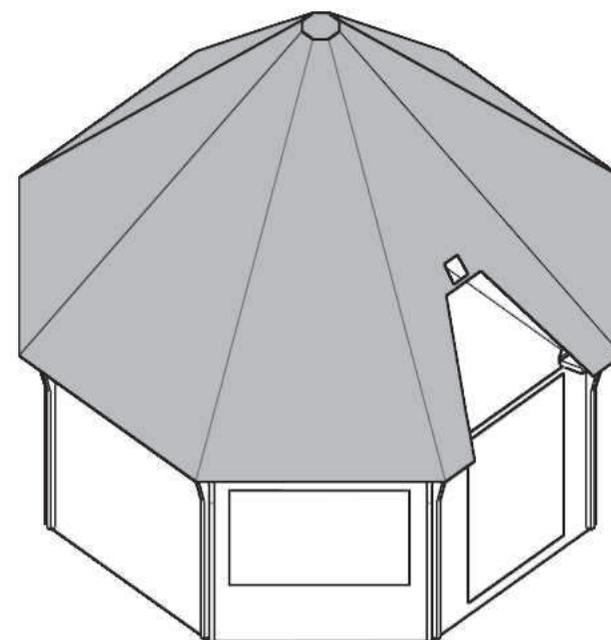


Saw open the door gap in the roof and wall elements.

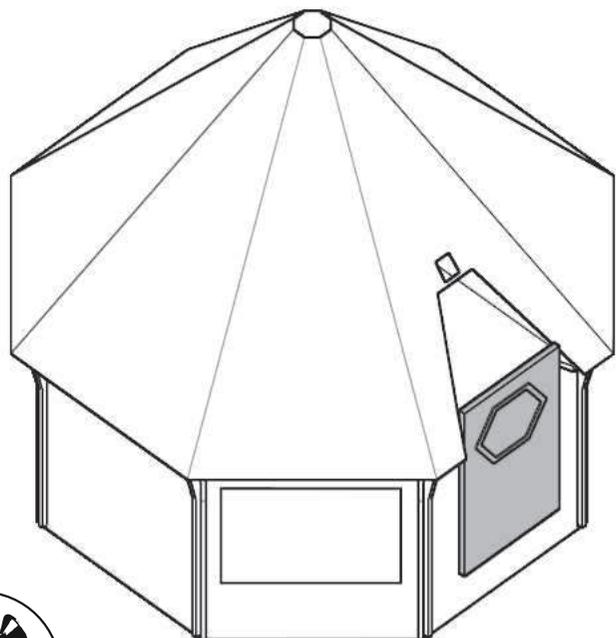


Place the door, attach with 4 screws. The doors outer brim has to be even with the wall elements outer side.

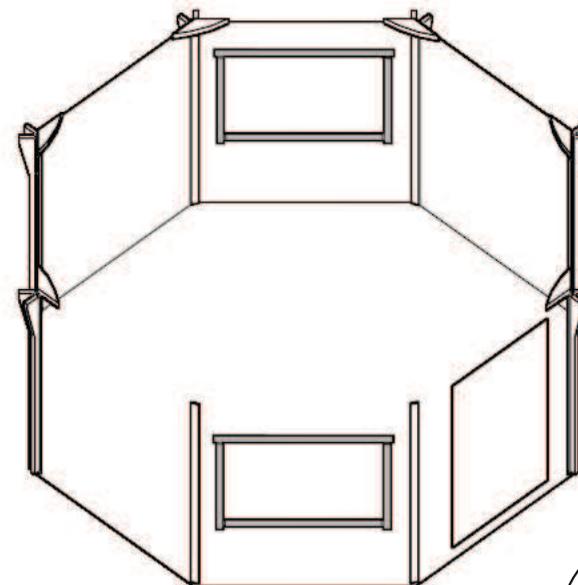


Attach the window strips inside the grillhouse. Strips are attached to the frame with ca 1.5cm overlay.

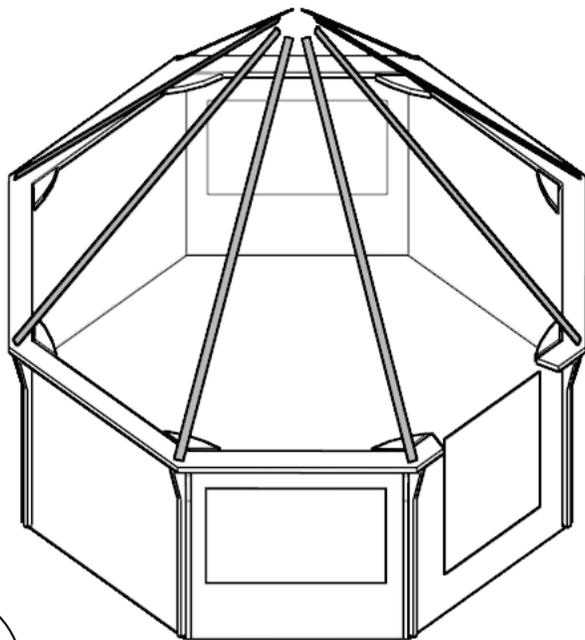


Attach the roof's inner corner strips to the roof elements with 6 screws.

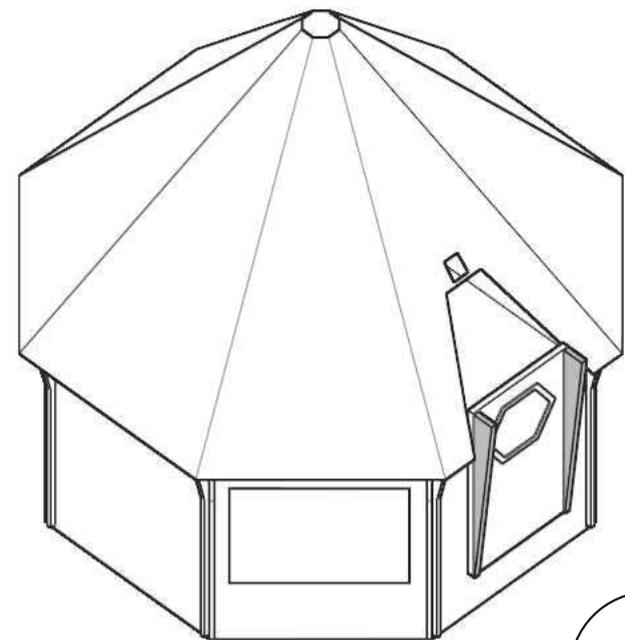


Place the door posts. Attach to the wall element and fluted brim plank with 2 screws per detail. Door post's upper brim has to be on the same height with the door frame's upper brim.

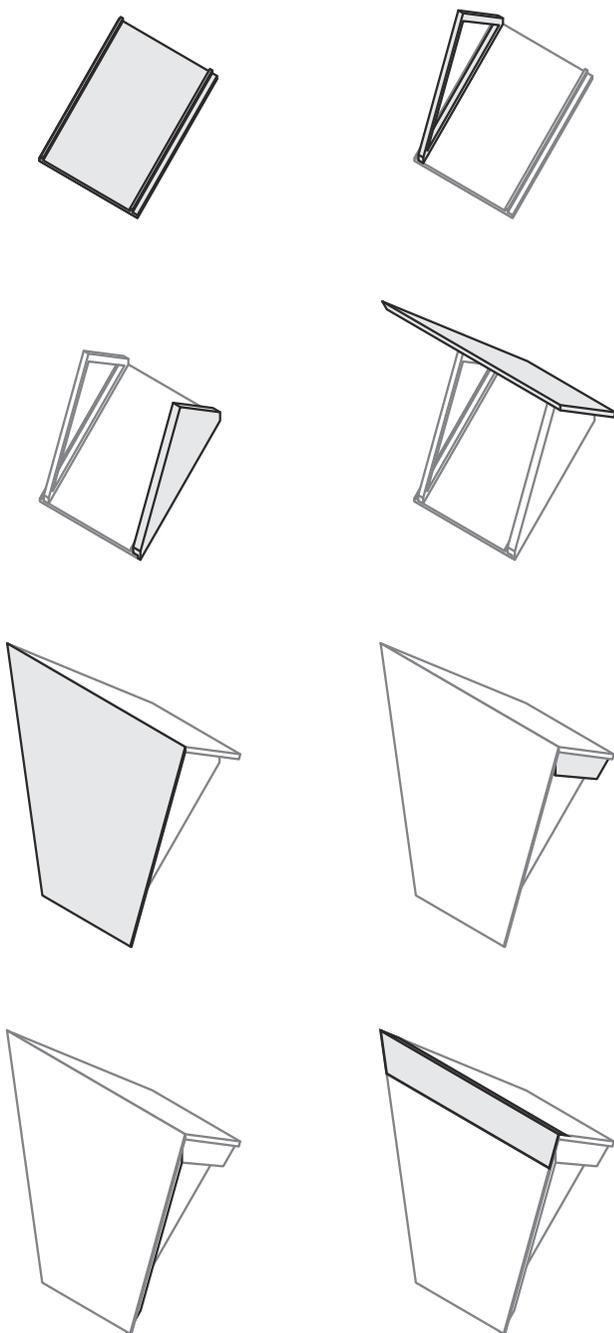


Assemble the roof cabinet on the ground and attach tarred felt.

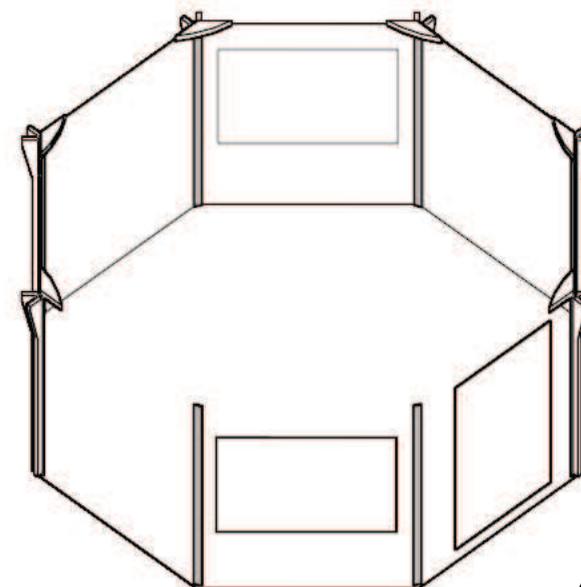


Inner corner strips go in the inner corners under the triangle details. 6 screws are used to attach one strip to the wall elements.

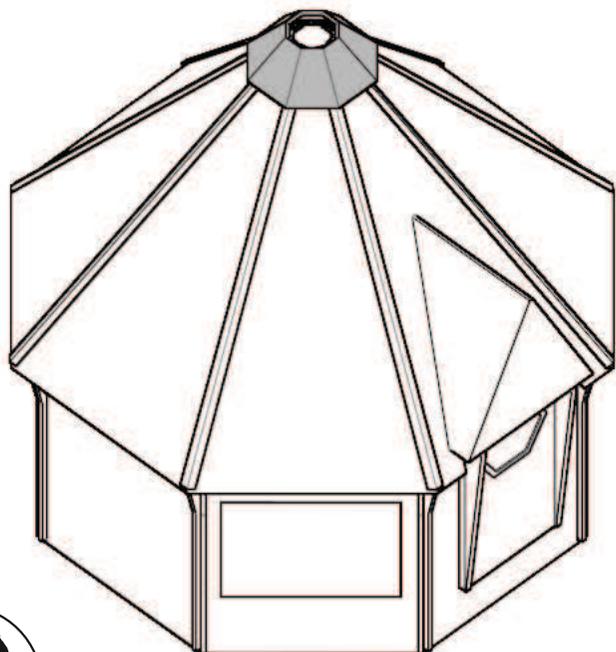


Attach the roof hat to the roof elements from below with 3 screws.

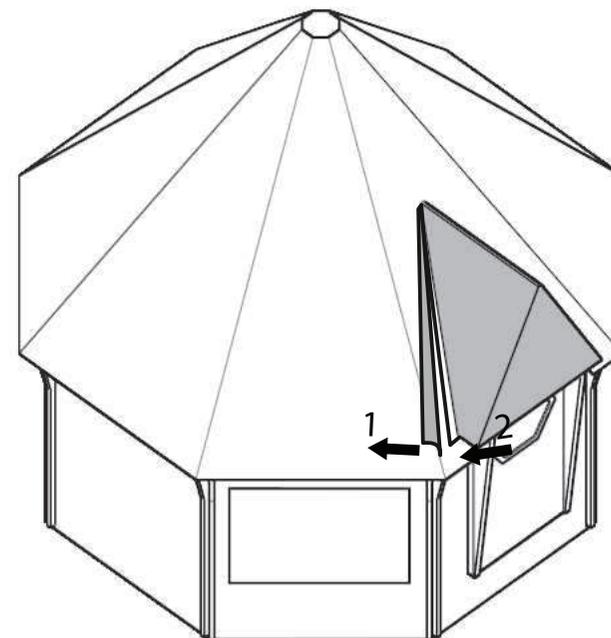

When attaching the roof cabinet the tarred felt needs to go under the roofs tarred felt. First lift the tarred felt on the roof and then push the tarred felt of the cabinet under it.

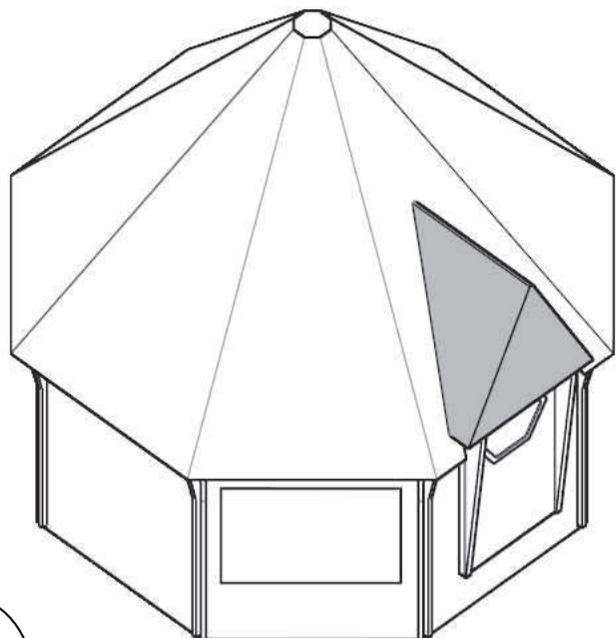

Attach the cabinet with 4 screws from the door frame and door posts.

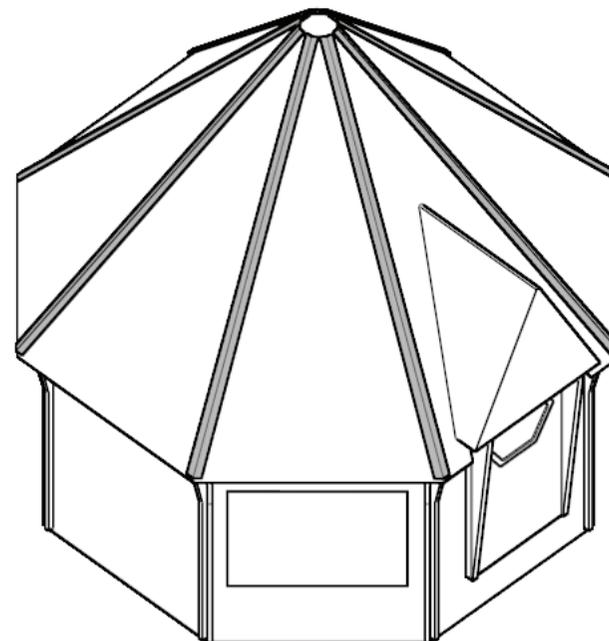

Attach peak plates to the connecting brims of the roof elements. Use felt nails. The lowest plate should be placed 7cm over the lower brim, flipped under the eaves and secured with nails.